



Using the TUI Upgrade Utility

First Published: May 29, 2012

Note

first.

If you are upgrading an existing Cisco StadiumVision Director server from Release 2.4 to Release 3.0, see the "Upgrading a Cisco StadiumVision Director Server from Release 2.4 SP1 to Release 3.0" module

This module describes how to upgrade an existing server already running Cisco StadiumVision Director, including installation of service packs. This procedure is also referred to generally as an *ISO upgrade* to refer to both the service pack and upgrade ISO process.

This module includes the following topics:

- Best Practices, page 25
- Prerequisites, page 26
- Information About Using the TUI Upgrade Utility to Update an Existing Release 3.0 Server, page 26
- Upgrade Tasks, page 27
- Verifying the Upgrade, page 33
- What to Do Next, page 42

Best Practices

Before you begin upgrading an existing Cisco StadiumVision Director server, consider the following best practices:

- Choose an appropriate down time to perform the upgrade on the Cisco StadiumVision Director server when there is adequate time to complete and verify the upgrade before any scheduled events and to allow time to resolve any unexpected issues that might occur.
- Refer to the *Release Notes for Cisco StadiumVision Director Release 3.0* for the latest information about hardware and software requirements, changes, important notes, and caveats for your software release.
- Pay particular attention to the required hardware and software versions for other devices supporting your Cisco StadiumVision solution and be sure that you upgrade those devices as needed. For example, generally only certain firmware versions are supported for the DMP hardware, or a new firmware version is needed to provide additional functionality supported by the Cisco StadiumVision Director software.

- Perform a backup and restore of the primary and secondary servers:
 - Perform a backup of the currently active primary server.
 - Restore the backup data onto the standby secondary server.
 - Promote the secondary server to primary.
 - Access the promoted secondary server to perform the upgrade.

For more information about performing a backup and restore on a Cisco StadiumVision Server, see the *Backing Up and Restoring Cisco StadiumVision Director Servers* guide.

Prerequisites

Be sure that the following requirements are met before you upgrade your server:

- Your server is running a minimum of Cisco StadiumVision Director Release 2.4.0-168 or higher.
- If you are upgrading your server from Release 2.4, you are following the requirements and tasks described in the "Upgrading a Cisco StadiumVision Director Server from Release 2.4 SP1 to Release 3.0" module in this guide.
- You have the IP address for the Cisco StadiumVision Director server where you want to upload the ISO upgrade image. You will need to use this information as part of the URL to access the ISO upload utility.
- You have a supported browser version for Cisco StadiumVision Director. For more information about the latest supported browsers, see the *Cisco StadiumVision Release Notes for Release 3.0*.
- You have an installer account on the Cisco StadiumVision Director server.

Information About Using the TUI Upgrade Utility to Update an Existing Release 3.0 Server

The ISO upgrade procedure for Cisco StadiumVision Director includes the following tasks:

- 1. Downloading an ISO service pack or upgrade file from the software download site on Cisco.com.
- **2.** Uploading the ISO file from your laptop to the Cisco StadiumVision Director server using the upload utility through your browser.
- 3. Installing the ISO image using the upgrade utility in the Text Utility Interface (TUI).

ISO Upgrade Files

The ISO upgrade files are stored in the following location:

/var/www/cgi-bin/ISOupload

You can store multiple ISO upgrade files on a Cisco StadiumVision Director server. The files will be displayed with a sequence number and the ISO filename in the TUI upgrade utility for you to select which file to install.

Disk Maintenance

There is no automatic aging of ISO upgrade files or any utility to remove files from the Cisco StadiumVision Director server.

You should periodically maintain your disk storage by manually removing any ISO upgrade files that you no longer need.

Upgrade Tasks

To upgrade your Cisco StadiumVision Director server, complete the following tasks:

- Downloading ISO Upgrade Files from Cisco.com, page 27 (required)
- Uploading an ISO Upgrade File to the Cisco StadiumVision Director Server, page 28 (required)
- Installing the ISO Upgrade Image on the Cisco StadiumVision Director Server, page 30 (required)
- Verifying the Upgrade, page 33 (required)

Downloading ISO Upgrade Files from Cisco.com

Be sure to download the upgrade files to a location, such as a laptop computer, where you can access them for installation onto the Cisco StadiumVision Director server.

To download an ISO upgrade file, complete the following steps:

Step 1 Go to the Cisco StadiumVision Director software download site at:

http://www.cisco.com/cisco/software/release.html?mdfid=283489263&flowid=31962&softwareid=283866237&release=3.0.0&relind=AVAILABLE&rellifecycle=&reltype=latest



Note This site page is also available from the Cisco StadiumVision Director product support page by clicking **Download Software > Cisco StadiumVision Director**.

Step 2 Select the ISO upgrade or service pack file (as available), and optionally the companion MD5 checksum file, and download them.

Table 1 shows the filename conventions used for ISO upgrades.

Table 1	ISO Upgrade Filename Conve	ntions
---------	----------------------------	--------

Hardware Product ID	Filename Convention ¹
64-bit Model	• SV-DIRECTOR-UPGRADE-3.0.0-nnn.x86_64.iso
SV-DIRECTOR-K9 or SV-PLATFORM2=	• SV-DIRECTOR-UPGRADE-3.0.0- <i>nnn</i> .x86_64.iso.md5sum

1."*nnn*" represents the build number of the image in the file.

Table 2 shows the filename conventions used for service pack (SP) ISO upgrades.

Hardware Product ID	Filename Convention
64-bit Model	• SV-DIRECTOR-SPx-3.0.0.x86_64.iso
SV-DIRECTOR-K9 or SV-PLATFORM2=	• SV-DIRECTOR-SPx-3.0.0.x86_64.iso.md5sum

Table 2SP Filename Conventions 1

1. "x' represents the ordered number of the service pack file. The first service pack is SP1.

You can download the files using one of the following methods:

- Download both files at one time—Select each file and click **Add to Cart**. Then at the top of the download page, click the "Download Cart (2 items)" link.
- Download each file independently—Click the **Download Now** button in the file selection box for each file.
- Step 3 (Optional) To verify the integrity of your upgrade file from the download, you can use a command-line or GUI utility on your laptop to calculate the checksum on the .iso file. Open the .md5sum file to compare the value that you calculated with the expected value provided in the .md5sum file.

The values should match. If they do not, retry the download.

Uploading an ISO Upgrade File to the Cisco StadiumVision Director Server

After you have downloaded the ISO upgrade file from Cisco.com, you need to upload the file to the Cisco StadiumVision Director server using a URL from a browser to access the ISO uploader utility. Once you have uploaded the software to the server, then you will use the TUI to install the upgrade image.

Prerequisites

Be sure that you know the IP address of the Cisco StadiumVision Director server where you want to upload the file, and you have a supported browser version for Cisco StadiumVision Director.

To upload an ISO upgrade file to the Cisco StadiumVision Director server, complete the following steps:

- **Step 1** Log into Cisco StadiumVision Director as an administrator.
- **Step 2** Open your browser, and to go the following URL, where *x.x.x.x* is replaced by the IP address of the server where you want to upload the upgrade software (Figure 1):

http://x.x.x/cgi-bin/isoupload.cgi





- **Step 3** Click **Browse** (Figure 1).
- **Step 4** From the File Upload dialog box, navigate to the location of the ISO upgrade file that you downloaded from Cisco.com. Select the file that you want to upload and click **Open**. Figure 2 shows an example of selection of a 64-bit ISO upgrade file.

Figure 2	File Upload Dialog Box
----------	------------------------



Step 5 Click the Upload ISO button (Figure 3). The file is sent to the server.



I

The upload might take several minutes. Do *not* refresh or reload the ISO Updater page while the upload process is running. Any interruption will corrupt the ISO image being uploaded.





When the ISO upload is complete, one of the following occurs:

- Image integrity is verified before an image is stored on the server. When the image is validated and uploaded successfully, a message is displayed stating that the ISO image has been uploaded.
- The image upload failed for some reason and you will need to retry the upload again.

Installing the ISO Upgrade Image on the Cisco StadiumVision Director Server

To install the ISO upgrade image on the Cisco StadiumVision Director server, complete the following steps:

- Step 1 Use a directly connected console, or use an SSH client from a laptop computer that is connected to the Cisco StadiumVision Server network to run a secure login to the Cisco StadiumVision Director server using the IP address for your server.
- **Step 2** When the login prompt appears, enter the **installer** userid followed by the installer password at the password prompt.
- **Step 3** When the Stadium Vision Director Configuration menu appears, type **q** and press Enter (Figure 4):



Figure 4 TUI Main Menu Option for Upgrade of Cisco StadiumVision Server

Step 4 When the upgrade configuration confirmation prompt appears, type **c** to continue (Figure 5):





Step 5 All of the ISO upgrade files that you have uploaded are displayed with a sequence number and the image name. Type the sequence number that corresponds to the image that you want to install, and press Enter. Figure 6 shows an example of selection of a 64-bit ISO upgrade file for installation.



-
Citaco Svatema
StadiuwVidion Director Configuration Monu
Statiantiston precede configuration menu
Comment bootstands do sounds down and and 24
Server hoschame is sande-tapps-regression4-54
Server IP address is 10.194.171.34
Are you sure you wish to upgrade? Push R to return to main menu
or C to continue.
1 SV-DIRECTOR-UPGRADE-3.0.0-247.x86 64.iso
2 SV-DIRECTOR-UPGRADE-3.0.0-237.x86 64.180
3 SV-DIRECTOR-UPGRADE-3.0.0-241.x86 64.iso
Please select a file number and press enter:
rease select a fife number and press enter.

The upgrade process begins (Figure 7).

Caution

I

Wait until the upgrade process completes. *Do not* close the terminal while the upgrade is in progress. You will get notification once the installation is complete.

Please select a file number and press enter: 1	
You selected SV-DIRECTOR-UPGRADE-3.0.0-246.x86_	
Beginning upgrade process	
umount: /var/sv/rpms/: not mounted	
Cleaning up Everything	
svd-update	
filelists.xml.gz	
other.xml.gz	
primary.xml.gz	
svd-update	
svd-update	
svd-update	
Metadata Cache Created	
Setting up Update Process	
Resolving Dependencies	
> Running transaction check	
> Package sv-tac.x86_64 0:3.0.0-247 set to be	updated
> Package sv-db.x86_64 0:3.0.0-247 set to be	updated
> Package sv-mule.x86_64 0:3.2.0.933-3.0.0.24	7 set to be updated
> Package svd-server-platform.x86_64 0:6.0.29	-18.3.0.0.247 set to be updated
> Package openssh-clients.x86_64 0:5.9p1-2 se	t to be updated
> Package sv-content.x86_64 0:3.0.0-247 set t	o be updated
> Package svd-server-monitor.x86_64 0:6.0.29-	18.3.0.0.247 set to be updated
> Package openssh.x86_64 U:5.9p1-2 set to be	updated
> Package svd-server-cms.x86_64 0:5.4.2-3.0.0	1.247 set to be updated
> Package sv-customapp.x00_64 0:3.0.0-247 set	; to be updated
> Package sv-IIIeray-ext.x86_64 0:5.0.0-247 s	2 and the be undered
> Package Illeray-portal.x06_64 0:5.2.3-30024	to be undeted
> Package sv-ullector.x85 64 0.3 0 0-247 set to	be undeted
> Package syd-server-localat1 y86 64 0:6 0 20	-18 3 0 0 247 set to be undeted
> Package svd-server-control.x86.64 0.6 0 29-	18.3.0.0.247 set to be undated
> Package openash-server.x86 64 0:5.9n1-2 set	to be undated
> Package sy-scripts.x86 64 0:3.0.0-247 set t	o be undated
> Package syd-server-config.x86 64 0:6.0.29-1	8.3.0.0.247 set to be undated
> Package sv-vdm.x86 64 0:3.0.0-247 set to be	updated
> Package sv-tui.x86 64 0:3.0.0-247 set to be	updated
> Package svd-server-hornetg.x86 64 0:6.0.29-	18.3.0.0.247 set to be updated

Figure 7 Start of ISO Upgrade Process

Step 6 When the "Upgrade complete" message appears, press any key. (Figure 8):



Cleanup	: syd-server-platform	[23/44]
Cleanup	: openssh-server	[24/44]
Cleanup	: sv-customapp	[85/44]
Cleanup	: syd-server-localct1	[25/44]
Cleanup	: syd-server-cms	[27/44]
Cleanup	: liferay-portal	[28/44]
Cleanup	: 3Y-CD	[29/44]
Cleanup	: svd-server-config	[30/44]
Cleanup	: sv-broker	
Cleanup	: sv-director	[32/44]
Cleanup	: sv-liferay-ext	[33/44]
Cleanup		
Cleanup	: openssh	
Cleanup		
Cleanup		
Cleanup	: syd-server-hornetg	
Cleanup	: syd-server-monitor	
	: openssh-clients	[41/44]
	: sv-content	
Cleanup	: svd-server-control	
Cleanup		[44/44]
dated: 11f ustomapp.x 4 0:3.0.0- 247 svd-se mplete!	eres-portal.x85_64 0:5.2.3-300247 openss 8:6 64 0:3.0.0-247 sv-db.x86_64 0:3.0.0-2 247 sv-tui.x86_64 0:3.0.0-247 sv-vdm.x86 rvver-hornetq.x86_64 0:6.0.29-18.3.0.C.24	8_64 015.5D1-1 openamb-clients.x8_64 015.5D1-2 openamb-server.x85_64 015.9D1-2 xr=broker.x86_64 013.6.0-247 xr=content.x86_64 013.6.0-247 xr=to servitescotr.x85_64 013.0-0-247 xr=litescr=xxx55_64 013.0-0-247 xr=totax85_64 013.6.0-2347 xr=totax15xx85_64 013.6.0-247 xr=totx15xx85_64 013.0-0-247 xr=totx15x85_64 013.0-0-247 xr=totx15x85_64 013.0-0-247 xr=totx15x85_6
starting S	VD services. Please wait	
hun: annen	ding output to 'achup.out'	
hun: annen	ding output to 'nohup.out'	
	ding autout to 'nature out !	
hup: appen	ding output to nonup.out.	
hup: appen hup: appen	ding output to 'nohup.out'	



There is no need to reboot the Cisco StadiumVision Director server. The server is restarted automatically after the upgrade is complete.

Step 7 Exit the TUI and go on to the "Verifying the Upgrade" section on page 33.

Verifying the Upgrade

To verify the upgrade, complete the following tasks:

- Clearing the Browser Cache, page 33 (required)
- Importing the Security Certificate, page 34 (required)
- Logging Into Cisco StadiumVision Director, page 35 (required)
- Verifying the Control Panel and Other Menus, page 36 (required)
- Checking for Duplicate MAC Address Entries, page 37 (required)
- Verifying that Services are Running, page 37 (required)
- Configuring the DMP 4310 Assigned VLAN Property for VLAN Compliance Check, page 38 (required)
- Verifying DMPs, Groups, and Zones in the Management Dashboard, page 39 (required)
- Verifying the Multicast Configuration, page 40 (required)
- Setting Up the Quest Venue Manager to Send Updates to Cisco StadiumVision Director Server, page 40 (required if using Quest for commerce integration)

Clearing the Browser Cache

I

After you perform a Cisco StadiumVision Director software upgrade, you must clear the browser cache to be sure that you are viewing the latest version of Cisco StadiumVision Director.

To clear the browser cache in Mozilla FireFox, complete the following steps:

1101	i the menu bar, go to roots > Clear Recent History .
The	Clear Recent History dialog box appears.
ρ	
<u>▼</u> Tip	You can also press Ctrl + Shift + Delete to open the Clear Recent History dialog box.
In th	e "Time range to clear:" box, select Everything.
Ope	n the Details drop-down list and select the Cache checkbox if it does not have a checkmark.
Ope Clic	n the Details drop-down list and select the Cache checkbox if it does not have a checkmark. k Clear Now .
Ope Clic To cl	n the Details drop-down list and select the Cache checkbox if it does not have a checkmark. k Clear Now . ear the browser cache in Microsoft Internet Explorer, complete the following steps:
Ope Clic To cl	a the Details drop-down list and select the Cache checkbox if it does not have a checkmark. k Clear Now. ear the browser cache in Microsoft Internet Explorer, complete the following steps: a the menu bar, go to Tools > Delete Browsing History.
Ope Clic To cl Fror	n the Details drop-down list and select the Cache checkbox if it does not have a checkmark. k Clear Now . ear the browser cache in Microsoft Internet Explorer, complete the following steps: n the menu bar, go to Tools > Delete Browsing History .

Step 3 Click Delete.

Importing the Security Certificate

When you access a Cisco StadiumVision Director server for the first time using Microsoft Internet Explorer or Mozilla Firefox, a security certificate warning will appear. Some Cisco StadiumVision Director functionality requires that the certificate is imported.

Importing the Security Certificate for Microsoft IE

To import the security certificate in Microsoft Internet Explorer, complete the following steps:

Step 1	When you see the warning page with the title "There is a problem with this website's security certificate," click the " Continue to this website " option.
Step 2	Next to the URL bar on the top of the browser window, click Certificate Error and then click the " View certificates " link.
Step 3	In the Certificate dialog box, click Install Certificate
Step 4	In the Certificate Import Wizard dialog box, click Next>.
Step 5	In the next step of the wizard, select "Place all certificates in the following store" radio button and then click Browse .
Step 6	In the Select Certificate Store dialog box, select the "Trusted Root Certification Authorities" store and click Ok .
Step 7	Click Next> in the Certificate Import Wizard dialog.
Step 8	Click Finish.
Step 9	In the Security Warning dialog box, click Yes.
	Confirm that a dialog stating "The import was successful." appears.
Step 10	Close all Microsoft IE windows.
	You should now be able to access the Cisco StadiumVision Director server using Microsoft IE without any security certificate warnings.

Adding a Security Exception for Mozilla Firefox

To add the security exception for Mozilla Firefox, complete the following steps:

- Step 1 When you see the warning page with the title "This Connection is Untrusted," click the "I Understand the Risks" option.
 Step 2 Click Add Exception....
 Step 3 In the Add Security Exception dialog box, click Confirm Security Exception.
- **Step 4** Close all Mozilla Firefox windows.

You should now be able to access the Cisco StadiumVision Director server using Mozilla Firefox without any security certificate warnings.

Logging Into Cisco StadiumVision Director

To verify that the upgrade to Cisco StadiumVision Director Release 2.4 was successful, and that Cisco StadiumVision Director is up and operating, complete the following steps:

Step 1 Open a browser window and type the URL for the Cisco StadiumVision Director server, in the following sample format, where *x.x.x.x* is the IPv4 address of the Cisco StadiumVision Director server:

```
https://x.x.x.X/StadiumVision/login.jsp
```

or alternatively,

http://x.x.x.x

The Cisco StadiumVision Director login screen appears (Figure 9).

Figure 9 Cisco StadiumVision Director Login Screen



Step 2 Verify that the Version 3.0 is displayed.



If your window is not displaying Version 3.0, be sure that you have cleared the browser cache as describe in the "Clearing the Browser Cache" section on page 33.

Step 3 Type your Cisco StadiumVision Director administrator login credentials and click Log In.



When you first log into Cisco StadiumVision Director, the default administrator username and password is *admin*.

The Cisco StadiumVision Director Main Menu screen appears (Figure 10).



Figure 10 Cisco StadiumVision Director Main Menu

Verifying the Control Panel and Other Menus

To verify the control panel, complete the following steps:

Step 1 From the Cisco StadiumVision Director Main Menu, click Control Panel.

After a few moments of loading resources, the Cisco StadiumVision Control Panel Setup screen will open in a new window (Figure 11).

Figure 11 Cisco StadiumVision Control Panel



Step 2 Confirm the version and build number of your Cisco StadiumVision Director software in the lower right corner of the Control Panel window.



If your window is not displaying the appropriate version and build that you loaded, be sure that you have cleared the browser cache as describe in the "Clearing the Browser Cache" section on page 33.

Step 3 Verify that you can open the other Cisco StadiumVision Director screens and menus.

Checking for Duplicate MAC Address Entries

Cisco StadiumVision Director does not support duplicate MAC addresses for the DMPs. After you have upgraded your software, check the following file for any duplicates:

/var/sv/db/mysql/upgrade-invalidmac.csv

 \mathcal{P} Tip

I

You can also run the GetStatus operation on selected DMPs in the Management Dashboard to update the MAC address for the selected DMPs in the Cisco StadiumVision Director database.

Verifying that Services are Running

After you upgrade, go to the Management Dashboard to verify that all of the primary Cisco StadiumVision Director services are running.

To verify that services are running, complete the following steps:

- **Step 1** From the Management Dashboard, expand the Service Alerts pane.
- **Step 2** Verify that all of the primary services—in particular the Content Management CMS Server—are in "Normal" (green) state without any service alerts.

Figure 12 Verifying Normal Service States



Step 3 If the CMS server or another service in the above list is not in Normal state but should be, use the TUI services menu to restart it.

Configuring the DMP 4310 Assigned VLAN Property for VLAN Compliance Check

After you upgrade, you need to go to the Management Dashboard and change the Assigned VLAN property under Global DMP Settings for both the 4310 and 4310 v5.x.x settings according to your DMP VLAN configuration.

Configuring this property in the Management Dashboard settings for the DMP 4310s will ensure that the Dashboard value can be checked for compliance with the value being sent by the DMP:

- If all of your DMPs are located on the same VLAN (recommended)—Type the number of the VLAN and save the configuration.
- If all of your DMPs are not located on the same VLAN, or you want to bypass any VLAN compliance checking—Type "**\$svd_ignore**" and save the configuration.

The value in the Assigned VLAN property in the Management Dashboard settings for the DMP 4310s is checked against what is being sent by the DMP, unless you have configured \$svd_ignore.

/!\ Caution

DMP auto-registration support requires that the VLAN value is correctly set or "\$svd_ignore" is used.

Figure 13 shows how to configure the Assigned VLAN property under the 4310 Settings for DMPs that are not located on the same VLAN using the "\$svd_ignore" string.

۵. Note

You need to set a value for the Assigned VLAN property for both the 4310 Settings and the 4310 v5.2.3 Settings under Global DMP Settings in the Management Dashboard..

To configure the Assigned VLAN Property, complete the following steps:

- Step 1 Go to the Management Dashboard, and click SV Director Configuration > System Configuration > Global DMP Settings.
- **Step 2** Complete both of the following steps, as shown in Figure 13:
 - **a.** Click **4310 Settings**. Find the Assigned VLAN property. In the box, type either the VLAN number where the DMP resides, or \$svd_ignore.
 - **b.** Click **4310 v5.x.x Settings**. Find the Assigned VLAN property. In the box, type either the VLAN number where the DMP resides, or \$svd_ignore

Monitor and Status		Director Configuration				
DMP and TV Controls		Configuration Property		Value		
2 Fvent Viewer		ciscocraft.fl_failover_url		http://10.194.172.99:80	30/StadiumVision/failover/SvFlashTempl	late/SvTemplate.sv
V Event Viewer		a init.STARTUP_URL		file:///tmp/ftproot/usb_1/SvFlashTemplate/SvTemplate.swf		
SV Director Configuration		ciscocraft.start_fl_url		file:///tmp/ftproot/usb_1/SvFlashTemplate/SvTemplate.swf		
System Configuration (10)		Firmware version verify st	tring (init.version)	SE 2.2.2		
SV Director Settings		Firmware build verify strin	ng (init.build)	Thu Mar 31 09:29:42 PD	F 2011 [b2744]	
🔻 🚞 Global DMP Settings (3)		sigma.ptsTimer		60		
Common		sigma.ptsRange		3300220		
🗋 4310 Settings ┥ 🗕		ciscocraft.fl_colorkey_ena	able	0		
🗋 4310 v5.×.× Settings		Enable Medianet		yes		
Auto Registration Settings Auto Registration Settings Settings User Preferences CISCO	isco S	Assigned VLAN StadiumVision Ma	anagement [\$sud_ignore 🗲 🗕 Dashboard		
Auto Registration Settings Management Dashbo User Preferences User int Monite Monite Monite	iSCO S	Assigned VLAN StadiumVision Ma tatus	anagement [SV Director C	\$svd_ignore +	Value	
Auto Registration Settings Auto Registration Settings Usen Preferences User Preferences Monitu Operation Monitu Operation	iSCO S er and St nd TV Co	Assigned VLAN StadiumVision Ma tatus ontrols	SV Director C Configur	\$svd_ignore ashboard onfiguration ation Property	Value	
Auto Registration Settings Management Dashbo User Preferences Generation G	iSCO S or and Si nd TV Co Viewer	Assigned VLAN StadiumVision Ma tatus ontrols	SV Director C Configur Enable fai	\$svd_ignore anticon ation Property lover menut	Value true 10000	
Auto Registration Settings Management Dashbo User Preferences User Preferences Monitu	iSCO S or and St nd TV Co Viewer	Assigned VLAN StadiumVision Ma tatus ontrols onfiguration	SV Director C Configur Enable fai Failover ti	\$sud_ignore antiguration attion Property lover meout	Value true 10000 5.3.4	
 Auto Registration Settings Management Dashbo User Preferences User Dreferences O DMP a Ø Event SV Dir Syste 	isco S or and Si nd TV C Viewer ector Co m Confi	Assigned VLAN StadiumVision Ma tatus ontrols onfiguration guration (10)	SY Director C Configur Enable fai Failover ti Init.versio	\$sud_ignore Cashboard Cas	Value tue 10000 5.3.4 Mon Jan 16 11:33:38 PST 1	
Aub Registration Settings Management Dashbo Ilisi C C User Preferences ✓ ✓ ✓ ✓ ✓ ✓ ✓	isco S or and St nd TV G Viewer ector Co m Confi Director	Assigned VLAN StacliumVision Ma tatus ontrols guration (10) settings	SV Director C Configur Enable fai Failover ti init.versio init.build sigma.pts	\$sud_ignore Dashboard onfiguration ution Property over meout Timer	Value tue 10000 5.3.4 Mon Jan 16 11:33:38 PST 1 60	
Auto Registration Settings Management Dashbo User Preferences Differences Differences Differences Differences Sv Dir	isco S or and St nd TV Co Viewer ector Co Director obal DMF	Assigned VLAN Status antrols onfiguration guration (10) r Settings 0 Settings (3)	SV Director C Configur Enable fai Failover ti init.build sigma.pts	sud_ignore Constraints Constr	Value true 10000 5.3.4 Mon Jan 16 11:33:38 PST 2 60 3300220	
 Auto Registration Settings Management Dashbo User Preferences O Set 100 O Moniti O Moniti O Moniti O Moniti O Moniti O Syste O Syste O Syste O Syste O Syste 	isco S ar and Si nd TV Co Viewer ector Co m Confil Director obal DMR Commo	Assigned VLAN StadiumVision Ma status ontrols onfiguration guration (10) * Settings P Settings (3) on	SV Director C Configur Enable fai Failover ti Init versio Init build sigma,pts ciscoraft	sud_ignore shifting anfiguration atton Property lover meout m Timer Range L_colorkey_enable	Value true 10000 5.3.4 Mon Jan 16 11:33:38 PST 2 60 3300220 0	
Auto Registration Settings Management Dashbo User Preferences S 11.11.00 CISCO C S 0.000 E vent S V Dir S y V Dir <td>isco S ar and S nd TV G Viewer ector Co m Confil Director obal DMR Commo 4310 Se</td> <td>Assigned VLAN Status Status ontrols guration (10) (Settings P Settings (3) on</td> <td>SV Director C Configur Enable fai Failover ti init-build sigma,pts discoraft, Enable Ma</td> <td>sud_ignore subport anfiguration ation Property lover meout Timer Range 4_colorkey_enable dianet</td> <td>Value true 10000 5.3.4 Mon Jan 16 11:33:38 PST 2 60 3300220 0 yes</td> <td></td>	isco S ar and S nd TV G Viewer ector Co m Confil Director obal DMR Commo 4310 Se	Assigned VLAN Status Status ontrols guration (10) (Settings P Settings (3) on	SV Director C Configur Enable fai Failover ti init-build sigma,pts discoraft, Enable Ma	sud_ignore subport anfiguration ation Property lover meout Timer Range 4_colorkey_enable dianet	Value true 10000 5.3.4 Mon Jan 16 11:33:38 PST 2 60 3300220 0 yes	
 Auto Registration Settings Management Dashbo riliuli Cisco User Preferences User Settings Event SV Dir SV Grime 	isco S r and S nd TV G Viewer ector Co m Confi Director obal DMP Commo 4310 S 4310 S	Assigned VLAN StactiumVision Ma Status onfiguration guration (10) 'Settings Settings (3) on Stutings Stutings Stutings	SV Director C Configur Enable fai Init build sigma,pts sigma,pts Enable M Assigned	sud_gnore configuration confi	Value true 100000 5.3.4 Mon Jan 16 11:33:38 PST 2 60 3300220 0 yes \$svd_jgnore	

Figure 13 Assigned VLAN Property Configuration for DMPs

Step 3 Click the Save icon.

Verifying DMPs, Groups, and Zones in the Management Dashboard

S, Note

e Before you verify DMP status, be sure that you have set the Assigned VLAN property for your DMP 4310s so that the VLAN compliance check can be performed. For more information, see the "Configuring the DMP 4310 Assigned VLAN Property for VLAN Compliance Check" section on page 38.

To check DMPs, groups, and zones after you upgrade your software, complete the following steps:

- **Step 1** Go to the Management Dashboard and verify that all of your groups, zones and DMPs are present and in the green state.
- Step 2 From the DMP and TV Controls dashboard drawer, run a Get Status on all DMPs to update Cisco StadiumVision Director's record of DMP MAC addresses using the following dashboard command path:
 DMP and TV Controls > Monitoring > Get Status.
- Step 3 Run an Initial Config to enable the Video Distribution Manager (VDM) configuration using the following dashboard command path:
 DMP and TV Controls > DMP Install > Initial Config.
- Step 4 Run Get Status to confirm that all DMPs have successfully rebooted.
- Step 5Stage the Flash template using the following dashboard command path:DMP and TV Controls > DMP Install > Stage Template.
- Step 6 Send Global DMP Settings to the DMPs using the following dashboard command path:DMP and TV Controls > Global > Global DMP Settings.

	Note	You must send the Global DMP Settings command twice to reboot the DMPs due to an issue with enabling Medianet services for the first time.
Step 7	Run Ge	et Status to confirm that the DMPs are in good health.
	Note	This will also update the MAC address for the DMPs.
Step 8	(Option comma DMP a	nal) Change the DMP State of healthy DMPs to "Production" using the following dashboard nd path: and TV Controls > Auto Registration > Change DMP State.
Step 9	Run Ge	et Status to check the DMP state after the change.
Step 10	Investig	gate any DMPs that are not in "Normal" state.

Verifying the Multicast Configuration

Cisco StadiumVision Director uses both unicast and multicast communications for DMP control-plane operation. The Cisco Connected Stadium design requires that Cisco StadiumVision Director uses the 239.193.0.0 multicast group address range.

The multicast group address for Cisco StadiumVision Director is configured in the "MulticastHostPort" registry.

To verify or configure the multicast addressing for Cisco StadiumVision Director, complete the following steps:

Step 1	From the Management Dashboard, select Tools > Advanced > Registry .
Step 2	Scroll to the "MulticastHostPort" registry key in the Parameters list and confirm the entry for the registry.
Step 3	To change the value, click on the value field and specify a multicast address in the range 239.193.0.0/24.
Step 4	Click Apply.

Setting Up the Quest Venue Manager to Send Updates to Cisco StadiumVision Director Server

After you upgrade, you need to set up the Quest Venue Manager to support sending updates to the Cisco StadiumVision server when menu items change.

To set up the Quest Venue Manager to send updates to the Cisco StadiumVision Director server, complete the following steps:

- **Step 1** Access the Quest server.
- Step 2 Go to the C:\Program Files\Quest POS\Quest Venue Manager\Services directory.

Step 3 Start the executable application program named "QuestInterfaceServiceManager" (Figure 14).

- 🗆 × _OX Cancel • 🛃 😡 Size Type 7 663 KB Application E 011 11:14 Application Application Applicatio XML Configura XML Configura QIS File XML Configuration File XML Configuration File 1 KB Application XML Config 1.5.157.2 Date

Figure 14 QuestInterfaceServiceManager Application

- Step 4 When the Quest Interface Service Manager application window opens, specify the following options (Figure 15):
 - a. In the Select a Service box, choose the Quest Menu Web Service Notification.
 - Select the **Enabled** checkbox so a checkmark appears. b.
 - In the URL box, enter "http://svd:8080/StadiumVision/services/TerminalUpdate." C.
 - d. In the Poll Interval box, select 1 minute.
 - Select the **Keypad** and **PLU** update checkboxes so a checkmark appears. e.
 - f. In the Terminal Type box, select Web Service.

Figure 15 Select a Service to Configure

Select a Service	Duest Manu Jalah Sanina Notificative
Sener d Serrice	
uest Menu Web Service	e Notifications Options
Enabled	
Usemame	
Password	
URL	Stadium/vision/services/TerminalUpdate
Poll Interval	1 Dinutes
UpdateType	Kenned V PIII V
Terminal Tupe	
remains type	Web Service

- Click OK. Step 5
- Step 6

ſ

- Restart the windows service to implement the configuration by completing the following steps:
 - a. From your laptop, click Start > Run...
 - **b.** When the Run dialog box opens, type "services.msc".

c. Find the Quest Interface Service and restart it (Figure 16).

vices						
Action View Help						
	•					
					_	
Services (Local)						
QuestInterfaceService	Name 🔺	Description	Status	Startup Type	Log On As	
-	QoS RSVP	Provides n		Manual	Local System	
Start the service	Quest Email Service		Started	Automatic	Local System	
	QuestAlertsService			Manual	Local System	
	QuestInterfaceService			Automatic	Local System	
	QuestSalesProcessingServ		Started	Automatic	Local System	
	QuestTerminalSchedulingS		Started	Automatic	Local System	
	Remote Access Auto Conn	Creates a		Manual	Local System	
	Remote Access Connectio	Creates a	Started	Manual	Local System	
	Remote Desktop Help Ses	Manages a		Manual	Local System	
	Remote Procedure Call (R	Provides th	Started	Automatic	Network S	
	Remote Procedure Call (R	Manages t		Manual	Network S	
	Remote Registry	Enables re	Started	Automatic	Local Service	
	Removable Storage			Manual	Local System	
	Routing and Remote Access	Offers rout		Disabled	Local System	
	Secondary Logon	Enables st	Started	Automatic	Local System	
	Security Accounts Manager	Stores sec	Started	Automatic	Local System	
	Security Center	Monitors s	Started	Automatic	Local System	
	Server .	Supports fil	Started	Automatic	Local System	
	Shell Hardware Detection	Provides n	Started	Automatic	Local System	
	Simple Mail Transfer Proto	Transports	Started	Automatic	Local System	
	Smart Card	Manages a		Manual	Local Service	
	SQL Server (MSSQLSERVER)	Provides st	Started	Automatic	Local System	
	SQL Server Active Directo	Enables int		Disabled	Network S	
	SQL Server Agent (MSSQL	Executes j	Started	Automatic	Local System	
	SQL Server Browser	Provides S		Disabled	Local System	
	SQL Server FullText Searc	Quickly cre	Started	Automatic	Local System	
	SQL Server VSS Writer	Provides th	Started	Automatic	Local System	
	SSDP Discovery Service	Enables dis	Started	Manual	Local Service	
	(9) · · · · · · · · · · · ·	Tracks such	Sharkod	Automotic	Local Suctors	

Figure 16 Restart the Quest Interface Service

What to Do Next

Use the "Appendix A: Post-Upgrade Checklist" to be sure that you have completed the required verification steps.