



## Preface

This document describes the requirements and tasks to install and upgrade the software for Cisco StadiumVision Director Remote Release 3.2. It also includes documentation for hardware installation and configuration on the Cisco UCS C22 server, if using that hardware for your Cisco StadiumVision Director Remote server platform.

The content is intended for Cisco StadiumVision system administrators and technical field engineers who are responsible for designing and deploying Cisco StadiumVision solutions. It is expected that readers of this document are familiar with basic IP networking, Linux, and VMware virtualization.

## Document Revision History

[Table 1](#) lists the technical changes made to this document since it was first published.

**Table 1** Document Revision History

Date	Change Summary
July 23, 2014	Revised references to ESX/ESXi in the following modules: <ul style="list-style-type: none"> <li>• <a href="#">“Getting Started Installing or Upgrading a Cisco StadiumVision Director Remote Server”</a></li> <li>• <a href="#">“Installing Cisco StadiumVision Director Remote Software on a Server for the First Time”</a></li> </ul>
May 15, 2014	Replaced errant table of minimum system requirements for the Cisco StadiumVision Director remote server for virtual platform in the <a href="#">“Getting Started Installing or Upgrading a Cisco StadiumVision Director Remote Server”</a> module on page 1.
May 12, 2014	Revised document to clarify upgrade scenarios and fix links.
April 21, 2014	First release of this document for Cisco StadiumVision Director Remote Release 3.2.0-82.

## Document Organization

Chapter	Description
<a href="#">“Getting Started Installing or Upgrading a Cisco StadiumVision Director Remote Server”</a>	Provides information that you should read before you perform an initial installation or upgrade of the Cisco StadiumVision Director Remote Release 3.2 software.
<a href="#">“Installing Cisco StadiumVision Director Remote Software on a Server for the First Time”</a>	Describes how to install the Cisco StadiumVision Director Remote Release 3.2 software from Cisco.com. The process applies to a brand new server that has never been installed with any version of Cisco StadiumVision Director Remote software.
<a href="#">“Upgrading Cisco StadiumVision Director Remote Software from Release 3.1 to Release 3.2 Using the TUI”</a>	Describes how to upgrade an existing server already running Cisco StadiumVision Director Remote software. This procedure is also referred to generally as an <i>ISO upgrade</i> and is similar to the ISO upgrade on Cisco StadiumVision Director using the Text Utility Interface (TUI).
<a href="#">“Using the Software Manager to Upgrade Cisco StadiumVision Director Remote Release 3.2 Software”</a>	Describes how to use the Cisco StadiumVision Director Remote Software Manager to upgrade Cisco StadiumVision Director Remote servers already running software Release 3.2 or later.
<a href="#">“Appendix A: Cisco UCS C22 Hardware Installation Guidelines”</a>	Provides the prerequisites and installation guidelines when installing the Cisco UCS C22 Server as your platform for the Cisco StadiumVision Director Remote software.

## Related Documentation

See the *Cisco StadiumVision Director Server Administration Guide, Release 3.2* for information about setting up and managing your Cisco StadiumVision Director servers.

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS Version 2.0.