



Preface

This document describes the requirements and tasks to install and upgrade the software for Cisco StadiumVision Director Remote Release 4.1. It also includes documentation for hardware installation and configuration on the Cisco UCS C22 server, if using that hardware for your Cisco StadiumVision Director Remote server platform.

The content is intended for Cisco StadiumVision system administrators and technical field engineers who are responsible for designing and deploying Cisco StadiumVision solutions. It is expected that readers of this document are familiar with basic IP networking, Linux, and VMware virtualization.

Document Revision History

[Table 1](#) lists the technical changes made to this document since it was first published.

Table 1 Document Revision History

| Date | Change Summary |
|-----------|--|
| May, 2016 | First release of this document for Cisco StadiumVision Director Remote Release 4.1.0-10. |

Document Organization

| Chapter | Description |
|--|---|
| “Getting Started Installing or Upgrading a Cisco StadiumVision Director Remote Server” | Provides information that you should read before you perform an initial installation or upgrade of the Cisco StadiumVision Director Remote software. |
| “Installing Cisco StadiumVision Director Remote Software on a Server for the First Time” | Describes how to install the Cisco StadiumVision Director Remote software from Cisco.com. The process applies to a brand new server that has never been installed with any version of Cisco StadiumVision Director Remote software. |
| “Using the Software Manager to Upgrade Cisco StadiumVision Director Remote Software” | Describes how to use the Cisco StadiumVision Director Remote Software Manager to upgrade Cisco StadiumVision Director Remote servers. |

| Chapter | Description |
|---|--|
| “Appendix A: Cisco UCS C22 Hardware Installation Guidelines” | Provides the prerequisites and installation guidelines when installing the Cisco UCS C22 Server as your platform for the Cisco StadiumVision Director Remote software. |
| “Appendix B: Using the TUI Upgrade Utility to Upgrade Cisco StadiumVision Director Remote Software” | Describes how to upgrade an existing server already running Cisco StadiumVision Director Remote software using the Text Utility Interface (TUI). |

Related Documentation and Resources

See the [Cisco StadiumVision Director Server Administration Guide, Release 4.1](#) for information about setting up and managing your Cisco StadiumVision Director servers.

For more information about other Cisco StadiumVision hardware and software installation, configuration, and operation, see the Cisco StadiumVision documentation available on Cisco.com at: www.cisco.com/go/stadiumvisiondocs

For more details, see the “Related Documentation and Resources” topic in the [Cisco StadiumVision Release Notes for Release 4.1](#).