



Preface

This document describes how to configure, use, and maintain the Cisco StadiumVision Mobile Reporter in Release 2.0 and later releases.

Document Revision History

[Table 1](#) lists the technical changes made to this document since it was first published.

Table 1 Document Revision History

Date	Change Summary
June 4, 2015	<ul style="list-style-type: none"> Removed the Cisco Prime Infrastructure 1.2 or later requirement for area reporting in “Service Quality Reporting and Cisco Prime Infrastructure Integration”. Refer to “Configuring Cisco StadiumVision Mobile Reporter for Service Quality Reporting” for reporting information.
May 26, 2015	<ul style="list-style-type: none"> Updated the version on the title page from 2.0 to 2.0.1-1. Updated the title page date from October, 2014 to May 26, 2015. Updated the Figure 1 on page 4. Added a note about event scheduling restrictions in “Configuring the Cisco StadiumVision Mobile Reporter Server”.
April 13, 2015	Added a note to the “Information About Uploading Data” section on page 17 regarding the scheduling of events.
October 17, 2014	Initial version for Cisco StadiumVision Mobile Reporter Release 2.0.

Document Organization

Module	Description
Cisco StadiumVision Mobile Reporter Overview	Provides an introduction to the Cisco StadiumMobile Reporter network architecture and application.
Configuring the Cisco StadiumVision Mobile Reporter Server	Describes how to set up the Cisco StadiumVision Mobile Reporter system and is intended for the system installer and administrator (admin user).
Admin and Marketing User Report Reference	Provides a detailed reference of the reports available in Cisco StadiumVision Mobile reporter
System Accounts on the Cisco StadiumVision Mobile Reporter Server	Describes the default system accounts implemented by Cisco StadiumVision Mobile Reporter for access and control of certain server functions.
Cisco StadiumVision Mobile Reporter Data Management	Describes the information that you should know about managing Cisco StadiumVision Mobile Reporter data and disk utilization on the server.
Cisco StadiumVision Mobile Reporter Failover	Describes how to set up two servers for a redundant environment and how to manually fail over as needed.
Cisco StadiumVision Mobile Reporter Text Utility Interface	Provides an overview of the Cisco StadiumVision Mobile TUI and how to use it.
System State Reports	Provides information about the System State Report feature that enables easy capture and export of system state data for Cisco StadiumVision servers, as well as raw data from the Cisco StadiumVision Reporter databases. This information can be sent to a remote support engineer to help troubleshoot any issues that occur with the system.
Troubleshooting the Raw Database	Describes some of the ways that you can troubleshoot the Raw Data Database
Enabling a TAC User Account (Cisco Personnel Only)	Describes how to create a TAC account for Cisco Technical Support to have full access to the CLI.

Related Documentation

For the listing page of all Cisco StadiumVision documentation, go to:

<http://www.cisco.com/c/en/us/support/video/stadiumvision/tsd-products-support-series-home.html>

- [Cisco StadiumVision Mobile Release Notes](#)

The following documents are available on Cisco.com at:

<http://www.cisco.com/c/en/us/support/video/stadiumvision/products-maintenance-guides-list.html>

- [Cisco StadiumVision Mobile Reporter and Cisco StadiumVision Mobile Streamer Software Installation and Upgrade Guide](#)—This guide contains instructions on how to install the StadiumVision Mobile Streamer software.

- *Cisco StadiumVision Mobile Reporter Administration Guide*—This guide describes how to install, configure and operate the StadiumVision Mobile Reporter server.
- *Cisco StadiumVision Mobile Streamer Administration Guide*—This guide describes how to install, configure and operate the StadiumVision Mobile Streamer server.
- *Cisco StadiumVision Mobile SDK Guide*—This guide describes how to use the library elements provided in the SDK (Software Development Kit) to create a venue application for mobile devices that accesses the Cisco StadiumVision Mobile feeds.
- *Cisco UCS C220 Installation and Service Guide*—This hardware guide contains information and instructions for installing and servicing the Cisco UCS C220 server. The UCS C220 is the server on which the StadiumVision Mobile Streamer and Reporter each run.
- *Cisco UCS C200 Installation and Service Guide*—This hardware guide contains information and instructions for installing and servicing the Cisco UCS C200 server. The UCS C200 is the server on which the StadiumVision Mobile Streamer and Reporter each run.

The following document is available by contacting your Cisco sales representative:

- *Cisco StadiumVision Mobile Design and Implementation Guide*—This guide provides additional information regarding the Streamer parameters described in this document.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

