



Preface

This document describes how to configure, operate and monitor the Cisco StadiumVision Mobile Streamer in Release 2.1 and later. The document is intended for venue operators who are responsible for administering and operating the Cisco StadiumVision Mobile Streamer.

Document Revision History

[Table 1](#) lists the technical changes made to this document since it was first published.

Table 1 *Document Revision History*

Date	Change Summary
November 5, 2015	<ul style="list-style-type: none"> • Changed the location of the <i>Cisco StadiumVision Mobile SDK Programmer's Guide</i> to Cisco DevNet under the “Related Documentation” section on page viii and provided links to the new content. • Revised the streaming audio session source description in Table 4 and Table 7. • Clarified the steps under “File Session Configuration” section on page 15 to configure C-Cast integration. • Updated Figure 10 on page 32 removing the setup automatic data archive from the figure and corresponding text. • Defined what an episode number is in the “External Systems” section on page 33 and how a number is assigned. • Updated figures throughout the guide to improve image resolution and clarity.
July 20, 2015	<ul style="list-style-type: none"> • Removed the process for Setting Up Automatic Data Archiving from “Backing Up and Restoring the Cisco StadiumVision Mobile Streamer”. While automatic data archiving is an available option in the TUI, it is not currently supported.
May 26, 2015	<ul style="list-style-type: none"> • Initial version for Cisco StadiumVision Mobile Streamer Release 2.1.

Document Organization

Chapter	Description
“Configuring the Cisco StadiumVision Mobile Streamer”	Describes how to configure the Cisco StadiumVision Mobile Streamer.
“Backing Up and Restoring the Cisco StadiumVision Mobile Streamer”	Describes how to backup and restore the Cisco StadiumVision Mobile Streamer.
“Cisco StadiumVision Mobile Streamer Text Utility Interface”	Provides an overview of the Text Utility Interface (TUI) for the Cisco StadiumVision Mobile Streamer. The TUI provides a console-based interface for use by system installers, administrators, and troubleshooting personnel to perform routine system tasks such as modifying system configurations, changing passwords, and checking system logs.

Related Documentation

For the listing page of all Cisco StadiumVision documentation, go to:

<http://www.cisco.com/c/en/us/support/video/stadiumvision/tsd-products-support-series-home.html>

- [Cisco StadiumVision Mobile Release Notes](#)

The following documents are available on Cisco.com at:

<http://www.cisco.com/c/en/us/support/video/stadiumvision/products-maintenance-guides-list.html>

- [Cisco StadiumVision Mobile Reporter and Cisco StadiumVision Mobile Streamer Software Installation and Upgrade Guide](#)—This guide contains instructions on how to install the StadiumVision Mobile Streamer software.
- [Cisco StadiumVision Mobile Reporter Administration Guide](#)—This guide describes how to install, configure and operate the StadiumVision Mobile Reporter server.
- [Cisco StadiumVision Mobile Streamer Administration Guide](#)—This guide describes how to install, configure and, operate the StadiumVision Mobile Streamer server.
- [Cisco UCS C220 Installation and Service Guide](#)—This hardware guide contains information and instructions for installing and servicing the Cisco UCS C220 server. The UCS C220 is the server on which the StadiumVision Mobile Streamer and Reporter each run.
- [Cisco UCS C200 Installation and Service Guide](#)—This hardware guide contains information and instructions for installing and servicing the Cisco UCS C200 server. The UCS C200 is the server on which the StadiumVision Mobile Streamer and Reporter each run.

Beginning with Release 2.1.1, the following documents are available on the Cisco StadiumVision Mobile (SVM) SDK DevNet site at:

<https://developer.cisco.com/site/svm/>

- [Cisco StadiumVision Mobile SDK Guides](#)—These guides describe how to use the library elements provided in the SDK (Software Development Kit) to create a venue application for mobile devices that accesses the Cisco StadiumVision Mobile feeds.
 - [Cisco StadiumVision Mobile Android Guide](#)
 - [Cisco StadiumVision Mobile iOS Guide](#)
 - [Cisco StadiumVision Mobile Windows Guide](#)

The following document is available by contacting your Cisco sales representative or from Cisco Partner Central at:

<https://www.ciscoet.com/sports-and-entertainment/stadiumvision-mobile>

- *Cisco StadiumVision Mobile Design and Implementation Guide*—This guide provides additional information regarding the Streamer parameters described in this document.

Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as an RSS feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service. Cisco currently supports RSS Version 2.0.

