## cisco.

## About This Guide

This document describes how to operate Cisco Vision Dynamic Signage Director including the concepts and tasks that you need to understand to deliver your content to a screen, run an event, and monitor and maintain the operation of Cisco Vision software.

## **Revision History**

Table 1 on page 14 provides information about changes to this document.

Table 1 Revision History

Date	Description
November 25, 2019	Updates and enhancements concerning video wall configuration and portrait-orientation display were made.
October 4, 2019	Initial publication of Release 6.2 document. The following updates and enhancement were made to Cisco Vision Dynamic Signage Director:
	Two new Series 4 DMPs, CV-HD2 and CV-UHD2, are available. For detailed specifications on these devices, see the Release 6.2: Cisco Vision Deployment Guide for Digital Media Players.
	<ul> <li>Enhancement of the Main Menu to include a new global navigation icon for Configuration. This interface is a redesign of the previous release Control Panel &gt; Setup UI. Configuration accesses the following 10 areas:</li> </ul>
	<ul> <li>Venues, Users, Devices, Groups &amp; Zones, Luxury Suites, Channel Definitions, Channel Guide, Data Integration, Proof of Play, and Triggers</li> </ul>
	Enhancements of the Script Management UI to include creating event scripts here.
	■ Enhanced Asset Library interface to include automated content import to <b>Inbox</b> .
	■ DMP Default Admin Password is Randomly Generated
	■ DMP Management Changes: Diagnostic Web Server
	■ Enable/disable Browser Inspector
	■ Multi-Venue Support, Change to UI
	Frameless External HTML Browser
	<ul> <li>Customizable Background Images for Login, DMP, or Channel Guide</li> </ul>
	Devices Interface and Enhancements
	Login Notification Screens and Lockout
	Force Stop is the new Default for Scripts
	Main Menu Logout Only
	See Cisco Vision Dynamic Signage Director Release Notes for Release 6.2