



## Monitoring Your WAAS Network

---

This chapter describes the monitoring tools available in the Cisco WAAS Central Manager GUI that can help you monitor activity, configure flow monitoring, and customize reports.

For information on Cisco WAAS system logging and troubleshooting, see Chapter 16, “[Troubleshooting Your WAAS Network](#)” and see the [Cisco WAAS Troubleshooting Guide for Release 4.1.3 and Later](#) on Cisco DocWiki.



### Note

---

Throughout this chapter, the term Cisco WAAS device is used to refer collectively to the WAAS Central Manager and Cisco Wide Area Application Engines (WAEs) in your network. The term WAE refers to WAE and Wide Area Application Virtual Engine (WAVE) appliances, Cisco Service Ready Engine Service Module (SRE-SM) modules running WAAS, and Cisco Virtual WAAS (vWAAS) instances.

---

This chapter contains the following sections:

- [Viewing System Information from the System Dashboard Window](#)
- [Viewing Device Information](#)
- [Customizing a Dashboard or Report](#)
- [WAAS Chart Descriptions](#)
- [WAAS Table Descriptions](#)
- [Using Predefined Reports to Monitor WAAS](#)
- [Managing Reports](#)
- [Configuring Flow Monitoring](#)

## Viewing System Information from the System Dashboard Window

The Cisco WAAS Central Manager GUI allows you to view general and detailed information about your Cisco WAAS network from the System Dashboard window. This section describes the System Dashboard window and contains the following topic:

- [Monitoring Graphs and Charts](#)

**Note**

For information on viewing the alarm panel and on viewing device alarms, see [WAAS Central Manager Alarm Panel](#) in Chapter 16, “Troubleshooting Your WAAS Network.”

Figure 15-1 shows the System Dashboard window.

**Figure 15-1** System Dashboard Window



The information displayed in the charts in the System Dashboard window is based on a snapshot of your WAAS network that represents the state of your WAE devices at the end of every two polling periods. You can configure the interval between polls in the WAAS Central Manager GUI (**Configure > Global > System Properties > System.monitoring.collectRate**). The default polling rate is 300 seconds (5 minutes). Alarms are presented in real time and are independent of the polling rate.

## Monitoring Graphs and Charts

The default System Dashboard window contains the following graphical displays about the application traffic processed by your WAAS system:

- **Traffic Summary** chart—Displays the applications with the highest percentage of traffic in the WAAS network for the last hour.
- **Effective WAN Capacity** graph—Displays the effective increased bandwidth capacity of the WAN link as a result of WAAS optimization, as a multiple of the actual bandwidth.
- **Traffic Volume and Reduction** graph—Displays the original and optimized traffic volume and percentage of traffic reduction over the last hour.
- **Compression Summary** chart—Displays the ten applications with the highest percentage of traffic reduction for the WAAS network for the last hour. The percent calculation excludes pass-through traffic.

Numbers shown in charts and graphs are rounded to whole units (KB, MB, or GB), while those displayed in tables are rounded to three decimal places. Data values exported to CSV files are in bytes, and are therefore, not rounded.

You can customize the graphical displays and tables that are displayed on the system dashboard. For more information, see [Customizing a Dashboard or Report](#). Individual charts are described in more detail in [WAAS Chart Descriptions](#).

Much of the device, statistical, and alarm information that is presented in the system dashboard and associated graphs and charts is also available programmatically through the monitoring API. For more information, see [Cisco Wide Area Application Services API Reference](#).

**Note**

You must synchronize the clock on each WAE device within 5 minutes of the primary and secondary WAAS Central Managers for statistics to be consistent and reliable. For information on using an NTP server to keep all your WAAS devices synchronized, see [Configuring NTP Settings](#) in Chapter 10, “Configuring Other System Settings.” Additionally, if the network delay in the Central Manager receiving statistical updates from the WAEs is greater than 5 minutes, statistics aggregation may not operate as expected.

**Note**

For information on how to troubleshoot device alarms, see [Troubleshooting Devices Using Alerts](#) in Chapter 16, “Troubleshooting Your WAAS Network.”

## Viewing Device Information

This section describes how to use the WAAS Central Manager device windows:

- [Devices Window](#)—Displays a list of and basic information for all WAAS devices.
- [Device Dashboard Window](#)—Displays detailed information about a specific device, such as the installed software version and whether the device is online or offline.
- [Device Status Dashboard Window](#)—Displays traffic information for all WAAS devices.
- [Viewing and Unlocking Device Users](#)—Displays the list of users, in table format, with information including username, number of login failures, and time of last login failure.

## Devices Window

The Devices window lists all the WAAS devices that are registered with the WAAS Central Manager. To view this list, choose **Devices > All Devices** in the WAAS Central Manager GUI.

[Figure 15-2](#) shows an example of the Devices window.

Figure 15-2 Devices Window

Device Name	Service	IP Address	Management Status	Device Status	Location	Software Version	Device Type	Max Connections	License Status	Alarm Count
BA-CR11E10	AppNav-XE Controller	9.2.192.1	Online	OK	BA-CR11E10-location	15.5(3)275.2.2	OE-CR11E10-VME	N/A	Permanent	Not Supported
BA-WAAS	Application Accelerator	9.2.192.19	Online	OK	BA-WAAS-location	8.4.0	OE-WAAS-ESX	12000	Enterprise	Not Active
DC-WAAS	Application Accelerator	9.2.195.19	Online	OK	DC-WAAS-location	8.4.0-aga	OE-WAAS-ESX	150	Enterprise	Not Active
ENCS-8800	Application Accelerator	9.2.192.17	Online	OK	ENCS-8800-location	8.4.0	OE-ENCS	6000	Enterprise	Not Active
vCN	OS (Primary)	9.2.192.16	Online	OK		8.4.0-aga	OE-VWAAS-ESX	N/A	Enterprise	Not Supported

This window displays the following information about each device:

- Services enabled on the device. See [Table 15-1](#) for a description of these services.
- IP address of the device.
- Management Status (Online, Offline, Pending, or Inactive). For more information about the status, see [Device Alarms](#) in Chapter 16, “Troubleshooting Your WAAS Network.”
- Device Status. The system status reporting mechanism uses four alarm lights to identify problems that have to be resolved. Each light represents a different alarm level as follows:
  - Green—No alarms (the system is in excellent health)
  - Yellow—Minor alarms
  - Orange—Major alarms
  - Red—Critical alarms

When you hover your mouse over the alarm light bar, a message provides further details about the number of alarms. Click the alarm light bar to troubleshoot the device. For more information, see [Troubleshooting Devices Using Alerts](#) in Chapter 16, “Troubleshooting Your WAAS Network.”

- Location associated with the device. For more information about locations, see [Chapter 3, “Using Device Groups and Device Locations.”](#) You can view reports that aggregate data from all the devices in a location. For more information, see [Location-Level Reports](#).
- Software version installed and running on the device. For WAAS Express and AppNav-XE devices, both the Cisco IOS and the WAAS Express or AppNav-XE software versions are shown.
- Device Type. If you see a type such as OE294, the numbers refer to the model number, such as WAVE-294. NME-WAE refers to an NME-WAE module. For WAAS Express and AppNav-XE devices, the router platform is displayed. For vWAAS devices, OE-VWAAS is displayed, and for Cisco WAAS for Cisco Integrated Services Routers (ISR) devices, ISR-WAAS is displayed.
- License Status. Displays the installed licenses. See [Table 15-2](#) for a description of the possible values.

WAE devices that are at a later software version level than the WAAS Central Manager are displayed in red. Also, if the standby WAAS Central Manager has a different version level from the primary WAAS Central Manager, the standby WAAS Central Manager is displayed in red.

You can filter your view of the devices in the list by using the Filter and Match If fields above the list. Enter a filter string in the text field and click **Go** to apply the filter. The filter settings are shown below the list. Click **Clear Filter** to clear the filter and show all the devices. Filtering allows you to find devices that match the criteria that you set.

**Table 15-1** Service Descriptions

Service	Description
CM (Primary)	The device has been enabled as the primary WAAS Central Manager.
CM (Standby)	The device has been enabled as a standby WAAS Central Manager.
Application Accelerator	The device has been enabled as an application accelerator.
AppNav Controller	The device has been enabled as an AppNav Controller.
AppNav-XE Controller	The device is a router using Cisco IOS XE with the AppNav-XE controller functionality enabled.
WAAS Express	The device is a router using Cisco IOS with the WAAS Express functionality enabled.

**Table 15-2** License Status Descriptions

License Status	Description
Not Active	No license is installed, or the first configuration synchronization has not yet occurred.
Transport, Enterprise	The listed licenses are installed.
Active	A router device is registered, but the first configuration synchronization has not yet occurred.
Permanent	A router device has a permanent license installed.
Evaluation, Expires in X weeks Y days	A router device has an evaluation license installed and it expires after the indicated period.
Expired	A router device has an expired evaluation license. A permanent license must be obtained for this device to operate.
N/A	The license status is not applicable because the device version is 4.0.

**Note**

After the devices has been registered to the WAAS Central Manager (WCM), a WCM DB VACUUM (runs between 1 AM – 2 AM) process takes more time (Min:2 min, Avg:7 min, Max:25min) due to the augmented load on computing resources.


- Some of the WAEs may go temporarily offline. They are online automatically once the VACUUM process is complete.
- Statistics Aggregation threads may take more than 5 minutes and the same would be indicated in the logs. As a result statistics samples, might be missing at network level.
- User, including the administrator will not be able to use (login) the WCM as the complete DB will be locked.

## Device Dashboard Window

The Device Dashboard window provides detailed information about a WAAS device, including device model (such as WAVE-7541-K9 or OE-VWAAS-KVM), IP address, interception method, and device-specific charts. (See [Figure 15-3](#).)

To access the Device Dashboard window, choose **Devices** > *device-name*.

**Figure 15-3** Device Dashboard Window

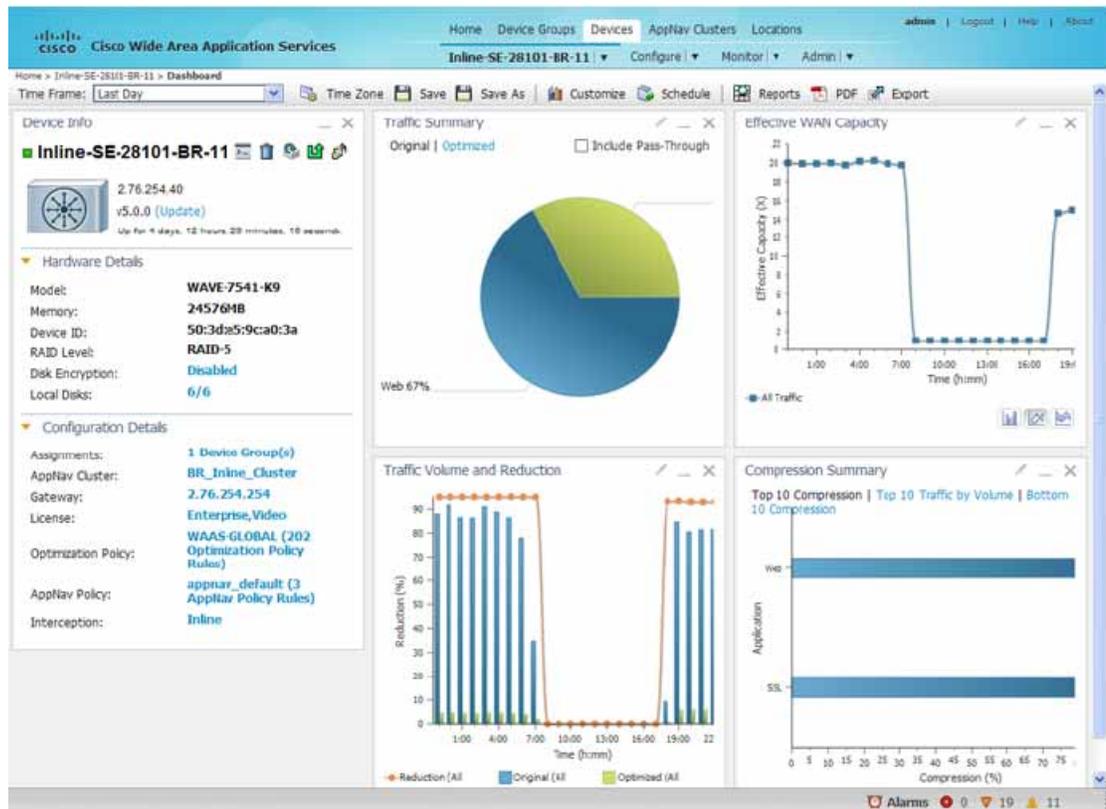

The Device Dashboard window for a WAAS Express or AppNav-XE device looks slightly different. It lacks some WAE-specific information and controls.

From the Device Dashboard window, you can perform the following tasks:

- View charts and graphs about the application traffic processed by the selected WAE device. (No charts or graphs are displayed if a WAAS Central Manager device is selected.)
- Customize the charts displayed in the window. For more information, see [Customizing a Dashboard or Report](#). Individual charts are described in more detail in [WAAS Chart Descriptions](#).
- View basic details, such as whether the device is online, the device's IP address and hostname, the software version running on the device, and the amount of memory installed in the device, the license status, and so forth.
- View the device groups to which the device belongs. For more information about device groups, see [Chapter 3, "Using Device Groups and Device Locations."](#) (Not available on AppNav-XE devices.)
- View the users that are defined on the device and unlock any locked-out users. For more information, see [Viewing and Unlocking Device Users](#). (Not available on WAAS Express and AppNav-XE devices.)
- Click the **Update** link to update the software on the device. For more information, see [Chapter 14, "Maintaining Your WAAS System."](#) (Not available on WAAS Express and AppNav-XE devices.)
- Click the **Telnet** icon to establish a Telnet session into the device and issue CLI commands.

- Click the **Delete Device** icon to delete the device.
- Click the **Full Update** icon to reapply the device configuration from the Central Manager to the device. (Not available on WAAS Express and AppNav-XE devices.)
- Click the **Reload** icon to reboot the device. (Not available on WAAS Express and AppNav-XE devices.)
- Click the **Restore Default Policies** icon to restore the default predefined policies on the device. For more information, see [Restoring Optimization Policies and Class Maps](#) in Chapter 12, “Configuring Application Acceleration.” (Not available on AppNav-XE devices.)
- Assign and unassign the device to device groups. For more information, see [Chapter 3, “Using Device Groups and Device Locations.”](#) (Not available on AppNav-XE devices.)
- For a WAAS Express device, a WAAS Enabled Interfaces item shows the number of interfaces on which WAAS optimization is enabled. You can click the number to go to the Network Interfaces configuration window, which displays device interface details and allows you to enable or disable optimization on the available interfaces. For more details, see [Enabling or Disabling Optimization on WAAS Express Interfaces](#) in Chapter 6, “Configuring Network Settings.”
- For a WAAS Express device, you can view the DRE item to determine if the device supports data redundancy elimination (DRE) optimization, which is not supported on some WAAS Express device models. This item reads Supported or Unsupported.
- For a WAAS Express device, you can view the SSL item to determine if SSL acceleration is available. This item reads Available or Unavailable.
- For a vWAAS device, the No. of CPUs, Max TCP Connections, and Interception Method fields are shown. For more details, see Chapter 5, “Configuring Traffic Interception.”
- On an AppNav Controller, an AppNav Cluster item shows any defined AppNav Clusters. You can click a cluster name to go to that cluster’s home window. Also, an AppNav Policy item shows defined AppNav policies, if any. Click a policy name to go to the policy configuration window.

## Device Status Dashboard Window

The Device Status Dashboard window, shown in [Figure 15-4](#), lists all the WAAS devices that are registered with the WAAS Central Manager. To view this list, choose **Home > Monitor > Network > Device Status** in the WAAS Central Manager GUI.

**Figure 15-4** Device Status Dashboard Window

Device	Management	Original Traffic	Optimized Traf.	Pass-Through	Reduction (%)	Effective Capa.	Peak Connecti.	Device Connec.	Total Active C.
AAA-BR2-SM-710	Online	871.809 KB	0 Bytes	1.095 MB	100	1000.0	0	500	0
AAA-DC2-594-2-a	Online	10.298 MB	10.941 MB	2.393 MB	0	1.0	1	750	3
AAA-POD7-ER-39	Online	0 Bytes	0 Bytes	N/A	0	1.0	0	200	0
AAA-POD7-ER-39	Online	0 Bytes	0 Bytes	N/A	0	1.0	0	0	0
BR-SM-750	Online	954.563 KB	7.766 KB	61.614 KB	99.19	123.46	1	750	12
CPARH-WAASK-C	Online	9.730 GB	161.437 MB	N/A	98.38	61.73	158	250	1311
CPARH-WAE-594	Online	10.479 GB	1.269 GB	358.739 MB	87.89	8.26	251	750	1901
DC-SMB-WAE-2-a	Online	0 Bytes	0 Bytes	0 Bytes	0	1.0	0	200	0
Galaxy-Han-DC-B	Offline	0 Bytes	0 Bytes	0 Bytes	0	1.0	0	150000	0
Galaxy-Han-ESSE	Offline	0 Bytes	0 Bytes	0 Bytes	0	1.0	0	6000	0
MSP1-POD48-DC-C	Offline	0 Bytes	0 Bytes	0 Bytes	0	1.0	0	0	0
MSP1BR-594	Online	67.543 MB	69.488 MB	711.960 KB	0	1.0	225	750	2564

[Table 15-3](#) displays information about each column in the Device Status Dashboard window:

**Table 15-3** Column and Field Descriptions for the Device Status Dashboard Window

Device Status Field or Column	Device Status Column Description
Time Frame drop-down list	<p>Choose one of the following time frame to display status for the device:</p> <ul style="list-style-type: none"> <li>• Last Hour</li> <li>• Last Day</li> <li>• Last Week</li> <li>• Last Month</li> <li>• Custom dates</li> </ul> <p> <b>Note</b> Data for Management Status and Active Connections is displayed only when you select <b>Last Hour</b>.</p> <p>For more information on time frames, see <a href="#">Customizing a Dashboard or Report</a></p>
Device	The name of the device.
Management Status	A status of Online, Offline, Pending, or Inactive. For more information on device management status and alarms related to device management status, see <a href="#">Device Alarms</a> in Chapter 16, “Troubleshooting Your WAAS Network.”
Original Traffic	The amount of original traffic, in GB, passing through the device.
Optimized Traffic	The amount of optimized traffic, in GB, passing through the device.
Pass-Through Reduction (%)	The percentage of traffic reduction for the time period specified in the Time Frame drop-down list.
Effective Capacity (X)	The effective bandwidth capacity of the device as a result of optimization.
Peak Connection	The peak optimized connections for the device.
Device Connection Limit	The maximum connection limit for the device.
Total Active Connections	The total number of current active connections for the device.

## Device Status Report

You can choose to view the Device Status report as a pdf or a .csv file by selecting the respective icons on the dashboard. The Time Zone option enables you to customize the time zone for the report, based on your preference. For more information on setting time zones, see [Customizing a Dashboard or Report](#).

You can filter your view of the devices in the list by using the Filter and Match If fields above the list. Enter a filter string in the text field and click the Go button to apply the filter. The filter settings are shown below the list. Click the Clear Filter button to clear the filter and show all devices. Filtering allows you to find devices in the list that match the criteria that you set.

## Viewing and Unlocking Device Users

To view the users defined on a WAAS device, go to **Devices** > *device-name*, and then, from the *device-name* menu, choose **Device Users**. On a Central Manager device, choose **CM Users**).

The list of users is displayed in a table, which shows the username, number of login failures, maximum number of login failures allowed, and the time of the last failed login. To view the details of a user, click the **View** icon next to that username.

If a user is locked out because the user has reached the maximum number of failed login attempts, unlock the user by checking the check box next to the username and clicking **Unlock** below the table.

## Customizing a Dashboard or Report

You can customize the system and device dashboards and reports, if any, in the same way. For more information about creating custom reports, see [Managing Reports](#).


This section contains the following topics:

- [The WAAS Central Manager Report Panel](#)
- [Adding a Chart or Table](#)
- [Configuring Chart Settings](#)

## The WAAS Central Manager Report Panel

An example of a report is shown in [Figure 15-5](#).

**Figure 15-5** Report Pane

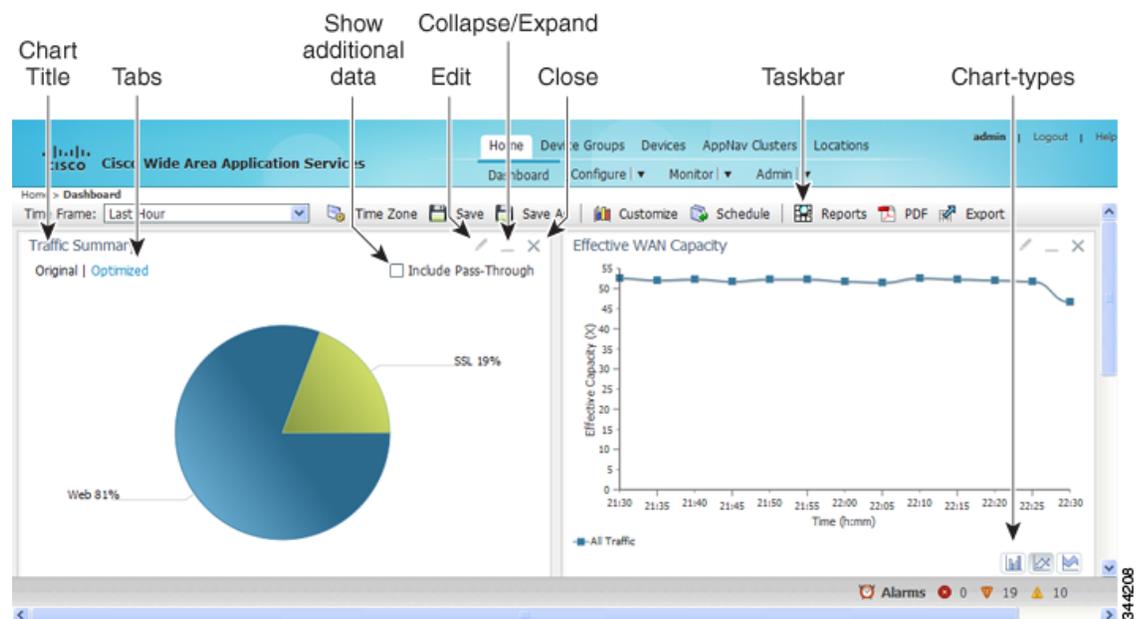

Taskbar icons and controls across the top of the dashboard or report allow you to do the following:

- **Time Frame**—Allows you to choose one of the several common time frames from the drop-down list:
  - **Last Hour**—Displays data for the past hour, in five-minute intervals (default). You can change the interval using the `System.monitoring.collectRate` configuration setting described in [Modifying the Default System Configuration Properties](#) in Chapter 10, “Configuring Other System Settings.”
  - **Last Day**—Displays data for the past day (in hourly intervals).
  - **Last Week**—Displays data for the past week (in daily intervals).
  - **Last Month**—Displays data for the past month (in daily intervals).
  - **Custom**—Enter starting and ending dates in the From and To fields. Click the calendar icon to choose dates from a pop-up calendar.

The time frame setting is stored individually for each report and Central Manager user. Additionally, the `System.monitoring.timeFrameSettings` system property controls the system default time frame setting (see [Modifying the Default System Configuration Properties](#) in Chapter 10, “Configuring Other System Settings”).

**Note**


---

If you create a chart with a custom date setting that spans more than two months prior to the current date, data for the most recent two months are plotted with daily data and data for all the earlier months are plotted with aggregated monthly data. The chart might appear to have a large drop in traffic for the most recent two months because the daily traffic totals are likely to be much smaller than the monthly traffic totals. However, this difference is normal.

---

- **Time Zone**—Allows you to choose one of the following options from the Time Zone drop-down list:
  - **UTC**—Sets the time zone of the report to UTC.
  - **CM Local Time**—Sets the time zone of the report to the time zone of the WAAS Central Manager (default).

When you change the time zone, the change applies globally to all reports. The time zone setting is stored individually for each Central Manager user.

- **Save**—Saves the dashboard or report with its current settings. The next time you view it, it is displayed with these settings.
- **Save As**—Saves the report with its current settings under a new name. A dialog box allows you to enter a report name and an optional description. You can enter only the following characters: numbers, letters, spaces, periods, hyphens, and underscores. The report will be available in the **Monitor > Reports > Reports Central** window.
- **Customize**—Allows you to add a chart or table to a dashboard or report. For information on adding a chart or table, see [Adding a Chart or Table](#).
- **Schedule**—Allows you to schedule reports to be generated once, or periodically, such as hourly, daily, weekly, or monthly. When a scheduled report is generated, you can have a PDF copy of the report e-mailed to you automatically.
  - In the Date field, enter the schedule date in the format DD/MM/YYYY or click the calendar icon to display a calendar from which to choose the date.
  - From the Hours drop-down list, choose the hours. The time represents the local time at the WAAS Central Manager.
  - From the Minutes drop-down list, choose the minutes. The time represents the local time at the WAAS Central Manager.

- From the Frequency drop-down list, choose **Once**, **Hourly**, **Daily**, **Weekly**, or **Monthly** for the report frequency.
- In the No. of Reports field, enter the number of times that a reoccurring report is to be generated. (After a report is generated a specified number of times, the report is no longer generated.)
- In the Email Id(s) field, enter the email addresses of the report recipients, separated by commas.
- In the Email Subject field, enter the subject of the email message.
- Reports—Allows you to view the scheduled reports. For instructions about viewing scheduled reports, see [Viewing or Deleting a Scheduled Report](#).
- PDF—Generates a PDF format of a report, including the charts and table data. If you want a custom logo in your PDF report, you can upload the logo by choosing **Home Dashboard**> **Admin**> **Custom Logo**, and clicking **Upload**. The custom logo is displayed in the PDF format of the report. Additionally, when you schedule a report, you can select **Custom Logo** for the logo to appear on the scheduled report. This option is available only when you have uploaded the custom logo.
- Export—Exports the chart and table statistical data to a CSV file. The statistical data shown in charts is rounded to whole units (KB, MB, or GB), while the exported data contains exact byte values.

Controls at the top of individual charts allow you to customize the chart as follows (not all controls are available in every chart):

- Chart title—Allows you to click and drag in order to move the chart to a different location in the report pane.
- Edit icon—Allows you to edit the chart settings, as described in [Configuring Chart Settings](#).
- Collapse/Expand icon—Allows you to collapse or expand the chart. When a chart is collapsed, this icon changes to Expand, which restores the chart to its normal size.
- Close icon—Closes the chart.
- Tabs—Allows you to have a choice of multiple tab views that you can access by clicking the desired tab name. Note that not all charts have this feature.
- Check box to show additional data—Allows you to check the check box labeled with an optional data statistic to include the data in the chart. Note that not all charts have this feature.


Chart-type icons at the bottom of individual charts allow you to choose the chart type as follows: column chart, line chart, area chart, stacked line chart, stacked area chart. Note that not all charts have this feature.

## Adding a Chart or Table

To add a chart or table to a dashboard or report, follow these steps:

- 
- Step 1** From the dashboard or report chart panel, click the **Customize** icon in the taskbar. The Customize window is displayed, as shown in [Figure 15-6](#).

Figure 15-6 Customize Window

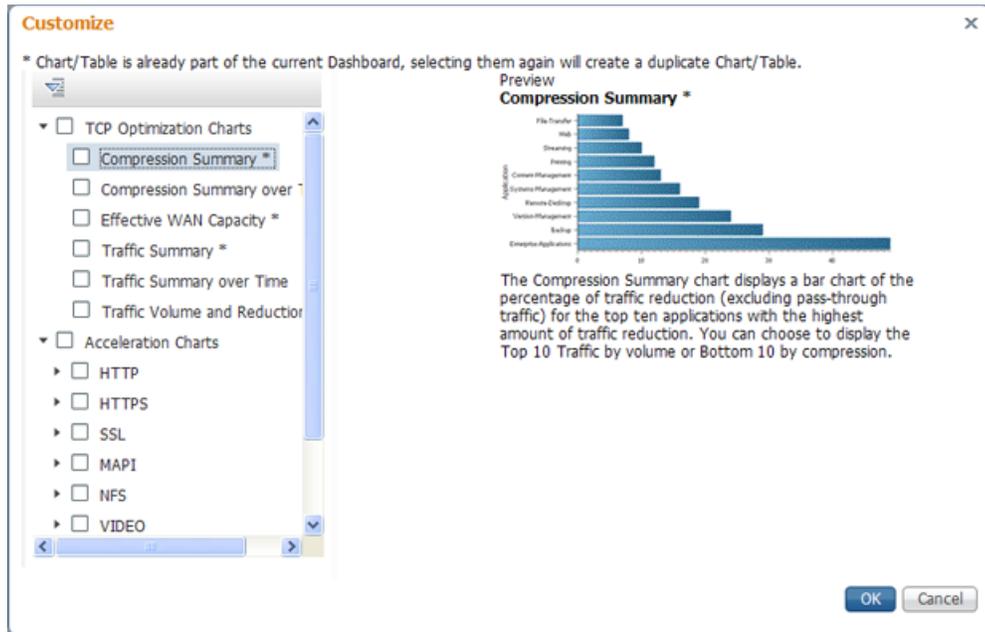

- Step 2** Expand any of the chart categories by clicking on the small triangle next to the corresponding category.
- Step 3** Check the check box next to each chart or table that you want to be displayed as a report. Individual charts are described in more detail in [WAAS Chart Descriptions](#).

Charts that are currently included in the dashboard or report are marked with an asterisk (\*). A report can contain a maximum of eight charts and tables (the Network Summary report can contain 12 charts and tables).



**Note** At the WAAS Express device level, only charts for supported accelerators are available.

- Step 4** To preview a chart, click the chart's title. The preview is displayed on the right of the pane.
- Step 5** Click **OK**.

To delete a chart or table from a dashboard or report, click **Close** on the chart and save the report.

## Configuring Chart Settings

To configure the data presented in a chart, follow these steps:

- Step 1** Click the **Edit** icon in the upper right corner of a chart. The Settings window is displayed.



**Note** Not all settings are available for all chart types.

- Step 2** (Optional) From the Traffic Direction drop-down list, choose one of the following options:

- **Bidirectional**—Includes LAN-to-WAN traffic as well as WAN-to-LAN traffic traveling through this WAAS device.
  - **Inbound**—Includes traffic from the WAN to the client through this WAAS device.
  - **Outbound**—Includes traffic traveling from a client to the WAN through this WAAS device.
- Step 3** (Optional) From the Access Mode drop-down list, choose one of the following options:
- **Both**—Displays statistics for both single-sided and double-sided optimization.
  - **With WAAS Peer**—Display statistics for double-sided optimization.
  - **Without WAAS Peer**—Displays statistics for single-sided optimization.
- Use these options are to include or exclude single-sided optimization. The single-side statistics option is available only for the Traffic Summary, Effective WAN capacity, Traffic Volume and Reduction, Compression Summary, Traffic Summary over time, Compression Summary over time, Throughput Summary and Optimized Connections Over Time charts.
- Step 4** (Optional) From the Select Series For drop-down list, choose one of the following:
- **Application**—The chart data is based on application statistics.
  - **Classifier**—The chart data is based on classifier (class map) statistics.
- Step 5** (Optional) In the **Application** or **Classifier** list, check the check box next to the applications or classifiers whose statistics you want to include in the chart data. To include all the applications, check the **All Traffic** check box. You can filter the list items by using the Quick Filter above the list. These lists are available only for some chart types.
- Step 6** (Optional) Some charts have other types of data series from which to choose. Check the check box next to each of the data series that you want to include in the chart data.
- Step 7** Click **OK**.

**Note**

Data collection for applications and classifiers occurs at slightly different times in the Central Manager. Therefore, the statistics can be different when viewing the same time period for an application and a classifier that report similar data.

## WAAS Chart Descriptions

This section describes the charts that you can choose to include in a dashboard or report. For tables that provide information on system, device, traffic and acceleration, see [WAAS Table Descriptions](#),

The following chart categories are available:

- [TCP Optimization Charts](#)
- [Acceleration Charts](#)
- [Akamai Connected Cache Charts](#)
- [Connection Trend Charts](#)
- [AppNav Charts](#)
- [Platform Charts](#)

All charts are created using the Central Manager local time zone, unless the chart settings are customized to use a different time zone.

**Note**

At the device level for WAAS Express devices, only charts for supported accelerators are available. In all charts, pass-through traffic for WAAS Express devices is considered as zero.

## TCP Optimization Charts

The following TCP optimization charts are available:

- [Compression Summary](#)
- [Compression Summary Over Time](#)
- [Effective WAN Capacity](#)
- [Throughput Summary](#)
- [Traffic Summary](#)
- [Traffic Summary Over Time](#)
- [Traffic Volume and Reduction](#)

### Compression Summary

The Compression Summary chart displays a bar chart depicting the percentage of traffic reduction (excluding pass-through traffic) for the top ten applications with the highest percentage of traffic reduction. Two additional tabs allow you to see the compression of the top ten applications by volume and the bottom ten applications with the lowest compression.

**Formula:**

$$\% \text{ Reduction Excluding Pass-Through} = (\text{Original Excluding Pass-Through} - \text{Optimized}) / (\text{Original Excluding Pass-Through})$$

### Compression Summary Over Time

The Compression Summary Over Time chart displays a graph of the percentage of total traffic that was reduced by using the WAAS optimization techniques. This chart excludes pass-through traffic in the results. You can customize the chart by choosing specific applications to include. The default is all traffic.

**Formula:**

$$\% \text{ Reduction} = (\text{Original Excluding Pass-Through} - \text{Optimized}) / (\text{Original Excluding Pass-Through})$$

### Effective WAN Capacity

The Effective WAN Capacity chart displays the effective increased bandwidth capacity of the WAN link as a result of WAAS optimization. You can choose which applications to include. The default is all traffic.

**Formula:**

Effective WAN Capacity =  $1 / (1 - \% \text{ Reduction Excluding Pass-Through})$

$\% \text{ Reduction Excluding Pass-Through} = (\text{Original Excluding Pass-Through} - \text{Optimized}) / (\text{Original Excluding Pass-Through})$

## Throughput Summary

The Throughput Summary chart displays the amount of average and peak throughput for the LAN-to-WAN (outbound) or WAN-to-LAN (inbound) directions depending on the selected tab. The throughput units (KBps, MBps, or GBps) at the left side vary depending on the range. The Peak Throughput series is not applicable for Last Hour graphs. This chart is available only at the device and location levels. The chart, which is in PDF, displays a maximum of 10 series.

**Formula:**

$\% \text{ Reduction Excluding Pass-Through} = (\text{Original Excluding Pass-Through} - \text{Optimized}) / (\text{Original Excluding Pass-Through})$

**Note**

The WAN to LAN Throughput and the LAN to WAN Throughput charts for the Last Week and Last Month time periods do not display peak throughput data until after two days of data have accumulated. You may see 0 for peak throughput if it has been less than two days since a new WAAS software installation or upgrade.

## Traffic Summary

The Traffic Summary chart displays the top nine applications that have the highest percentage of traffic as seen by WAAS. Each section in the pie chart represents an application as a percentage of the total traffic on your network or device. Unclassified, unmonitored, and applications with less than 2 percent of the total traffic are grouped together into a tenth category named Other Traffic (shown only if it totals at least 0.1 percent of all traffic). You can choose to display Original traffic or Optimized traffic by clicking the tab, and you can include pass-through traffic by checking the **Include Pass-Through** check box.

**Formula:**

$(\text{App Traffic} / \text{Total Traffic}) * 100$

App Traffic is the Original traffic (Original Excluding Pass-Through) or Optimized traffic (Optimized Excluding Pass-Through) flowing for an application.

## Traffic Summary Over Time

The Traffic Summary Over Time chart displays a graph depicting the amount of original or optimized traffic, depending on the selected tab. You can include pass-through traffic by checking the **Pass-Through** check box. You can customize the chart by choosing specific applications to include. The default is all traffic.

## Traffic Volume and Reduction

The Traffic Volume and Reduction chart compares the amount of original and optimized traffic in a bar chart and displays the percentage of traffic reduction as a line. Pass-through traffic is excluded. The traffic units (bytes, KB, MB, or GB) at the right side depend upon the range. The percentage of traffic reduction is shown at the left side of the chart. You can customize the chart by choosing specific applications to include. The default is all traffic.

### Formula:

$$\% \text{ Reduction Excluding Pass-Through} = (\text{Original Excluding Pass-Through} - \text{Optimized}) / (\text{Original Excluding Pass-Through})$$

## Acceleration Charts

This section describes these charts:

- [HTTP Acceleration Charts](#)
- [HTTPS Acceleration Charts](#)
- [Secure Sockets Layer \(SSL\) Acceleration Charts](#)
- [Messaging Application Programming Interface \(MAPI\) Acceleration Charts](#)
- [Network File System \(NFS\) Acceleration Charts](#)
- [Server Message Block \(SMB\) Acceleration Charts](#)
- [Independent Computing Architecture \(ICA\) Acceleration Charts](#)

## HTTP Acceleration Charts

This section describes these charts:

- [HTTP: Connection Details](#)
- [HTTP: Effective WAN Capacity](#)
- [HTTP: Estimated Time Savings](#)
- [HTTP: Optimization Count](#)
- [HTTP: Optimization Techniques](#)
- [HTTP: Response Time Savings](#)

### HTTP: Connection Details

The HTTP Connection Details chart displays the HTTP session connection statistics, showing the average number of active HTTP connections per device (at the device level, it shows the exact number for the last hour.) Click the **Details** tab to display the newly handled HTTP connections, optimized connections, dropped connections, and handed off connections over time.

### HTTP: Effective WAN Capacity

The HTTP Effective WAN Capacity chart displays the effective bandwidth capacity of the WAN link as a result of HTTP acceleration, as a multiplier of its base capacity. The capacity data for all traffic and HTTP traffic is shown.

**Note**

If the chart has no data, monitoring may be disabled for the application definition that includes this type of traffic. Verify that monitoring is enabled for the web application.

### HTTP: Estimated Time Savings

The HTTP Estimated Time Savings chart displays a graph of the estimated percentage of the response time saved by the HTTP accelerator due to SharePoint prefetch optimization and metadata caching.

### HTTP: Optimization Count

The HTTP Optimization Count chart displays a graph of the number of different kinds of optimizations performed by the HTTP accelerator. These optimizations are displayed in different colors. The optimizations included in this chart are metadata caching and SharePoint prefetch.

### HTTP: Optimization Techniques

The HTTP Optimization Techniques pie chart displays the different kinds of optimizations performed by the HTTP accelerator. The optimizations included in this chart are metadata caching, suppressed server compression, SharePoint prefetch, and DRE hinting.

### HTTP: Response Time Savings

The HTTP Response Time Savings chart displays a graph of the round-trip response time saved by the HTTP accelerator due to metadata caching and SharePoint prefetch optimizations. These optimizations are displayed in different colors. The time units (milliseconds, seconds, or minutes) at the left side depend on the range.

## HTTPS Acceleration Charts

This section describes the following charts:

- [HTTPS: Connection Details](#)
- [HTTPS: Effective WAN Capacity](#)
- [HTTPS: Estimated Time Savings](#)
- [HTTPS: Optimization Count](#)
- [HTTPS: Optimization Techniques](#)
- [HTTPS: Response Time Savings](#)

### HTTPS: Connection Details

The HTTPS Connection Details chart displays the HTTPS session connection statistics, showing the average number of active HTTPS connections per device (at the device level, it shows the exact number for the last hour). Click the **Details** tab to display the newly handled HTTPS connections and optimized connections.

### HTTPS: Effective WAN Capacity

The HTTPS Effective WAN Capacity chart displays the effective bandwidth capacity of the WAN link as a result of HTTP acceleration, as a multiplier of its base capacity. The capacity data for all traffic and SSL traffic (which includes HTTPS traffic) is shown.



#### Note

If the chart has no data, monitoring may be disabled for the application definition that includes this type of traffic. Make sure that monitoring is enabled for the SSL application.

### HTTPS: Estimated Time Savings

The HTTPS Estimated Time Savings chart displays the estimated percentage of response time saved by using metadata caching for HTTPS connections.

### HTTPS: Optimization Count

The HTTPS Optimization Count chart displays a graph of the number of different kinds of metadata caching optimizations performed by the HTTPS accelerator. These optimizations are displayed in different colors.

### HTTPS: Optimization Techniques

The HTTPS Optimization Techniques pie chart displays the different kinds of optimizations performed by the HTTPS accelerator. The optimizations included in this chart are metadata caching, suppressed server compression, and DRE hinting.

### HTTPS: Response Time Savings

The HTTPS Response Time Savings chart displays a graph of the round-trip response time saved by the HTTPS accelerator due to metadata caching optimizations, which are displayed in different colors. The time units (milliseconds, seconds, or minutes) at the left side depend on the range.

## Secure Sockets Layer (SSL) Acceleration Charts

This section describes these charts:

- [SSL: Acceleration Bypass Reason](#)
- [SSL: Connection Details](#)
- [SSL: Effective WAN Capacity](#)

### SSL: Acceleration Bypass Reason

The Secure Sockets Layer (SSL) Acceleration Bypass Reason pie chart displays the reasons because of which SSL traffic is not accelerated: version mismatch, unknown, nonmatching domain, server name indication mismatch, cipher mismatch, revocation failure, certificate verification failure, other failure, and non-SSL traffic.

### SSL: Connection Details

The SSL Connection Details chart displays the SSL session connection statistics, showing the average number of active SSL connections per device (at the device level, it shows the exact number for the last hour). Click the **Details** tab to display the newly handled SSL connections, optimized connections, handed-off connections, dropped connections, HTTPS connections, and Independent Computing Architecture (ICA) connections over SSL.

### SSL: Effective WAN Capacity

The SSL Effective WAN Capacity chart displays the effective bandwidth capacity of the WAN link as a result of SSL acceleration, as a multiplier of its base capacity. The capacity data for all traffic and SSL traffic is shown.

**Note**

If the chart has no data, monitoring may be disabled for the application definition that includes this type of traffic. Verify that monitoring is enabled for the SSL application.

## Messaging Application Programming Interface (MAPI) Acceleration Charts

This section describes these charts:

- [MAPI: Acceleration Bypass Reason](#)
- [MAPI: Average Response Time Saved](#)
- [MAPI: Connection Details](#)
- [MAPI: Effective WAN Capacity](#)
- [MAPI: Request Optimization](#)
- [MAPI: Response Time Optimization](#)
- [MAPI: Average Accelerated Client Sessions](#)
- [MAPI: Handled Traffic Pattern](#)
- [MAPI: Connection Details](#)

### MAPI: Acceleration Bypass Reason

The Messaging Application Programming Interface (MAPI) Acceleration Bypass Reason pie chart displays the reasons because of which encrypted MAPI traffic is not accelerated: acceleration disabled, secret retriever disabled, unsupported cipher, unsupported authentication mechanism, misconfigured domain identity, failure in secret retrieval, general security failure, insufficient system resources, and recovery mode connections.

Click the **Non-Encrypted** tab to display the bypass reasons for unencrypted MAPI traffic: reservation failure (non-overload), reservation failure (overload), signed MAPI request, malformed RPC packet, handover request from peer, unsupported server version, user in denied list, unsupported client version, secured connections (encrypted), unsupported DCERPC protocol version, association group not tracked, and other.

### MAPI: Average Response Time Saved

The MAPI Average Response Time Saved chart displays a graph of the estimated percentage of response time saved by the MAPI accelerator. The time units (microseconds, milliseconds, seconds, or minutes) at the left side depend upon the range.

### MAPI: Connection Details

The MAPI Connection Details chart displays the MAPI session connection statistics, showing the average number of active MAPI connections per device (at the device level, it shows the exact number for the last hour). Click the **Details** tab to display the newly handled MAPI connections, optimized connections, handed-off connections, and dropped connections. Click the **Optimized Encrypted vs Non-Encrypted** tab to display the new encrypted and unencrypted MAPI connections.

### MAPI: Effective WAN Capacity

The MAPI Effective WAN Capacity chart displays the effective bandwidth capacity of the WAN link as a result of MAPI acceleration, as a multiplier of its base capacity. The capacity data for all traffic and MAPI traffic is shown.



#### Note

If the chart has no data, monitoring may be disabled for the application definition that includes this type of traffic. Verify that monitoring is enabled for the Email-and-Messaging application.

### MAPI: Request Optimization

The MAPI Request Optimization chart displays the percentage of local and remote MAPI command responses. A local response is a response that is sent to the client from the local WAE. A remote response comes from the remote server. Click the **Encrypted vs Non-Encrypted** tab to display the percentage of local and remote responses for encrypted and unencrypted MAPI connections.

### MAPI: Response Time Optimization

The MAPI Response Time Optimization chart compares the average time used for local and remote MAPI responses. The time units (microseconds, milliseconds, seconds, or minutes) at the left side depend upon the range. Click the **Encrypted vs Non-Encrypted** tab to display the average time used for local and remote responses for encrypted and unencrypted MAPI connections.

### MAPI: Average Accelerated Client Sessions


The MAPI Average Accelerated Client Sessions pie chart displays the average number of encrypted sessions that are accelerated from different versions (2000, 2003, 2007, and 2010) of the Microsoft Outlook client. Click the **Non-Encrypted** tab to display the unencrypted session counts.

### MAPI: Handled Traffic Pattern

For WAAS Versions 5.5.3 and later, MAPI Acceleration reports include the MAPI: Handled Traffic Pattern pie chart. As shown in [Figure 15-7](#), this chart displays the percentage of three types of traffic:

- Total handled MAPI connections
- Total handled MAPI RPC-HTTP connections
- Total handled MAPI RPC-HTTPS connections

Figure 15-7 Example of MAPI: Handled Traffic Pattern Chart

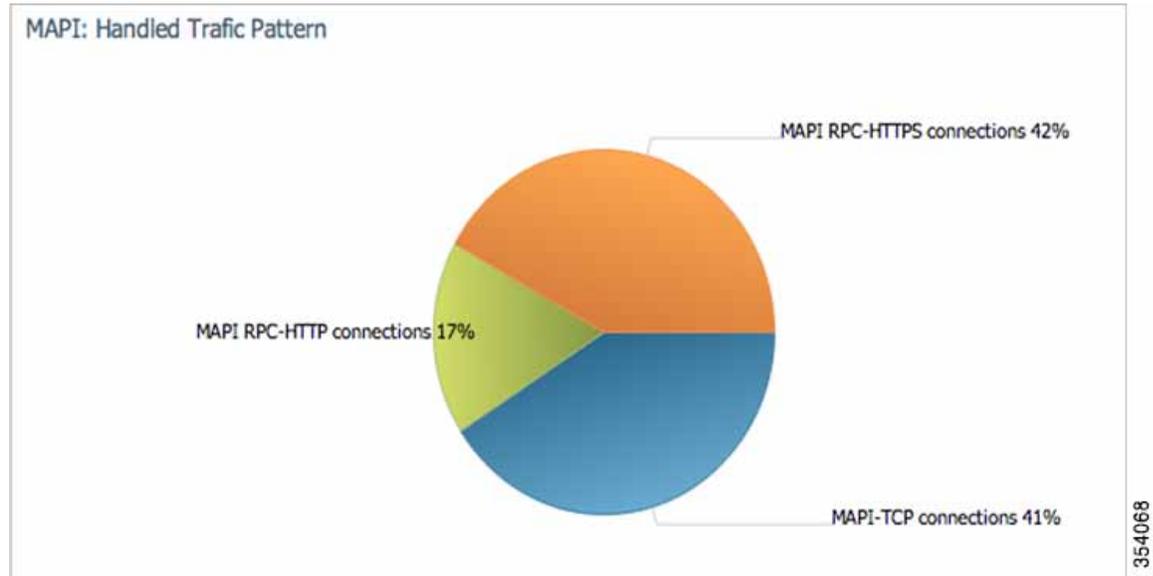


354068

MAPI: Connection Details

The MAPI Connection Details chart displays MAPI session connection statistics, showing the average number of active MAPI connections per device (at the device level, it shows the exact number for the last hour). In addition to information on newly handled MAPI connections, optimized connections, handed-off connections, dropped connections, and optimized vs. non-encrypted MAPI connections, WAAS Version 5.5.3 and later also provides information on optimized TCP vs. RPC-HTTP(S) MAPI connections, as shown in Figure 15-8.

Figure 15-8 Example of MAPI: Connection Details Chart

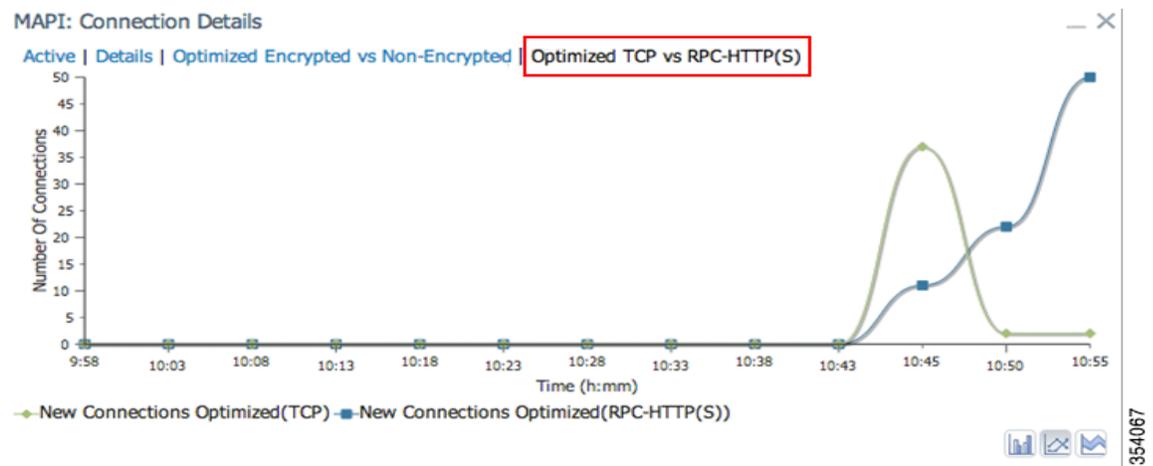

354067

## Network File System (NFS) Acceleration Charts

This section describes these charts:

- [NFS: Acceleration Bypass Reason](#)
- [NFS: Connection Details](#)
- [NFS: Effective WAN Capacity](#)
- [NFS: Estimated Time Savings](#)
- [NFS: Request Optimization](#)
- [NFS: Response Time Optimization](#)
- [NFS: Versions Detected](#)

### NFS: Acceleration Bypass Reason

The Network File System (NFS) Acceleration Bypass Reason pie chart displays the reasons because of which NFS traffic is not accelerated: unknown authentication flavor or unknown NFS version.

### NFS: Connection Details

The NFS Connection Details chart displays the NFS session connection statistics, showing the average number of active NFS connections per device (at the device level, it shows the exact number for the last hour). Click the **Details** tab to display the newly handled NFS connections, optimized connections, handed-off connections, and dropped connections.

### NFS: Effective WAN Capacity

The NFS Effective WAN Capacity chart displays the effective bandwidth capacity of the WAN link as a result of NFS acceleration, as a multiplier of its base capacity. The capacity data for all traffic and NFS traffic is shown.



#### Note

If the chart has no data, monitoring may be disabled for the application definition that includes this type of traffic. Verify that monitoring is enabled for the File-System application.

### NFS: Estimated Time Savings

The NFS Estimated Time Savings chart displays a graph of the estimated percentage of response time saved by the NFS accelerator.

### NFS: Request Optimization

The NFS Request Optimization chart displays the percentage of local and remote NFS command responses. A local response is a response that is sent to the client from the local WAE. A remote response comes from the remote server.

### NFS: Response Time Optimization

The NFS Response Time Optimization chart compares the average time used for local and remote NFS responses. The time units (milliseconds, seconds, or minutes) at the left side depend upon the range.

## NFS: Versions Detected

The NFS Versions Detected pie chart displays the number of NFS messages detected for each NFS version (2, 3, and 4). The NFS accelerator works with NFS Version 3 traffic.

## Server Message Block (SMB) Acceleration Charts

This section describes these charts:

- [SMB: Average Response Time Saved](#)
- [SMB: Client Average Throughput](#)
- [SMB: Connection Details](#)
- [SMB: Effective WAN Capacity](#)
- [SMB: Request Optimization](#)
- [SMB: Response Time Savings](#)
- [SMB: Versions Detected](#)

### SMB: Average Response Time Saved

The Server Message Block (SMB) Average Response Time Saved chart displays the average response time saved for SMB responses. The time units (milliseconds, seconds, or minutes) at the left side depend upon the range.

### SMB: Client Average Throughput

The SMB Client Average Throughput chart displays the average client throughput for the SMB accelerator.

### SMB: Connection Details

The SMB Connection Details chart displays the SMB session connection statistics, showing the average number of active SMB connections per device (at the device level, it shows the exact number for the last hour). Click the **Details** tab to display the newly handled SMB connections, optimized connections, handed-off connections, dropped connections, and signed connections.

### SMB: Effective WAN Capacity

The SMB Effective WAN Capacity chart displays the effective bandwidth capacity of the WAN link as a result of SMB acceleration, as a multiplier of its base capacity. The capacity data for all traffic and SMB traffic is shown.



#### Note

If the chart has no data, monitoring may be disabled for the application definition that includes this type of traffic.

### SMB: Request Optimization

The SMB Request Optimization chart displays the percentage of SMB command responses that use the following optimizations: read ahead, metadata, write, and other.

## SMB: Response Time Savings

The SMB Response Time Savings chart displays a graph of the round-trip response time saved by the SMB accelerator due to the following optimizations, which are displayed in different colors: read ahead, metadata, Microsoft Office, async write, named pipe, print, and other. The time units (milliseconds, seconds, or minutes) at the left side depend on the range.

## SMB: Versions Detected

The SMB Versions Detected pie chart displays the number of SMB messages detected for each SMB version:

- SMB v1.0 optimized, SMB v1.0 unoptimized, SMB v1.0 signed.
- SMB v2.0 optimized, SMB v2.0 unoptimized, SMBv 2.0 signed optimized and SMB v2.0 signed unoptimized.
- SMB v2.1 optimized, SMB v2.1 unoptimized, SMB v2.1 signed optimized, SMB v2.1 signed unoptimized.
- SMB v3.0 optimized, and SMB v3.0 unoptimized, SMB v3.0 signed, SMBv3.0 Encryption L4 optimized, SMBv3.0 Encryption L7 optimized, SMBv3.0 Encryption unoptimized
- SMBv3.02 optimized, SMB v3.02 unoptimized and SMB v3.02 signed, SMBv3.02 Encryption L4 optimized, SMBv3.02 Encryption L7 optimized, SMBv3.02 Encryption unoptimized

## Independent Computing Architecture (ICA) Acceleration Charts

This section describes these charts:

- [ICA: Client Versions](#)
- [ICA: Connection Details](#)
- [ICA: Effective WAN Capacity](#)
- [ICA: Unaccelerated Reasons](#)

### ICA: Client Versions

The Independent Computing Architecture (ICA) Client Versions pie chart displays the number of ICA messages detected for each ICA version: online plugin 11.0, online plugin 11.2, online plugin 12.0, online plugin 12.1, Citrix Receiver 13.0, and other.

### ICA: Connection Details

The ICA Connection Details chart displays the ICA session connection statistics, showing the average number of active ICA connections per device (at the device level, it shows the exact number for the last hour). Click the **Details** tab to display the newly handled ICA connections, optimized connections, handed-off connections, and dropped connections. Click the **ICA vs ICA over SSL** tab to display the the number of newly handled ICA connections and the number of newly handled ICA over SSL connections.

### ICA: Effective WAN Capacity

The ICA Effective WAN Capacity chart displays the effective bandwidth capacity of the WAN link as a result of ICA acceleration, as a multiplier of its base capacity. The capacity data for all traffic and ICA traffic is shown.

**Note**

If the chart has no data, monitoring may be disabled for the application definition that includes this type of traffic. Verify that monitoring is enabled for the Citrix application.

### ICA: Unaccelerated Reasons

The ICA Unaccelerated Reasons chart displays the reasons that ICA traffic is bypassed: unrecognized protocol, unsupported client version, CGP session ID unknown, client on denied list, no resource, and other. Click the **Dropped** tab to display the reasons because of which ICA traffic is dropped: unsupported client version, I/O error, no resource, AO parsing error, maximum sessions reached, and other.

## Akamai Connected Cache Charts

The WAAS Central Manager provides the following types of monitoring reports for Akamai Connected Cache:

- [Response Time Savings](#)
- [Throughput Summary](#)
- [HTTP: Bandwidth Savings](#)
- [Top Sites](#)
- [Cache Statistics \(Hits\)](#)

To access the following types of charts, choose **Monitor > Caching > Akamai Connect**.


**Note**

Except for the Top Sites chart, you can view monitoring information at the device, network, location, or AppNav cluster levels.

### Response Time Savings

As shown in [Figure 15-9](#), the Response Time Savings chart displays the aggregated amount of time saved due to Akamai Connect caching, showing the response time saved as a percentage, and total response time saved, for cache hit transactions, in minutes.

Figure 15-9 Example of Response Time Savings Chart

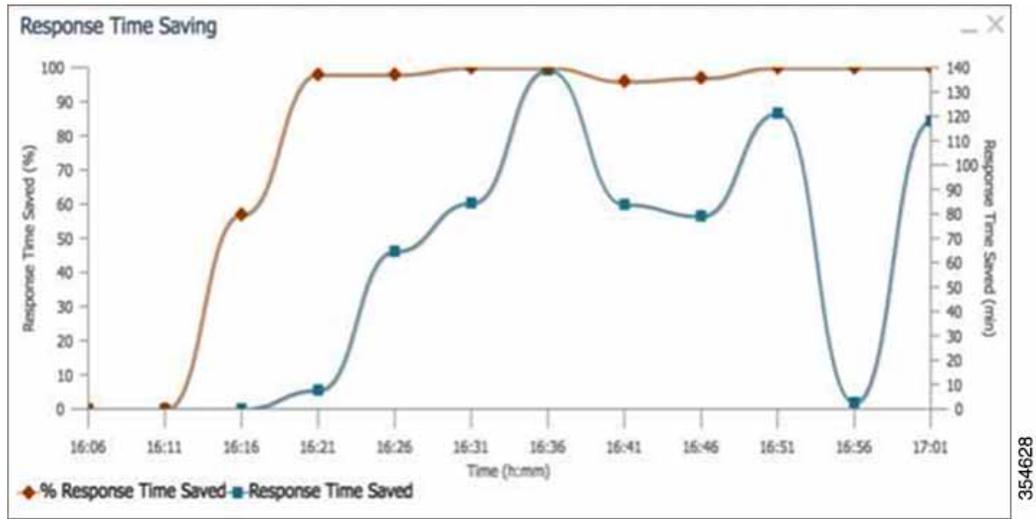

The WAAS CM performs the following percentage calculations:

- Total response time saved
- Total adjusted download time
- Total response time without cache (total response time saved plus total adjusted download time)



#### Note


Output from the **show statistics accelerator http** CLI command also displays information on response time, including the fields Total Time Saved and Percentage of Connection Time Saved. For more information on CLI commands, see the [Cisco Wide Area Application Services Command Reference Guide](#).

## Throughput Summary

The Throughput Summary chart displays information on web-optimized and original throughput. Depending in the tab you click for this chart, LAN-to-WAN (outbound) or WAN-to-LAN (inbound), throughput is displayed. The WAN-to-LAN report is the default report.

If you hover your mouse over a bar, the total optimized or average throughput, in KBps, for a given time range is displayed.

Figure 15-10 Example of Throughput Summary Chart

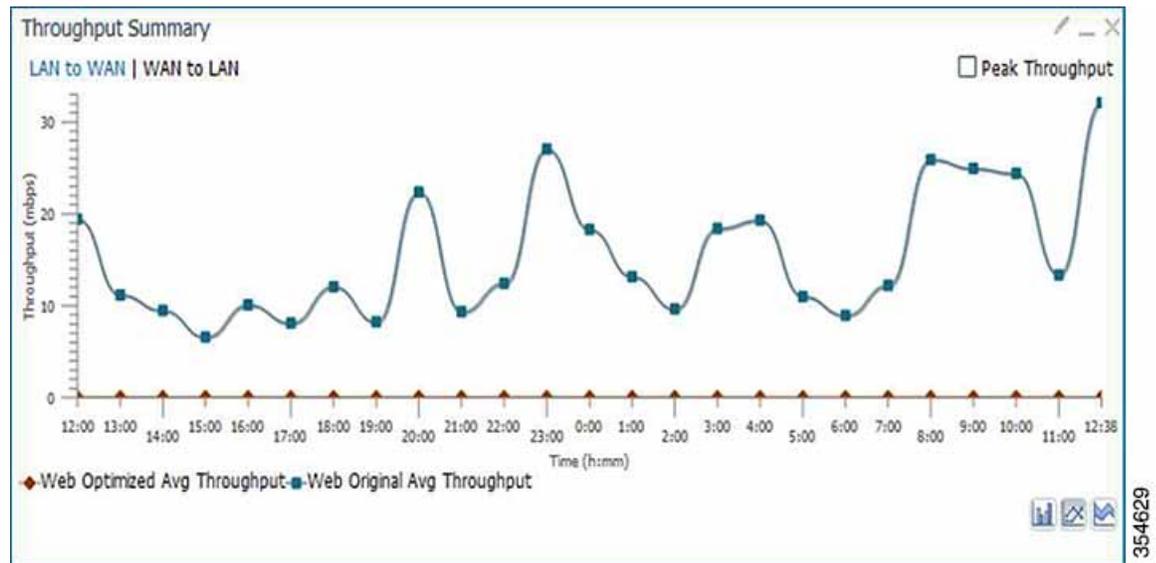

## HTTP: Bandwidth Savings


The HTTP: Bandwidth Savings chart displays how much traffic, by percentage, is actually served by the Cache Engine (CE) that did not have to be fetched from the source.

When this information is combined with overall incoming traffic into the router from the WAN, it indicates how effective the cache is in boosting the WAN performance in terms of request-response latency. The combination of the incoming (WAN) traffic flow to the router, plus the WAN data offload incoming traffic provides a truer measure of the traffic flow the router's clients (in aggregate) experience.

As shown in [Figure 15-11](#):

- The bar graph is the absolute byte count for data served out of cache for the specified interval
- The line graph represents the percentage of total bytes requested that were served out of cache for the specified interval.

Figure 15-11 Example of HTTP Bandwidth Savings Chart

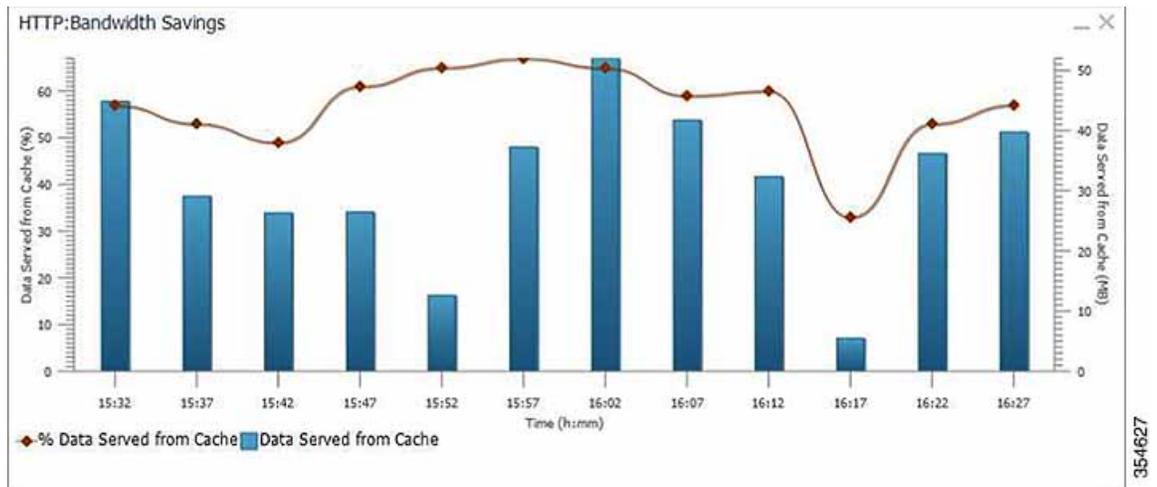


## Top Sites

The Top Sites chart displays the top sites being served by the Cache Engine (CE) in terms of hostname and traffic, in bar chart format. The Top Sites chart displays the following types of information:

- WAN Offload (Default report)—The top URLs by number of bytes served out of the cache, and as a result did not come over the WAN.
- Response Time Saving—The response time saved due to Akamai Connect caching. The time unit, (milliseconds, seconds, or minutes) at the bottom of the chart depend on the time range specified for the chart.
- Hit Count—The top URLs by number of cache hits.
- WAN Response—The top URLs by number of bytes served over the WAN.

Figure 15-12 Top Sites Chart Showing Response Time Saving by Site

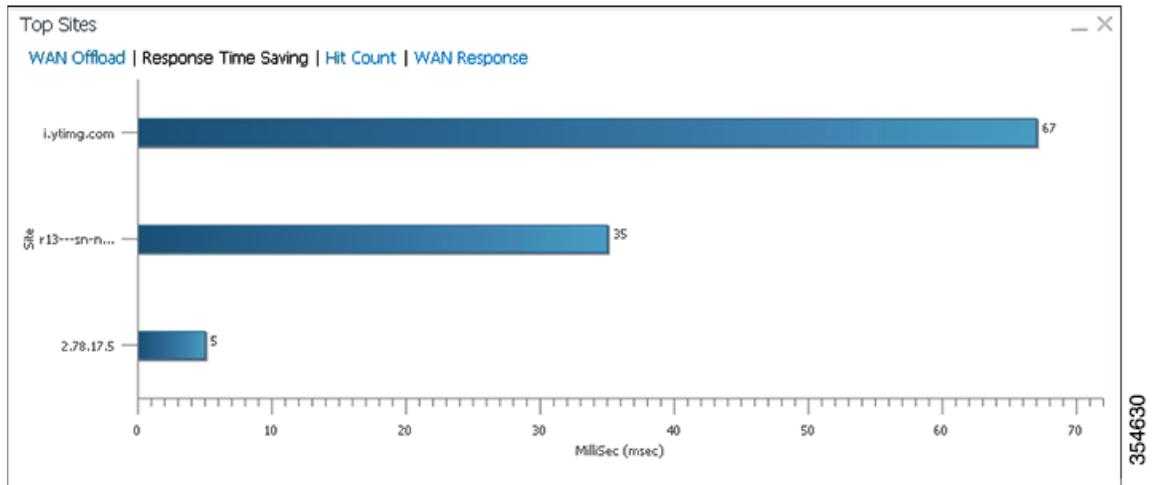

**Note**

Information in the Top Sites chart corresponds to the output for the **show statistics accelerator http object-cache EXEC** command. Top ten sites information is shown as top hosts information, in the Object cache top hosts ordered by: hit count, output section for 0 to 10 hosts. For more information on CLI commands, see the [Cisco Wide Area Application Services Command Reference Guide](#).

## Cache Statistics (Hits)

The Cache Statistics (Hits) chart displays information on cache hits or on data served from the cache, in bar chart format. For each type of Cache Statistics chart, you can specify a time frame of Last Hour, Last Day, Last Week, Last Month, or set a Custom one.

- The Cache Statistics Hits chart shows the percentage and the number of cache hits (in millions) over a specified time frame.

If you hover your mouse over a data point, the total percentage of cache hits for that data point is displayed.


If you hover your mouse over a bar, the number of hits, in millions, is displayed.

- The Cache Statistics Data Served from Cache chart shows the percentage and the amount of data served from cache (in MB) over a specified time frame.

If you hover your mouse over a data point, the total percentage of cache hits for that data point is displayed.

If you hover your mouse over a bar, the total amount, in MB, of data served from the cache, is displayed.

**Figure 15-13** Example of Cache Statistics Hits Chart Showing a Detailed View of a Data Point

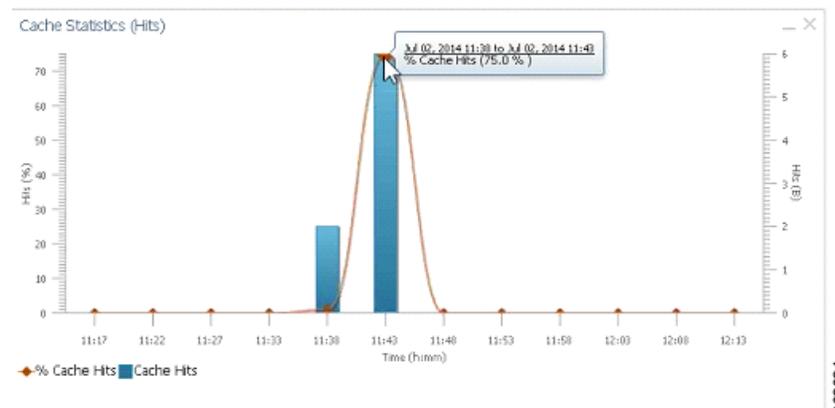

## Connection Trend Charts

This section describes these charts:

- [Optimized Connections Over Time](#)

- [Optimized vs Pass-Through Connections](#)

## Optimized Connections Over Time

The Optimized Connections Over Time chart displays the number of optimized connections over the selected time period. You can show the number of MAPI-reserved connections by checking the **MAPI Reserved Connections** check box. You can view the peak optimized connection values for all the data points in the chart by checking the **Peak Connections** check box. If you have opted to view the peak connections, the chart shows a combination of Optimized Connections as stacked legends and Peak Connections as overlaid lines for selected application/classifiers. In WAAS-XE devices, the Optimized Connections Over Time chart has only the Peak Connections option. You can customize the chart by choosing specific applications to be included. The default is all traffic.

The peak connection value is available for the following:

- **LAST HOUR**—The maximum value (optimized, pass-through connections counters) among the 12 data samples available for the last hour.
- **LAST DAY**—The maximum value (optimized, pass-through connection counters) among the 12 data samples for each hour. For example, if the optimized connection counter values are 10, 20, 30, 40, 50, 60, 70, 80, 90, 100, 110, and 120 for an hour, the peak optimized connection value would be 120.

This chart is available only when a specific WAAS device is selected and can be added only to the Connection Trend report.

## Optimized vs Pass-Through Connections

The Optimized vs Pass-Through Connections chart displays the total number of optimized and pass-through connections on a device or on all devices in a location. You can show the device connection limit, which is the maximum number of connections a device can support, by checking the **Device Connection Limit** check box. This option is available only at the device level. At the Location level, by default, the chart displays only the top five devices series based on the maximum connection limit usage. You can select the devices of your choice from the chart Settings page. The chart in the PDF report displays a maximum of 10 series.

You can view the peak pass-through connection values for all the data points in the chart by checking the **Peak Connections** check box.



### Note

This chart is available only when a specific WAAS device or location is selected, and can be added only to the Connection Trend report.

### Formula:

Pass-Through Connections for a Device = Total Pass-Through Connections for all applications

Optimized Connections for a Device = Total Optimized Connections for all applications

Device Connections limit usage % =  $100 * \text{Average Optimized connections} / \text{Device connection Limit}$   
where,

Average Optimized connections =  $\text{Sum of Optimized Connections} / \text{No. of samples}$

## AppNav Charts

This section describes these charts:

- [Total AppNav Traffic](#)
- [AppNav Policies](#)
- [Top 10 AppNav Policies](#)
- [Top 10 WAAS Node Group Distribution](#)
- [WAAS Node Group Distribution](#)
- [Pass-Through Reasons](#)
- [Top 10 Pass-Through Reasons](#)

### Total AppNav Traffic

The Total AppNav Traffic chart displays the total amount of distributed and pass-through traffic processed by the AppNav Cluster or ANC device. The units at the left side depend upon the range.

### AppNav Policies

The AppNav Policies chart displays a graph of the amount of intercepted, distributed, or pass-through traffic processed by the AppNav Cluster (ANC) or ANC device for each policy rule, depending on which tab you select. The units at the left side depend upon the range.

From the Show Details For drop-down list, select a policy rule for viewing.

### Top 10 AppNav Policies

The Top 10 AppNav Policies pie chart displays the amount of intercepted, distributed, or pass-through traffic processed by the AppNav Cluster or ANC device for the top nine policy rules with the most traffic, depending on which tab you select. Traffic for all other policy rules is grouped together into a tenth category named Other Traffic (shown only if it totals at least 0.1 percent of all traffic).

From the Show Details For drop-down list, select a policy rule for viewing.

### Top 10 WAAS Node Group Distribution

The Top 10 WAAS Node Group (WNG) Distribution pie chart displays the top nine WNGs to which traffic is distributed. Traffic for all other WNGs is grouped together into a tenth category named Other Traffic (shown only if it totals at least 0.1 percent of all traffic).

From the Show Details For drop-down list, select a WNG whose individual Cisco WAAS node details you want to view.

### WAAS Node Group Distribution

The WAAS Node Group Distribution chart displays a graph of the amount of traffic distributed to each WNG. The units at the left side depend upon the range.

From the Show Details For drop-down list, select a WNG whose individual Cisco WAAS node details you want to view.

## Pass-Through Reasons

The Pass-Through Reasons chart displays a graph of the amount of pass-through traffic for each of the pass-through reasons. The units at the left side depend upon the range.

From the Show Details For drop-down list, select a reason whose details you want to view.

## Top 10 Pass-Through Reasons

The Top 10 Pass-Through Reasons pie chart displays the top nine reasons because of which traffic is passed through. Traffic for all other reasons is grouped together into a tenth category named Other Traffic (shown only if it totals at least 0.1 percent of all traffic).

From the Show Details For drop-down list, select a reason whose details you want to view.

## Platform Charts

This section describes these charts:

- [CPU Utilization](#)
- [Disk Utilization](#)

### CPU Utilization

The CPU Utilization chart displays the percentage of CPU utilization for a device. This chart is available only when a specific WAAS device is selected. This chart can be added only to the Monitor > Reports > Reports Central > Resource Utilization report page.

### Disk Utilization

The Disk Utilization chart displays the percentage of disk utilization for a device. This chart is available only when a specific WAAS device is selected. This chart can be added only to the Monitor > Reports > Reports Central > Resource Utilization report page.

## WAAS Table Descriptions

This section describes tables that provide information on system, device, traffic and acceleration. For information on charts that you can choose to include in a dashboard or report, see [WAAS Chart Descriptions](#).

The following statistics details tables are available:

- [Traffic Summary Table](#)
- [Network Application Traffic Details Table](#)
- [HTTP Acceleration Statistics Table](#)
- [HTTPS Acceleration Statistics Table](#)
- [ICA Acceleration Statistics Table](#)
- [MAPI Acceleration Statistics Table](#)

- [NFS Acceleration Statistics Table](#)
- [SMB Acceleration Statistics Table](#)
- [SSL Acceleration Statistics Table](#)

You can sort the tables by clicking any column heading to sort the data in that column. A small triangle appears in the heading to indicate that a column is sorted. Click the triangle to reverse the sort order in the column.

For some values, different formulas are used at the system and device levels, and these formulas are noted in the table descriptions. The terms used in the tables are:

- **Original Inbound**—Traffic that is entering the WAAS device from the LAN (clients), and needs to be optimized before being sent out on the WAN to a peer WAAS device.
- **Original Outbound**—Traffic that is exiting the WAAS device to the LAN (clients) after being received on the WAN from a peer WAAS device.
- **Optimized Inbound**—Traffic that is entering the WAAS device from the WAN, and needs to be processed (deoptimized) before being sent out on the LAN to clients.
- **Optimized Outbound**—Traffic that is exiting the WAAS device to the WAN and a peer WAAS device after being optimized.
- **Pass-Through**—Traffic that is being passed through the WAAS device and is not optimized.

To get the statistics at the system, location, and device group levels, the Original Inbound, Original Outbound, Optimized Inbound, Optimized Outbound, Pass-through Client, and Pass-through Server bytes of all devices are added together. The Reduction % and Effective Capacity values are calculated using added values of all devices.

## Traffic Summary Table

This table is called the Network Traffic Summary, Device Traffic Summary, or Location Traffic Summary, depending on the context, and it displays a summary of traffic.

At the system and location levels, each row in the table displays the total traffic information for each device that is registered to the corresponding Central Manager or is in a particular location. At the device level, each row in the table displays the total traffic information for each application defined on the device. The data is described in [Table 15-4](#).

**Table 15-4**      *Traffic Summary Table*

Table Column	Description and Formulas Used to Calculate Value
Device	Displays the device name. (Appears only at the system and location levels.)
Application	Displays the application name. (Appears only at the device level.)
Original Traffic (Excludes Pass-Through)	Reports the amount of original traffic, excluding pass-through traffic. System: $(\text{Original Outbound} + \text{Original Inbound}) / 2$ Device / Device Group: $\text{Original Inbound} + \text{Original Outbound}$
Optimized Traffic (Excludes Pass-Through)	Reports the amount of optimized traffic, excluding pass-through traffic. System: $(\text{Optimized Inbound} + \text{Optimized Outbound}) / 2$ Device/Device Group: $\text{Optimized Outbound} + \text{Optimized Inbound}$

Table 15-4 Traffic Summary Table

Table Column	Description and Formulas Used to Calculate Value
Pass-Through Traffic	<p>Reports the amount of pass-through traffic. (This value is not applicable for WAAS Express devices.)</p> <p>System: (Pass-through Client + Pass-through Server) / 2</p> <p>Device/Device Group: Pass-through Client + Pass-through Server</p> <p>An asterisk (*) in the column heading indicates that a device whose data is included in this table is configured as a serial peer with another device and optimization is disabled between those two peer devices. The amount of pass-through traffic shown may be more than what is expected because the device passes through traffic coming from its peer. (For more information, see <a href="#">Information About Clustering Inline WAEs</a> in Chapter 5, “Configuring Traffic Interception.”)<sup>1</sup></p>
Reduction (%)	<p>Reports the percentage of bytes saved, considering only optimized traffic.</p> <p>(Original Excl Pass-through – (Optimized)) * 100 / (Original Excl Pass-through)</p>
Effective Capacity	<p>Reports the effective bandwidth capacity of the WAN link as a result of optimization, as a multiplier of its base capacity, considering only optimized traffic.</p> <p><math>1 / (1 - \% \text{ Reduction Excl Pass-through})</math></p>

- The number in the Pass-Through Traffic column represents the amount of traffic that is passed through that particular WAE (or, in the case of a location report, all the devices in the location). If the device is part of a serial inline cluster (that is, configured as a nonoptimizing peer with another device), the traffic that is shown as pass-through on one device may have been optimized by another device in the serial cluster. It is useful to know the amount of traffic that is not optimized by either of the devices in the cluster (in other words, passed through the entire cluster).

When the device closer to the LAN is not overloaded, the pass through numbers on that device accurately represent the overall pass-through traffic. But, if that device goes into overload, the second device in the cluster starts optimizing traffic that was passed through by the first one, which needs to be accounted for. In such a scenario, the overall pass-through numbers for the cluster can be obtained as follows. Note that this calculation has to be done even if the first device went into overload in the past and came out of it.

Consider that W1 and W2 are part of a serial cluster, and W1 is toward the LAN (closer to the client if the cluster is in the branch, or closer to the server if the cluster is in the data center) and W2 is toward the WAN. The amount of traffic that is passed through the cluster without optimization by either W1 or W2 can be obtained by the following formula: (W1 pass-through traffic) – (W2 original traffic)

## Network Application Traffic Details Table

The Network Application Traffic Details table is available at the system level and displays the total traffic information for each application. The data is the same as described in [Table 15-4](#) (except there is no Device column in this table).

## HTTP Acceleration Statistics Table

The HTTP Acceleration Statistics table is available at the system and device levels and displays HTTP acceleration details. The data is described in [Table 15-5](#).

**Table 15-5 HTTP Acceleration Statistics Table**

Table Column	Description and Formulas Used to Calculate Value
Device	Displays the device name. (Appears only at the system level.)
Start Time and End Time	Displays the start time and end time for the time period. (Appears only at the device level.)
New Connections Handled	Reports the number of HTTP connections handled for the time period.
Average Active Connections/ Active Connections	Reports the average active number of connections currently being handled by the HTTP accelerator at the system level. At other levels, reports the number of active connections.
New Bypassed Connections	Reports the number of connections initially received by the HTTP accelerator and then pushed down to the generic accelerator.
Total Time Saved	Reports the amount of time saved due to HTTP optimization.
Total Round-Trip Time	Reports the total round-trip time for all connections plus the time for remotely served metadata cache misses.
% Time Saved	Reports the percentage of connection time saved for all aggregated samples.  Total Time Saved / (Total Time Saved + Total Round Trip Time For All Connections + Total time for all remotely served metadata cache misses)

## HTTPS Acceleration Statistics Table

The HTTPS Acceleration Statistics table is available at the system and device levels and displays HTTPS acceleration details. The data is described in [Table 15-6](#).

**Table 15-6 HTTPS Acceleration Statistics Table**

Table Column	Description and Formulas Used to Calculate Value
Device	Displays the device name. (Appears only at the system level.)
Start Time and End Time	Displays the start time and end time for the time period. (Appears only at the device level.)
New Connections Handled	Reports the number of HTTPS connections handled for the time period.
Average Active Connections/ Active Connections	Reports the average number of connections currently being handled by the HTTP/SSL accelerator at the system level. At other levels, reports the number of active connections.
Total Time Saved	Reports the amount of time saved due to HTTPS optimization.
Total Round-Trip Time	Reports the total round-trip time for all connections plus the time for remotely served metadata cache misses.
% Time Saved	Reports the percentage of connection time saved for all aggregated samples.  Total Time Saved by cache hits / (Total Time Saved by cache hits + Total time for all remotely served metadata cache misses)

## ICA Acceleration Statistics Table

The ICA Acceleration Statistics table is available at the system and device levels and displays ICA acceleration details. The data is described in [Table 15-7](#).

**Table 15-7** ICA Acceleration Statistics Table

Table Column	Description and Formulas Used to Calculate Value
Device	Displays the device name. (Appears only at the system level. WAAS Express devices are not included.)
Start Time and End Time	Displays the start time and end time for the time period. (Appears only at the device level.)
New Connections Handled	Reports the number of ICA connections handled for the time period.
Average Active Connections/ Active Connections	Reports the average number of connections currently being handled by the ICA accelerator at the system level. At other levels, reports the number of active connections.
Dropped Connections	Reports the number of connections dropped by the ICA accelerator.
Bypassed Connections	Reports the number of connections initially received by the ICA accelerator and then pushed down to the generic accelerator.

## MAPI Acceleration Statistics Table

The MAPI Acceleration Statistics table is available at the system and device levels and displays MAPI acceleration details. The data is described in [Table 15-8](#).

**Table 15-8** MAPI Acceleration Statistics Table

Table Column	Description and Formulas Used to Calculate Value
Device	Displays the device name. (Appears only at the system level. WAAS Express devices are not included.)
Start Time and End Time	Displays the start time and end time for the time period. (Appears only at the device level.)
New Connections Handled	Reports the number of MAPI connections handled for the time period.
Average Active Connections/ Active Connections	Reports the average number of connections currently being handled by the MAPI accelerator at the system level. At other levels, reports the number of active connections.
New Bypassed Connections	Reports the number of connections initially received by the MAPI accelerator and then pushed down to the generic accelerator.
New Local Request Count	Reports the number of client requests handled locally by the WAE.
Avg. Local Response Time	Reports the average time used for local responses, in microseconds.
New Remote Request Count	Reports the number of client requests handled remotely over the WAN.
Avg. Remote Response Time	Reports the average time used for remote responses, in microseconds.
Average Time Saved	Reports the average connection time saved for all aggregated samples, in microseconds.

## NFS Acceleration Statistics Table

The NFS Acceleration Statistics table is available at the system and device levels and displays NFS acceleration details. The data is described in [Table 15-9](#).

**Table 15-9** NFS Acceleration Statistics Table

Table Column	Description and Formulas Used to Calculate Value
Device	Displays the device name. (Appears only at the system level. WAAS Express devices are not included.)
Start Time and End Time	Displays the start time and end time for the time period. (Appears only at the device level.)
New Connections Handled	Reports the number of NFS connections handled for the time period.
Average Active Connections/ Active Connections	Reports the average number of connections currently being handled by the NFS accelerator at the system level. At other levels, reports the number of active connections.
New Bypassed Connections	Reports the number of connections initially received by the NFS accelerator and then pushed down to the generic accelerator.
New Local Request Count	Reports the number of client requests handled locally by the WAE.
Avg. Local Response Time	Reports the average time used for local responses, in milliseconds.
New Remote Request Count	Reports the number of client requests handled remotely over the WAN.
Avg. Remote Response Time	Reports the average time used for remote responses, in milliseconds.
% Time Saved	Reports the percentage of connection time saved for all aggregated samples. $\frac{(\text{Down} - \text{Up}) * 100}{(\text{Down})}$ If(Down != 0) Here: $\text{Down} = (\text{New local request count} + \text{New remote request count}) * \text{Avg. local response time}$ $\text{Up} = ((\text{New local request count} * \text{Avg. local response time}) + (\text{New remote request count} * \text{Avg. remote response time}))$

## SMB Acceleration Statistics Table

The SMB Acceleration Statistics table is available at the system and device levels and displays SMB acceleration details. The data is described in [Table 15-10](#).

**Table 15-10** SMB Acceleration Statistics Table

Table Column	Description and Formulas Used to Calculate Value
Device	Displays the device name. (Appears only at the system level. WAAS Express devices are not included.)
Start Time and End Time	Displays the start time and end time for the time period. (Appears only at the device level.)
New Connections Handled	Reports the number of SMB connections handled for the time period.

**Table 15-10** SMB Acceleration Statistics Table

Table Column	Description and Formulas Used to Calculate Value
Average Active Connections/ Active Connections	Reports the average number of connections currently being handled by the SMB accelerator at the system level. At other levels, reports the number of active connections.
Bypassed Connections	Reports the number of connections initially received by the SMB accelerator and then pushed down to the generic accelerator.
Total Time Saved	Reports the amount of time saved due to SMB optimization.
Total Round-Trip Time	Reports the total round-trip time for all connections plus the time for remotely served metadata cache misses.
% Time Saved	Reports the percentage of connection time saved for all aggregated samples.  Total Time Saved by cache hits / (Total Time Saved by cache hits + Total Time for all remotely served metadata cache misses)

## SSL Acceleration Statistics Table

The SSL Acceleration Statistics table is available at the system and device levels and displays SSL acceleration details. The data is described in [Table 15-11](#).

**Table 15-11** SSL Acceleration Statistics Table

Table Column	Description
Device	Displays the device name. (Appears only at the system level.)
Start Time and End Time	Displays the start time and end time for the time period. (Appears only at the device level.)
New Connections Handled	Reports the number of SSL connections handled for the time period.
Average Active Connections/ Active Connections	Reports the average number of connections currently being handled by the SSL accelerator at the system level. At other levels, reports the number of active connections.
New HTTPS Connections Handled	Reports the number of HTTPS connections handled by the SSL accelerator.
Dropped Connections	Reports the number of connections dropped by the SSL accelerator.
Bypassed Connections	Reports the number of connections initially received by the SSL accelerator and then pushed down to the generic accelerator.

## Using Predefined Reports to Monitor WAAS

The WAAS Central Manager includes a number of predefined reports that you can use to monitor system operation. These reports are available from the Monitor menu. The reports consist of a combination of specific charts and graphs and a statistical table displayed in the lower part of the WAAS Central Manager window.

You can customize these predefined reports by editing them with the Manage Report function available in the Monitor menu, as described in [Viewing and Editing a Report](#).

This section contains the following topics:

- [Predefined Reports Available by WAAS Level](#)
- [Location-Level Reports](#)
- [TCP Summary Report](#)
- [HTTP Acceleration Report](#)
- [HTTPS Acceleration Report](#)
- [SSL Acceleration Report](#)
- [MAPI Acceleration Report](#)
- [NFS Acceleration Report](#)
- [SMB Acceleration Report](#)
- [ICA Acceleration Report](#)
- [Summary Report](#)
- [Topology Report](#)
- [Connection Trend Report](#)
- [Connections Statistics Report](#)
- [Resource Utilization Report](#)
- [Disks Report](#)
- [AppNav Report](#)
- [Exported Reports](#)

## Predefined Reports Available by WAAS Level

This section contains the following tables:

- [Table 15-12](#), “Predefined Reports Available at System, AppNav Cluster, Location, and Device Level”
- [Table 15-13](#), “Predefined Reports Available at Specified Levels”

[Table 15-12](#) shows the predefined reports available at the WAAS system level, the AppNav Cluster level, the location level, and the device level.

**Table 15-12** *Predefined Reports Available at System, AppNav Cluster, Location, and Device Level*

Report Type	Available Reports
Optimization	<ul style="list-style-type: none"> <li>• <a href="#">TCP Summary Report</a></li> </ul>

Report Type	Available Reports
Acceleration (not all reports available for WAAS Express device level)	<ul style="list-style-type: none"> <li>• <a href="#">HTTP Acceleration Report</a></li> <li>• <a href="#">HTTPS Acceleration Report</a></li> <li>• <a href="#">SSL Acceleration Report</a></li> <li>• <a href="#">MAPI Acceleration Report</a></li> <li>• <a href="#">NFS Acceleration Report</a></li> <li>• <a href="#">SMB Acceleration Report</a></li> <li>• <a href="#">ICA Acceleration Report</a></li> </ul>
Caching and Akamai Connected Cache	<ul style="list-style-type: none"> <li>• <a href="#">Cache Statistics (Hits)</a></li> <li>• <a href="#">Throughput Summary</a></li> <li>• <a href="#">HTTP: Bandwidth Savings</a></li> <li>• <a href="#">Top Sites</a></li> </ul>

Table 15-13 shows the predefined reports available at specified WAAS levels.

**Table 15-13** Predefined Reports Available at Specified Levels

WAAS Level	Report Type	Available Reports
System level	• Network	• <a href="#">Summary Report</a>
System and Device levels	• Network/Peers	• <a href="#">Topology Report</a>
Device and Location levels	• Optimization	• <a href="#">Connection Trend Report</a>
Device level	• Optimization	• <a href="#">Connections Statistics Report</a>
	• Acceleration	• <a href="#">SMB Acceleration Report</a>
	• Platform (not available at WAAS Express or AppNav-XE device level)	<ul style="list-style-type: none"> <li>• <a href="#">Resource Utilization Report</a></li> <li>• <a href="#">Disks Report</a></li> </ul>
AppNav Cluster level and Device level for AppNav Controller devices	• AppNav	• <a href="#">AppNav Report</a>



**Note**

In a WAAS network where there are 1000 or more WAEs, there may be a delay of up to 90 seconds to redisplay the table when you click a table column to sort a system-level report table. You may experience a similar delay when you click the **Print** icon in the taskbar before you see the report.

## Location-Level Reports

Location-level reports aggregate data from all the WAEs present in a particular location. For more information about locations, see [Working with Device Locations](#) in Chapter 3, “Using Device Groups and Device Locations.”

To view a location-level report, follow these steps:

- 
- Step 1** From the WAAS Central Manager menu, choose **Locations** > *location-name*.
- Step 2** From the WAAS Central Manager menu, choose **Monitor** and choose the report from the Optimization or Acceleration categories.
- 

When scheduling any report, you can also select one or more locations; the report will include data from all the devices within the selected locations. For more information, see [Scheduling a Report](#).

The maximum number of devices supported in a location-level report is 25 by default. This number is configurable up to 250 by the `System.monitoring.maxDevicePerLocation` system property. For more information, see [Modifying the Default System Configuration Properties](#) in Chapter 10, “Configuring Other System Settings.”

## TCP Summary Report

The Transmission Control Protocol (TCP) Summary report displays a summary of all traffic. The following charts and tables are included:

- [Traffic Summary](#)
- [Effective WAN Capacity](#)
- [Traffic Volume and Reduction](#)
- [Compression Summary](#)
- [Traffic Summary Over Time](#)
- [Compression Summary Over Time](#)
- [Throughput Summary, page 15-15](#) (included only at the device and location levels)
- [Traffic Summary Table](#)

## HTTP Acceleration Report

The HTTP Acceleration report displays the HTTP acceleration statistics. The following charts and tables are included:

- [HTTP: Estimated Time Savings](#)
- [HTTP: Effective WAN Capacity](#)
- [HTTP: Connection Details](#)
- [HTTP: Response Time Savings](#)
- [HTTP: Optimization Count](#)
- [HTTP: Optimization Techniques](#)
- [HTTP Acceleration Statistics Table](#)

The WAAS Central Manager provides monitoring information on the following types of caching: Basic, Standard, Advanced, Bypass, and Connected Cache. Except for the Top Sites chart, you can view monitoring information at the device, network, location, or AppNav cluster levels. The following charts are included:

- [Akamai Connected Cache Charts](#)

- [Cache Statistics \(Hits\)](#)
- [Throughput Summary](#)
- [HTTP: Bandwidth Savings](#)
- [Top Sites](#)

## HTTPS Acceleration Report

The HTTPS Acceleration report displays the HTTPS acceleration statistics. The following charts and tables are included:

- [HTTPS: Estimated Time Savings](#)
- [HTTPS: Effective WAN Capacity](#)
- [HTTPS: Connection Details](#)
- [HTTPS: Response Time Savings](#)
- [HTTPS: Optimization Count](#)
- [HTTPS: Optimization Techniques](#)
- [HTTPS Acceleration Statistics Table](#)

## SSL Acceleration Report

The SSL Acceleration report displays the SSL acceleration statistics. The following charts and tables are included:

- [SSL: Connection Details](#)
- [SSL: Effective WAN Capacity](#)
- [SSL: Acceleration Bypass Reason](#)
- [SSL Acceleration Statistics Table](#)

## MAPI Acceleration Report

The MAPI Acceleration report displays the MAPI acceleration statistics. The following charts and tables are included:

- [MAPI: Average Response Time Saved](#)
- [MAPI: Effective WAN Capacity](#)
- [MAPI: Connection Details](#)
- [MAPI: Request Optimization](#)
- [MAPI: Response Time Optimization](#)
- [MAPI: Average Accelerated Client Sessions](#)
- [MAPI: Acceleration Bypass Reason](#)
- [MAPI Acceleration Statistics Table](#)

## NFS Acceleration Report

The NFS Acceleration report displays the NFS acceleration statistics. The following charts and tables are included:

- [NFS: Estimated Time Savings](#)
- [NFS: Effective WAN Capacity](#)
- [NFS: Connection Details](#)
- [NFS: Request Optimization](#)
- [NFS: Response Time Optimization](#)
- [NFS: Versions Detected](#)
- [NFS: Acceleration Bypass Reason](#)
- [NFS Acceleration Statistics Table](#)

## SMB Acceleration Report

The SMB Acceleration report displays the SMB acceleration statistics. The following charts and tables are included:

- [SMB: Average Response Time Saved](#)
- [SMB: Effective WAN Capacity](#)
- [SMB: Connection Details](#)
- [SMB: Request Optimization](#)
- [SMB: Response Time Savings](#)
- [SMB: Client Average Throughput](#)
- [SMB: Versions Detected](#)
- [SMB Acceleration Statistics Table](#)

## ICA Acceleration Report

The ICA Acceleration report displays the ICA acceleration statistics. The following charts and tables are included:

- [ICA: Effective WAN Capacity](#)
- [ICA: Connection Details](#)
- [ICA: Client Versions](#)
- [ICA: Unaccelerated Reasons](#)
- [ICA Acceleration Statistics Table](#)



The ICA charts in WAAS Version 5.0 and later are different from those used in Version 4.5. If you are viewing the data from a Version 4.5 WAAS device, the charts appear empty due to the different data that the device is collecting. The ICA data for Version 4.5 WAAS devices is available in the system-level TCP Summary Report. For more information, see [TCP Summary Report](#).

## Summary Report

The Summary Report is a predefined report that can be used to monitor system operation. It is available at the system level. This report displays the following charts and tables by default:

- [Traffic Summary](#)
- [Effective WAN Capacity](#)
- [Traffic Summary Over Time](#)
- [Traffic Volume and Reduction](#)
- [Compression Summary](#)
- [Compression Summary Over Time](#)
- [HTTP: Estimated Time Savings](#)
- [HTTP: Effective WAN Capacity](#)
- [MAPI: Effective WAN Capacity](#)
- [SSL: Effective WAN Capacity](#)
- [MAPI: Average Response Time Saved](#)
- [Network Application Traffic Details Table](#)

The Summary Report can be customized to display the charts that you require. Use the **Customize** taskbar icon to select the charts that you want to be displayed in this report. Only 12 charts can be displayed in the report.

## Topology Report

The Topology report at the system level displays a topology map that shows a graphical representation of all the connections between the WAAS devices.

The topology map uses blue squares to show connections between devices. Use the legend to the right of the grid to associate the device name with the number that appears at the top of the grid. Use the drop-down lists at the top of the window to perform the following tasks:

- Display connections between your various locations instead of between devices.
- Sort the grid by the number of connections instead of by device name.

Click the **View** icon next to the WAE to view a list of peer devices for a specific WAE. The Peer List window appears, which is the same as the device level Topology report.

At the device level, the Topology report lists all the peer devices connected to a specific WAE so that you can see the relationship between devices in your WAAS network. The Peer List window displays information about each peer device involved in optimized connections with this WAE. To go to the system level Topology report, click the **Topology** icon in the taskbar.

If a peer device is not registered with the WAAS Central Manager, the message **Unknown, this peer is not being managed by CM** is displayed for the name and **Unknown** is displayed for the IP address.



### Note

The WAAS Central Manager device does not have any peers because it does not participate with any WAEs to optimize traffic. For this reason, the topology feature is not available on the WAAS Central Manager device.

## Connection Trend Report

The Connection Trend Report displays the connection trends of applications on a device. The following charts are included:

- [Optimized Connections Over Time](#)
- [Optimized vs Pass-Through Connections](#)

## Connections Statistics Report

The Connections Statistics report displays a Connections Statistics table for the device. The table displays all the TCP connections handled by the device and corresponds to the **show statistics connection** EXEC mode command in WAE and the **show waas connection brief** command in WAAS Express.

You can choose to display a subset of connections identified by IP address and port by entering values in the Source/Destination IP Address and Source/Destination Port fields above the table and clicking **Submit**. To see the Connection Start Time for the active connections in appropriate time zones, you can select the time zone from the available values of **CM Local Time**, **Device Local Time** and **UTC** from the Show Connection Start Time drop-down list.



### Note

In case of a clock or timezone change in the WAE, the exact time for device timezone is reflected after the configuration synchronization cycles.

The Connection Statistics table displays the following information about each connection:

- Source IP address and port.
- Destination IP address and port.
- Peer ID—Hostname of the peer device.
- Applied Policy/Bypass Reason—Displays icons representing the applied optimization policies, including TFO, DRE, LZ, and an application accelerator, respectively. (Hover your mouse over the icon to see its meaning.) If the connection is not optimized, the bypass reason is shown.
- Connection Start Time—Date and time at which the connection was started.
- Open Duration—Number of hours, minutes, and seconds that the connection has been open.
- Total number of original bytes.
- Total number of optimized bytes.
- Percentage of compression.
- Class map name—If no class map exists for the connection, this column contains a dash. To create a class map for this connection, click the radio button at the left of the row and then click the **Create Class-Map** taskbar icon to display the Optimization Class-Map pane. For details on creating a class map and match conditions, see [Chapter 12, “Configuring Application Acceleration”](#).



### Note

If the WAE is inheriting policies from a device group, the Create Class-Map button is dimmed, to prevent a user from unknowingly overriding device group policies. To create a class map, you must first override the device group policy page and then return to the Connection Statistics report.

The data in the Connections Statistics table is retrieved from the device once when you view the table for the first time.

From the Connections Statistics table, you can perform the following tasks:

- Apply filter settings to display particular connections based on specific criteria, by choosing **Quick Filter** from the Show drop-list in the taskbar.
- Refresh the table by clicking the **Refresh** taskbar icon.
- Export the table to a spreadsheet by clicking the **Export** taskbar icon.
- View connection details by clicking the **Details** icon next to the connection entry.

The Connection Details window contains connection addresses, port information, policy information, and traffic statistics. It also displays graphs that plot real-time traffic statistics and are refreshed every two seconds.




---

**Note** In the Connection Details window, if the value for Percentage Compression is negative, the Percentage Compression and Effective Capacity values do not appear.

---

In some cases, the Central Manager is not able to fetch the Connections Statistics page details at the WAE device level. This happens when the WAE uses internal IP for management purpose with the Central Manager and external IP (NAT) for RPC or registration purpose with the WAAS Central Manager, and if the internal IP not reachable from the WAAS Central Manager.

## Resource Utilization Report

The Resource Utilization report displays the following charts:

- [CPU Utilization](#)
- [Disk Utilization](#)

## Disks Report

The Disks Report displays physical and logical disk information.

The report window displays the following information about each disk:

- Physical disk information, including the disk name, serial number, and disk size.
- Present status. The Present field will show either **Yes** if the disk is present or **Not Applicable** if the disk is administratively shut down.
- Operational status—NORMAL, REBUILD, BAD, UNKNOWN, or Online.
- Administrative status—ENABLED or DISABLED. When the Administrative Status field shows DISABLED, the Present field will show Not Applicable.
- Current and future disk encryption status.
- RAID level. For RAID-5 devices, the Disk Information window includes the RAID device name, RAID status, and RAID device size.
- Error information, if any errors are detected.

From this window, you can save all disk information details to an Excel spreadsheet by clicking the **Export Table** icon in the taskbar.

## AppNav Report

The AppNav report displays AppNav flow distribution information. This report is available at the AppNav Cluster level, where it shows statistics for the whole AppNav Cluster, and at the device level for AppNav Controllers (ANCs), where it shows statistics for a single ANC.

The following charts and tables are included:

- [Total AppNav Traffic](#)
- [AppNav Policies](#)
- [Top 10 AppNav Policies](#)
- [Top 10 WAAS Node Group Distribution](#)
- [WAAS Node Group Distribution](#)
- [Pass-Through Reasons](#)
- [Top 10 Pass-Through Reasons](#)

At the AppNav Cluster level, the following additional controls appear in the taskbar:

- The Scope drop-down list allows you to choose to display data for the whole cluster or for an individual ANC.
- The AppNav Policy Rule drop-down list allows you to choose the AppNav policy for which data is displayed (shown for WAAS appliance AppNav clusters only.)
- The Context drop-down list allows you to choose the AppNav context (or all contexts) for which data is displayed (shown for AppNav-XE clusters only.)



### Note

At the AppNav Cluster level, the charts may not show data if the configuration on all ANCs in the cluster does not match. To resolve this situation, choose **AppNav Clusters** > *cluster-name* from the Central Manager menu and click the taskbar icon named **Force Settings on all Devices in a Group**. After about 15 minutes, the AppNav charts will display data.

## Exported Reports

Using the spreadsheet icon in the Central Manager taskbar, you can export chart values to a CSV file.

[Table 15-14](#) provides descriptions of report column headings for exported reports. Because there are many report column headings, the table is divided into categories by types of traffic, in alphabetical order. For these heading descriptions, a time specification (for example, milliseconds) is not noted, as the time specification may change depending on the time period specified for the report (for example, hour or week).

week).

- [Akamai Connected Cache](#)
- [Akamai Connected Cache Top Sites](#)
- [Application, Time, and Time Saved](#)
- [Cache Control Header and Cache](#)

- [Connections: Active, Dropped, Incomplete, Pending](#)
- [Connections: Handled, Optimized, Prepositioned](#)
- [Connections: Idle, Reused, Timeout](#)
- [Connections: Handoffs, Pass Through, Piped Through](#)
- [DRE and LZ Compression](#)
- [Locally Served and Remotely Served](#)
- [Round Trip Time \(RTT\)](#)
- [Session](#)
- [Sharepoint](#)
- [Throughput](#)
- [Transactions](#)

**Table 15-14** Exported Report Column Headings

Report Column Heading	Description
<b>Akamai Connected Cache</b>	
ce_cachetype_hit_count ce_cachetype_hit_miss ce_cachetype_hit_response ce_cachetype_wan_response	<p>For the Akamai Connect Cache Engine, exported reports show the following types of information:</p> <p>Hit Count—The top URLs by number of cache hits.</p> <p>Hit Miss—The number of object cache responses not cached.</p> <p>Hit Response—The number of object cache response bytes for cache-hit transactions.</p> <p>WAN Response—The top URLs by number of bytes served over the WAN.</p> <p>Depending on which cache types are enabled and what traffic is seen, the output may show statistics for any or all of the following cache types:</p> <ul style="list-style-type: none"> <li>• Connected Cache (example: ce_connect_hit_count)</li> <li>• Bypass (example: ce_bypass_hit_miss)</li> <li>• Standard, (example: ce_standard_hit_response)</li> <li>• Basic (example: ce_basic_wan_response)</li> <li>• Advanced (example: ce_advanced_hit_count)</li> <li>• OTT-youtube (example: ce_ott_hit_miss)</li> <li>• OTT-generic (example: ce_ott-generic_hit_response)</li> <li>• unknown (example: ce_unknown_wan_response)</li> </ul>
total_aggregate_time_saved	Aggregated amount of time saved due to Akamai Connect caching.
<b>Akamai Connected Cache Top Sites</b>	
Hit Count	The top URLs by number of cache hits.
Response Time Savings	The response time saved due to Akamai Connect caching.

Report Column Heading	Description
Site	The names of the top sites being served by the Akamai Cache Engine, in terms of hostname and traffic.
Timestamp	The date and time of the information recorded, for each row of the report.
WAN Offload	The top URLs by number of bytes served out of the cache, and as a result did not come over the WAN.
WAN Response	The top URLs by number of bytes served over the WAN.
<b>Application, Time, and Time Saved</b>	
timestamp	The date and time of the information recorded, for each row of the report.
Application Name	Type of application for the reported data, such as enterprise, backup, replication, file system, email and messaging, file system, storage, web, file transfer, streaming, printing, or remote desktop.
time_saved	Total response time saved, for cache hit transactions. The time is incremented on the client side WAE by one RTT whenever an idle fast connection is reused instead of establishing a new WAN connection.
total_adjusted_download_time	The total adjusted download time.
total_aggregate_time_saved	Aggregated amount of time saved due to Akamai Connect caching.
<b>Cache Control Header and Cache</b>	
httpao_requests_cache_control_denies_cached_resp	Number of requests not to be cached, as specified by a Cache-Control header.
httpao_responses_cache_control_prevents_caching	Number of OK (200), Redirected (301), Not Modified (304), and Unauthorized (401) responses not to be cached, as specified by a Cache-Control header.
httpao_long_url	Number of responses not cached because the URL is longer than 255 characters. The URL length includes the length of the destination IP address.
httpao_total_time_cache_miss httpao_total_time_cache_miss_https	For HTTP/S, total time for HTTP AO cache misses.
<b>Connections: Active, Dropped, Incomplete, Pending</b>	
active connections	Number of WAN side connections currently established and either in use or free for fast connection use.
active_https_connections	Number of active HTTPS connections.
maximum_active_connections	Maximum value reached by the Current Active Connections counter. Maximum Active Connections is reset if the accelerator is restarted or if statistics are cleared.
dropped_connections	Number of connections dropped for any reason other than client/server socket errors or close (for example, out of resources).

Report Column Heading	Description
<code>incomplete_connect</code>	Number of SSL CONNECT requests with an incomplete message.
<code>pending_connections</code>	Number of connections pending to be accepted.
<b>Connections: Handled, Optimized, Prepositioned</b>	
<code>handled_connections</code>	Number of connections handled since the accelerator was started or its statistics were last reset; incremented when a connection is accepted or re-used; never decremented.
<code>handled_https_connections</code>	Number of HTTPS connections handled since the accelerator was started or its statistics were last reset; incremented when a connection is accepted or re-used; never decremented.
<code>optimized_connections</code>	Number of connections previously and currently optimized by the accelerator.
<code>total_optimized_connections_https</code>	For HTTPS, the total number of optimized connections.
<b>Optimized Single Sided Connections</b>	Number of optimized connections using single-sided mode.
<code>preposition connections</code>	Number of prepositioned connections.
<b>Opt TCP Only Connections</b>	Number of current active connections using TFO optimization only.
<code>optimized TCP Plus Connections</code>	Number of current active connections using DRE/LZ compression/optimization or handled by an accelerator.
<b>Connections: Idle, Reused, Timeout</b>	
<code>idle</code>	Number of Current Active Connections that are idle and available for reuse as a fast connection. Incremented when an in-use active connection becomes idle and is available for reuse as a fast connection; decremented an available idle active connection is reused or its idle timeout (5 secs) is reached.
<code>reused</code>	Number of times a client-side idle active WAN connection was able to be reused instead of establishing a new WAN connection.
<code>reuse_failed</code>	Number of times a client-side idle active WAN connection was attempted to be re-used but the reuse failed.
<code>max_reused</code>	Maximum number of times a single connection was reused. This is the “best case” of number of reuses on a single connection.
<code>reused_peer</code>	Number of times a peer WAAS device connection was reused instead of establishing a new connection.
<code>http_time_saved_fast_reuse</code>	Time saved by fast connection reuse.
<code>ao_syn_hndling_timeouts</code>	Number of SYN (synchronize/start) timeouts because the AO accelerator was temporarily busy.
<b>Connections: Handoffs, Pass Through, Piped Through</b>	

Report Column Heading	Description
handoff_failed	Number of connections attempted to be handed off but the handoff failed.
ssl_handoff	Number of connections handed off to the SSL accelerator as a result of SSL CONNECT requests received by the HTTP accelerator.
total_handoff	Total number of connections handed off.
PT Config Connections	Number of pass-through connections offloaded due to missing policy configurations.
PT Intermediate Connections	Number of pass-through connections due to an intermediate WAAS node.
PT Other Connections	Number of pass-through connections offloaded due to other reasons.
PT No Peer Connections	Number of pass-through connections offloaded due to the absence of a peer WAAS node.
pipe_through_connections	Number of connections bypassed by the SSL accelerator due to, for example, SSL cipher negotiated on the flow is not supported on the WAAS device, or the destination domain did not match domains to be accelerated.
pipe_through_uncompressed	The number of connections bypassed
<b>DRE and LZ Compression</b>	
httpao_dre_hints_flush httpao_dre_hints_flush_https	For HTTP/S, number of DRE hints by SMB accelerator to flush data.
httpao_dre_hints_skip_bytes httpao_dre_hints_skip_bytes_https	For HTTP/S, number of DRE hints by SMB accelerator to skip the header bytes.
httpao_dre_hints_skip_lz httpao_dre_hints_skip_lz_https	Number of DRE hints by SMB accelerator to skip LZ compression.
httpao_accept_encoding_removed httpao_accept_encoding_removed_https	Number of HTTP/S requests with Accept-Encoding removed from the HTTP/S header (preventing the server from compressing HTTP/S data and allowing the WAE to apply its own compression).
<b>Locally Served and Remotely Served</b>	
httpao_locally_served_if_not_modified httpao_locally_served_if_not_modified_https	Number of locally served HTTP/S Not Modified (304) responses.
httpao_locally_served_redirect httpao_locally_served_redirect_https	Number of locally served HTTP Redirect (301) responses.
httpao_locally_served_unauthorized httpao_locally_served_unauthorized_https	Number of locally served HTTP/S Unauthorized (401) responses.
httpao_remotely_served_if_not_modified	Number of remotely served Not Modified (304) responses (cache misses).
httpao_remotely_served_redirect	Number of remotely served Redirect (301) responses (cache misses).

Report Column Heading	Description
httpao_remotely_served_unauthorized	Number of remotely served Unauthorized (401) responses (cache misses).
<b>Round Trip Time (RTT)</b>	
setup_rtt	The initial RTT time, in milliseconds.
rtt	Round trip time saved for all WAN connections that have been established.
http_if_not_modified_cache_saved_rtt http_if_not_modified_cache_saved_rtt_https	For HTTP/S, round trip time saved by caching and locally serving Not Modified (304) responses, in milliseconds.
http_redirect_cache_saved_rtt http_redirect_cache_saved_rtt_https	For HTTP/S, round trip time saved by caching and locally serving Redirected (301) responses.
http_unauth_cache_saved_rtt http_unauth_cache_saved_rtt_https	For HTTP/S, round trip time saved by caching and locally serving Unauthorized (401) responses.
total_rtt_saved_all_caches_https	Total round trip time saved for all response types.
httpao_sharepoint_saved_rtt httpao_sharepoint_saved_rtt_https	For HTTP/S, total response time saved for HTTP AO in accessing SharePoint objects by enabling SharePoint optimization.
<b>Session</b>	
httpao_move_session_to_v1_on_request	The number of HTTP AO transactions moved to the NTLM Version 1 Security Model on request, for this session.
httpao_move_session_to_v1_on_response	The number of HTTP AO transactions moved to the NTLM Version 1 Security Model on response, for this session.
httpao_pipelined_session	Number of HTTP AO pipelined transactions during the session.
httpao_session_auth_required	Number of HTTP AO Unauthorized (401) responses for the session.
httpao_sharepoint_session_hit_count httpao_sharepoint_session_hit_count_https	Number of HTTP/S sessions using the SharePoint optimization feature to access objects from the SharePoint server.
<b>Sharepoint</b>	
httpao_sharepoint_saved_rtt httpao_sharepoint_saved_rtt_https	For HTTP/S, total response time saved for HTTP AO in accessing SharePoint objects by enabling SharePoint optimization.
httpao_total_time_sharepoint_miss httpao_total_time_sharepoint_miss_https	For HTTP/S, total time lost in accessing SharePoint data that is not already stored in cache.
httpao_sharepoint_session_hit_count httpao_sharepoint_session_hit_count_https	Number of HTTP/S sessions using the SharePoint optimization feature to access objects from the SharePoint server.
<b>Throughput</b>	
Original Throughput In(bits/sec)	Original input throughput, in bits per second.
Optimized Throughput Out(bits/sec)	Optimized output throughput, in bits per second.
Original Throughput Out(bits/sec)	Original output throughput, in bits per second.

Report Column Heading	Description
Optimized Throughput In(bits/sec)	Optimized input throughput, in bits per second.
Original Peak Throughput In(bits/sec)	Original peak input throughput, in bits per second.
Optimized Peak Throughput Out(bits/sec)	Optimized peak output throughput, in bits per second.
Original Peak Throughput Out(bits/sec)	Original peak output throughput, in bits per second.
Optimized Peak Throughput In(bits/sec)	Optimized peak input throughput, in bits per second.
<b>Transactions</b>	
httpao_handled_transaction	Number of HTTP AO handled transactions.

## Managing Reports

The WAAS Central Manager allows you to edit any of the predefined reports and to create custom reports. Additionally, you can schedule reports to be generated periodically such as hourly, daily, weekly, or monthly. When a scheduled report is generated, a link to the report is e-mailed to notify the recipients.

This section contains the following topics:

- [Creating a Custom Report](#)
- [Viewing and Editing a Report](#)
- [Scheduling a Report](#)
- [Viewing or Deleting a Scheduled Report](#)

## Creating a Custom Report


A report consists of up to eight charts and tables. The system and device dashboard displays are examples of predefined reports, along with the other reports available in the Monitor menu.

Reports can be created only at the system level, not at the device level.

To create a custom report, follow these steps:

- 
- Step 1** From the WAAS Central Manager menu, choose **Monitor > Reports > Reports Central**.
  - Step 2** Click the **Create** taskbar icon. The Create Report pane appears, as shown in [Figure 15-14](#).

Figure 15-14 Create Report Pane

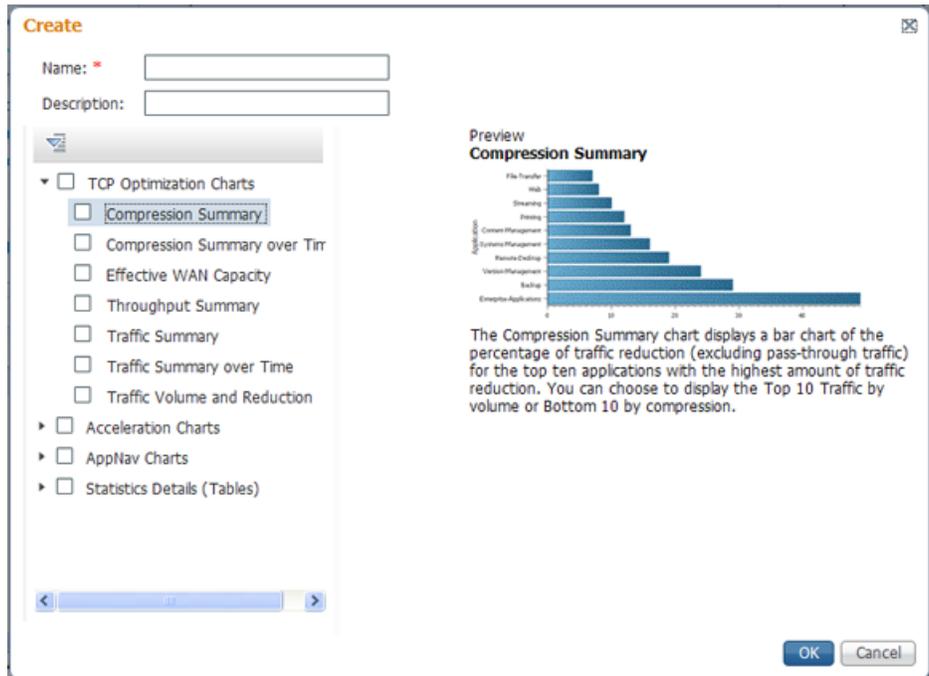

- Step 3** In the Name field, enter a name for the report. The maximum is 64 characters. Only numerals, letters, spaces, periods, hyphens, and underscores are allowed.
- Step 4** (Optional) In the Description field, enter a description of the report.
- Step 5** In the list at the left side of the pane, check the check box next to each chart and table that you want to be displayed in the report. See [WAAS Chart Descriptions](#) for a description of the charts.
- Expand the categories by clicking the small triangle next to the category name. See a preview and description of a chart by clicking the chart name. Tables are listed in the last category, Statistics Details.
- Step 6** Click **OK**.
- Step 7** (Optional) Customize any of the chart settings as follows:
- Display the report by clicking the report name in the Report Templates table.
  - You can customize report settings, such as the time frame and the time zone, as described in [Customizing a Dashboard or Report](#).
  - Click the **Edit** icon in the upper left of a chart to customize the chart settings. For more information, see [Configuring Chart Settings](#).
  - Click **OK**.
- Repeat the steps for each chart you want to customize.

---

Another way in which you can create a report is to copy a similar report that already exists and modify it into a new report. To copy a report, follow these steps:

- 
- Step 1** From the WAAS Central Manager menu, choose **Monitor > Reports > Reports Central**.
- Step 2** Check the box next to the report that you want to copy.

- Step 3** Click the **Copy** taskbar icon. The copy report window appears.
- Step 4** In the Name field, enter a name for the report.
- Step 5** (Optional) In the Description field, enter a description of the report.
- Step 6** Click **OK**.

The report is added to the Reports table.

---

## Viewing and Editing a Report

To view or edit a report, follow these steps:

- Step 1** From the WAAS Central Manager menu, choose **Monitor > Reports > Reports Central**.
  - Step 2** Click the name of the report that you want to view or edit.  
You can filter the list by choosing **Quick Filter** from the Show drop-down list and entering filter criteria.
  - Step 3** To change any of the charts or tables in the report, use the standard chart editing methods, as described in [Customizing a Dashboard or Report](#).
  - Step 4** Click **Save** to save the report, or click **Save As** to save the report under a different name.
- 

To delete a report from the Reports table, check the check box next to the corresponding report and click the **Delete** taskbar icon.

Admin users can view, edit, and delete reports created by all users and can view and edit predefined reports. Nonadmin users can view, edit, and delete only reports created by themselves, and can view and edit predefined reports.

## Scheduling a Report

You can schedule reports to be generated once or periodically, such as daily, weekly, or monthly. When a scheduled report is generated, a copy of the report can be emailed.



### Note

You cannot delete a scheduled custom report after you have scheduled it and it is in pending status. You can delete a report only after it has been generated.

---

To schedule a report, follow these steps:

- Step 1** From the WAAS Central Manager menu, choose **Monitor > Reports > Reports Central**.
- Step 2** Check the check box next to the report that you want to schedule.
- Step 3** Click the **Schedule** icon in the taskbar. The scheduling window appears, as shown in [Figure 15-15](#).

Figure 15-15 Scheduling a Report

**Schedule Report - Network TCP Summary**

Schedule Date: 06/12/2012

Hours: 9

Minutes: 25

Frequency: Once

No. of Reports: 1 (1-1825)

Email Id: (Comma separated - 200 characters max)

Email Subject: (200 characters max)

Select: Device(s)

Select Device(s) Selected 0 | Total 2

Show All

<input type="checkbox"/>	Name
<input type="checkbox"/>	WAE-231-03
<input type="checkbox"/>	wae-231-02

OK Cancel

- Step 4** In the Date field, enter the schedule date in the format DD/MM/YYYY, or click the calendar icon to display a calendar from which to choose the date.
- Step 5** In the Hours drop-down list, choose the hours. The time represents the local time at the WAAS Central Manager.
- Step 6** In the Minutes drop-down list, choose the minutes. The time represents the local time at the WAAS Central Manager.
- Step 7** In the Frequency drop-down list, choose the report frequency (Once, Hourly, Daily, Weekly, or Monthly).
- Step 8** In the No. of Reports field, enter the number of times a reoccurring report is to be generated. You can schedule it to be generated for up to 1825 times. After being generated the specified number of times, the report is no longer generated.
- Step 9** Select the **Email PDF** or **Email CSV** check box to receive the report in the format of your choice.
- Step 10** In the Email Id field (enabled only when the **Email PDF** or **Email CSV** check box is checked), enter the e-mail addresses of the report recipients, separated by commas.
- Step 11** In the Email Subject field, enter the subject of the email message.
- Step 12** From the Select drop-down list, choose an option (Device(s), DeviceGroup, Cluster, or Location) to display a list of the chosen entities.
- Step 13** In the Select entity area, choose the devices that are to be included in the statistics for the report. Check the check box next to each device, device group, cluster, or location that you want to include.
- To locate an entity in a long list, choose **Quick Filter** from the Show drop-down list and enter the complete or partial entity name in the field above the list. The search is case sensitive.
- Step 14** Click **OK**.

- Step 15** Configure the e-mail server settings for e-mail notification when reports are generated. For more information, see [Configuring the E-mail Notification Server](#) in Chapter 10, “Configuring Other System Settings.”



**Note** In a WAAS network where there are 1000 or more WAEs, a scheduled report might take up to 4 minutes to generate. And if you schedule more than one report at the same time, the reports will be generated with a delay of up to 20 minutes, depending on the number of reports and devices.

## Viewing or Deleting a Scheduled Report

To view or delete a scheduled report, follow these steps:

- Step 1** From the WAAS Central Manager menu, choose **Monitor > Reports > Reports Central**.
- The lower part of the Reports window lists the completed and pending scheduled reports, depending on the tab you choose. (You can use the Show filter above the table to filter the reports that are displayed.)
- Step 2** (Optional) To view a completed report instance in the Completed Reports tab, click the **Completed** link in the Status column.



**Note** For each completed instance of a scheduled report, the Frequency column shows Once and the Completed Time shows the date and time that the report was generated.

- Step 3** (Optional) If you want to view a list of pending reports, click the **Pending Reports** tab.
- Step 4** (Optional) If you want to delete a report in either the Completed Reports or Pending Reports tabs, check the box next to one or more report instances that you want to delete and click the **Delete** taskbar icon.

WAAS stores the 10 most recently completed or failed report instances for each custom report. This number is configurable by the System.monitoring.maxReports system property. For details on changing this property, see [Modifying the Default System Configuration Properties](#) in Chapter 10, “Configuring Other System Settings.”

Admin users can view reports scheduled by all users or the name of the report creator. Nonadmin users can view only reports scheduled by themselves.

Any changes to predefined report settings are stored separately for individual users. That is, if one user changes a predefined scheduled report, only that user sees the changes, and other users (including admin users) continue to see the report with default settings.

Reports scheduled by an external user are deleted if the maximum limit of days without a login passes and the user is deleted. For more information, see the cdm.remoteuser.deletionDaysLimit system configuration property in [Chapter 10, “Configuring Other System Settings.”](#)



**Note** You cannot delete a scheduled custom report after you have scheduled it and it is in pending status. You can delete a report only after it has been generated.

# Configuring Flow Monitoring

Flow-monitoring applications collect traffic data that is used for application trend studies, network planning, and vendor-deployment impact studies. This section describes how to configure the flow monitoring feature on the WAE, and includes the following topics:

- [Configuring Flowing Monitoring with NetQoS](#)
- [Configuring Flow Monitoring with NetFlow v9](#)
- [Troubleshooting Flow Monitoring Information](#)

## Configuring Flowing Monitoring with NetQoS

This section has the following topics:

- [About Flow Monitoring with NetQoS](#)
- [Configuration Considerations for Flow Monitoring with NetQoS](#)
- [Procedure for Configuring Flow Monitoring with NetQoS](#)
- [Example: Using NetQoS for Flow Monitoring](#)

### About Flow Monitoring with NetQoS

The NetQoS monitoring application can interoperate with the WAAS software to provide flow monitoring. To integrate this application with the WAAS software, configure the NetQoS FlowAgent module on the WAE devices. The NetQoS FlowAgent module on the WAE collects important metrics of packet flows, which are then sent across the network to the NetQoS SuperAgent. This monitoring agent analyzes the data and generates reports. For this feature to work, additional configuration is required on the NetQoS FlowAgent. (See the [Example: Using NetQoS for Flow Monitoring](#).)

The monitoring agent comprises two modules: the console (or host) and the collector. The WAE initiates two types of connections to these two monitoring agent modules: a *temporary connection to the console* and a *persistent connection to the collector*.

### Configuration Considerations for Flow Monitoring with NetQoS

Consider the following when you configure flow monitoring with NetQoS:

- Configure the console IP address on the WAE by entering the **flow monitor tcpstat-v1 host** configuration mode command in either the WAE CLI or through the Central Manager GUI. This temporary connection is referred to as the *control connection*.
- The control connection uses TCP port 7878. Its purpose is to obtain the IP address and port number of the collector to which the WAE is assigned.
- The WAE also pulls the configuration information regarding which servers are to be monitored over the control connection. After the WAE obtains the IP address and port number of the collector, the WAE opens a persistent connection to the collector. Collected summary data for the servers that are being monitored is sent over this persistent connection.
- You can place the console (or host) module and the collector module on a single device or on separate devices. These connections are independent of one another. Failure of one connection does not cause the failure of the other connection.

- You can view the state of these connections and various operation statistics display with the **show statistics flow monitor tcpstat-v1** EXEC mode command. Connection errors and data transfer errors trigger alarms on the WAE and in the Central Manager GUI. For information on flow monitoring alarms, see [Troubleshooting Flow Monitoring Information](#).
- To display debug information, use the **debug flow monitor tcpstat-v1** EXEC mode command.

## Procedure for Configuring Flow Monitoring with NetQos

To configure NetQoS flow monitoring on your WAEs using the Central Manager GUI, follow these steps:

- 
- Step 1** Create a new device group for configuring flow monitoring on multiple devices by choosing **Device Groups > device-group-name > Create New Device Group**.
- When you create a device group, check the **Automatically assign all newly activated devices to this group** check box to enable this option.
  - Add your existing WAE devices to this new device group.
- Step 2** In the Device Group listing window, click the **Edit** icon next to the name of the flow monitoring configuration device group that you want to configure.
- Step 3** Choose **Configure > Monitoring > Flow Monitor**. The Flow Monitor Settings for Device Group window appears.
- Step 4** In the Destination IP Address field, enter the IP address of the monitoring agent console.
- This configuration allows the WAE to establish a temporary connection (a control connection) to the console for the purpose of obtaining the IP address of the collector device. You must configure the collector IP address information from the console device. (See the configuration documentation for the NetQoS flow monitoring application software.)
- Step 5** Check the **Enable Flow Monitor** check box.
- Step 6** Click **Submit** to apply the settings to the devices in this device group.
- 

To configure NetQoS flow monitoring on the WAE using the CLI, follow these steps:

- 
- Step 1** Register the WAE with the IP address of the monitoring agent console.
- ```
WAE(config)# flow monitor tcpstat-v1 host 10.1.2.3
```
- This configuration allows the WAE to establish a temporary connection (a control connection) to the console (or host) for the purpose of obtaining the IP address of the collector device. You must configure the collector IP address information from the console device. (See the configuration documentation for the NetQoS flow monitoring application software.)
- Step 2** Enable flow monitoring on the WAE appliance.
- ```
WAE(config)# flow monitor tcpstat-v1 enable
```
- Step 3** Check the configuration by using the **show running-config** EXEC command.

## Example: Using NetQoS for Flow Monitoring

NetQoS integrates with the WAAS software by running the NetQoS FlowAgent on WAE devices. FlowAgent is a software module developed by NetQoS that resides on a WAE appliance. The FlowAgent collects metrics about the packet flows, which are then sent across the network to a NetQoS SuperAgent. The SuperAgent measures the round-trip times, server response times, and data transfer times, and then analyzes the data and generates reports.

**Note**

When you use flow monitoring with the NetQoS SuperAgent, the flow monitor on the WAE captures optimized traffic only.

To configure flow monitoring with NetQoS, follow these steps:

- Step 1** From the WAE CLI or Central Manager GUI, enter the SuperAgent Master Console IP address in the Destination IP Address field on your WAE appliances.
- If you are configuring multiple WAAS devices through a device group, wait for the configuration to propagate to all the devices in the device list.
- Step 2** From the NetQoS SuperAgent console, assign a WAE to a SuperAgent Aggregator (known as the collector in WAAS terminology) and configure the NetQoS networks, servers, and applications entities.

**Note**

For information about using the NetQoS SuperAgent Master Console and configuring NetQoS SuperAgent entities, go to <http://support.ca.com>

## Configuring Flow Monitoring with NetFlow v9

This section has the following topics:

- [About Flow Monitoring with NetFlow v9](#)
- [Configuration Considerations for Flow Monitoring with NetFlow v9](#)
- [Procedure for Configuring Flow Monitoring with NetFlow v9](#)
- [Disabling NetFlow v9](#)
- [NetFlow v9 Exported Fields](#)
- [NetFlow v9 Pass-Through Reasons](#)

## About Flow Monitoring with NetFlow v9

NetFlow v9 is a template-based protocol developed by Cisco Systems to collect IP traffic information. The NetFlow v9 record format consists of a packet header followed by a template flowset of data flowset. A template flowset contains a description of the fields to be sent through in the data flowset. A data flowset is a collection of the data records containing flow information that is put into an export packet.

WAAS v5.3.1 and later provide the following features for Netflow v9:

- Unlike NetFlow v5, which used a fixed format, NetFlow v9 utilizes a template format. All WAAS optimization engines can use this template format to export data to collectors such as Cisco Prime and Solarwinds.
- The template format allows new features to be quickly added to NetFlow v9.
- Templates are verified every few minutes for changes, and sent out hourly to provide collectors with field information for data records.
- NetFlow v9 uses WAAS transaction log information and adds an exporter code to allow data to be sent to external devices.
- NetFlow v9 can be used on all WAAS optimization engines; it is not used with WAAS AppNav.
- By default, all WAAS class maps are monitored. If you would like to have specific class maps to not be monitored, see [Disabling NetFlow v9](#).

## Configuration Considerations for Flow Monitoring with NetFlow v9

To configure NetFlow v9 on your WAEs with either the Central Manager GUI or the CLI, configure four monitoring areas:

- Flow Record—Contains the WAAS-specific flow information you want to send to the collector.
- Flow Exporter—Contains the destination details for the exported information, and the format for this information.
- Flow Monitor—Specifies which flow records are going to which flow exporter.
- Class Map—For WAAS v5.3.1 and above, monitors are enabled globally on all class map policies by default. If you do not want a particular device monitored, manually disable monitoring for that device.

## Procedure for Configuring Flow Monitoring with NetFlow v9

To configure NetFlow v9 flow monitoring on the WAE using the CLI, follow these steps:

- Step 1** Use the following command to create a flow record to configure which fields to collect as part of Netflow export:

```
WAE(config)# flow record RecordName
WAE(config)# collect waas ?
```

**Table 15-15** Collection Parameters

Collection Parameter	Description
application-name	Collects application name for the flow.
bytes	Collects byte counts for the flow.
class-name	Collects class name for the flow.
connection-mode	Collects connection mode for the flow.
dre	Collects DRE details for the flow.
lz	Collects LZ details for the flow.
packets	Collects packet counts for the flow.
passthrough-reason	Collects pass-through reason for the flow.

- Step 2** Use the following command to create the flow exporter, which includes the destination IP address and port for the Netflow:

```
WAE(config)# flow exporter ExporterName
WAE(config-flow_exporter)# destination 2.2.2.2
WAE(config-flow_exporter)# description Descriptive name
WAE(config-flow_exporter)# export-protocol IPFIX
WAE(config-flow_exporter)# transport udp 12000
WAE(config-flow_exporter)# exit
```

- Step 3** Use the following command to create the flow monitor and associate the flow record with the flow exporter:

```
WAE(config)# flow monitor MonitorName
WAE(config-flow_monitor)# description Descriptivename
WAE(config-flow_monitor)# exporter ExporterName
WAE(config-flow_monitor)# record RecordName
WAE(config-flow_monitor)# enable
```

## Disabling NetFlow v9

By default, flow monitoring is enabled on all devices. Use the following command to disable monitoring for a particular class:

```
WAE(config)# policy-map type waas PmapName
WAE(config)# class ClassName
WAE(config)# {no} flow-monitor enable
```

## NetFlow v9 Exported Fields

In Netflow v9, there are several fields that can be provided to the Netflow collector. The following table provides some examples of these fields:

**Table 15-16 Netflow v9 Exported Fields**

Exported Field	Description and Corresponding Number Value
Segment ID	The segment of the optimized flow that the values are from: 1, 2, 4, 8, or 16. A value of 1 is the unoptimized side on the Edge WAE, and a value of 16 is a pass-through flow.
Source IP	Source IP address.
Destination IP	Destination IP address.
NextHop	IP address of next-hop router.
Input Interface	SNMP index of input interface.
Output Interface	SNMP index of output interface.
Source Port	TCP/UDP source port number or equivalent.
Destination Port	TCP/UDP destination port number of equivalent.
TCP Flags	Cumulative OR of TCP flags.
Packets	Packets in the flow.
Bytes	Unused bytes.
Start Time	System uptime at start of flow.
End Time	System uptime when the last packet of the flow is received.
Protocol	IP protocol type, for example, TCP=6, UDP=17.
Type of Service	Type of service.
Source ASN	Autonomous System Number of the source, either origin or peer.
Destination ASN	Autonomous System Number of the destination, either origin or peer.
Source Mask	Source address of the prefix mask, in bits.
Destination Mask	Destination address of the prefix mask, in bits.
Application Name	Name of the application traffic on the connection.
Class Name	Class name.
Connection Mode	Current connection mode. Value of 1 (TFO), 3 (TFO + DRE), 5 (TFO + LZ) or 7 (TFO + DRE + LZ).
Pass-Through Reason	Reason the traffic was not optimized.
Bytes Received	Number of bytes received.
Bytes Sent	Number of bytes sent.
Packets Received	Number of packets received.
Packets Sent	Number of packets sent.
DRE In Bytes	Number of DRE bytes before compression.
DRE Out Bytes	Number of DRE bytes after compression.
DRE Encode Latency	Amount of latency incurred during DRE encode operation against an optimized connection.

DRE Decode Latency	Amount of latency incurred during DRE decode operation against an optimized connection.
LZ In Bytes	Number of LZ bytes before compression.
LZ Out Bytes	Number of LZ bytes after decompression.
LZ Encode Latency	The amount of latency (transmission delay) associated with the LZ compressed message operation.
LZ Decode Latency	The amount of latency (transmission delay) associated with the LZ decompressed message operation.
Original Bytes	Number of unoptimized bytes.
Optimized Bytes	Number of optimized bytes.

## NetFlow v9 Pass-Through Reasons

Pass-Through reasons are sent to the collector. [Table 15-17](#) shows pass-through numbers and associated reasons.

**Table 15-17** Pass-Through Number and Pass-Through Reason

Pass-Through Number	Pass-Through Reason
0	PE_CONN_UNKNOWN
1	PE_CONN_PT_APP_CONFIG
2	PE_CONN_PT_GLB_CONFIG
3	PE_CONN_PT_OVERLOAD
4	PE_CONN_PT_CPU_OVERLOAD
5	PE_CONN_PT_IN_PROGRESS
6	PE_CONN_PT_PE_INT_ERROR
7	PE_CONN_PT_DYN_BYPASS
8	PE_CONN_INT_CLIENT
9	PE_CONN_INT_SERVER
10	PE_CONN_ACCEL_OPTIMIZED
11	PE_CONN_ACCEL_NON_OPTIMIZED
12	PE_CONN_APP_DYN_MITCH_OPTIMIZED
13	PE_CONN_APP_DYN_MITCH_NON_OPTIMIZED
14	PE_CONN_OPT_TCP_PLUS
15	PE_CONN_ORIG_TCP_PLUS
16	PE_CONN_OPT_PREPOSITION
17	PE_CONN_ORIG_PREPOSITION
18	PE_CONN_OPT_TCP_ONLY
19	PE_CONN_ORIGIN_TCP_ONLY
20	PE_CONN_PT_NO_PEER
21	PE_CONN_PT_RJCT_CAPABILITIES

22	PE_CONN_PT_RJCT_RESOURCES
23	PE_CONN_PT_NO_LICENSE
24	PE_CONN_PT_ASYMMETRIC
25	PE_CONN_PT_INTERMEDIATE
26	PE_CONN_PT_FB_INT_ERROR
27	PE_CONN_PT_AD_INT_ERROR
28	PE_CONN_PT_SQ_INT_ERROR
29	PE_CONN_PT_APP_OVERRIDE
30	PE_CONN_PT_SVR_BLACKLIST
31	PE_CONN_PT_AD_VER_MISMATCH
32	PE_CONN_PT_AD_AO_INCOMPAT
33	PE_CONN_PT_AD_AOIM_PROGRESS
34	PE_CONN_PT_DIRM_VER_MISMATCH
35	PE_CONN_PT_DIRM_INT_ERROR
36	PE_CONN_PT_PEER_OVERRIDE
37	PE_CONN_PT_AD_OPT_PARSE_FAIL
38	PE_CONN_PT_AD_SERIAL_MODE_PEER
39	PE_CONN_PT_INTERCEPTION_ACL
40	PE_CONN_PT_WCCP_SHUTDOWN_ACTIVE
41	PE_CONN_PT_AD_IP_FRAG

## Troubleshooting Flow Monitoring Information

This section has the following topics:

- [Alarms for Flow Monitoring](#)
- [Commands Used to Troubleshoot Flow Monitoring](#)

### Alarms for Flow Monitoring

Table 15-18 shows the four different alarms that may be raised when errors occur with flow monitoring.

**Table 15-18** Alarms for Flow Monitoring

Name	Severity	Description
CONTROL_CONN	Major	Indicates a problem with the control connection.
COLLECTOR_CONN	Major	Indicates a problem with the collector connection.

Name	Severity	Description
SUMMARY_COLLECTION	Minor	Indicates a problem with the collection of packet summary information.  Summary packets may be dropped because the buffer queue limit has been reached or because of a TFO (Transport File Optimization) error, such as not being able to allocate memory.  Summary packet collection may also be dependent on the available WAN bandwidth.
DATA_UPDATE	Minor	Indicates a problem with the ability of the WAE to send updates to the collector agent.

## Commands Used to Troubleshoot Flow Monitoring

Table 15-19 shows the commands used to troubleshoot flow monitoring.

**Table 15-19** *Commands Used to Troubleshoot Flow Monitoring*

Command Type	Command
<b>show</b> commands	show flow record <i>RecordName</i> show flow record <i>RecordName</i> template show flow <i>ExporterName</i> exporter show flow monitor
<b>show statistics</b> commands	show statistics flow monitor <i>MonitorName</i> show statistics flow exporter <i>ExporterName</i>
<b>clear statistics</b> commands	clear statistics flow monitor <i>MonitorName</i> clear statistics flow exporter <i>ExporterName</i>
<b>tcpdump</b> commands	tcpdump