

Cable Monitoring Feature for Cisco cBR Series Routers

After you configure cable monitoring, the router forwards copies of selected packets on the cable interface to an external LAN analyzer attached to another interface on the Cisco CMTS router. This command can help in troubleshooting network and application problems.



Note

This feature does not monitor traffic for the purpose of preventing denial-of-service attacks and other types of network attacks. Even after configuring the cable monitoring feature, the traffic continues to its original destination, and only copies of the selected packets are forwarded to the CALEA server or LAN analyzer.



Note

This feature doesn't support line card high availability (LCHA).

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to http://tools.cisco.com/ITDIT/CFN/. An account on http://www.cisco.com/ is not required.

Contents

- Overview of Cable Monitor Command for cBR, on page 2
- Configuring Cable Monitoring for cBR Routers, on page 2
- Capturing Sniffed Packets, on page 4
- Cable Monitor Packet Struct, on page 7
- Feature Information for Cable Monitoring, on page 7

Overview of Cable Monitor Command for cBR


The **cable monitor** command sends copies of packets for specific types of traffic that is sent over a particular cable interface to a LAN analyzer, for use in troubleshooting network problems. This command can select packets to be forwarded using one or more of the following parameters:

- Either incoming or outbound packets
- Packets that match a specific MAC address (source and destination)
- Packets with a specific Service ID (SID)

Packets can also be timestamped to aid in troubleshooting. The packets are then forwarded out of the specified 10 Gigabit Ethernet port to the LAN analyzer for additional analysis.

The figure below illustrates a LAN packet analyzer attached to a Fast Ethernet port in a DOCSIS two-way configuration.

Figure 1: LAN Packet Analyzer in a DOCSIS Two-Way Configuration

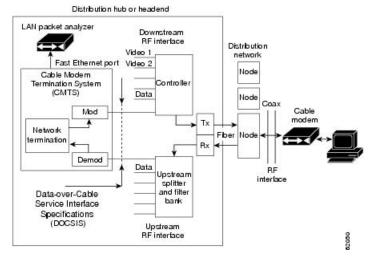



Note

The WAN port used for cable monitoring should be exclusively used by the LAN packet analyzer.

Configuring Cable Monitoring for cBR Routers

To enable the cable traffic monitoring feature on a particular cable interface, use the following procedure, starting in privileged EXEC mode.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. cable monitor

- 4. sniff card <slot num> <ds/us> <sniff point> <filter> dest cmon-tunnel <cmon-tunnel num>
- **5**. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode. Enter your password if
	Example:	prompted.
	Router> enable	
	Example:	
	Router#	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
	Example:	
	Router(config)#	
Step 3	cable monitor	Enters cable monitor configuration mode.
	Example:	
	Router(config)# cable monitor	
	Example:	
	Router(config-cable-monitor)#	
Step 4	sniff card <slot num=""> <ds us=""> <sniff point=""> <filter> dest cmon-tunnel <cmon-tunnel num=""></cmon-tunnel></filter></sniff></ds></slot>	Configures the card to forward the sniffed packets.
		• slot number—Slot number of the line card
	Example:	• ds/us—Downstream or upstream
	Downstream traffic: For each channel	•
	Router(config-cable-monitor)sniff card 3 outbound docsis integrated-Cable 3/0/0:0 dest cmon-tunnel 3	LDC'A (field programmable cots arrors)
		• filter—Packet type filter
	Example: Downstream traffic: For each wideband channel	• dest cmon-tunnel—Cable monitor tunnel for captured packets
	Router(config-cable-monitor)sniff card 3 outbound pre-docsis wideband-Cable 3/0/0:0 dest cmon-tunnel	
	3	capture packets
	Example:	
	Downstream traffic: For each MAC address	
	Router(config-cable-monitor)sniff card 3 outbound docsis mac-address 0100.5e01.0101 dest cmon-tunnel 3	
	Example:	
	Upstream traffic: For each channel	

	Command or Action	Purpose
	Router(config-cable-monitor) # sniff card 3 incoming	
	post-docsis upstream-cable 3/0/0 us-channel 0 dest cmon-tunnel 3	
	Example:	
	Upstream traffic: For each MAC address (cable modem or CPE)	
	Router(config-cable-monitor)#sniff card 3 incoming	
	post-docsis mac-address e448.c70c.9c27 dest cmon-tunnel 3	
	Example:	
	Upstream traffic: For MD/SID	
	Router(config-cable-monitor)#sniff card 3 incoming	
	post-docsis cable 3/0/0 sid 12 upstream 0 dest cmon-tunnel 3	
Step 5	end	Exits global configuration mode.
	Example:	
	Router(config)# end	
	Example:	
	Router#	

What to do next

You can capture and forward the sniffed packets to an external server or a local hard disk. For more details, see Capturing Sniffed Packets, on page 4.

Capturing Sniffed Packets

To forward the captured traffic to an external server, you should configure a tunnel. The external server might not be directly connected and can be away from CMTS.

To capture sniffed packets, you can follow one of these procedures:

- Capture output packets using an external host
- Capture packets by locating the hard disk

Capturing Sniffed Packets on an External Host

To forward the captured traffic to an external server, you should configure a tunnel. The external server might not be directly connected and can be away from CMTS.

SUMMARY STEPS

- 1. configure terminal
- 2. interface cmon-tunnel number
- 3. tunnel destination IP address, tunnel source IP address
- 4. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Router# configure terminal	
	Example:	
	Router(config)#	
Step 2	interface cmon-tunnel number	Enters the interface cmon-tunnel mode to capture sniffed
	Example:	packets.
	<pre>Router(config)# interface CMON-Tunnel 3 Router(config-if)#</pre>	
Step 3	tunnel destination IP address, tunnel source IP address	Configures destination IP address and the source IP addres for an external host to capture output packets.
	Example:	
	Router(config-if) #tunnel destination 10.10.21.11 Router(config-if) #tunnel source 10.10.21.1	
Step 4	end	Exits global configuration mode.
	Example:	
	Router(config)# end	
	Example:	
	Router#	

Capturing Sniffed Packets on a Local Hard Drive

To forward the captured traffic to a local hard disk, use the following procedure.

SUMMARY STEPS

- 1. configure terminal
- 2. interface cmon-tunnel number
- 3. mode buffer
- **4**. end
- 5. show platform software interface fp active name-string CMON-Tunnel number
- 6. test platform hardware qfp active feature docsis cmon-copy 3 QFP_ID

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	Router#configure CMON-Tunnel 3	
	Example:	
	Router(config)#	
Step 2	interface cmon-tunnel number	Enters the interface cmon-tunnel mode.
	Example:	
	Router(config)#interface CMON-Tunnel 3 Router(config-if)#	
Step 3	mode buffer	Enables mode buffer in the cmon-tunnel to capture packets
	Example:	by locating the hard disk.
	Router(config-if) #mode buffer	
Step 4	end	Exits global configuration mode.
	Example:	
	Router(config-if)# end Router#	
Step 5	show platform software interface fp active name-string CMON-Tunnel number	Gets the QFP ID.
	Example:	
	Router# show platform software interface fp active name-string CMON-Tunnel3 Name: CMON-Tunnel3, ID: 131074, QFP ID: 11745, Schedules: 0 Type: CABLE-MONITOR, State: enabled, SNMP ID: 0, MTU: 0 IP Address: 0.0.0.0 IPV6 Address: :: Flags: unknown ICMP Flags: unreachables, no-redirects, no-info-reply, no-mask-reply ICMP6 Flags: unreachables, no-redirects SMI enabled on protocol(s): UNKNOWN Authenticated-user: FRR linkdown ID: 65535 Monitor Type: 0, Instance ID: 3, Mode: 3 Monitor Tunnel Source: 0.0.0.0, Destination: 0.0.0.0 vNet Name: , vNet Tag: 0, vNet Extra Information: 0 Dirty: unknown AOM dependency sanity check: PASS AOM Obj ID: 24094	
Step 6	test platform hardware qfp active feature docsis cmon-copy 3 QFP_ID	Uses the QFP ID to copy the buffer to the harddisk.

Command or Action	Purpose
Example:	
Router# test platform hardware qfp active feature docsis cmon-copy 3 11745 Router #dir harddisk: in CMON 50 -rw- 24 Mar 5 2020 12:33:42 +02:00 CMON_3_20200305-123342.pcap	

Cable Monitor Packet Struct

The cable monitor packet struct is described as follows:

- For post-docsis and pre-docsis sniffer points: Internal Header (16 Bytes) + Ethernet Header
- For docsis sniffer point: Internal Header (16 Bytes) + Docsis Header + Ethernet Header

If **remove-jib** is configured under CMON-Tunnel interface, the packets will not contain Internal Header.

Feature Information for Cable Monitoring

Use Cisco Feature Navigator to find information about the platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to the https://cfnng.cisco.com/ link. An account on the Cisco.com page is not required.



Note

The following table lists the software release in which a given feature is introduced. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 1: Feature Information for Cable Monitoring

Feature Name	Releases	Feature Information
Cable Monitoring	Cisco IOS XE Everest 16.6.1	This feature was integrated into Cisco IOS XE Everest 16.6.1 on theCisco cBR Series Converged Broadband Routers.

Feature Information for Cable Monitoring