



Dynamic Bonding Group

This document describes how to configure Dynamic Bonding Group that helps manage resource of all downstream bonding groups by automatically creating bonding groups.

Your software release may not support all the features that are documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. The Feature Information Table at the end of this document provides information about the documented features and lists the releases in which each feature is supported.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <http://tools.cisco.com/ITDIT/CFN/>. An account on <http://www.cisco.com/> is not required.

- [Hardware Compatibility Matrix for the Cisco cBR Series Routers, on page 1](#)
- [Information About Dynamic Bonding Group, on page 2](#)
- [Overview of Dynamic Bonding Group, on page 2](#)
- [How to configure Dynamic Bonding Group, on page 3](#)
- [Feature Information for Dynamic Bonding Group, on page 13](#)

Hardware Compatibility Matrix for the Cisco cBR Series Routers



Note The hardware components that are introduced in a given Cisco IOS-XE Release are supported in all subsequent releases unless otherwise specified.

Table 1: Hardware Compatibility Matrix for the Cisco cBR Series Routers

Cisco CMTS Platform	Processor Engine	Interface Cards
Cisco cBR-8 Converged Broadband Router	<p>Cisco IOS-XE Release 16.5.1 and Later Releases</p> <p>Cisco cBR-8 Supervisor:</p> <ul style="list-style-type: none"> • PID—CBR-SUP-250G • PID—CBR-CCAP-SUP-160G 	<p>Cisco IOS-XE Release 16.5.1 and Later Releases</p> <p>Cisco cBR-8 CCAP Line Cards:</p> <ul style="list-style-type: none"> • PID—CBR-LC-8D30-16U30 • PID—CBR-LC-8D31-16U30 • PID—CBR-RF-PIC • PID—CBR-RF-PROT-PIC • PID—CBR-CCAP-LC-40G • PID—CBR-CCAP-LC-40G-R • PID—CBR-CCAP-LC-G2-R • PID—CBR-SUP-8X10G-PIC • PID—CBR-2X100G-PIC <p>Digital PICs:</p> <ul style="list-style-type: none"> • PID—CBR-DPIC-8X10G • PID—CBR-DPIC-2X100G <p>Cisco cBR-8 Downstream PHY Module:</p> <ul style="list-style-type: none"> • PID—CBR-D31-DS-MOD <p>Cisco cBR-8 Upstream PHY Modules:</p> <ul style="list-style-type: none"> • PID—CBR-D31-US-MOD

Information About Dynamic Bonding Group

Dynamic Bonding Group (DBG) helps manage the resource of all downstream bonding groups, including automatically creating and reclaiming the downstream bonding groups.

Overview of Dynamic Bonding Group

To reduce the effort required in configuring and managing RCC, the DBG feature implements the automatic creating and reclaiming of the downstream bonding groups. DBG creates the bonding group automatically depending on the channel's load usage. With DBG, the modem is assigned the downstream bonding group

without any static RCC configuration. The load balancing feature leverages DBG to balance traffic among all channels. DBG also accommodates primary channel and CM capacity distributions automatically.

DBG also accommodates primary channel and CM capacity distributions automatically.

Dynamic Bonding Group supports the following:

- Support 896 bonding groups per CLC for CBR-CCAP-LC-40G and CBR-CCAP-LC-40G-R cards.
- Support creating DBGs and reclaiming DBG.
- Support DOCSIS 3.0 and DOCSIS 3.1 channel types.
- Support DOCSIS 3.0 and DOCSIS 3.1 load balance.
- Supports DBG interoperation — Modem registration and load balancing.
- Enhance dynamic load balance — Fixed primary channel movement.
- Enhance raider FPGA SQF — Fairness in channel utilization.

How to configure Dynamic Bonding Group

Enable Dynamic Bonding Group

To enable DBG, run the following commands:

```
ROUTER# config t
Enter configuration commands, one per line. End with CNTL/Z.
ROUTER(config)# cable dynamic-bonding-group
ROUTER(config)# end
ROUTER#
ROUTER#
ROUTER# show run
ROUTER# show running-config | in dynamic-bonding
cable dynamic-bonding-group
```

Enable DS-Resiliency and Configure Resiliency Bonding Group

To make sure that the modem remains w-online with maximum downstream capability when several rf channels are impaired, enable ds-resiliency feature by running the following commands:

```
Router# config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# cable resiliency ds-bonding
Router(config)# end
Router#
Router# show running-config | in resiliency
cable resiliency ds-bonding
Router#
Router# config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# interface wideband-Cable 3/0/1:30
Router(config-if)# cable ds-resiliency
Wideband-Cable3/0/1:30 is set to WB resiliency bonding group.
Remove any existing bundle and rf-channel configuration.
```

Enable ACFE

```

Router(config-if)#end
Router#
Router#show running-config interface wideband-Cable 3/0/1:30
Building configuration...
Current configuration : 61 bytes
!
interface Wideband-Cable3/0/1:30
cable ds-resiliency
end

```

Enable ACFE

Enable ACFE feature to make sure that modem registration is not blocked because of QoS failures:

```

Router# config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# cable acfe enable
Router(config)# end
Router# show running-config | in acfe
cable acfe enable

```

Configure Interface Mac-Domain and Fiber-Node

Note The recommended size of service group is 32 or 48. The recommended primary channel distribution is one primary channel for contiguous four channels, such as 0, 4, 8, 12, 16, 20, 24, 28 and so on.

To set up interface mac-domain and fiber-node, run the following commands:

```

Router# show running-config interface c3/0/1
Building configuration...
Current configuration : 963 bytes
!
interface Cable3/0/1
downstream Integrated-Cable 3/0/1 rf-channel 0
downstream Integrated-Cable 3/0/1 rf-channel 4
downstream Integrated-Cable 3/0/1 rf-channel 8
downstream Integrated-Cable 3/0/1 rf-channel 12
downstream Integrated-Cable 3/0/1 rf-channel 16
downstream Integrated-Cable 3/0/1 rf-channel 20
downstream Integrated-Cable 3/0/1 rf-channel 24
downstream Integrated-Cable 3/0/1 rf-channel 28
upstream 0 Upstream-Cable 3/0/1 us-channel 0
upstream 1 Upstream-Cable 3/0/1 us-channel 1
upstream 2 Upstream-Cable 3/0/1 us-channel 2
upstream 3 Upstream-Cable 3/0/1 us-channel 3
upstream 4 Upstream-Cable 3/0/1 us-channel 4
upstream 5 Upstream-Cable 3/0/1 us-channel 5
upstream 6 Upstream-Cable 3/0/1 us-channel 6
upstream 7 Upstream-Cable 3/0/1 us-channel 7
cable upstream bonding-group 1
upstream 0
upstream 1
attributes 80000002
cable upstream bonding-group 2
upstream 2
upstream 3
attributes 80000000

```

```

cable bundle 255
end

Router# show cab
Router# show cable fib
Router# show cable fiber-node 1
Fiber-Node 1
    Channel(s) : downstream Integrated-Cable 3/0/1: 0-31
    Channel ID(s): 1  2  3  4  5  6  7  8  9  10 11 12 13 14
                    15 16 17 18 19 20 21 22 23 24 25 26 27 28
                    29 30 31 32
    Upstream-Cable 3/0/1
        FN Config Status: Configured (status flags = 0x01)
        MDD Status: Valid
Router# show running-config | sec fiber-node 1
cable fiber-node 1
downstream Integrated-Cable 3/0/1
upstream Upstream-Cable 3/0/1

```

Example of OFDM configured in the fiber node and added as part of the dynamic bonding group.

```

Router# show cable dynamic-bonding-group summary
Dynamic bonding group: Enable
BG ID BG Name          BG Size   CMS   ServFlows Create Time           Create Client      BG
State          RFid list
9219  Wi1/0/4:2       33       36     36      Nov 7  01:56:27.406  MODEM_ONLINE
OPERATIONAL      9216-9247, 9375
9220  Wi1/0/4:3       33       10     10      Nov 7  02:04:31.142  MODEM_ONLINE
OPERATIONAL      9248-9279, 9375
9221  Wi1/0/4:4       8        1      1       Nov 7  02:06:09.949  MODEM_ONLINE
OPERATIONAL      9248-9255

Router# show controller integrated-Cable 1/0/0 rf-channel 158
Load for five secs: 8%/1%; one minute: 8%; five minutes: 8%
Time source is NTP, *14:07:30.643 EST Fri Nov 17 2017
Chan State Admin Mod-Type Start          Width      PLC           Profile-ID      dcid  power
output
                                Frequency
158 UP      UP      OFDM      2580000000  480000000  2790000000      100      159    34.0  NORMAL

Router# show cable fiber-node 10
Load for five secs: 9%/0%; one minute: 9%; five minutes: 8%
Time source is NTP, *13:59:39.571 EST Fri Nov 17 2017
-----
Fiber-Node 10
    Channel(s) : downstream Integrated-Cable 1/0/0: 0-63, 158
    Channel ID(s): 1  2  3  4  5  6  7  8  9  10 11 12 13 14
                    15 16 17 18 19 20 21 22 23 24 25 26 27 28
                    29 30 31 32 33 34 35 36 37 38 39 40 41 42
                    43 44 45 46 47 48 49 50 51 52 53 54 55 56
                    57 58 59 60 61 62 63 64 159
    Upstream-Cable 1/0/0
        FN Config Status: Configured (status flags = 0x01)
        MDD Status: Valid

```

To enable DOCSIS load balancing, run the cable load-balance docsis-enable command. When DOCSIS load balancing is enabled, run the cable load-balance docsis30-enable command to enable load balancing for DOCSIS 3.0 and DOCSIS 3.1.



Note The **cable load-balance docsis30-enable** command enables load balancing for DOCSIS 3.0 and DOCSIS 3.1.

Enable DOCSIS 3.0 and DOCSIS 3.1 Static Load Balance

To balance the load of primary channels, enable static load balance by running the following commands:

```
ROUTER# config t
Enter configuration commands, one per line. End with CNTL/Z.
ROUTER(config)# cable load-balance docsis30-enable static
ROUTER(config)# end
ROUTER# show cable load-balance
DOCSIS LB Enabled: Yes
DOCSIS 2.0 LB Enabled: Yes
DOCSIS 3.0 LB Enabled: Yes
DOCSIS 3.0 Static LB Enabled: Yes
DOCSIS 3.0 Dynamic Downstream LB Enabled: No
```

Enable DOCSIS 3.0 and DOCSIS 3.1 General Load Balance Group

To enable general load balance group, run the following commands:

```
Router# config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# cable load-balance docsis-group fn 1 md c3/0/1
Router(config-lb-group)# no disable
Router(config-lb-group)# end
Router# show cable load-balance
DOCSIS LB Enabled: Yes
DOCSIS 2.0 LB Enabled: No
159
DOCSIS 3.0 LB Enabled: Yes
DOCSIS 3.0 Static LB Enabled: Yes
DOCSIS 3.0 Dynamic Downstream LB Enabled: Yes
DOCSIS 3.0 Dynamic Upstream LB Enabled: Yes
DOCSIS      Status Interval DCC mask Policy      Method Threshold
DOCSIS 3.0 General LB
MD      FN    Group ID          S Intv   DCC mask  Policy  Mtd      MD-CM-SG  Threshold
                                         /UCC
M/E/U/P/S
Ca3/0/1  1     2147557888 E 90    0xF8(0)/N 0           u/u       0x91010B  5/10/70/70/50
```

Enable Dynamic Load Balance and Fixed-Primary Channel Movement



Note To reduce service outage while enabling dynamic load balancing, enable fixed primary channel movement.

To balance the load of all of downstream channels based on utilization, enable dynamic load balance by running the following commands:

```
Router# config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# cable load-balance docsis30-enable dynamic downstream
Router(config)# end
Router#
Router# show cable load-balance
DOCSIS LB Enabled: Yes
DOCSIS 2.0 LB Enabled: No
DOCSIS 3.0 LB Enabled: Yes
DOCSIS 3.0 Static LB Enabled: Yes
DOCSIS 3.0 Dynamic Downstream LB Enabled: Yes
DOCSIS 3.0 Dynamic Upstream LB Enabled: Yes
DOCSIS      Status Interval    DCC mask   Policy      Method Threshold
Group          /UCC                  DS/US     M/E/U/P/S
1             GE       30           0xF8(0)/N 0        m/m      5/10/70/70/50

DOCSIS 3.0 General LB
MD      FN      Group ID    S Intv DCC mask   Policy      Mtd MD-CM-SG  Threshold
                           /UCC                  D/U          M/E/U/P/S
Ca3/0/1  1     2147557888 E 90   0xF8(0)/N 0        u/u 0x91050A  5/10/70/70/50
Router#
Router# config t
Enter configuration commands, one per line. End with CNTL/Z.
Router(config)# cable load-balance fixed-primary-channel
Router(config)# end
Router#
Router# show run
Router# show running-config | in fixed
cable load-balance fixed-primary-channel
```

Verifying Dynamic Bonding Group Configuration

To verify that the DBGs are created:

Check the modem's primary wideband interface by using the **show cable modem wideband channel** command:

```
Router# show cable modem 4800.33ee.ebee wideband channel
MAC Address          IP Address         I/F          MAC          DSxUS      Primary
                                                               State
4800.33ee.ebee      30.132.15.246    C3/0/1/UB    w-online    32x2      Wi3/0/1:3
Router# scm 4800.33ee.ebee ver
```

Check the modem's downstream tuner capability by using the **show cable modem verbose | in DS Tuner** command.

```
Router# show cable modem 4800.33ee.ebee verbose | in DS Tuner
DS Tuner Capability : 32
```

Check the related RCC by using the **show cable mac-domain rcc** command:

Verifying Dynamic Bonding Group Configuration

```
Router# show cable mac-domain c3/0/1 rcc
RCC-ID   RCP          RCs   MD-DS-SG   CMs   WB/RCC-TMPL      D3.0   D3.1
32 00 00 00 00 00 8   0       11   WB (Wi3/0/1:1)   Y     Y
33 00 00 00 00 00 32  0       6    WB (Wi3/0/1:3)   Y     Y
34 00 00 00 00 00 8   0       7    WB (Wi3/0/1:2)   Y     Y
35 00 00 00 00 00 8   0       7    WB (Wi3/0/1:4)   Y     Y
36 00 00 00 00 00 8   0       7    WB (Wi3/0/1:5)   Y     Y
```

Check the dynamically created bonding groups, use the **show cable dynamic-bonding-group summary** command as shown in the example below:

```
Router# show cable dynamic-bonding-group summary
Dynamic bonding group: Enable
BG ID BG Name   BG Size CMs ServFlows Create Time           Create Client   BG State
RFid list
24834 Wi3/0/1:1 8       11  11        Sep 14 14:36:35.194 MODEM_ONLINE   OPERATIONAL
24832-24839
24836 Wi3/0/1:3 32      6   6         Sep 14 14:43:24.144 MODEM_ONLINE   OPERATIONAL
24832-24863
24835 Wi3/0/1:2 8       7   7         Sep 14 17:20:37.115 MODEM_ONLINE   OPERATIONAL
24840-24847
24837 Wi3/0/1:4 8       7   7         Sep 14 17:21:37.723 STATIC_LOAD_BALANCE OPERATIONAL
24856-24863
24838 Wi3/0/1:5 8       7   7         Sep 14 17:21:39.761 STATIC_LOAD_BALANCE OPERATIONAL
24848-24855
```

Table 2: Dynamic Bonding Group States

CREATE_WAITING_SUP	Line card sends request to create DBG and waits for SUP to create the bonding group.
HOLD	DBG is created from SUP, or bonding group reverts from reclaim to ready for use.
OPERATIONAL	If modem is used on the bonding group after the HOLD state times out, the DBG state changes to OPERATIONAL.
RECLAIM_HOLD	Ready for reclaim. If no modem is used on the bonding group or match the reclaim in two minutes, the bonding group is reclaimed. The DBG state changes to RECLAIM_HOLD.
RECLAIM_MODEM_MOVING	Ready for reclaim. The modem is moved out of the bonding group.
RECLAIM_WAITING_SUP	Line card sends DBG reclaim request and waits for SUP to reclaim the BG.

To show the detailed channel list information of dynamic bonding group, use the **show derived-config interface wideband** command.

```
Router# show derived-config interface wideband-Cable 3/0/1:1
Building configuration...
Derived configuration: 113 bytes
```

```
!
interface Wideband-Cable3/0/1:1
  cable bundle 255
  cable rf-channels channel-list 0-7 bandwidth-percent 1
end
```

Check the usage of bonding group resource by using the **show cable dynamic-bonding-group quota summary | slot | controller** command.

```
Router# show cable dynamic-bonding-group quota controller 3/0/1
slot/subslot/ctrlr: 3/0/1
Total BG number: 128
Used BG number (static/dynamic): 6(1/5) Available BG number: 122
Available BG list port: 0, 6-29, 31-127
```



Note 128 BGs can be configured on one controller, but only 896 BGs are supported per CLC. All controllers share the 896 BG resources.

Check the reclaimed bonding group by using the **show cable dynamic-bonding-group reclaim-history summary** command:

```
Router# show cable dynamic-bonding-group reclaim-history summary
BG ID BG Name    BG Size Create Time      Create Client Reclaim Time      Reclaim Client RFid
list
24835 Wi3/0/1:2 16        Sep 14 14:40:27 MODEM_ONLINE  Sep 14 14:44:27 DBG_INTERNAL
24832-2484
```

Verifying Static Load Balancing Configuration

To verify if static load balancing is configured:

Check the load of all primary channels by using the **show cable load-balance docsis-group fn 1 md cable load | in In** command.

```
Router# show cable load-balance docsis-group fn 1 md c3/0/1 load | in In
Interface      State   Group     Utilization Rsvd NBCM WB/UB Weight
In3/0/1:0(573 MHz) initial 2147557888 0%(0%/0%) 0% 0 17 37
In3/0/1:4(597 MHz) initial 2147557888 0%(0%/0%) 0% 0 17 37
In3/0/1:8(621 MHz) initial 2147557888 0%(0%/0%) 0% 0 13 37
In3/0/1:12(645 MHz) initial 2147557888 0%(0%/0%) 0% 0 13 37
In3/0/1:16(669 MHz) initial 2147557888 0%(0%/0%) 0% 0 13 37
In3/0/1:20(693 MHz) initial 2147557888 0%(0%/0%) 0% 0 13 37
In3/0/1:24(717 MHz) initial 2147557888 0%(0%/0%) 0% 0 13 37
In3/0/1:28(741 MHz) initial 2147557888 0%(0%/0%) 0% 0 13 37
```

This command output lists all primary channels and shows the number of cable modems used with these channels. NBCM is the number of narrow band modems used with a channel while WBCM (WB/UB) is the number of wideband modems used with a channel. The total number of WBCMs should be balanced among all the channels.

The difference between the total number of WBCMs used with any two channels is smaller or equal to the threshold load minimum. The default value of the threshold load minimum is 5.

Check the load of all rf channels by using the **show cable load-balance docsis-group fn 1 md rfch-util** command.

Verifying Static Load Balancing Configuration

```
Router# show cable load-balance docsis-group fn 1 md c3/0/1 rfch-util
Interface Pstate Pending-In Pending-Out Throughput(Kbps) Util NBCM WBCM
In3/0/1:0 up No No 0 0% 0 17
In3/0/1:1 NA No No 0 0% 0 17
In3/0/1:2 NA No No 0 0% 0 17
In3/0/1:3 NA No No 0 0% 0 17
In3/0/1:4 up No No 0 0% 0 17
In3/0/1:5 NA No No 0 0% 0 17
In3/0/1:6 NA No No 0 0% 0 17
In3/0/1:7 NA No No 0 0% 0 17
In3/0/1:8 up No No 0 0% 0 13
In3/0/1:9 NA No No 0 0% 0 13
In3/0/1:10 NA No No 0 0% 0 13
In3/0/1:11 NA No No 0 0% 0 13
In3/0/1:12 up No No 0 0% 0 13
In3/0/1:13 NA No No 0 0% 0 13
In3/0/1:14 NA No No 0 0% 0 13
In3/0/1:15 NA No No 0 0% 0 13
.....
Average: 0.0
Variance: 0.0
```

This command lists the load information about the primary and secondary channels. WBCM is the number of wideband modems used with a channel.

Check the cable modem's internal state in load balancing using the **show cable load-balance docsis-group fn 1 md modem-list wideband** command.

```
Router# show cable load-balance docsis-group fn 1 md c3/0/1 modem-list wideband
Codes: M - Multicast, U - UGS, P - PCMM, F - Max-Failures, X - eXcluded
L - L2vpn, R - RSVP, S - DS-Resiliency
Primary WB MAC Address Primary DS RCC-ID Priority MUPFXLRS State
Wi3/0/1:0 (3)
36 c8fb.2631.0e56 In3/0/1:20 41 0 ----- LB_CM_HOLD_EXPIRE_IN
37 c8fb.26a6.c3dc In3/0/1:16 41 0 ----- LB_CM_HOLD_EXPIRE_IN
43 c8fb.2631.0d7e In3/0/1:16 41 0 ----- LB_CM_HOLD_EXPIRE_IN
Wi3/0/1:1 (9)
c8fb.2631.0c80 In3/0/1:0 32 0 ----- LB_CM_STATIC_MOVING
c8fb.2631.0cae In3/0/1:0 32 0 ----- LB_CM_STATIC_READY
c8fb.2631.0db0 In3/0/1:24 42 0 ----- LB_CM_STATIC_MOVING
c8fb.2631.0c10 In3/0/1:28 42 0 ----- LB_CM_STATIC_MOVING
c8fb.2631.0d80 In3/0/1:16 41 0 ----- LB_CM_STATIC_MOVING
c8fb.2631.0d26 In3/0/1:24 41 0 ----- LB_CM_STATIC_MOVING
a4a2.4a2d.b4aa In3/0/1:20 41 0 ----- LB_CM_STATIC_MOVING
c8fb.2631.0e5c In3/0/1:0 32 0 ----- LB_CM_STATIC_MOVING
c8fb.2631.0cb0 In3/0/1:0 32 0 ----- LB_CM_STATIC_MOVING
Wi3/0/1:2 (3)
27 c8fb.2631.0d2a In3/0/1:12 34 0 ----- LB_CM_HOLD_EXPIRE_IN
c8fb.2631.0e5a In3/0/1:12 34 0 ----- LB_CM_STATIC_MOVING
```

	c8fb.2631.0bfe	In3/0/1:8	34	0	----- LB_CM_STATIC_MOVING
Wi3/0/1:3 (2)	4800.33ea.54be	In3/0/1:28	33	0	----- LB_CM_DYNAMIC_READY
	4800.33ee.ebe6	In3/0/1:20	33	0	----- LB_CM_HOLD_EXPIRE_IN
1					
Wi3/0/1:4 (2)	c8fb.2631.0e44	In3/0/1:24	42	0	----- LB_CM_HOLD_EXPIRE_IN
40	c8fb.2631.0a44	In3/0/1:28	42	0	----- LB_CM_HOLD_EXPIRE_IN
42					

Table 3: Cable Modem States

CM state	Description
LB_CM_STATIC_READY	Modem is ready for static load balance movement.
LB_CM_STATIC_MOVING	Modem is in movement triggered via static LB.
LB_CM_HOLD_EXPIRE_IN	Modem is in hold for the next movement. The default hold time is 600 seconds.
LB_CM_DYANMIC_READY	Modem is ready for dynamic load balance movement.
LB_CM_DYANMIC_MOVING	Modem is in movement triggered via dynamic LB.
LB_CM_DISABLED	Modem is not ready for movement. If the modem failure movement count reaches max-failure threshold, then set the modem in LB_CM_DISABLED to avoid further movement.

Verifying Dynamic Load Balancing Configuration

Check the utilization of all rf channels by using **show cable load-balance docsis-group fn 320 md rfch-util** command.

```
Router# show cable load-balance docsis-group fn 320 md c3/0/0 rfch-util
Interface Pstate Pending-In Pending-Out Throughput(Kbps) Util NBCM WBCM
Do3/0/0:0 up No No 11754 31% 0 308
Do3/0/0:1 up No No 11754 31% 0 296
Do3/0/0:2 up No No 11754 31% 0 333
Do3/0/0:3 up No No 11754 31% 0 296
Do3/0/0:4 up No No 11754 31% 0 297
Do3/0/0:5 up No No 11754 31% 0 331
Do3/0/0:6 up No No 11754 31% 0 299
Do3/0/0:7 up No No 11753 31% 0 268
Do3/0/0:8 up No No 11754 31% 0 302
Do3/0/0:9 up No No 11754 31% 0 331
Do3/0/0:10 up No No 11753 31% 0 308
Do3/0/0:11 up No No 11754 31% 0 305
Do3/0/0:12 NA No No 12862 34% 0 258
Do3/0/0:13 NA No No 12862 34% 0 258
Do3/0/0:14 NA No No 12862 34% 0 258
.....
Average: 30.416
Variance: 1.701
```

Verifying Dynamic Load Balancing Configuration

The traffic among all rf channels is considered balanced when the difference between any two rf channel utilization is under the threshold load. The default value of threshold load is 10%.

To check the potential target bonding group for each of the source bonding group, use the **show cable load-balance docsis-group fn md cable target dbg** and the **show cable load-balance docsis-group fn md target wide** command.

```
Router# show cable load-balance docsis-group fn 320 md c3/0/0 target dbg
Interface Bg-Id Size Group Target
Wi3/0/0:0 24577 4 2147557695
Wi3/0/0:3 24580 4 2147557695
Wi3/0/0:4 24581 8 2147557695
Wi3/0/0:5 24582 8 2147557695
Wi3/0/0:6 24583 24 2147557695 33% [24576, 24584-24587, 24589-24607]
Wi3/0/0:7 24584 16 2147557695 30% [24576, 24586-24587, 24595-24607]
Wi3/0/0:8 24585 16 2147557695
Wi3/0/0:9 24586 32 2147557695
Wi3/0/0:10 24587 24 2147557695 33% [24576, 24584-24587, 24589-24607]
Wi3/0/0:11 24588 8 2147557695
Wi3/0/0:12 24589 8 2147557695 27% [24596-24603]
Wi3/0/0:13 24590 8 2147557695
Wi3/0/0:14 24591 4 2147557695

Router# show cable load-balance docsis-group fn 5 md c1/0/4 target wide
Interface Bg-Id State Group Target
Wi1/0/4:2 9219 up 2147510276 Wi1/0/4:4
Wi1/0/4:3 9220 up 2147510276
Wi1/0/4:4 9221 up 2147510276
```

If no target bonding groups are displayed, no bonding groups are created to balance traffic among rf channels.

A sample output with DOCSIS 3.1 modems with configured threshold of 14% is shown below. For utilization based load balancing to start on DOCSIS 3.1 modems, the OFDM channel must be 100% utilized and traffic must flow on SC-QAM. The utilization based load balancing balances the traffic flowing on the SC-QAM channels in a D31 modem.

```
Router# show cable load-balance docsis-group fn 5 md c1/0/4 rfch-util
Interface Pstate Pending-In Pending-Out Throughput(Kbps) Util NBCM WBCM
In1/0/4:0 up No No 10632 28% 0 45
In1/0/4:1 NA No No 11226 29% 0 41
In1/0/4:2 NA No No 11225 29% 0 41
In1/0/4:3 NA No No 11225 29% 0 41
In1/0/4:4 down No No 11225 29% 0 41
In1/0/4:5 down No No 11225 29% 0 41
In1/0/4:6 down No No 11225 29% 0 41
In1/0/4:7 down No No 11225 29% 0 41
In1/0/4:8 up No No 10620 28% 0 43
.....
.....
In1/0/4:35 NA No No 6646 17% 0 6
In1/0/4:36 NA No No 6646 17% 0 6
In1/0/4:37 NA No No 6647 17% 0 6
In1/0/4:38 NA No No 6646 17% 0 6
In1/0/4:39 NA No No 6647 17% 0 6
In1/0/4:40 up No No 6088 16% 0 6
In1/0/4:41 NA No No 6648 17% 0 6
In1/0/4:42 NA No No 6647 17% 0 6
In1/0/4:43 NA No No 6647 17% 0 6
In1/0/4:44 NA No No 6646 17% 0 6
In1/0/4:45 NA No No 6646 17% 0 6
In1/0/4:46 NA No No 6647 17% 0 6
```

In1/0/4:47	NA	No	No	6648	17%	0	6
In1/0/4:48	NA	No	No	6648	17%	0	6
In1/0/4:49	NA	No	No	6648	17%	0	6
In1/0/4:50	NA	No	No	6646	17%	0	6
In1/0/4:51	NA	No	No	6648	17%	0	6
In1/0/4:52	NA	No	No	6647	17%	0	6
In1/0/4:53	NA	No	No	6648	17%	0	6
In1/0/4:54	NA	No	No	6647	17%	0	6
In1/0/4:55	NA	No	No	6648	17%	0	6
In1/0/4:56	NA	No	No	6647	17%	0	6
In1/0/4:57	NA	No	No	6647	17%	0	6
In1/0/4:58	NA	No	No	6646	17%	0	6
In1/0/4:59	NA	No	No	6645	17%	0	6
In1/0/4:60	NA	No	No	6646	17%	0	6
In1/0/4:61	NA	No	No	6646	17%	0	6
In1/0/4:62	NA	No	No	6647	17%	0	6
In1/0/4:63	NA	No	No	6647	17%	0	6
In1/0/4:159	NA	No	No	1819685	100%	0	47

Feature Information for Dynamic Bonding Group

Use Cisco Feature Navigator to find information about the platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to the <https://cfnng.cisco.com/> link. An account on the Cisco.com page is not required.



Note The following table lists the software release in which a given feature is introduced. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 4: Feature Information for Dynamic Bonding Group

Feature Name	Releases	Feature Information
Dynamic Bonding Group	Cisco IOS XE Fuji 16.7.1	This feature was introduced on the Cisco cBR Series Converged Broadband Routers.

