

DOCSIS 3.1 Path Selection

This document describes how to configure the path selection on the Cisco cBR Series Converged Broadband Router.

- Hardware Compatibility Matrix for Cisco cBR Series Routers, on page 1
- Information about Path Selection, on page 2
- How to Configure Path Selection, on page 2
- Additional References, on page 5
- Feature Information for DOCSIS 3.1 Path Selection, on page 6

Hardware Compatibility Matrix for Cisco cBR Series Routers



Note The hardware components introduced in a given Cisco IOS-XE Release are supported in all subsequent releases unless otherwise specified.

Cisco CMTS Platform	Processor Engine	Interface Cards
Cisco cBR-8 Converged Broadband Router	Cisco IOS-XE Release 3.15.0S and Later Releases	Cisco IOS-XE Release 3.15.0S and Later Releases
	Cisco cBR-8 Supervisor :	Cisco cBR-8 CCAP Line Cards:
	• PID—CBR-CCAP-SUP-160G	• PID—CBR-LC-8D30-16U30
	• PID—CBR-CCAP-SUP-60G ¹	• PID—CBR-LC-8D31-16U30
	• PID—CBR-SUP-8X10G-PIC	• PID—CBR-RF-PIC
		• PID—CBR-RF-PROT-PIC
		Cisco cBR-8 Downstream PHY Modules: • PID—CBR-D30-DS-MOD
		• PID—CBR-D31-DS-MOD
		Cisco cBR-8 Upstream PHY Modules: • PID—CBR-D30-US-MOD

Table 1: Hardware Compatibility Matrix for the Cisco cBR Series Routers

¹ Effective with Cisco IOS-XE Release 3.17.0S, CBR-CCAP-SUP-60G supports 8 cable line cards. The total traffic rate is limited to 60Gbps, the total number of downstream service flow is limited to 72268, and downstream unicast low-latency flow does not count against the limits.

Information about Path Selection

DOCSIS 3.1 Path Selection feature is enhanced to support OFDM downstream channels. The RCC decision process is enhanced to include OFDM channels.

How to Configure Path Selection

Configuring Downstream Bonding Group with OFDM Channel

To configure the downstream bonding group with OFDM channel, follow the steps below:

```
enable
configure terminal
interface wideband-cable slot/subslot/bay:wideband-channel
description text
cable bundle id
cable rf-channels channel-list grouplist bandwidth-percent percentage-bandwidth
```



Channel 158 to 162 are specified as OFDM channel.

Verifying Downstream Bonding Group with OFDM Channel Configuration

To display the details of the downstream bonding group with OFDM channel, use the **show running-config interface** command as shown in the example below:

```
Router# show running-config interface wideband-cable 3/0/0:13
```

```
Building configuration...

Current configuration : 212 bytes

!

interface Wideband-Cable3/0/0:13

description D31-DSBG: 1 SC-QAM plus 1 OFDM

cable bundle 1

cable rf-channels channel-list 8 bandwidth-percent 30

cable rf-channels channel-list 158 bandwidth-percent 25

end
```

Verifying the Path Selection Status

To display the path selection status of a cable modem, use the **show cable modem path-sel** command as shown in the example below:

```
router#show cable modem 38c8.5cfe.efa6 path-sel
CM 38c8.5cfe.efa6 Path-Sel Info: 07:20
RCS Filter Result: Succeed
Candidate RCS List: 2
 RCC-Id Owner-Id Preliminary RCP
                                      TLV-56
                                             LBG
                                                      SF-Attr CM-Attr
 1
        1 :12289 Pass Pass
                                       --
                                             Pass
                                                      Pass
                                                               Pass
        1 :12290 Pass
                              Pass
                                       ___
 2
                                              Pass
                                                      Pass
                                                               Pass
TCS Filter Result: Succeed
TCS Info:
 TCS in CGD
                                 UCID: 1 2 3
                    : 0x7
 TCS in Freq Range : 0x7
                                 UCID: 1 2 3
 TCS Impaired
                    : 0x0
TCS Passed filters:
                    : 0x7
                                 UCID: 1 2 3
 Preliminary
 LB Group
                    : 0x7
                                 UCID: 1 2 3
 SF Attr Mask
                   : 0x7
                                 UCID: 1 2 3
                    : 0x7
                                 UCTD: 1 2 3
 CM Attr Mask
Candidate US-BG List: 4
 UBG-Id Chan-Mask Preliminary TLV-56 LBG
                                                SF-Attr
                                                         CM-Attr
         0x7
 1
                   Pass
                                 ___
                                       Pass
                                                Pass
                                                         Pass
 65537
         0x2
                   Pass
                                 ___
                                       Pass
                                                Pass
                                                         Pass
 65538
         0x4
                                 --
                    Pass
                                        Pass
                                                Pass
                                                         Pass
 65536
         0x1
                     Pass
                                 ---
                                        Pass
                                                Pass
                                                         Pass
```

Primary DS Chan Result: Skipped Candidate Primary DS Chan List: 0

```
Primary US Chan Result: Skipped
Candidate Primary US Chan List: 0
```

Clearing the Path Selection Status

To clear the path selection status for all CMs, use the **clear cable modem all path-sel** command as shown in the example below:

```
Router# clear cable modem all path-sel
```

```
Router# show cable modem c8fb.26a6.c46a path-sel
```

CM c8fb.26a6.c46a Path-Sel Info: N/A Path-Sel status has been cleared after register online.

Verifying the RCC Configuration

To verify the runtime RCCs on a cable interface, use the **show cable mac-domain rcc** command as shown in the example below:

```
Router# show cable mac-domain cable 7/0/0 rcc
```

RCC-ID	RCP	RCs MD-DS-SG CMs	WB/RCC-TMPL	D3.0 D3.1
4	00 00 00 00 00	16 0 1	WB (Wi7/0/0:0)	У У
5	00 00 00 00 00	25 0 2	WB (Wi7/0/0:1)	N Y
6	00 10 00 00 08	8 0 0	RCC-TMPL(3:1)	Y N
7	00 00 00 00 00	4 0 0	WB (Wi7/0/0:4)	У У

To display the detailed information for only DOCSIS 3.1 capable RCC, use the **show cable mac-domain rcc simplified** command as shown in the example below:

router#show cable mac-domain cable 7/0/0 rcc 5 simplified

RCC ID Created Via CM attribute	e mask		deband 800000	- Wi7/0/0:1 00
Primary Rece Chan Idx 1	eive Channel RF Chan In7/0/0:0	List	DCID 1	Freq 453000000
Non-Primary	Receive Char	nnel	List:	
Chan Idx	RF Chan		DCID	Freq
2	In7/0/0:1		2	459000000
3	In7/0/0:2		3	465000000
4	In7/0/0:3		4	471000000
5	In7/0/0:4		5	477000000
6	In7/0/0:5		6	483000000
7	In7/0/0:6		7	489000000
8	In7/0/0:7		8	495000000
9	In7/0/0:8		9	501000000
10	In7/0/0:9		10	507000000
11	In7/0/0:10		11	513000000
12	In7/0/0:11		12	519000000
13	In7/0/0:12		13	525000000
14	In7/0/0:13		14	531000000
15	In7/0/0:14		15	537000000
16	In7/0/0:15		16	543000000
17	In7/0/0:16		17	549000000

18	In7/0/0:17	18	555000000	
19	In7/0/0:18	19	561000000	
20	In7/0/0:19	20	567000000	
21	In7/0/0:20	21	573000000	
22	In7/0/0:21	22	579000000	
23	In7/0/0:22	23	585000000	
24	In7/0/0:23	24	591000000	
25	In7/0/0:158	159	663000000	
OFDM Receive	Channel List:			
Chan Idx	RF Chan	DCID	PLC-Freq	Profiles
25	In7/0/0:158	159	663000000	0 1 2

Additional References

Related Document

Document Title	Link
Cisco cBR	http://www.cisco.com/c/en/us/td/docs/cable/cbr/configuration/guide/b_cbr_layer2_docsis30.html
Converged	
Broadband	
Routers	
Layer 2 and	
DOCSIS 3.0	
Configuration	
Guide	

MIBs

I

MIBs	MIBs Link
• DOCSIF31-MIB	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

Technical Assistance

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies.	http://www.cisco.com/support
To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds.	
Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	

Feature Information for DOCSIS 3.1 Path Selection

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to http://tools.cisco.com/ITDIT/CFN/. An account on http://www.cisco.com/ is not required.



Note The below table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 2: Feature Information for DOCSIS 3.1 Path Selection

Feature Name	Releases	Feature Information
DOCSIS 3.1 Path Selection		This feature was introduced on the Cisco cBR Series Converged Broadband Router s.