



## Maintaining the Cisco cBR Chassis

- [Maintaining the Cisco cBR Chassis](#) 2
- [Powering Down the Cisco cBR Chassis](#) 2
- [Unmounting the Cisco cBR Chassis](#) 2

Revised: October 8, 2018

# Maintaining the Cisco cBR Chassis

## Powering Down the Cisco cBR Chassis

You may want to power down the chassis to perform certain tasks, including:

- Transporting the chassis to a new location
- Repairing or upgrading the chassis hardware
- Mounting the chassis

### Before you begin

#### Procedure

---

**Step 1** Push the toggle switch on the FPEM (AC or DC) on the rear of the chassis to OFF position.

**Step 2** [Disconnect AC or DC power.](#)

---

### What to do next

- [Unmount the Cisco cBR chassis.](#)
- [Power up the Cisco cBR chassis.](#)

## Unmounting the Cisco cBR Chassis

### Before you begin

- [Install the chassis installation handle](#) (Optional).

### Required Tools and Equipment

- #2 Phillips screwdriver

#### Procedure

---

**Step 1** [Power down the chassis.](#)

**Step 2** [Disconnect AC or DC power.](#)

**Step 3** Remove all external cables.

**Step 4** Loosen the screws inserted into the side cable management bracket using a #2 Phillips screwdriver.

**Step 5** Loosen the screws inserted into the rack mount ear on each side using a #2 Phillips screwdriver.

**Step 6** Remove the chassis from the rack.

---

**What to do next**

- [Move the equipment to another location.](#)
- To return the equipment to Cisco, pack the chassis in the original Cisco box that you received during shipment and visit [Cisco Ordering](#) website.





**Americas Headquarters**  
Cisco Systems, Inc.  
San Jose, CA 95134-1706  
USA

**Asia Pacific Headquarters**  
CiscoSystems(USA)Pte.Ltd.  
Singapore

**Europe Headquarters**  
CiscoSystemsInternationalBV  
Amsterdam,TheNetherlands

Cisco has more than 200 offices worldwide. Addresses, phone numbers, and fax numbers are listed on the Cisco Website at [www.cisco.com/go/offices](http://www.cisco.com/go/offices).