



Powering up the Cisco Remote PHY Shelf 7200

- [Powering up the Cisco Remote PHY Shelf 7200 Chassis, on page 1](#)

Powering up the Cisco Remote PHY Shelf 7200 Chassis

After all the interfaces and other cables are connected, perform a visual check of all connections and check that:

- The ejector levers on each line card are in the locked position.
 - All the captive screws on all the modules are securely fastened.
 - All network interface cables are connected.
 - The console terminal is turned on.
1. Ensure that you have a chassis ground connection. Go through the topic [Attaching a Chassis Ground Connection](#).
 2. Verify if the LEDs on the front Power Modules is green to indicate input voltage presence is within correct range.
 3. Toggle switch (AC or DC) on the lower front right corner of the chassis to ON position.
 4. Verify if the LEDs on the front Power Modules are green to indicate output voltage presence is enabled.

