



## About this Guide

---

This guide contains Command-Line Interface (CLI) commands to maintain the SCE platform. This guide assumes a basic familiarity with telecommunications equipment and installation procedures.

This reference provides a complete listing of all commands at the **admin** authorization level or below, with examples of how to use each command to perform typical SCE platform management functions.

## Audience

This guide is intended for the networking or computer technician responsible for configuring and maintaining the SCE platform on-site. It is also intended for the operator who manages the SCE platform(s). This guide does not cover high-level technical support procedures available to Root administrators and Cisco technical support personnel.

## Document Revision History

Revision	Cisco Service Control Release and Date	Change Summary
OL-16481-01	3.1.6S June, 2008	Created the Cisco SCE8000 CLI Command Reference

## Organization

This guide contains the following sections:

Section	Title	Description
1	<a href="#">Command Line Interface, page 1-1</a>	Describes how to use the SCE platform Command-Line Interface (CLI), its hierarchical structure, authorization levels and its help features.
2	<a href="#">CLI Command Reference, page 2-1</a>	Provides an alphabetical list of the available CLI commands that you can use to configure the SCE platform

## Related Publications

This *Cisco SCE8000 CLI Command Reference* should be used in conjunction with the following SCE8000 platform manuals to provide a detailed explanation of the commands:

- [Cisco Service Control Engine \(SCE\) Software Configuration Guide](#)
- [Cisco SCE8000 Installation and Configuration Guide](#)

## Conventions

This document uses the following conventions:

Convention	Indication
<b>bold font</b>	Commands and keywords and user-entered text appear in <b>bold font</b> .
<i>italic font</i>	Document titles, new or emphasized terms, and arguments for which you supply values are in <i>italic font</i> .
[ ]	Elements in square brackets are optional.
{ x   y   z }	Required alternative keywords are grouped in braces and separated by vertical bars.
[ x   y   z ]	Optional alternative keywords are grouped in brackets and separated by vertical bars.
string	A nonquoted set of characters. Do not use quotation marks around the string or the string will include the quotation marks.
<code>courier font</code>	Terminal sessions and information the system displays appear in <code>courier font</code> .
< >	Nonprinting characters such as passwords are in angle brackets.
[ ]	Default responses to system prompts are in square brackets.
!, #	An exclamation point (!) or a pound sign (#) at the beginning of a line of code indicates a comment line.



### Note

Means *reader take note*.



### Tip

Means *the following information will help you solve a problem*.



### Caution

Means *reader be careful*. In this situation, you might perform an action that could result in equipment damage or loss of data.



### Timesaver

Means *the described action saves time*. You can save time by performing the action described in the paragraph.

**Warning**

**Means *reader be warned*. In this situation, you might perform an action that could result in bodily injury.**

## Obtaining Documentation and Submitting a Service Request

For information on obtaining documentation, submitting a service request, and gathering additional information, see the monthly *What's New in Cisco Product Documentation*, which also lists all new and revised Cisco technical documentation, at:

<http://www.cisco.com/en/US/docs/general/whatsnew/whatsnew.html>

Subscribe to the *What's New in Cisco Product Documentation* as a Really Simple Syndication (RSS) feed and set content to be delivered directly to your desktop using a reader application. The RSS feeds are a free service and Cisco currently supports RSS version 2.0.

