



## Supported Devices Information

This section contains the following topics:

- [Supported Devices and Software Types, on page 1](#)

### Supported Devices and Software Types

You can configure the software type while onboarding a device to Cisco Crosswork Change Automation and Health Insights. The devices and the corresponding suggested software types are explained in the table below:

**Table 1: Supported devices and software types**

Device	Suggested Software Type
Alcatel-Lucent	TIMOS
Cisco ASR 5000 Device (formerly STAROS)	ASR5K STAROS
Cisco Adaptive Security Appliance (ASA)	ASASW
Cisco Application Control Engine (ACE)	ACSW
Cisco CatOS Device	CATOS
Cisco IOS Device	IOS
Cisco IOS-EXR Device	IOS XR
Cisco IOS-XR Device	IOS XR
Cisco ME1200 Device running ME1200 OS	ME1200_OS
Cisco NX-OS Device	NXOS
Cisco NX-OS Device with embedded UCSM	NXOS
Cisco Network Analysis Module (NAM)	NAM
Cisco Optical Networking System (ONS) Device	ONS

<b>Device</b>	<b>Suggested Software Type</b>
Cisco SG500 Device running SG500 OS	SG500_OS
Cisco Service Control Engine (SCE)	SCOS
Cisco Unified Communications Manager (UCM)	UCOS
Cisco WAAS Device	Wide Area Application Services
Cisco Wireless LAN Controller	WLC
Generic UNIX Device	UNIX
H3C Comware Device	Comware
Huawei VRP Device	HW_VRP
Juniper JunOS Device	JUNOS