




Interface TX Utilization

- [Interface TX Utilization, on page 1](#)

Interface TX Utilization

This alarm monitors transmitting traffic information and is triggered when interface TX utilization is outside the range you specify. To configure this alarm, do the following:

Procedure

- Step 1** In the main window, click  > **Configure** > **Policies**.
 - Step 2** Click **Add Policy**.
 - Step 3** Enter a policy name in the **Name** field.
 - Step 4** Under **Triggers**, click **Add Rules**.
 - Step 5** Click **Interface TX Utilization**.
 - Step 6** Click **Next**.
 - Step 7** By default, the rule is enabled. Toggle the switch to **DISABLED** if you do not want to activate the rule yet.
 - Step 8** Use the slider to indicate utilization ranges that will trigger this alarm. Crosswork Cloud will send a notification if utilization is within the range indicated by the color red and **ALARM** text.
 - Step 9** Under the **Severity** drop-down list, select the severity level you want defined for this alarm.
 - Step 10** Make any other necessary interface and endpoint notification configurations, then click **Save**.
-

