



## Configure Credentials

---

- [Create Credentials, on page 1](#)
- [Edit Credentials, on page 1](#)
- [Link Devices to a Credential, on page 2](#)

## Create Credentials

You can specify credentials that are shared among a group of devices instead of manually entering this information for each device. Creating credentials allows multiple routers in a production environment to leverage a single login credential. This login credential may be defined in an external authentication service such as TACACS+ or RADIUS.

### Procedure

---

- Step 1** In the main window, click **Configure > Credentials**.
- Step 2** Click **Add Credential**.
- Step 3** Enter a name for the credential, select the credential type, and complete the required fields.
- Step 4** Click **Save**.

You can now apply this credential to devices you have added.

---

## Edit Credentials

You can edit previously created credentials.

### Procedure

---

- Step 1** In the main window, click **Configure > Credentials**.
- Step 2** Click the name of the credential you want to edit.

- Step 3** Click **Edit**.
- Step 4** Make the required changes, then click **Save**.
- Step 5** To link devices to this credential, click **Link Devices**.
- The credential updates with the changes you made.
- 

## Link Devices to a Credential

You can link previously added devices to a credential group, which overwrites any previously assigned credential for the selected devices.

### Procedure

---

- Step 1** In the main window, click **Configure > Credentials**.
- Step 2** Click the name of the credential to which you want to link devices.
- Devices for which you can link to the selected credential are displayed. If the specified credential isn't valid for the device, the device doesn't appear in the list.
- Step 3** Click **Link Devices**.
- Step 4** Select one or more devices to link to the credential, then click **Link**.
-