



Cisco Catalyst Center 3.3.1 on ESXi Deployment Guide

Cisco Catalyst Center
Updated September 9, 2026

Abbreviated Cisco Trademarks

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/c/en/us/about/legal/trademarks.html>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

Topics included

.....	ii
1 Get Started with Catalyst Center on ESXi.....	5
Catalyst Center on ESXi.....	6
Deployment requirements.....	6
Catalyst Center on ESXi packages.....	8
Deployment prerequisites.....	8
VMware vSphere installation.....	8
Enterprise interface reservations.....	9
Import the IdenTrust certificate chain.....	9
DNS, NTP, and proxy server settings.....	10
Required internet URLs and fully qualified domain names.....	10
Enable storage input/output control.....	13
HA admission control settings.....	13
2 Set up Catalyst Center on ESXi.....	15
Virtual appliance.....	16
Create a virtual machine.....	16
Configure an additional network adapter.....	17
Configure a Catalyst Center on ESXi virtual appliance.....	19
Configure a virtual appliance using the Maglev Configuration Wizard (default mode).....	19
Configure a virtual appliance using the Maglev Configuration Wizard (advanced mode).....	23
Configure a virtual appliance using the Install Configuration wizard.....	29
Configure a virtual appliance using the advanced Install Configuration Wizard	33
Enable an air-gapped deployment.....	38
3 Postdeployment Changes.....	39
Postdeployment configurations.....	40
Enable VM restart priority.....	40
Configure VM reservation for recovery site.....	40
Recovery site VM resource pool reservations.....	41
4 Upgrade Catalyst Center on ESXi.....	43
Upgrade to Catalyst Center 3.3.1 on ESXi.....	44
Upgrade to Catalyst Center 3.3.1 on ESXi in an air-gapped deployment.....	44

1 Get Started with Catalyst Center on ESXi

Topics:

- [Catalyst Center on ESXi](#)
- [Deployment requirements](#)
- [Catalyst Center on ESXi packages](#)
- [Deployment prerequisites](#)

Catalyst Center on ESXi

Introduces the Catalyst Center on ESXi deployment model and its benefits, such as a rapid virtual deployment.

Catalyst Center on ESXi is a deployment model that

- provides full functionality of Catalyst Center in a virtual format
- allows rapid deployment of Catalyst Center in your network environment, and
- allows you to evaluate Catalyst Center without purchasing a physical appliance.

This deployment guide provides information on:

- The requirements for deploying a Catalyst Center on ESXi virtual appliance.
- Procedures for creating a virtual machine on a VMware ESXi host, configuring a virtual appliance, and completing the necessary post-deployment tasks before using Catalyst Center on ESXi.

Deployment requirements

Outlines the best practices, VM minimum requirements, scale numbers, and other requirements for a successful deployment.

Performance best practices

Certain requirements must be met to successfully deploy a Catalyst Center on ESXi virtual appliance. Refer to these performance tips for the most important aspects of VMware vSphere:

- VMware vSphere Client 7.0: [Performance Best Practices for VMware vSphere 7.0](#) (PDF)
- VMware vSphere Client 8.0: [Performance Best Practices for VMware vSphere 8.0](#) (PDF)

Virtual machine requirements

Table 1: Virtual machine minimum requirements

Feature	Description
Virtualization platform and hypervisor	VMware vSphere (which includes ESXi and vCenter Server) 7.0.x or later, including all patches.
Processors	Intel Xeon Scalable server processor (Cascade Lake or newer) or AMD EPYC Gen2 with 2.1 GHz or better clock speed. 32 vCPUs with 64-GHz reservation must be dedicated to the VM.
Memory	256-GB DRAM with 256-GB reservation must be dedicated to the VM.
Storage	3-TB solid-state drive (SSD). Reserve additional datastore space if you plan to create backups of your virtual appliance. For information, refer to "Backup server requirements" in the Cisco Catalyst Center Administrator Guide .
I/O Bandwidth	180 MB/sec.
Input/output operations per second (IOPS) rate	2,000 to 2,500, with less than 5 ms of I/O completion latency.
Latency	Catalyst Center on ESXi to network device connectivity: 200 ms.

 Caution

Any changes to the resource allocation or reservation of the Catalyst Center VM may adversely affect its operations and could result in failure.

Scale numbers

The number of devices and site elements that Catalyst Center on ESXi supports:

Table 2: Nonfabric deployment scale numbers

Network component	Maximum number supported
Access Points	4000
Devices	1000
Endpoints	25,000
Site Elements	2500

Table 3: Fabric deployment scale numbers

Network component	Maximum number supported
Endpoints	25,000
Devices	2000
Access Points	3000
Site Elements	2500
Per-fabric site scale	
Fabric Nodes	500
VNs	64
IP Pools	100

For both nonfabric and fabric deployments, up to 10 concurrent user connections are supported for network admins to log in to Catalyst Center on ESXi.

Cisco Catalyst Assurance processes data using near real-time streaming analytics, which requires additional guarantees on resource availability. When operating Catalyst Center on ESXi close to maximum scale, the functionality may be impacted by uncontrolled external events, such as host resource oversubscriptions and edge use cases leading to a spike in resource usage. A number of things can indicate that these events are taking place, such as slow performance, data processing gaps, high I/O latency, and a CPU readiness percentage that's higher than normal.

**Note**

For more information about troubleshooting performance problems, refer to the "Troubleshoot and enhance performance" topic for your VMware vSphere version:

- For VMware vSphere Client 7.0, click [here](#).
- For VMware vSphere Client 8.0, click [here](#).

Supported browsers

- Mozilla Firefox, version 65 or later
- Google Chrome, version 72 or later

Catalyst Center on ESXi packages

Directs you to the [Cisco Catalyst Center Release Notes](#), which lists the packages used by Catalyst Center on ESXi.

For a listing of the packages used by the virtual appliance, refer to "Package versions in Catalyst Center" in the [Cisco Catalyst Center Release Notes](#).

Deployment prerequisites

Guides you through the preparatory tasks to complete before starting the deployment.

Complete these tasks to deploy a Catalyst Center on ESXi virtual appliance.

- [VMware vSphere installation](#) on page 8
- [Enterprise interface reservations](#) on page 9
- [Import the IdemTrust certificate chain](#) on page 9
- [DNS, NTP, and proxy server settings](#) on page 10
- [Required internet URLs and fully qualified domain names](#) on page 10
- [Enable storage input/output control](#) on page 13
- [HA admission control settings](#) on page 13

VMware vSphere installation

This page provides an overview of the VMware vSphere installation and setup process.

VMware vSphere includes several components.

Use VMware vSphere 7.0.x or later, including all patches, for running Catalyst Center on ESXi. To access the overview of the VMware vSphere installation and setup process, refer to [VMware Installation and Setup](#).

After installing VMware vSphere, verify that it can be reached from the computer you will use to deploy the virtual appliance's OVA file.

Enterprise interface reservations

Indicates that the Enterprise interface needs to be reserved for use by the virtual appliance.

An enterprise interface reservation is a network configuration requirement that

- dedicates an interface on the virtual appliance for enterprise network connectivity,
- requires recording the assigned IP address for later use during appliance setup, and
- may support management interfaces and additional network interfaces for appliance administration.

Before setting up the virtual appliance:

- Reserve at least one 1-Gbps or 10-Gbps Enterprise interface to connect to your enterprise network.
- Note the IP address for this interface. You will enter it later during appliance configuration.
- Optionally, reserve a 1-Gbps or 10-Gbps Management interface for accessing the Catalyst Center on ESXi GUI. Note its IP address if you plan to configure it.

Note these points:

- The IP address of the intracluster interface is predefined. You do not need to enter it when you complete either the Maglev Configuration wizard with default mode selected or the browser-based Install Configuration wizard.
- Catalyst Center on ESXi supports configuring one additional interface for use by the virtual appliance. If you do so, choose **VMXNET** from the **Adapter Type** drop-down list. If you select a different type, the appliance configuration will not complete successfully. For more information, refer to [Add a Network Adapter to a Virtual Machine in vSphere Virtual Machine Administration](#).

Import the IdenTrust certificate chain

The task topic explains the steps to import the IdenTrust certificate chain.

The Catalyst Center on ESXi OVA file is signed with an IdenTrust CA certificate. This certificate is not included in the default VMware truststore.

If the certificate is invalid, the **Deploy OVF Template** wizard's **Review details** page displays a warning. To resolve this issue, you can import the IdenTrust certificate chain to the host or cluster on which you want to deploy the OVA file.

Procedure

1. On the VMware ESXi host or cluster where your virtual appliance will reside, download **digicertevcodesigning- <version>-VA.tar.gz** from the same location as the Catalyst Center on ESXi OVA file.
2. Extract the downloaded file to a local directory.
3. Log in to the vSphere Web Client.
4. Choose **Administration > Certificates > Certificate Management**.
5. In the **Trusted Root Certificates** field, click **Add**.
6. In the **Add Trusted Root Certificate** dialog box, click **Browse**.
7. Extract the file that you downloaded in Step 1 and select the **digicertevcodesigning.pem** file. Then click **Open**.
8. Check the **Start Root certificate push to vCenter Hosts** check box, then click **Add**.

A message confirms that the certificate chain is imported successfully.

After you complete the **Deploy OVF Template** wizard, the **Publisher** field in the **Review details** page shows that you are using a trusted certificate.

DNS, NTP, and proxy server settings

Describes how to prepare the DNS, NTP, and proxy servers your virtual appliance will use.

While configuring your virtual appliance, you must prepare the DNS, NTP, and proxy servers that your virtual appliance will use.

You will be prompted to specify three items:

- The Domain Name System (DNS) server that Catalyst Center on ESXi will use to convert domain names to IP addresses.
- The Network Time Protocol (NTP) server that Catalyst Center on ESXi will use for clock synchronization.
- **(Optional)** The proxy server that Catalyst Center on ESXi will use to access internet-bound URLs.

Before you configure your virtual appliance, do the following:

- Ensure that the servers you want to use are available and running.
- For an NTP server, obtain its IP address or hostname. For a proxy server, collect either its URL or hostname and its login credentials.

Required internet URLs and fully qualified domain names

Lists the internet addresses Catalyst Center must be able to access.

You must provide secure access to the required URLs and Fully Qualified Domain Names (FQDNs) for the appliance to function.

This table describes the features that make use of each URL and FQDN. You must configure either your network firewall or a proxy server so that IP traffic can travel to and from the appliance and these resources.

Caution

If you do not provide access to the listed URLs and FQDNs, the associated features will not work as intended.

Note

Table 4: Required URLs and FQDN access

In order to...	...Catalyst Center must access these URLs and FQDNs
Download updates for system software and application packages.	Recommended: https://*.ciscoconnectdna.com/¹ To avoid wildcards, specify these URLs instead. • https://www.ciscoconnectdna.com • https://catalogsvc-cdn.ciscoconnectdna.com • https://catalogsvc-reg.ciscoconnectdna.com • https://catalogsvc-reg-cdn.ciscoconnectdna.com • https://catalogsvc-cm.ciscoconnectdna.com • https://app-cdn.ciscoconnectdna.com
Submit user feedback to the product team.	https://dnacenter.uservoice.com
Smart Account and SWIM software downloads.	• https://apx.cisco.com • https://cloudsso.cisco.com/as/token.oauth2 • https://*.cisco.com/ • https://download-ssc.cisco.com/
Authenticate with the cloud domain.	https://dnaservices.cisco.com
Integrate with ThousandEyes.	• app.thousandeyes.com This URL uses AWS and might map to *.awsglobalaccelerator.com. Other services that might use AWS could also map to the AWS domain. • api.thousandeyes.com

¹ Cisco owns and maintains ciscoconnectdna.com and its subdomains. The Cisco Connect DNA infrastructure meets Cisco Security and Trust guidelines. It is tested for security on a continuous basis. This infrastructure is robust, with built-in load balancing and automation capabilities. A cloud operations team monitors and maintains the infrastructure to ensure continuous availability.

In order to...	...Catalyst Center must access these URLs and FQDNs
Allow API calls to enable access to Cisco CX Cloud Success Tracks. Otherwise, the enhancements made to extended configuration-based scanning for the Security Advisories, Bug Identifier, and EOX features that Machine Reasoning Engine (MRE) supports will not operate as expected.	https://api-cx.cisco.com
Integrate with Webex.	• http://analytics.webexapis.com • https://webexapis.com
Connectivity with Cisco Catalyst Cloud and apps hosted there (e.g. AppX MS Teams Integration, Talos integration).	*.cisco.com:443 Otherwise, specific FQDNs are: • neoffers.cisco.com • neoffers-de.cisco.com • neoffers-sg.cisco.com • dnaservices.cisco.com
Allow Cisco authorized specialists to collect troubleshooting data when Catalyst Center Remote Support functionality is enabled.	wss://prod.radkit-cloud.cisco.com:443
Integrate with cisco.com and Cisco Smart Licensing.	*.cisco.com:443 To avoid wildcards, specify these URLs instead: • software.cisco.com • commerce.cisco.com • id.cisco.com • cloudsso.cisco.com • cloudsso1.cisco.com • cloudsso2.cisco.com • apiconsole.cisco.com • api.cisco.com • apx.cisco.com • smartreceiver.cisco.com • sso.cisco.com • apmx-prod1-vip.cisco.com • apmx-prod2-vip.cisco.com • tools.cisco.com • tools1.cisco.com • tools2.cisco.com

In order to...	...Catalyst Center must access these URLs and FQDNs
Connect to the Network-Based Application Recognition (NBAR) cloud.	prod.sdavc-cloud-api.com:443
For Cisco AI Network Analytics data collection, configure your network or HTTP proxy to allow outbound HTTPS (TCP 443) access to the cloud hosts.	• https://api.use1.prn.kairos.ciscolabs.com (US East Region) • https://api.euc1.prn.kairos.ciscolabs.com (EU Central Region)
Access a menu of interactive help flows that let you complete specific tasks from the GUI.	https://ec.walkme.com
Access the licensing service.	https://swapi.cisco.com
Integrate with Cisco Spaces.	• https://ciscospaces.io • https://ciscospaces.eu • https://ciscospaces.sg

Enable storage input/output control

For the datastore in which you are planning to deploy a virtual appliance, complete the following procedure so the appliance's virtual machine input/output (I/O) is prioritized over other virtual machines when the network is experiencing I/O congestion.

Procedure

1. In the vSphere Client, navigate to and click the datastore in which you plan to deploy a virtual appliance.
2. Click the **Configure** tab, then click **General**.
3. In the **Datastore Capabilities** area, click **Edit**.
4. In the **Configure Storage I/O Control** window, do the following:
 - a) Click the **Enable Storage I/O Control and statistics collection** radio button.
 - b) In the **Storage I/O congestion threshold** area, configure the congestion threshold you want to use.
You can either specify a peak throughput percentage or enter a value (in milliseconds).
 - c) (Optional) In the **Statistic Collection** area, check the **Include I/O statistics for SDRS** check box.
5. Click **OK**.

HA admission control settings

You cannot create three-node clusters by connecting Catalyst Center on ESXi VMs. To enable high availability (HA), use the HA functionality in VMware vSphere. Enable strict admission control to ensure that:

- The system does not power on a virtual machine if that action would violate availability constraints.
- The system enforces configured failover capacity limits.
- HA operates as expected during a failover.

2 Set up Catalyst Center on ESXi

Topics:

- [Virtual appliance](#)
- [Create a virtual machine](#)
- [Configure an additional network adapter](#)
- [Configure a Catalyst Center on ESXi virtual appliance](#)
- [Enable an air-gapped deployment](#)

Virtual appliance

Provides step-by-step instructions on how to deploy a Catalyst Center VA on ESXi.

Deployment methods

To set up a Catalyst Center VA on ESXi using the Maglev Configuration wizard or Install Configuration wizard, complete these steps:

1. [Create a virtual machine.](#)
2. [Configure the virtual appliance.](#)

What to do next

After successfully deploying Catalyst Center on ESXi, complete the Catalyst Center first-time setup. Refer to the "First-time setup" section in the "Get Started with Catalyst Center" chapter in the [Cisco Catalyst Center User Guide](#).

Create a virtual machine

Covers the steps to deploy the OVA template on a VMware ESXi host, including resource allocation and storage setup.

Complete this procedure to create a virtual machine on the VMware ESXi host or cluster where your virtual appliance will reside.

Procedure

1. Download the Catalyst Center on ESXi OVA file from the location specified by Cisco.
2. Log in to the vSphere Web Client.
3. In the navigation pane, right-click the IP address of host or cluster on which you want to deploy the OVA file and then click **Deploy OVF Template**.
4. Complete the **Deploy OVF Template** wizard:
 - a) In the **Select an OVF Template** wizard page, specify the OVA file you want to use for deployment and then click **Next**. You can either:
 - Click the **URL** radio button and enter the appropriate path and OVA filename. If you choose this option, ensure that the OVA file is stored in and shared from a web-accessible location.
 - Click the **Local file** radio button, click **Upload Files**, and then navigate to and select the appropriate OVA file.

The wizard's **Select a name and folder** page opens. By default, the OVA's filename is set as the name of the virtual machine you're about to create. Also, the location where the ESXi host or cluster you selected in Step 3 resides is set as the deployment location.

- b) If you want to use the default values, click **Next** and proceed to Step 4c.

If you want to use different values, do these steps:

1. Enter a name for the virtual machine you are creating.
2. Specify where the virtual machine will reside.
3. Click **Next**.

The wizard's **Select a compute resource** page opens.

- c) Click the ESXi host or cluster on which you want to deploy the OVA file (the same one you right-clicked in Step 3), then click **Next**.

A page that lists deployment template details is displayed.

- d) Review the template details and then do one of these tasks:
- If you need to make any changes, click **Back** as needed to return to the appropriate wizard page.
 - If you want to proceed, click **Next**.



Note

Ignore the information provided in the **Extra configuration** field. This refers to additional configurations that Cisco provides in the Catalyst Center on ESXi OVA file.

The wizard's **Select storage** page opens.

- e) Configure the storage:
1. Click the radio button for the storage device you want to use.
 2. In the **Select virtual disk format** field, choose either the **Thick Provision** or **Thin Provision** option.
 3. Click **Next**.

The wizard's **Select networks** page opens.

- f) Configure the destination network for the enterprise network.
1. In the **Destination Network** drop-down list for the enterprise network, choose the network that will connect to the Catalyst Center on ESXi enterprise interface.
 2. Click **Next**.

A summary of the deployment settings you've entered is displayed by the **Ready to complete** wizard page.

- g) Review the settings and then do one of these tasks:
- If you need to make any changes, click **Back** as needed to return to the appropriate wizard page.
 - If you want to proceed with deployment, click **Finish**.

Important

In general, deployment takes around 45 minutes to complete. You can monitor the progress in the vSphere Client's **Recent Tasks** tab.

Configure an additional network adapter

Provides instructions for adding a secondary network interface to the virtual machine and configuring its network settings.

Complete this procedure to configure an additional network adapter for your virtual appliance.



Note

The Management interface will reside on the adapter.

Procedure

1. Log in to the vSphere Web Client.
2. In the navigation pane, right-click the virtual machine you've created, then choose **Power > Power Off**.
3. Right-click the virtual machine and then choose **Actions > Edit Settings**.
4. Select the **Virtual Hardware** tab. Click **Add New Device**, and then choose **Network Adapter**.
5. In the drop-down list for the **New Network** field, click **Browse**.
6. In the **Select Network** dialog box, choose the network to connect to your virtual appliance's Management interface, and then click **OK**.
7. In the **Adapter Type** field's drop-down list, choose **VMXNET3** and then click **OK**.
8. In the navigation pane, right-click the virtual machine, and then choose **Power > Power On**.
9. Do one of these tasks:
 - If you haven't done so already, [configure the virtual appliance](#) using one of the available configuration wizards.
 - If you've already configured the virtual appliance, proceed to the next step.
10. After Catalyst Center on ESXi comes up, run the Configuration wizard to configure the settings for the Management interface:
 - a) Open a terminal window to the virtual machine. Run the **sudo maglev-config update** command.
The Configuration wizard opens and displays the settings that are already configured for the appliance's Enterprise interface.
 - b) Click **next>>**.
The wizard now displays the settings that are already configured for the appliance's Intracluster interface.
 - c) Click **next>>**.
 - d) For the Management interface (NETWORK ADAPTER 3) you created, enter the required values for these parameters, and then click **next>>**:
 - **Host IPv4/IPv6 Address** field: Enter the IP address for the Management interface.
 - **IPv4 Netmask/IPv6 Prefix Length** field: Enter the netmask for the interface's IP address.
 - **Default Gateway IPv4/IPv6 Address** field: Enter the default gateway IP address to use for the interface.
 - **IPv4/IPv6 Static Routes** field: Enter one or more static routes in this format, separated by spaces:
<network>/<netmask>/<gateway>.

Configure a Catalyst Center on ESXi virtual appliance

Walks through the various methods for configuring the virtual appliance, including the Maglev Configuration wizard, to establish network and system settings.

Choose one procedure to configure a Catalyst Center VA on a VMware ESXi host:

- [Configure a virtual appliance using the Maglev Configuration Wizard \(default mode\)](#) on page 19
- [Configure a virtual appliance using the Maglev Configuration Wizard \(advanced mode\)](#) on page 23
- [Configure a virtual appliance using the Install Configuration wizard](#) on page 29
- [Configure a virtual appliance using the advanced Install Configuration Wizard](#) on page 33

Configure a virtual appliance using the Maglev Configuration Wizard (default mode)

To quickly configure a virtual appliance using the Maglev Configuration Wizard and preset settings, use this procedure.



Note

The Intraccluster interface is preconfigured when using this wizard. If you don't want to use the default settings for this interface, you'll need to complete the [Maglev Configuration wizard with advanced mode selected](#).

Before you begin

Gather these information for the virtual appliance before you start this procedure:

- Static IP address
- Subnet mask
- Default gateway
- DNS address
- NTP server details
- Proxy server details

Important

If you plan to configure the appliance's Management interface, also [configure an additional network adapter](#) for this interface to reside on before you start this wizard.

Procedure

1. After deployment completes, power on the new virtual machine:

- a) In the vSphere Client, right-click the virtual machine.
- b) Choose **Power** > **Power On**.

Your virtual machine typically becomes operational in about 45 minutes, depending on bandwidth, RAM, hard disk space, and vCPU count. You can monitor progress in the VMware VM Console.

2. Launch either the remote console or web console by clicking the appropriate link.

3. Configure the virtual machine by completing the Maglev Configuration Wizard:

- a) You don't need to enter any settings in the wizard's **STATIC IP CONFIGURATION** page, so click **skip>>**.

Enter static IP settings only when configuring a virtual appliance using the browser-based web UI installation mode.

- b) Click **Create MKS**.

- c) Click **Start using MKS pre manufactured cluster**.

- d) Enter the configuration values for **NETWORK ADAPTER #1**, as shown in the table. Click **next>>**.

Catalyst Center on ESXi uses this interface to link the virtual appliance with your network.

Host IPv4 address field	Enter the IP address for the Enterprise interface. This is required.
-------------------------	--

IPv4 Netmask field	Enter the netmask for the interface IP address.
--------------------	---

Default Gateway IPv4 Address field	Enter a default gateway IP address to use for the interface.
------------------------------------	--

Important

Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.

IPv4 Static Routes field	Enter one or more static routes in this format, separated by spaces: <code><network>/<netmask>/<gateway></code> . This is usually required on the Catalyst Center on ESXi Management interface only.
--------------------------	--

LACP Mode field	Leave this field blank, as it's not applicable to virtual appliances.
-----------------	---

The wizard checks the values you entered and displays an error message if any are incorrect. If you receive an error message, check that the value you entered is correct, then reenter it. If necessary, click **<<back** to reenter it.

- e) You don't need to enter configuration values for **NETWORK ADAPTER #2**, as the **Host IPv4 Address** and **IPv4 Netmask** fields are prepopulated for the Intracenter interface. Click **next>>** to proceed.

- f) Enter the configuration values for **NETWORK ADAPTER #3**, as shown in the table. Click **next>>**.

This interface allows you to access the Catalyst Center on ESXi GUI from the virtual appliance.



Note

This wizard page appears only if you have [configured an additional network adapter](#) for the Management interface.

Host IPv4 address field	Enter the IP address for the Management interface. This is required only if you are using this interface to access the Catalyst Center on ESXi GUI from your management network; otherwise, you can leave it blank.
-------------------------	---

IPv4 Netmask field	Enter the netmask for the interface IP address.
--------------------	---

Default Gateway IPv4 Address field Enter a default gateway IP address to use for the interface.

Important

Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.

IPv4 Static Routes field Enter one or more static routes in this format, separated by spaces:
`<network> / <netmask> / <gateway>`.

Correct any validation errors to proceed. The wizard applies your network adapter configurations.

- g) In the **DNS Configuration** page, enter the IP address of the preferred DNS server. Click **next>>**. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.

Important

- For NTP, ensure port 123 (UDP) is open between Catalyst Center on ESXi and your NTP server.
- Configure a maximum of three DNS servers. Configuring more than three DNS servers for a virtual appliance can cause problems.

The wizard updates, indicating that it must shut down the controller in order to validate the settings you have entered so far.

- h) Select one of these steps:

- If you need to change any settings, click **<<back** as needed, make the necessary changes, and then return to this wizard page.
- If you're happy with the settings you've entered, click **proceed>>**.

- i) After validation successfully completes, select one of these steps:

- If your network does *not* use a proxy server to access the internet, click **skip proxy>>** to proceed.
- If your network does use a proxy server, enter these configuration values in the **NETWORK PROXY** wizard page. Click **next>>**.

HTTPS Proxy field Enter the URL or host name of an HTTPS network proxy used to access the Internet.

 Note

Connection from Catalyst Center on ESXi to the HTTPS proxy is supported only through HTTP in this release.

HTTPS Proxy Username field Enter the user name used to access the network proxy. If no proxy login is required, leave this field blank.

HTTPS Proxy Password field	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.
----------------------------	---

After you provide the necessary information, correct any validation errors to proceed, as needed.

- j) You are next prompted to enter the virtual appliance's virtual IP address in the **MAGLEV CLUSTER DETAILS** wizard page. Enter the virtual IP address configured for the Enterprise interface. If you configured a virtual IP address for the Management interface, enter this address as well (using a comma to separate the two IP addresses).

You can also specify the fully qualified domain name (FQDN) for your virtual appliance. Catalyst Center on ESXi uses this domain name for these steps:

- It uses this host name to access your virtual appliance's web interface and the Representational State Transfer (REST) APIs used by devices in the enterprise network that Catalyst Center on ESXi manages.
- In the Subject Alternative Name (SAN) field of Catalyst Center on ESXi certificates, it uses the FQDN to the define the Plug and Play server that should be used for device provisioning.

After you provide the information, click **next>>** to proceed. If validation errors appear, correct them as you did on previous screens.

- k) Enter these configuration values for the settings provided in the wizard's **USER ACCOUNT SETTINGS** page. Click **next>>**.

Linux Password field	Enter and confirm the password for the <code>maglev</code> user.
Re-enter Linux Password field	Confirm the Linux password by entering it a second time.
Password Generation Seed field	If you do not want to create the Linux password yourself, enter a seed phrase in this field and then press <Generate Password> to generate the password.
Auto Generated Password field	(Optional) The seed phrase appears as part of a random and secure password. If desired, you can either use this password "as is", or you can further edit this auto-generated password. Press <Use Generated Password> to save the password.

After you provide the information, correct any validation errors to proceed, as needed.

- l) Enter these configuration values for the settings provided in the wizard's **NTP SERVER SETTINGS** page. Click **next>>**.

NTP Servers field	Enter one or more NTP server addresses or host names, separated by spaces. At least one NTP address or host name is required. For a production deployment, we recommend that you configure a minimum of three NTP servers.
-------------------	--

- NTP Authentication check box To enable the authentication of your NTP server before synchronization with Catalyst Center on ESXi, check this check box and enter the required information:
- The NTP server's key ID. Valid values range between 1 and 4294967295 ($2^{32}-1$).
This value corresponds to the key ID that's defined in the NTP server's key file.
 - The SHA-1 key value associated with the NTP server's key ID. This 40-character hex string resides in the NTP server's key file.

**Note**

Ensure that you enter a key ID and key value for each NTP server that you configured in the previous field.

After you provide the information, correct any validation errors to continue, as needed.

A final message appears, stating that the wizard is ready to apply the configuration.

m) To apply the settings you've entered to the virtual appliance, click **proceed>>**.

After the configuration process completes, the virtual appliance powers on again and displays a **CONFIGURATION SUCCEEDED!** message, then presents the Maglev login page.

**Note**

Wait 15 to 30 minutes for services to stabilize before you log in to the Catalyst Center UI.

Configure a virtual appliance using the Maglev Configuration Wizard (advanced mode)

If you want to configure a virtual appliance using the Maglev Configuration wizard and need to specify settings that are different from the preset appliance settings, complete this procedure.

Before you begin

Gather this information for your virtual appliance before you start:

- Static IP address
- Subnet mask
- Default gateway
- DNS address
- NTP server details

- Proxy server details

Important

If you plan to configure the appliance's Management interface, also [configure an additional network adapter](#) for this interface before you start this wizard.

Procedure

1. After deployment completes, power on the newly-created virtual machine:

- a) In the vSphere Client, right-click the virtual machine.
- b) Choose **Power > Power On**.

Your virtual machine typically becomes operational in about 45 minutes. The exact time depends on your available bandwidth, RAM, hard disk space, and the number of vCPUs. You can monitor the progress in the vSphere Client's **Recent Tasks** tab.

2. Launch either the remote console or web console by clicking the appropriate link.

3. Configure the virtual machine by completing the Maglev Configuration Wizard:

- a) You don't need to enter any settings in the wizard's **STATIC IP CONFIGURATION** page, so click **skip>>**.

Configure static IP addresses only if you are installing the virtual appliance through the browser-based WEB UI.

- b) Click **Create MKS**.

- c) Click the **Start configuration of MKS in advanced mode** option.

The next wizard page opens, indicating that all preconfigured appliance settings (except for the container and cluster subnets) will be erased. You'll need to enter values for these settings.

If you choose this option, you cannot return to the default appliance setup workflow. Keep this in mind before you complete the next step.

- d) Click **proceed>>**.

After all of the preconfigured appliance settings have been erased, the next wizard page opens.

- e) Do one or more of these steps, then click **next>>**:

- Choose whether you want to use IPv4 or IPv6 addressing.
- If you want to enable FIPS mode, click its corresponding option. For more information regarding FIPS mode, refer to "FIPS Mode Support" in the [Cisco Catalyst Center Second-Generation Appliance Installation Guide](#).

- f) You don't need to enter any settings in the **Layer2 mode used for the services** wizard page, so click **next>>**.

- g) Enter the configuration values for **NETWORK ADAPTER #1**, as shown in the table, then click **next>>**.

Catalyst Center on ESXi uses this interface to link the virtual appliance with your network.

Host IPv4/IPv6 Address field	Enter the IP address for the Enterprise interface. This is required.
------------------------------	--

IPv4 Netmask/IPv6 Prefix Length field	Do one of these:
---------------------------------------	------------------

- If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required.
- If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.

Default Gateway IPv4/IPv6
Address field

Enter a default gateway IP address to use for the interface.

Important

Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.

IPv4/IPv6 Static Routes field

Enter one or more static routes in this format, separated by spaces: `<network>/<netmask>/<gateway>`. This is usually required on the Management interface only.

Cluster Link field

Leave this field blank. It is required on the Intracluster interface only.

LACP Mode field

Leave this field blank, as it's not applicable to virtual appliances.

The wizard checks the values you entered and displays an error message if any are incorrect. If you receive an error message, verify the value you entered. Click **<<back** to reenter it.

- h) Enter the configuration values for **NETWORK ADAPTER #2**, as shown in the table, then click **next>>**.

Host IPv4/IPv6 Address field

Enter the IP address for the Intracluster interface. This is required. Note that you cannot change the address of the Intracluster interface later.

IPv4 Netmask/IPv6 Prefix Length
field

Do one of these:

- If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required.
- If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.

Default Gateway IPv4/IPv6
Address field

Leave this field blank.

IPv4/IPv6 Static Routes field

Leave this field blank.

Cluster Link field

Check the check box to set this interface as the link to a Catalyst Center on ESXi cluster. This is required on the Intracluster interface only.

LACP Mode field

Leave this field blank, as it's not applicable to virtual appliances.

If you encounter validation errors, correct them to continue. The wizard validates and applies your network adapter configurations.

- i) Enter the configuration values for **NETWORK ADAPTER #3**, as shown in the table, then click **next>>**.

Use this interface to access the Catalyst Center on ESXi GUI on your the virtual appliance.

 Note

This wizard page applies only if you have already [configured an additional network adapter](#) for the Management interface.

Host IPv4/IPv6 Address field Enter the IP address for the Management interface. This is required only if you are using this interface to access the Catalyst Center on ESXi GUI from your management network; otherwise, you can leave it blank.

IPv4 Netmask/IPv6 Prefix Length field Do one of these if you entered an IP address:

- If you selected IPv4 addressing, enter the netmask for the port's IP address. This is required.
- If you selected IPv6 addressing, enter the prefix length (in bits). Valid values range from 10 through 127.

Default Gateway IPv4/IPv6 Address field Enter a default gateway IP address to use for the interface.

Important

Ensure that you enter a default gateway IP address for at least one of your appliance's interfaces. Otherwise, you will not be able to complete the configuration wizard.

IPv4/IPv6 Static Routes field Enter one or more static routes in this format, separated by spaces: `<network> / <netmask> / <gateway>`.

Cluster Link field Leave this field blank. It is required on the Intracenter interface only.

Correct validation errors, if any, to proceed. The wizard validates and applies your network adapter configurations.

- j) In the **DNS Configuration** page, enter the IP address of the preferred DNS server and then click **next>>**. If you are entering multiple DNS servers, separate the IP addresses in the list with spaces.

Important

- For NTP, ensure port 123 (UDP) is open between Catalyst Center on ESXi and your NTP server.
- Avoid configuring more than three DNS servers for your virtual appliance to prevent problems.

The wizard updates, indicating that it needs to shut down the controller in order to validate the settings you've entered so far.

- k) Do one of these:

- If you need to change any settings, click **<<back** as needed, make the necessary changes, and then return to this wizard page.
- If you're happy with the settings you've entered, click **proceed>>**.

- l) After validation successfully completes, the **NETWORK PROXY** wizard page opens. Click **skip proxy>>** to proceed.
- m) Confirm that you want to skip network proxy configuration by clicking **skip proxy validation>>**.
- n) Next, you are prompted to enter the virtual appliance's virtual IP addresses in the **MAGLEV CLUSTER DETAILS** wizard page. Since clusters are not supported by Catalyst Center on ESXi, you can leave the **Cluster Virtual IP Address(s)** field on this page blank.

You can also specify the fully qualified domain name (FQDN) for your virtual appliance. Catalyst Center on ESXi uses this domain name to:

- Access your virtual appliance's web interface and the Representational State Transfer (REST) APIs used by devices in the enterprise network that Catalyst Center on ESXi manages.
- Define the Plug and Play server, in the Subject Alternative Name (SAN) field of Catalyst Center on ESXi certificates, that should be used for device provisioning.

After you provide the necessary information, click **next>>** to proceed. Correct validation errors, if any, as you did in previous screens.

- o) Enter the configuration values for the settings provided in the wizard's **USER ACCOUNT SETTINGS** page as listed in the table, then click **next>>**.

Linux Password field	Enter and confirm the password for the <code>maglev</code> user.
Re-enter Linux Password field	Confirm the Linux password by entering it a second time.
Password Generation Seed field	If you do not want to create the Linux password yourself, enter a seed phrase in this field and then press <Generate Password> to generate the password.
Auto Generated Password field	(Optional) The seed phrase appears as part of a random and secure password. If desired, you can either use this password "as is", or you can further edit this auto-generated password. Press <Use Generated Password> to save the password.

After you provide the necessary information, correct any validation errors to proceed (if necessary).

- p) Enter the configuration values for the settings provided in the wizard's **NTP SERVER SETTINGS** page as described in the table, then click **next>>**.

NTP Servers field	Enter one or more NTP server addresses or hostnames, separated by spaces. At least one NTP address or hostname is required. For a production deployment, we recommend that you configure a minimum of three NTP servers.
-------------------	--

- NTP Authentication check box To enable the authentication of your NTP server before it's synchronized with Catalyst Center on ESXi, check this check box and then enter these details:
- The NTP server's key ID. Valid values range between 1 and 4294967295 ($2^{32}-1$).
This value corresponds to the key ID that's defined in the NTP server's key file.
 - The SHA-1 key value associated with the NTP server's key ID. This 40-character hex string resides in the NTP server's key file.

**Note**

Ensure that you enter a key ID and key value for each NTP server that you configured in the previous field.

After you provide the necessary information, correct any validation errors to proceed (if necessary).

The wizard displays a message when it is ready to apply the configuration.

- q) Enter the configuration values for the settings provided in the wizard's **MAGLEV ADVANCED SETTINGS** page as described in the table, then click **next>>**.

Container Subnet field	A dedicated, non-routed IP subnet that Catalyst Center on ESXi uses to manage internal services. By default, this is already set to 169.254.32.0/20 , and we recommend that you use this subnet. If you enter another subnet, ensure that it does not conflict with or overlap with any other internal or an external network subnet used by Catalyst Center on ESXi. For more information, refer to the Container Subnet description in the Catalyst Center Second-Generation Appliance Installation Guide's "Required IP Addresses and Subnets" topic.
Cluster Subnet field	A dedicated, non-routed IP subnet that Catalyst Center on ESXi uses to manage internal cluster services. By default, this is already set to 169.254.48.0/20 , and we recommend that you use this subnet. If you choose to enter another subnet, ensure that it does not conflict with or overlap any other subnet used by the Catalyst Center on ESXi internal network or an external network. For more information, refer to the Cluster Subnet description in the Catalyst Center Second-Generation Appliance Installation Guide's "Required IP Addresses and Subnets" topic.

After you provide the necessary information, correct any validation errors to proceed (if necessary).

A final message appears, stating that the wizard is ready to apply the configuration.

- r) To apply the settings you've entered to the virtual appliance, click **proceed>>**.

After the configuration process completes, the virtual appliance powers on again and displays a **CONFIGURATION SUCCEEDED!** message.

It takes around 180 to 210 minutes for the virtual machine to become operational. The actual time will depend on things like available bandwidth, RAM, hard disk space, and the number of vCPUs. You can monitor the progress in the vSphere Client's **Recent Tasks** tab.

Configure a virtual appliance using the Install Configuration wizard

Use the Install Configuration wizard to configure a Catalyst Center on ESXi virtual appliance more easily.

If you want to configure a virtual appliance as quickly as possible using the browser-based Install configuration wizard and are okay with using preset appliance settings, complete this procedure.

Important

Ensure that all of the IP addresses you enter while completing this procedure are valid IPv4 addresses with valid IPv4 netmasks. Also make sure that the addresses and their corresponding subnets do not overlap. This can result in service communication issues.

Before you begin

Collect the required information:

- Static IP address
- Subnet mask
- Default gateway
- DNS address
- NTP server details
- Proxy server details

Use a supported browser. Refer to [Deployment requirements](#) on page 6.

Enable ICMP on the firewall between Catalyst Center on ESXi and the DNS servers you will specify in this procedure. This wizard uses Ping to verify the DNS server you specify. If a firewall between Catalyst Center on ESXi and the DNS server is not configured to allow ICMP, the ping can be blocked, which can prevent successful completion of the wizard.



Note

The Intracluster interface is preconfigured when using this wizard. If you do not want to use the default settings for this interface, complete the [browser-based Advanced Install configuration wizard](#).

Procedure

1. After deployment completes, power on the newly-created virtual machine:
 - a) In the vSphere Web Client, right-click the virtual machine.
 - b) Choose **Power** > **Power On**.

The virtual machine typically becomes operational in about 45 minutes. This time varies depending on the bandwidth, RAM, hard disk space, and the number of vCPUs. You can monitor the progress in the vSphere Client's **Recent Tasks** tab.

2. Launch either the remote console or web console by selecting the appropriate link.
3. Open the Install Configuration wizard:
 - a) In the **STATIC IP CONFIGURATION** page, do one of the tasks:
 - If you want a DHCP server to assign an IP address, subnet mask, and default gateway to your virtual appliance's Enterprise interface, click **skip>>**.
 - If you want to assign your own IP address, subnet mask, and default gateway to your virtual appliance's Enterprise interface, enter the information described in this table and then click **configure>>**.



Note

The **IPv6 Mode** check box is for enabling IPv6 addressing in advanced mode only. For IPv4 deployments, this check box needs to be unchecked.

IPv6 Mode check box	If you want to enable IPv6 addressing, you will need to do so using the Advanced Install Configuration wizard . Leave this check box unchecked to use IPv4 addressing.
IP Address field	Enter the static IP address that you want to use.
Netmask field	Enter the netmask for the IP address you specified in the previous field. You can enter either a netmask or CIDR address.
Default Gateway Address field	Specify the default gateway that will be used to route traffic.
Static Routes field	Leave the Static Routes field blank as this wizard does not allow configuration of static routes.

Note the URL listed in the **Web Installation** field; you will need it for the next step.

- b) Open the URL that was displayed in the **Static IP Configuration** page.
- c) Click the **Start a Catalyst Center Virtual Appliance** radio button, then click **Next**.
- d) Click the **Install** radio button, then click **Start**.

The **Overview** slider opens. Click > to view a summary of the tasks that the wizard will help you complete.

- e) Click **Start Workflow** to start the wizard.

The **Virtual Appliance Interfaces** page opens.

4. Configure your virtual appliance by completing the Install Configuration wizard:
 - a) Click **Next**.
The **DNS Configuration** page opens.
 - b) In the **DNS** field, enter the IP address of the preferred DNS server. To enter additional DNS servers, click the **Add (+)** icon.

Important

You can configure a maximum of three DNS servers. Configure no more than three DNS servers for an appliance to avoid issues.

c) Click **Next**.

The **Configure Proxy Server Information** page opens.

d) Do one of the tasks:

- If your network does *not* use a proxy server to access the internet, click the **No** radio button and then click **Next**.
- If your network does use a proxy server to access the internet, enter the values described in this table and then click **Next**.

Proxy Server field	Enter the URL or host name of an HTTPS network proxy used to access the Internet.
--------------------	---



Note

Connection from Catalyst Center on ESXi to the HTTPS proxy is supported only via HTTP in this release.

Port field	Enter the port that your appliance used to access the network proxy.
------------	--

Username field	Enter the username used to access the network proxy. If no proxy login is required, leave this field blank.
----------------	---

Password field	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.
----------------	---

The wizard's **Advanced Appliance Settings** page opens.

e) Enter configuration values for your appliance, then click **Next**.

Cluster Virtual IP Addresses

To access from Enterprise Network and For Intracluster Access fields	Enter the virtual IP address configured for the Enterprise interface. If you configured a virtual IP address for the Management interface, enter this address as well (using a comma to separate the two IP addresses).
--	---

Fully Qualified Domain Name (FQDN) field	You can also specify the Fully Qualified Domain Name (FQDN) for your virtual appliance. Catalyst Center on ESXi uses this domain name to do the tasks:
--	--

- This hostname is used to access your virtual appliance's web interface and the Representational State Transfer (REST) APIs used by devices managed by Catalyst Center on ESXi in the enterprise network.
- In the Subject Alternative Name (SAN) field of Catalyst Center on ESXi certificates, it uses the FQDN to define the Plug and Play server that should be used for device provisioning.

NTP Server Settings

NTP Server field	Enter at least one NTP server address or hostname. To enter additional NTP server addresses or hostnames, click the Add (+) icon. For a production deployment, Cisco recommends configuring at least three NTP servers.
Turn on NTP Authentication check box	To enable the authentication of your NTP server before it is synchronized with Catalyst Center on ESXi, check this check box and then enter the required information: • The NTP server's key ID. Valid values range between 1 and 4294967295 ($2^{32}-1$). This value corresponds to the key ID that's defined in the NTP server's key file. • The SHA-1 key value associated with the NTP server's key ID. This 40-character hex string resides in the NTP server's key file.



Note

Ensure that you enter a key ID and key value for each NTP server that you configured in the previous field.

Subnet Settings

Container Subnet field	A dedicated, non-routed IP subnet that Catalyst Center on ESXi uses to manage internal services. By default, this is already set to 169.254.32.0/20 , and you cannot enter another subnet.
Cluster Subnet field	A dedicated, non-routed IP subnet that Catalyst Center on ESXi uses to manage internal cluster services. By default, this is already set to 169.254.48.0/20 , and you cannot enter another subnet.

The **Enter CLI Password** page opens.

- f) Enter and confirm the password for the `maglev` user, then click **Next**.

This is the password you will use to log in to Catalyst Center on ESXi for the first time after configuring the virtual appliance. After logging in, you will be prompted to configure a new admin user (as a security measure). For more information, refer to "Log in to Catalyst Center for the first time" in the "Get Started with Catalyst Center" chapter in the [Cisco Catalyst Center User Guide](#).

The wizard validates the information that you entered and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you entered are valid, the wizard's **Summary** page opens.

 Note

To download the appliance configuration as a JSON file, click the corresponding link.

- g) Scroll to the bottom of the screen and review all the settings entered while completing the wizard. To update any settings, click the relevant **Edit** link.
- h) To complete the configuration of your Catalyst Center on ESXi virtual appliance, click **Start Configuration**.
The wizard screen continuously updates during the process, showing which tasks are being completed, their progress, and any errors. To save a local copy of this information as a text file, click the **Download** link.

5. After appliance configuration completes, click the copy icon to copy the default admin superuser password.

Important

Catalyst Center on ESXi automatically sets this password when you complete the Install configuration wizard. Ensure that you click the copy icon before you proceed. Otherwise, you will not be able to log in to Catalyst Center on ESXi for the first time.

 Note

As a security measure, you will be prompted to change this password after you log in. For more information, refer to "Log in to Catalyst Center for the first time" in the "Get Started with Catalyst Center" chapter in the [Cisco Catalyst Center User Guide](#).

Configure a virtual appliance using the advanced Install Configuration Wizard

This guide explains how you can configure a virtual appliance using the Advanced Install configuration wizard.

To configure a virtual appliance using the browser-based Advanced Install configuration wizard with settings differing from the preset appliance settings, complete this procedure.

Important

Enter only valid IPv4 addresses with correct IPv4 subnet masks. Ensure that the addresses and their corresponding subnets do not overlap. Overlapping subnets might cause issues with service communication.

Before you begin

Collect this information:

- Static IP address
- Subnet mask

- Default gateway
- DNS address
- NTP server details
- Proxy server details

Ensure you are using a supported browser. For more information, refer to [Deployment requirements](#) on page 6.

Ensure you enabled ICMP on the firewall between Catalyst Center on ESXi and both the default gateway and the DNS server you specify in this procedure. The wizard uses ping to verify the gateway and DNS server you specify. This ping might get blocked if a firewall is in place and ICMP is not enabled on that firewall. When this happens, you will not be able to complete the wizard.

Procedure

1. After the deployment completes, power on your new virtual machine:

- In the vSphere Web Client, right-click the virtual machine.
- Choose **Power** > **Power On**.

It takes approximately 90 to 120 minutes for the virtual machine to become operational. The total time depends on the available bandwidth, RAM, hard disk space, and the number of vCPUs. Monitor the progress in the vSphere Client's **Recent Tasks** tab.

2. Click the link for the remote console or web console to launch it.

3. Open the Advanced Install Configuration wizard:

- In the **STATIC IP CONFIGURATION** page, do one of the tasks:
 - If you want a DHCP server to assign an IP address, subnet mask, and default gateway to your virtual appliance's Enterprise interface, click **skip>>**.
 - If you want to assign your own IP address, subnet mask, and default gateway to your virtual appliance's Enterprise interface, enter the information described in this table and then click **configure>>**.

Option	Description
IPv6 Mode check box	If you want to use IPv6 addressing, check this check box. If you want to use IPv4 addressing instead, leave this check box blank.
IP Address field	Enter the static IP address that you want to use.
Netmask field	Enter the netmask for the IP address you specified in the previous field: - If you entered an IPv4 address, you can enter either a netmask or CIDR address. - If you entered an IPv6 address, you can only enter a CIDR address.
Default Gateway Address field	Specify the default gateway that will be used to route traffic.
Static Routes field	Enter one or more static routes in this format, separated by spaces: <code><network>/<netmask>/<gateway></code> . This is usually required on the Management interface only.

Note the URL that is listed in the **Web Installation** field. You will need this for the next step.

- Open the URL that was displayed in the **Static IP Configuration** page.

- c) Click the **Start a Catalyst Center Virtual Appliance** radio button, then click **Next**.
- d) Click the **Advanced Install** radio button, then click **Start**.

The **Advanced Install Overview** slider opens. Click > to view a summary of the tasks that the wizard will help you complete.

- e) Click **Start Workflow** to start the wizard.

The **Virtual Appliance Interface Overview** page opens, providing a description of the four appliance interfaces that you can configure.

4. Configure your virtual appliance by completing the Advanced Install Configuration wizard:

- a) Click **Next**.

The **How would you like to set up your appliance interfaces?** page opens

If your network is behind a firewall, perform these actions:

- Click the **allow access to these URLs** link to open a window listing the URLs that Catalyst Center on ESXi must access.
- Click the **open these ports** link to open a window listing the network service ports required by Catalyst Center on ESXi.

By default, the **Enterprise Network Interface** check box is already checked. It's also prepopulated with the values you entered in the **STATIC IP CONFIGURATION** page.

- b) Follow these steps for each appliance interface you want to use, then click **Next**:

- Click its check box and enter the appropriate configuration values.
- If necessary, click its **Add/Edit Static Route** link to configure static routes. Click + as needed to configure additional routes. When you're done, click **Add**.

The **DNS Configuration** screen opens.

- c) Enter the IP address of the preferred DNS server, then click **Next**. To enter additional DNS servers, click the **Add (+)** icon.

Important

- For each node in your cluster, configure a maximum of three DNS servers. You might encounter problems if you configure more than three DNS servers for an appliance.
- For NTP, ensure that port 123 (UDP) is open between Catalyst Center on ESXi and your NTP server.

The **Configure Proxy Server Information** screen opens.

- d) Follow one of these steps and then click **Next**:

- If your network does *not* use a proxy server to access the internet, click the **No** radio button.
- If your network does use a proxy server to access the internet, enter the values described in this table:

Field	Description
Proxy Server	Enter the URL or host name of an HTTPS network proxy used to access the Internet.
	 Note Connection from Catalyst Center on ESXi to the HTTPS proxy is supported only via HTTP in this release.
Port	Enter the port your appliance used to access the network proxy.
Username	Enter the username used to access the network proxy. If no proxy login is required, leave this field blank.
Password	Enter the password used to access the network proxy. If no proxy login is required, leave this field blank.

The wizard checks the information you have entered and displays any settings that need to be changed before you can proceed. If the settings you have entered are valid and the port is up, the wizard's **Advanced Appliance Settings** screen opens.

- e) Enter configuration values for your appliance, then click **Next**.

Option	Description
Cluster Virtual IP Addresses	
To access from Enterprise Network and For Intracluster Access fields	Enter the virtual IP address configured for the Enterprise interface. If you configured a virtual IP address for the Management interface, enter this address as well (using a comma to separate the two IP addresses).
Fully Qualified Domain Name (FQDN) field	You can also specify the Fully Qualified Domain Name (FQDN) for your virtual appliance. Catalyst Center on ESXi uses this domain name for these tasks: • It uses this hostname to access your virtual appliance's web interface and the Representational State Transfer (REST) APIs used by devices in the enterprise network that Catalyst Center on ESXi manages. • In the Subject Alternative Name (SAN) field of Catalyst Center on ESXi certificates, it uses the FQDN to define the Plug and Play server that should be used for device provisioning.
NTP Server Settings	
NTP Server field	Enter at least one NTP server address or hostname. To enter additional NTP server addresses or hostnames, click the Add (+) icon. For a production deployment, Cisco recommends that you configure a minimum of three NTP servers.

Option	Description
Turn On NTP Authentication check box	To enable the authentication of your NTP server before it's synchronized with Catalyst Center on ESXi, check this check box and then enter this information: - The NTP server's key ID. Valid values range between 1 and 4294967295 ($2^{32}-1$). This value corresponds to the key ID that's defined in the NTP server's key file. - The SHA-1 key value associated with the NTP server's key ID. This 40-character hex string resides in the NTP server's key file.



Note

Ensure that you enter a key ID and key value for each NTP server that you configured in the previous field.

Subnet Settings

Container Subnet field	A dedicated, non-routed IP subnet that Catalyst Center on ESXi uses to manage internal services. By default, this is already set to 169.254.32.0/20 , and we recommend that you use this subnet.
Cluster Subnet field	A dedicated, non-routed IP subnet that Catalyst Center on ESXi uses to manage internal cluster services. By default, this is already set to 169.254.48.0/20 , and we recommend that you use this subnet.

The **Enter CLI Password** page opens.

- f) Enter and confirm the password for the `maglev` user, then click **Next**.

The wizard validates the information you have entered and notifies you of any settings that need to be changed before you can proceed with the wizard. If the settings you have entered are valid, the wizard's **Summary** page opens.



Note

To download the appliance configuration as a JSON file, click the corresponding link.

- g) Scroll to the bottom of the screen and review all of the settings that you have entered while completing the wizard. If necessary, click the appropriate **Edit** link to open the wizard screen in which you want to make updates.
- h) To complete the configuration of your Catalyst Center on ESXi virtual appliance, click **Start Configuration**.

The wizard screen updates during the process, to show which tasks are being completed, their progress, and any errors. Click the **Download** link to save this information as a text file.

The virtual machine becomes operational in 180 to 210 minutes. The time depends on the available bandwidth, RAM, hard disk space, and the number of vCPUs. You can monitor the progress in the vSphere Client's **Recent Tasks** tab.

5. After configuring the appliance, click the copy icon to save the default administrator superuser password.

Services may take between 15 to 30 minutes to stabilize before you can log in to the user interface.

Important

Catalyst Center on ESXi automatically sets this password when you complete the Install configuration wizard. Ensure that you click the copy icon before you proceed. Otherwise, you will not be able to log in to Catalyst Center on ESXi for the first time.



Note

As a security measure, you will be prompted to change this password after you log in. For more information, refer to "Log in to Catalyst Center for the first time" in the "Get Started with Catalyst Center" chapter in the *Cisco Catalyst Center User Guide*.

Enable an air-gapped deployment

Explains the process for isolating the network and performing manual data transfers for air-gapped deployments.

An air gap is a security measure that involves isolating a network and preventing it from establishing external connections. Transfer data into an air-gapped network by inserting removable media, such as a USB drive, or by connecting a laptop. To enable an air gap for your Catalyst Center on ESXi deployment, complete these steps.

Procedure

1. [Deploy a virtual appliance](#), making sure to leave the proxy server unconfigured.
 2. Contact the Cisco Technical Assistance Center (TAC) to enable an air gap for your network.
-

3 Postdeployment Changes

Topics:

- [Postdeployment configurations](#)
- [Enable VM restart priority](#)
- [Configure VM reservation for recovery site](#)
- [Recovery site VM resource pool reservations](#)

Postdeployment configurations

Describes essential operational adjustments, such as setting VM restart priorities and configuring VM resource reservations for disaster recovery.

After you deploy a virtual appliance, complete these tasks to run the appliance.

Enable VM restart priority

Explains how to configure VMware vSphere HA settings to ensure the VM is prioritized during an HA failover.

If VMware vSphere HA is enabled in your environment, complete this procedure to ensure that the VM of the virtual appliance is prioritized to power on first during an HA failover.

Procedure

1. In the vSphere Client's navigation pane, click the HA cluster.
 2. Click the **Configure** tab.
 3. Choose **Configuration > VM Overrides** and then click **Add**.
 4. Click the virtual machine you want to apply overrides to and then click **OK**.
 5. In the **vSphere HA** area, **VM Restart Priority** field, perform these steps:
 - a. Check the **Override** check box.
 - b. From the drop-down list, choose **High**.
 6. Click **Finish**.
-

Configure VM reservation for recovery site

Details the manual resource allocation steps required for disaster recovery placeholder VMs.

If you enable disaster recovery for Catalyst Center on ESXi using the vSphere Site Recovery Manager (SRM), ensure that the required resources are reserved during failover. Complete this procedure to reserve the resources. When you configure vSphere replication on the virtual appliance, the recovery site's VM (also called the placeholder VM) does not have a reservation configured on the main site. Configure the reservation manually after replication completes.

Procedure

1. In the vSphere Client's navigation pane, click the secondary site's placeholder VM.
 2. Click **Actions**, then choose **Edit Settings**.
 3. With the **Virtual Hardware** tab selected, configure a 64-GHz (64-gigahertz) reservation for the **CPU** parameter and a 256-GB (256-gigabyte) reservation for the **Memory** parameter.
 4. Click **OK**.
-

Recovery site VM resource pool reservations

Provides guidance on managing resource pool mappings and reservations when using SRM for secondary sites.

If you deployed a virtual appliance in a resource pool and mapped its primary site resource pool to a secondary site resource pool with Site Recovery Manager (SRM) for vSphere, make sure the secondary site's resource pool reserves the resources the virtual appliance needs.

4 Upgrade Catalyst Center on ESXi

Topics:

- [Upgrade to Catalyst Center 3.3.1 on ESXi](#)
- [Upgrade to Catalyst Center 3.3.1 on ESXi in an air-gapped deployment](#)

Upgrade to Catalyst Center 3.3.1 on ESXi

Describes the steps for upgrading the system software from the **Software Management** page.

Before you begin

- Create a backup of your Catalyst Center on ESXi database.
- If your deployment uses a firewall, ensure Catalyst Center on ESXi can access this location on each cluster node to download system and package files from: <https://www.ciscoconnectdna.com:443>.



Note

Only users with the SUPER-ADMIN-ROLE can complete this procedure.

Procedure

1. A pop-up window opens in the top-right corner, indicating that a new version of Catalyst Center on ESXi is available. Click the **Go to Software Management** link.



Note

If this pop-up window doesn't open, you can also click the menu icon from the upper-left corner and choose **System > Software Management**.

2. In the **Software Management** page, click **Upgrade**.
 3. In the **Upgrade Release** dialog box, click **Install**.
 4. In the **Schedule Upgrade** dialog box, specify when you want to start the upgrade; then click **Download**.
You can track the upgrade progress from the **Activities** page.
-

Upgrade to Catalyst Center 3.3.1 on ESXi in an air-gapped deployment

Explains how to manually upgrade the Catalyst Center on ESXi virtual appliance in air-gapped environments.

Procedure

1. Download the *.tar.gz file from the location specified by Cisco.
2. Enter the following command to copy the file to the **/airgap** folder on the virtual appliance:

```
scp -P 2222 *.tar.gz maglev@<appliance-IP-address>:/airgap
```

3. Log in to the Catalyst Center on ESXi GUI.

4. From the main menu, choose **System > Software Management**.
 5. Click **Scan**.
 6. After the system locates the files required to complete the upgrade, choose one of these options:
 - Click **PreLoad** to download the upgrade files. If you select this option, schedule the upgrade time.
 - Click **Upgrade** to download the relevant files and begin the upgrade immediately.
-

