

## Inventory

The section contains the following topics:

• Viewing Device Inventory, on page 1

## **Viewing Device Inventory**

Access this page to view, monitor and support all of the devices and inventory in your network. The **Inventory** page displays a complete list of the devices and their details in a tabular view. Additionally, it also provides action buttons to perform configuration tasks and apply the latest firmware updates for supported devices. The following table provides details of the information displayed:

=	Cisco Business Dashboard		Inv	entory			
	+ 2   🗎	All Organizations + Type: Network	Device × Add Filte				Q
O	▲ Hostname	\$ IP	Serial Number	Version <pre>\$ Model</pre>	Organization	Network	Notification
	000 AP4CBC.48C0.74B AP	172.16.1.110	PSZ23301ESP	10.0.252.45 CBW240AC-B	Default	Branch2	<b>6</b> 0 <u>A</u> 0 <b>V</b> 1
	AP5CE1.76F2.3F0C AP	172.16.1.164	FGL2429L432	10.0.252.45 CBW140AC-B	Default	Branch2	<b>8</b> 0 <b>▲</b> 0 <b>▼</b> 0
	AP6C41.0E22.009C AP	10.0.0.119	PSZ234819L2	10.0.252.45 CBW240AC-B	Default	Branch 1	<b>0</b> 0 <b>▲</b> 0 <b>▼</b> 0
	AP6C71.0D54.02A AP	172.16.1.163	FGL2418L83F	10.0.252.45 CBW140AC-B	Default	Branch2	<b>0</b> 0 ▲ 0 ▼ 0
	APA453.0E22.0A7( AP	172.16.1.101	null	10.0.252.45 CBW141ACM-B-US	Default	Branch2	<b>00 ▲0 ▼0</b>
	APF01D-2D9E-0E9 AP	172.20.1.148	DNI2535002K	10.0.251.81CBW150AX-B	Default	WIFI6Lab	
	APF01D-2D9E-0EC AP	10.0.0.121	DNI2535002W	10.0.251.82 CBW150AX-B	Default	Branch 1	
	MPE01D-2D9E-10A AP	10.0.0.203	DNI254509FG	10.0.251.81CBW150AX-B	Default	Branch 1	
	CBW150AXM AP	10.0.0.177	DNI2531004V	10.0.251.82 CBW151AXM-B	Default	Branch 1	0 2 ▲ 0 ♥ 0
	CBW150AX_adr2 AP	172.20.1.136	DNI254509EX	10.0.251.81CBW150AX-B	Default	WIFI6Lab	01 ▲0 ▼0



## Table 1: Inventory Details

ltem	Description		
Serial Number	The serial number for the device.		
Version	The current firmware version of the device.		
Vendor (hidden by default)	The vendor that manufactured the device.		
Model	Model name of the device.		
CBD Agent Status	The CBD agent status for the device, is only available for devices that support direct management.		
Organization	The organization the device belongs to.		
Network	The network to which the device belongs		
Notification	A count of the outstanding notifications for the device		
PnP Status (hidden by default)	The current Network Plug and Play status for the device. For more information, see the <b>Network Plug and Play</b> pages.		

The following additional controls are available on the Inventory page:

- Select columns button—Use this button located at the top left of the table to choose which columns to display
- Filter Box—You may use the Filter box to limit the display by typing device names, device types, serial numbers and so on. By default, the inventory is filtered to display only network devices
- Add icon—Click the (+) plus icon to add new devices to the inventory prior to the device being discovered. When manually adding a device to the inventory you can provide basic information about the device including identity information, organization and device group, and PnP settings. Providing this information ahead of time ensures the device will be correctly managed when it is connected to the network
- Refresh button—Click this button to update the table to show the latest available information
- Actions buttons—The following action buttons allow you to perform actions on one or more selected devices

Upgrade Firmware To Latest	Upgrade Firmware To Latest
Upgrade From Local	Upgrade From Local
Backup Configuration	Backup Configuration
Restore Configuration	Restore Configuration

Reboot	Reboot
Save Running Configuration	Save Running Configuration
Delete	Delete
Disconnect	Disconnect

Action buttons are only displayed when one or more devices supporting actions are selected.



Note

For more details on these actions, see Performing Device Actions, on page 19

I

## Inventory