



Cisco Cloud Network Controller Statistics

- [About Google Cloud Statistics, on page 1](#)
- [Guidelines and Limitations For Configuring Google Cloud Statistics, on page 2](#)
- [Viewing Router Statistics, on page 2](#)
- [Enabling Flow Log Statistics, on page 4](#)
- [Viewing Flow Log Statistics, on page 5](#)
- [Enabling VPC Flow Log Statistics Using the REST API, on page 8](#)

About Google Cloud Statistics

Beginning in Cisco Cloud Network Controller Release 25.0(4), you can view statistics that are derived by processing Google Cloud flow logs.

Beginning in Cisco Cloud Network Controller Release 25.0(5), you can view statistics that are collected from the Cisco Catalyst 8000V routers.

Router Statistics

Cisco Cloud Network Controller allows you to view router statistics for individual cloud context profiles within a tenant. Statistics are displayed for Cisco Catalyst 8000V routers within the cloud context profile.

Each router instance captures and stores the ingress and egress byte and packet statistics for each physical and tunnel interface. The Cisco Cloud Network Controller queries the routers for these statistics and maps the response to router statistics on the Cisco Cloud Network Controller. The statistics query repeats every 5 minutes for as long as the tunnel is up and operational. The Cisco Cloud Network Controller GUI displays the collected statistics for the routers.

Flow Log Statistics

Cisco Cloud Network Controller allows you to enable flow log statistics for individual cloud context profiles within a tenant. When statistics are enabled for a cloud context profile, statistics are collected for every IP address within the corresponding VPCs. Available statistics include ingress and egress bytes and packets, internal and external, for VPCs, regions, and endpoints.

The collected statistics are aggregated through the following hierarchy:

- IP statistics are aggregated to determine endpoint statistics.
- Endpoint statistics are aggregated to determine zone statistics.

- Zone statistics are aggregated to determine subnet statistics.
- Subnet statistics are aggregated to determine region statistics.
- Region statistics are aggregated to determine VPC statistics.

The Cisco Cloud Network Controller GUI displays the collected statistics for VPCs, regions, and endpoints. For more information about Google Cloud flow logs, see "VPC Flow Logs" on the Google Cloud website.

Guidelines and Limitations For Configuring Google Cloud Statistics

Following are the guidelines and limitations when configuring Cisco Cloud Network Controller to collect Google Cloud statistics:

- Router statistics are enabled by default when Cisco Catalyst 8000V routers are brought up in the Cisco Cloud Network Controller.
- The flow log statistics feature is not enabled by default.
- Flow log statistics can be enabled for individual context profiles within a tenant. In this case, flow logs are enabled on all subnets belonging to the corresponding VPC.
- Flow logs are aggregated at one minute intervals. The aggregation interval and sample rate are not configurable.
- Statistics for dropped traffic are not supported by flow logs.
- Statistics filters are not supported.
- Zone and subnet statistics are not displayed.

Viewing Router Statistics

In the Cisco Cloud Network Controller GUI, you can view graphed statistics for Cisco Catalyst 8000V routers. Available statistics for each router include ingress and egress bytes and packets. Peak values for each counter are displayed with a timestamp that shows when the peak value occurred.

This example procedure shows you how to view the statistics for a router in the Cisco Cloud Network Controller GUI.

Step 1 Select the Cisco Catalyst 8000V router whose statistics you would like to view.

Health	Name	Cloud Provider ID	Oper State	Type	VRFs	Cloud Context Profiles	BGP Sessions	Tunnels	VNICs
Health v	Cloud Router on [1]-id-[0] infra > global	N/A	N/A	Cloud Router	1	1	0	0	N/A
Major	ct_routerp_us-west1_0:0 infra > us-west1		running	Host Router	1	2	5	5	2

a) From the navigation menu, select **Cloud Resources > Routers**.


A **Routers** summary table appears in the work pane.

b) In the summary table, double-click the name of the router.


The router dialog box appears over the work pane. The router dialog box displays the **Overview**, **Cloud Resources**, **Application Management**, **Statistics**, and **Event Analytics** tabs.

Step 2

Click the **Statistics** tab.

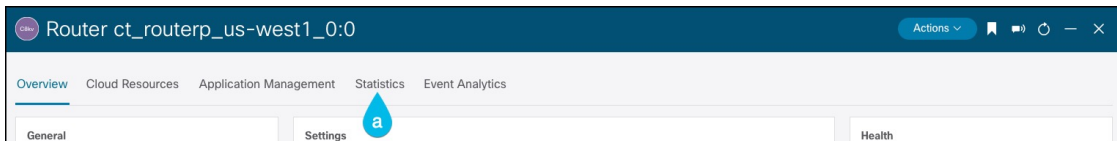

A graphical view of the router statistics appears along with a table of maximum values.

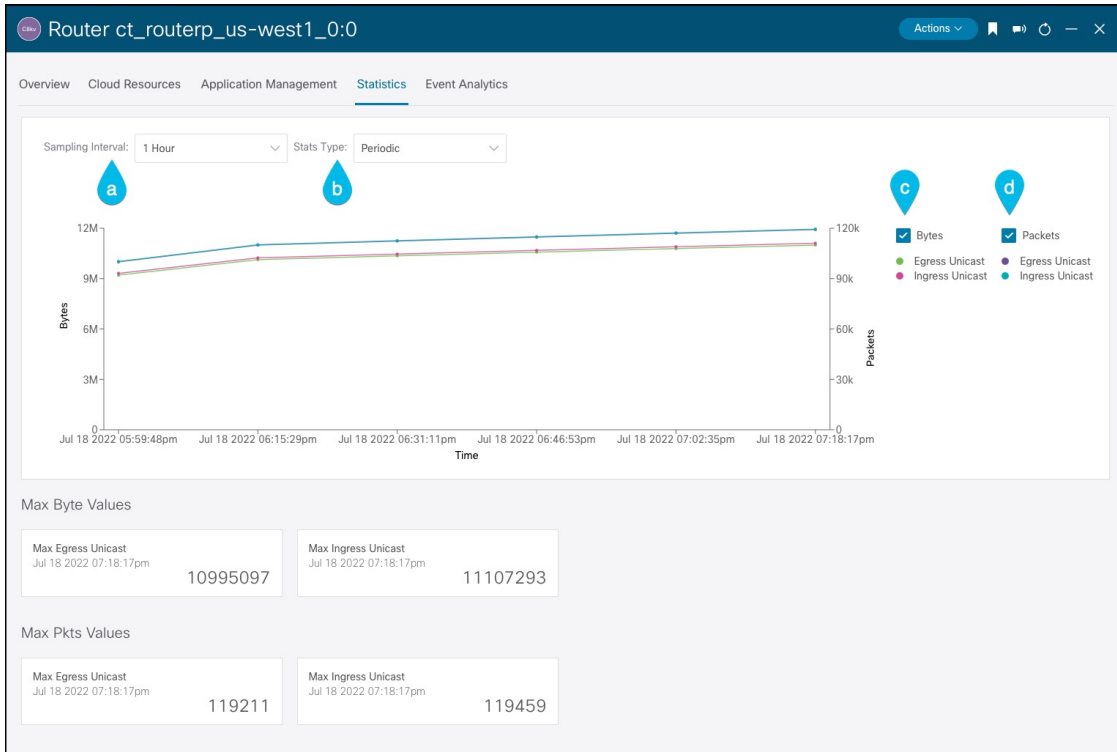

Step 3 Configure the display of the statistics.

To configure the parameters of the displayed statistics, you can modify the following settings:

Properties	Description
Sampling Interval	Choose the interval: <ul style="list-style-type: none"> • 1 hour • 12 Hours • 1 Day • 1 Week • 1 Month
Stats Type	Choose the display type: <ul style="list-style-type: none"> • Periodic • Cumulative • Trend • Rate
Bytes	Select the checkbox to display the byte counter graph. The vertical axis on the left side of the graph indicates the byte count.
Packets	Select the checkbox to display the packet counter graph. The vertical axis on the right side of the graph indicates the packet count.

Enabling Flow Log Statistics

You can enable the collection of Google Cloud flow log statistics for individual context profiles within a tenant. Statistics can then be viewed for VPCs, regions, and endpoints in their respective **Cloud Resources** GUI menus.

To enable flow log statistics using the Cisco Cloud Network Controller GUI:

Step 1 Select the tenant containing the resource for which flow log statistics will be enabled.

The screenshot displays the 'Tenants' page in the Cisco Cloud Network Controller GUI. The left-hand navigation pane shows 'Application Management' expanded, with 'Tenants' selected. The main content area features a table with the following columns: Health, Name, Description, Application Profiles, EPGs, VRFs, Google Cloud Project, Regions, VPCs, and Endpoints. The first row of data shows a tenant with 'Health' status 'Healthy', 'Name' 'common', and 'Application Profiles', 'EPGs', 'VRFs', 'Regions', 'VPCs', and 'Endpoints' all listed as 'N/A'. A blue callout 'a' points to the 'Health' column header, and a blue callout 'b' points to the 'common' value in the 'Name' column.


- a) From the navigation menu, select **Application Management > Tenants**.

A **Tenants** summary table appears in the work pane.

- b) In the summary table, double-click the name of the tenant.

The tenant dialog box appears over the work pane. The tenant dialog box displays the **Overview**, **Topology**, **Cloud Resources**, **Application Management**, **Statistics**, and **Event Analytics** tabs.

Step 2 Enable flow log statistics collection on the desired resource.

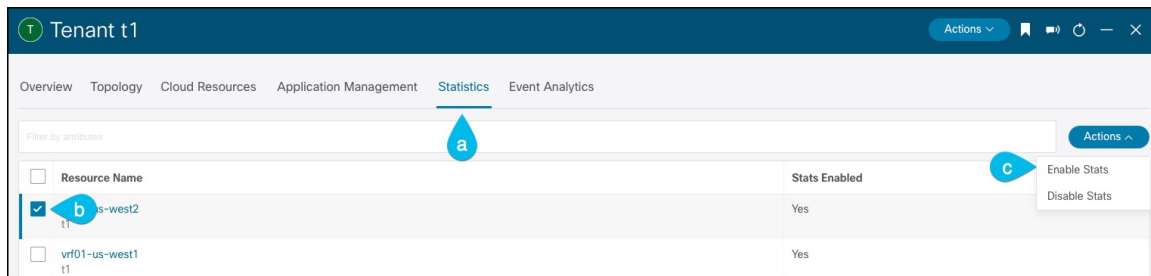

- a) In the tenant dialog box, select the **Statistics** tab.

A **Resource Name** table appears with context profiles listed as rows in the table. The **Stats Enabled** column indicates whether flow log statistics are enabled for each resource.

- b) Check the checkbox next to the desired resource.
 c) In the top right of the tenant dialog box, click the **Actions** menu and select **Enable Stats**.

Viewing Flow Log Statistics

In the Cisco Cloud Network Controller GUI, you can view graphed statistics for VPCs, regions, and endpoints. Available statistics for each include ingress and egress bytes and packets. For VPCs and regions, the statistics are further separated into the following categories:

- **Statistics:** All traffic counters extracted from the flow logs records.
- **Inter-Region Statistics:** For a particular region, all ingress and egress traffic to or from other regions within the VPC.
- **External Statistics:** All ingress and egress traffic with a source or destination outside of the VPC.
- **Inter-Zone Statistics:** For a particular zone, all ingress and egress traffic to or from other zones within the same region and VPC. These aggregated statistics are available on the region page and on the VPC page.


Peak values for each counter are displayed with a timestamp that shows when the peak value occurred.

This example procedure shows you how to view the flow log statistics for VPCs in the Cisco Cloud Network Controller GUI. You can also view the statistics for regions or endpoints in the same manner by selecting **Regions** or **Endpoints** instead of **VPCs** in the following steps.

Before you begin

Enable Google Cloud flow log statistics for the desired cloud context profile using the procedure in [Enabling Flow Log Statistics, on page 4](#).

Step 1 Select the resource whose statistics you would like to view.

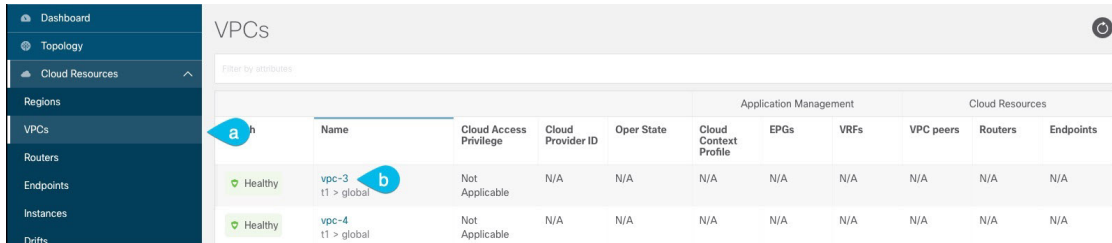

	Name	Cloud Access Privilege	Cloud Provider ID	Oper State	Application Management			Cloud Resources		
					Cloud Context Profile	EPGs	VRFs	VPC peers	Routers	Endpoints
Healthy	vpc-3 t1 > global	Not Applicable	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A
Healthy	vpc-4 t1 > global	Not Applicable	N/A	N/A	N/A	N/A	N/A	N/A	N/A	N/A


a) From the navigation menu, select **Cloud Resources > VPCs**.

A **VPCs** summary table appears in the work pane.

b) In the summary table, double-click the name of the VPC.


The VPC dialog box appears over the work pane. The VPC dialog box displays the **Overview**, **Application Management**, **Cloud Resources**, **Statistics**, and **Event Analytics** tabs.

Step 2 Click the **Statistics** tab.

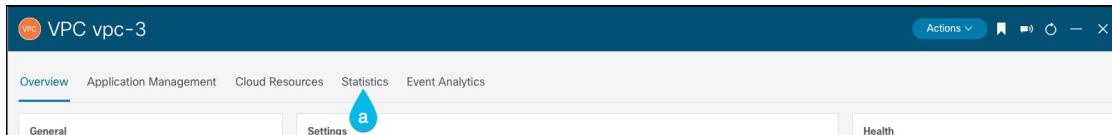

General	Settings	Health

A graphical view of the VPC statistics appears along with a table of maximum values.

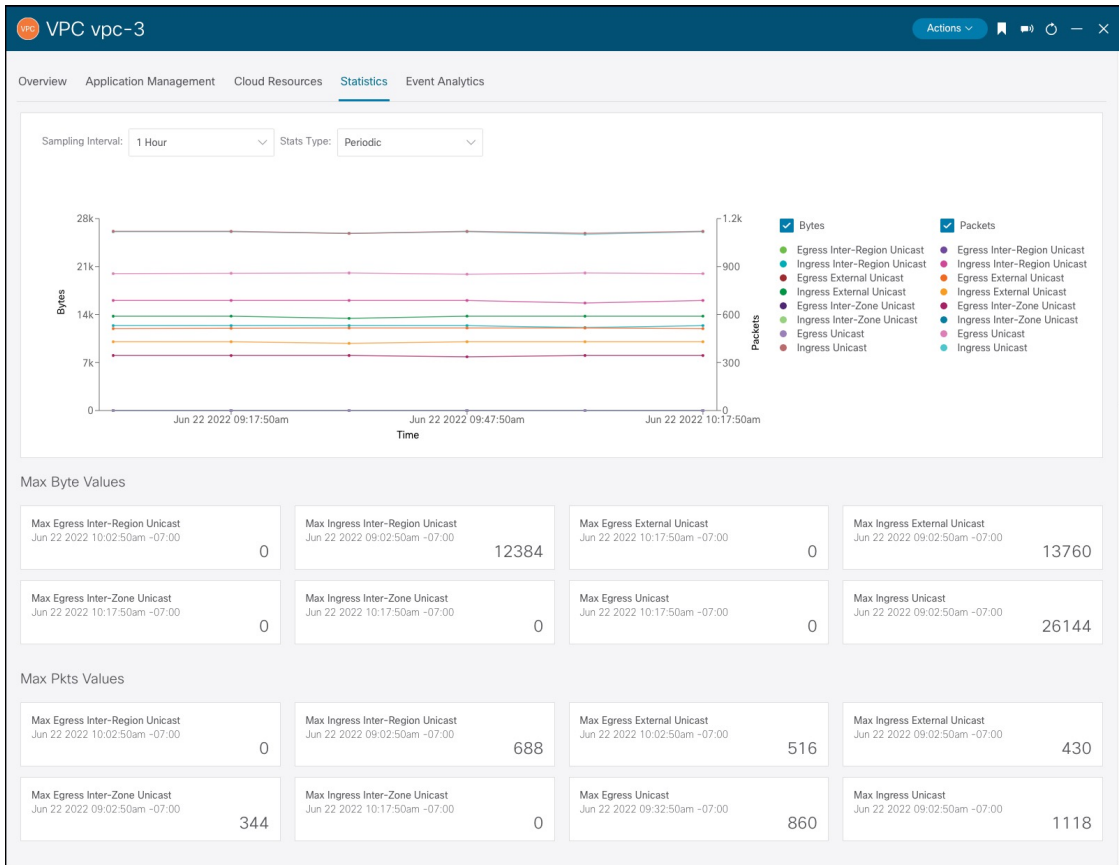

Step 3 Configure the display of the statistics.

To configure the parameters of the displayed statistics, you can modify the following settings:

Properties	Description
Sampling Interval	Choose the interval: <ul style="list-style-type: none"> • 1 hour • 12 Hours • 1 Day • 1 Week • 1 Month
Stats Type	Choose the display type: <ul style="list-style-type: none"> • Periodic • Cumulative • Trend • Rate

Properties	Description
Bytes	Check the checkbox to display the byte counter graph. The vertical axis on the left side of the graph indicates the byte count.
Packets	Check the checkbox to display the packet counter graph. The vertical axis on the right side of the graph indicates the packet count.

Enabling VPC Flow Log Statistics Using the REST API

Google Cloud flow log statistics can be enabled for individual context profiles within a tenant.

Step 1 Define a flow log policy (`cloudGcpFlowLogPol`) under the tenant.

No configuration settings are needed except for the name.

Note For the name of the flow log policy, note the following restrictions:

- Match the regular expression:

```
[a-z]([-a-z0-9]*[a-z0-9])?
```

This means that the first character must be a lowercase letter, and all the following characters must be hyphens, lowercase letters, or digits, except the last character, which cannot be a hyphen.

- We recommend using 14 characters or fewer for this name.

Example:

```
<polUni>
  <fvTenant name="tenant1" status="">
    <cloudGcpFlowLogPol name="myFlowLogPol1" status="">
    </cloudGcpFlowLogPol>
    <cloudCtxProfile name="ctxProfile2" status="" vpcGroup="vpc-4">
  .
  .
  .
```

Step 2 Within the cloud context profile, add a reference to the flow log policy.

Flow log statistics for the cloud context profile are enabled by the presence of the reference object (`cloudRsCtxToGcpFlowLog`). To disable flow log statistics for the cloud context profile, remove the reference object.

Example:

```
.
.
.
  <cloudRsCtxToGcpFlowLog tnCloudGcpFlowLogPolName="myFlowLogPol1" status=""/>
</cloudCtxProfile>
</fvTenant>
```


</polUni>
