



## U Commands

---

- [undebug all, on page 2](#)
- [update license, on page 3](#)
- [use-profile, on page 4](#)
- [use-retry, on page 5](#)
- [user-certdn-match, on page 6](#)
- [username, on page 7](#)
- [username \(iSCSI initiator configuration and iSLB initiator configuration\), on page 12](#)
- [userprofile, on page 14](#)
- [user-pubkey-match, on page 15](#)
- [user-switch-bind, on page 16](#)

**udebug all**

# **udebug all**

To disable all debugging, use the **udebug all** command.

**udebug all**

**Syntax Description** This command has no arguments or keywords.

**Command Default** None.

**Command Modes** EXEC mode.

Command History	Release	Modification
	1.0(2)	This command was introduced.

**Usage Guidelines** Use this command to turn off all debugging.

**Examples** The following example shows how to disable all debugging on the switch:

```
switch# udebug all
```

Related Commands	Command	Description
	<b>no debug all</b>	Also disables all <b>debug</b> commands configured on the switch.
	<b>show debug</b>	Displays all debug commands configured on the switch.

# update license

To update an existing license, use the **update license** command in EXEC mode.

```
update license {url | bootflash: | slot0: | volatile:} new_license_file old_license_file
```

Syntax Description	<b>update license</b>	Updates an installed, expiring license.
	<b>url</b>	Specifies the URL for the license file to be uninstalled.
	<b>bootflash:</b>	Specifies the license file location in internal bootflash memory.
	<b>slot0:</b>	Specifies the license file in the CompactFlash memory or PCMCIA card.
	<b>volatile:</b>	Specifies the license file in the volatile file system.
	<b>new_license_file</b>	Location or URL of the new license file.
	<b>old_license_file</b>	Location or URL of the old license file that needs to be updated.

## Command Modes

EXEC mode.

## Command History

	<b>Release</b>	<b>Modification</b>
1.3(2)		This command was introduced.

## Examples

The following example updates a specific license:

```
switch# update license bootflash:sanextn2.lic sanextn1.lic
Updating sanextn1.lic:
SERVER this_host ANY
VENDOR cisco
# An example fcports license
INCREMENT SAN_EXTN_OVER_IP cisco 1.000 permanent 1 HOSTID=VDH=ABCD \
    NOTICE=<LicFileID>san_extn1.lic</LicFileID><LicLineID>0</LicLineID> \
    SIGN=33088E76F668

with bootflash:/sanextn2.lic:
SERVER this_host ANY
VENDOR cisco
# An example fcports license
INCREMENT SAN_EXTN_OVER_IP cisco 1.000 permanent 1 HOSTID=VDH=ABCD \
    NOTICE=<LicFileID>san_extn2.lic</LicFileID><LicLineID>1</LicLineID> \
    SIGN=67CB2A8CCAC2

Do you want to continue? (y/n) y
Updating license ..done
```

# use-profile

To bind a profile to the FCIP interface, use the **use-profile** option. To disable a configured profile, use the **no** form of the option.

**use-profile** *profile-id*  
**no use-profile** *profile-id*

<b>Syntax Description</b>	<i>profile-id</i> Specifies the profile ID to be used. The range is 1 to 255.
---------------------------	---

<b>Command Default</b>	None.
------------------------	-------

<b>Command Modes</b>	Interface configuration submode.
----------------------	----------------------------------

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	1.1(1)	This command was introduced.

<b>Usage Guidelines</b>	Access this command from the switch(config-if)# submode.
-------------------------	--

This command binds the profile with the FCIP interface.

<b>Examples</b>	The following example shows how to bind a profile to the FCIP interface:
-----------------	--

```
switch# config terminal
switch(config)# interface fcip 50
switch(config-if)# use-profile 100
switch(config-if)# no use-profile 100
```



**Note** Explicitly shutdown the FCIP interface using the **no use-profile** *profile-id* command before unbinding the interface.

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show fcip</b>	Displays information about the FCIP profile.
	<b>show interface fcip</b>	Displays an interface configuration for a specified FCIP interface.

# use-retry

To specify send retry details for the gRPC transport protocol, use the **use-retry** command. To remove the send retry details, use the **no** form of this command.

**use-retry size *buffer\_size***

**no use-retry size**

<b>Syntax Description</b>	<b>size <i>buffer_size</i></b>	Send retry buffer size. Buffer size is in Mb and ranges from 10 to 1500.
---------------------------	------------------------------------	--

**Command Default** No send retry is specified.

**Command Modes** Telemetry destination configuration mode (conf-tm-dest-profile)

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	8.3(1)	This command was introduced.

**Examples** This example shows how to specify send retry details for the gRPC transport protocol:

```
switch# configure
switch(config)# telemetry
switch(config-telemetry)# destination-profile
switchconf-tm-dest-profile)# use-retry size 50
```

This example shows how to remove the send retry details:

```
switch# configure
switch(config)# telemetry
switch(config-telemetry)# destination-profile
switchconf-tm-dest-profile)# no use-retry
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>destination-group</b>	Creates a destination group and enters destination group configuration mode.
	<b>feature telemetry</b>	Enables the SAN Telemetry Streaming feature.
	<b>show running-config telemetry</b>	Displays the existing telemetry configuration.
	<b>show telemetry</b>	Displays telemetry configuration.
	<b>telemetry</b>	Enters SAN Telemetry Streaming configuration mode.

# user-certdn-match

To set the certificate matching, use the user-certdn-match command. To disable this feature, use the no form of the command.

```
user-certdn-match attribute-name attribute-name search-filter string base-DN string
no user-certdn-match attribute-name attribute-name search-filter string base-DN string
```

<b>Syntax Description</b>	attribute-name attribute-name	Specifies LDAP attribute name. The maximum size is 128 characters.
	search-filter	Specifies LDAP search filter. The maximum length is 128 characters.
	string	Specifies search map search filter . The maximum length is 128 characters.
	base-DN	Configure base DN to be used for search operation. The Maximum length is 63 characters.
	string	Specifies search map base DN name. The Maximum length is 63 characters.

**Command Default** None.

**Command Modes** Configuration mode.

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	NX-OS 5.0(1a)	This command was introduced.

**Usage Guidelines** None.

## Examples

```
The following example shows how to set the certificate matching:
switch(config)#ldap search-map s1
switch(config-ldap-search-map)# user-certdn-match attribute-name map1 search-filter map1
base-DN a
switch(config-ldap-search-map) #
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show ldap-server groups</b>	Displays the configured LDAP server groups.

# username

To define a user, use the **username** command in configuration mode. To undo the configuration or revert to factory defaults. Use the **no** form of the command

```
username name [expire date | Keypair {export uri {dsa | rsa} [force] | generate {dsa | rsa} [force]} | import bootflash:uri | volatile:uri {dsa | rsa} [force] {iscsi | password [0 | 5 | 7]} user-password [expire date] [role rolename] | priv-lvl privilege-level | role rolename | ssh-cert-dn distinguished-name {dsa | rsa} | sshkey {key-content | file filename}]]
no username name [expire date | Keypair export bootflash:uri | volatile:uri {dsa | rsa} [force] | generate {dsa | rsa} [force] | import bootflash:uri | volatile:uri {dsa | rsa} [force] iscsi | password [0 | 5 | 7] user-password [expire date] [role rolename] | priv-lvl privilege-level | role rolename | ssh-cert-dn distinguished-name {dsa | rsa} | sshkey {key-content | file filename}]
```

Syntax Description	
<b>name</b>	Specifies the name of the user. Maximum length is 32 characters.
<b>expire date</b>	(Optional) Specifies the date when this user account expires (in YYYY-MM-DD format).
<b>Keypair</b>	(Optional) Specifies SSH (Secure shell) user keys.
<b>export uri</b>	Exports keypairs to bootflash or remote directory.
<b>dsa</b>	Specifies DSA keys.
<b>rsa</b>	Specifies RSA keys.
<b>force</b>	(Optional) Specifies the generation of keys even if previous ones are present.
<b>generate</b>	Generates SSH key pairs.
<b>import</b>	Import keypair from bootflash or remote directory.
<b>bootflash: uri</b>	Specifies URI or alias of the bootflash or file system to export.
<b>volatile: uri</b>	Specifies URI or alias of the volatile or file system to import.
<b>iscsi</b>	(Optional) Identifies an iSCSI user.
<b>password</b>	(Optional) Configures a password for the user. The password is limited to 80 characters. The minimum length is 8 characters.
<b>0</b>	(Optional) Specifies a clear text password for the user.  <b>Note</b> From Cisco MDS NX-OS Release 8.4(1) and later, the password length is limited to 127 characters.  <b>Note</b> From Cisco MDS NX-OS Release 8.4(2), the "?" character is supported in the clear text password, hence help option will not be available in the password. After typing the password, if you type ?, you can see the help option.

username

<b>5</b>	(Optional) Specifies a strongly encrypted password for the user.
<b>7</b>	(Optional) Specifies an encrypted password for an ISCSI user. The encrypted password length is limited to 64 characters.  <b>Note</b> From Cisco MDS NX-OS Release 8.3(1) and later, the description for the keyword <b>7</b> is modified from Encrypted password to Encrypted password for ISCSI user.
<b>user-password</b>	Enters the password. Maximum length is 32 characters.
<b>role rolename</b>	(Optional) Specifies the role name of the user. Maximum length is 32 characters.
<b>priv-lvl privilege-level</b>	(Optional) Specifies privilege level. The range is from 1 to 15 characters.
<b>ssh-cert-dn distinguished-name</b>	(Optional) Specifies the SSH X.509 certificate distinguished name. The maximum size is 512.
<b>dsa</b>	(Optional) Specifies the DSA algorithm.
<b>rsa</b>	(Optional) Specifies the RSA algorithm.
<b>sshkey key_content</b>	(Optional) Specifies the actual contents of the SSH public key in OPENSSH format.
<b>file filename</b>	(Optional) Specifies a file containing the SSH public key either in OPENSSH or IETF SECH or Public Key Certificate in PEM format.

**Command Default**

None.

**Command Modes**

Configuration mode.

**Command History**

Release	Modification
1.0(2)	This command was introduced.
2.0(x)	<ul style="list-style-type: none"> <li>Removed the <b>update_snmpv3</b> option.</li> <li>Added level <b>7</b> for passwords.</li> </ul>
3.0(1)	Added the <b>ssh-cert-dn</b> , <b>dsa</b> , and <b>rsa</b> options.
5.0(1a)	Added the keypair and Priv-lvl keyword to the syntax description.
8.3(1)	Description for the keyword <b>7</b> was modified from Encrypted password to Encrypted password for ISCSI user.
8.4(1)	The password character limit was modified from 80 to 127 characters.
8.4(2)	Added support to add "?" character in the clear text password.

**Usage Guidelines**

To change the SNMP password, a clear text CLI password is required. You must know the SNMPv3 password to change the password using the CLI.

The password specified in the **username** command is synchronized as the auth and priv passphrases for the SNMP user.

Deleting a user using either command results in the user being deleted for both SNMP and CLI.

User-role mapping changes are synchronized in SNMP and CLI.

The SSH X.509 certificate distinguished name (DN) is the distinguished name in the certificate. You need to extract the distinguished name from the certificate and specify the subject name as the argument to the **username** command.

The SSHkey is the public key that we use to authorize any remote machine to log in to the switch without the need to enter the password. Basically it is the passwordless authentication for the user who has that key. These keys are used by the SSH Server of the switch to authenticate a user.

The SSH keys will be used by the SSH client on the switch while doing an SSH/SCP to connect to the remote host from the switch. This keypair can be used to do a passwordless SSH/SCP from the switch to a remote server.

**Examples**

The following example shows how to configure the privilege level that the user need to assign:

```
switch(config)# username admin priv-lvl 13
switch(config) #
```

The following example shows how to generate SSH keys:

```
switch(config)# username admin keypair generate rsa force
generating rsa key(1024 bits).....
.generated rsa key
switch(config) #
```

The following example shows how to delete SSH keys:

```
switch(config)# no username admin keypair generate rsa force
generating rsa key(1024 bits).....
.generated rsa key
switch(config) #
```

The following example shows how to export a keypair to bootflash or to the volatile directory:

```
switch(config)# username admin keypair export bootflash:xyz rsa force
Enter Passphrase:
switchg(config) #
```

The user can configure the same set of SSH keypairs on different switches by copying the public and private keypair to that switch and importing them using the following commands.

The following example shows how to import keypair from bootflash or volatile directory:

```
switch(config)# username admin keypair import bootflash:xyz rsa force
Enter Passphrase:
switchg(config) #
```

The following example shows how to define a user:

**username**

```
switch(config)# username knuckles password testpw role bodega
switch(config)# do show user-account
user:admin
    this user account has no expiry date
    roles:network-admin
user:knuckles
    this user account has no expiry date
    roles:bodega
```

The following example configures the name for a user to log in using iSCSI authentication:

```
switch(config)# username iscsi
```

The following example places you in the mode for the specified role (techdocs). The prompt indicates that you are now in the role configuration submode. This submode is now specific to the techdocs group.

```
switch(config)# username role name techdocs
switch(config-role) #
```

The following example deletes the role called techdocs:

```
switch(config)# no username role name techdocs
```

The following example assigns a description to the new role. The description is limited to one line and can contain spaces:

```
switch(config-role)# description Entire Tech. Docs. group
```

The following example resets the description for the Tech. Docs. group:

```
switch(config-role)# no description
```

The following example creates or updates the user account (usam) along with a password (abcd) that is set to expire on 2009-05-31:

```
switch(config)# username usam password abcd expire 2009-05-31
```

The following example creates or updates the user account (msam) along with a password (abcd) specified in clear text (indicated by 0):

```
switch(config)# username msam password 0 abcd role network-operator
```

The following example specifies an encrypted (specified by 5) password (!@\*asdfsdfjh!@df) for the user account (user1):

```
switch(config)# username user1 password 5!*asdfsdfjh!@df
```

The following example adds the specified user (usam) to the network-admin role:

```
switch(config)# username usam role network-admin
```

The following example deletes the specified user (usam) from the vsan-admin role:

```
switch(config)# no username usam role vsan-admin
```

The following example shows how to define a distinguished name on a switch for SSH certificate authentication:

```
switch# config t
switch(config)# username knuckles ssh-cert-dn /CN=excal-1.cisco.com rsa

switch(config)# do show user-account

user:admin
    this user account has no expiry date
    roles:network-admin
user:knuckles
    this user account has no expiry date
    roles:network-operator
    ssh cert DN : /CN=excal-1.cisco.com; Algo: x509v3-sign-rsa
```

The following example specifies the SSH X.509 certificate distinguished name and DSA algorithm for an existing user account (usam):

```
switch(config)# username usam ssh-cert-dn usam-dn dsa
```

The following example specifies the SSH X.509 certificate distinguished name and RSA algorithm for an existing user account:

```
switch(config)# username user1 ssh-cert-dn user1-dn rsa
```

The following example deletes the SSH X.509 certificate distinguished name for the user account:

```
switch(config)# no username admin ssh-cert-dnadmin-dn dsa
```

The following example identifies the contents of the SSH key for the specified user (usam):

```
switch(config)# username usam sshkey fsafsd2344234234ffgsdfg
```

The following example deletes the SSH key content identification for the user (usam):

```
switch(config)# no username usam sshkey fsafsd2344234234ffgsdfgffsdfsfsfssf
```

The following example updates the SNMPv3 password for the specified user (joe). The local CLI password and the SNMP password are updated. If user Joe does not exist, the command fails:

```
switch(config)# username joe password wxyz6789 update-snmpv3 abcd1234
```

#### Related Commands

Command	Description
<b>role</b>	Configures user roles.
<b>show username</b>	Displays username information.

**username (iSCSI initiator configuration and iSLB initiator configuration)**

# username (iSCSI initiator configuration and iSLB initiator configuration)

To assign a username for iSCSI login authentication, use the **username** command in iSCSI initiator configuration submode. To assign a username for iSLB login authentication, use the **username** command in iSLB initiator configuration submode. To disable this feature, use the **no** form of the command.

```
username username
no username username
```

<b>Syntax Description</b>	<b>username</b> Specifies the username for iSCSI or iSLB login authentication.
---------------------------	--

**Command Default** None.

**Command Modes** iSCSI initiator configuration submode.iSLB initiator configuration submode.

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	1.3(2)	This command was introduced.
	3.0(1)	Added iSLB initiator configuration submode.

**Usage Guidelines** None.

**Examples** The following example assigns the username for iSCSI login authentication of an iSCSI initiator:

```
switch# config terminal
Enter configuration commands, one per line. End with CNTL/Z.
switch(config)# iscsi initiator name iqn.1987-02.com.cisco.initiator
switch(config-iscsi-init)# username iSCSIloginUsername
switch(config-iscsi-init)#

```

The following example assigns the username tester for iSLB login authentication of an iSLB initiator:

```
switch# config t
switch(config)# islb initiator ip-address 100.10.10.10
switch(config-iscsi-islb-init)# username ?
<WORD> Enter username <Max Size - 128>
switch(config-iscsi-islb-init)# username tester
```

The following example removes the username tester for an iSLB initiator:

```
switch (config-iscsi-islb-init)# no
username tester
```

Related Commands	Command	Description
	<b>iscsi initiator name</b>	Assigns an iSCSI name and changes to iSCSI initiator configuration submode.
	<b>islb initiator</b>	Assigns an iSLB name and IP address to the iSLB initiator and enters iSLB initiator configuration submode.
	<b>show iscsi initiator</b>	Displays information about a configured iSCSI initiator.
	<b>show iscsi initiator configured</b>	Displays iSCSI initiator information for the configured iSCSI initiator.
	<b>show iscsi initiator detail</b>	Displays detailed iSCSI initiator information.
	<b>show iscsi initiator summary</b>	Displays iSCSI initiator summary information.
	<b>show islb initiator</b>	Displays iSLB initiator information.
	<b>show islb initiator configured</b>	Displays iSLB initiator information for the configured iSLB initiator.
	<b>show islb initiator detail</b>	Displays detailed iSLB initiator information.
	<b>show islb initiator summary</b>	Displays iSLB initiator summary information.

# userprofile

To set the userprofile, use the userprofile command. To disable this feature, use the no form of the command.

**userprofile attribute-name attribute-name search-filter string base-DN string**  
**no userprofile attribute-name attribute-name search-filter string base-DN string**

<b>Syntax Description</b>	attribute-name attribute-name	Specifies LDAP attribute name. The maximum size is 128 characters.
	search-filter string	Specifies search map search filter. The maximum length is 128 characters.
	base-DN string	Specifies search map base-DN name. The maximum length is 128 characters.

**Command Default** None.

**Command Modes** Configuration mode.

Release	Modification
NX-OS 5.0(1a)	This command was introduced.

**Usage Guidelines** None.

## Examples

```
The following example shows how to set the pubkey matching :
switch(config)#ldap search-map s1
switch(config-ldap-search-map)# userprofile attribute-name map1 search-filter map1 base-DN
a
```

**Usage Guidelines** None.

## Examples

```
The following example shows how to set the CRLLookup:---add the output
switch(config)# ldap search-map map1
switch(config-ldap-search-map)# crllook attribute-name map1 search-filter map1 b
ase-DN DN1
GROUP_NAME: map1
CRL
ATTR_NAME: map1
SEARCH_FLTR: map1
BASE_DN: DN1
Sending the SET_REQ
switch(config-ldap-search-map)#
switch(config-ldap-search-map)##end
```

Command	Description
<b>show crypto ssh-auth-map</b>	displays mapping filters applied for SSH authentication.

# user-pubkey-match

To set the user-pubkey matching, use the user-pubkey-match command. To disable this feature, use the no form of the command.

```
user-pubkey-match attribute-name attribute-name search-filter string base-DN string
no user-pubkey-match attribute-name attribute-name search-filter string base-DN string
```

<b>Syntax Description</b>	attribute-name attribute-name	Specifies LDAP attribute name. The maximum size is 128 characters.
	search-filter	Specifies LDAP search filter. The maximum length is 128 characters.
	string	Specifies search map search filter . The maximum length is 128 characters.
	base-DN	Configure base DN to be used for search operation. The Maximum length is 63 characters.
	string	Specifies search map base DN name. The Maximum length is 63 characters.

**Command Default** None.

**Command Modes** Configuration mode.

Command History	Release	Modification
NX-OS 5.0(1a)		This command was introduced.

**Usage Guidelines** None.

## Examples

```
The following example shows how to set the pubkey matching :
switch(config)#ldap search-map s1
switch(config-ldap-search-map)# user-pubkey-match attribute-name map1 search-filter map1
base-DN a
switch(config-ldap-search-map) #
```

Related Commands	Command	Description
	<b>show ldap-server groups</b>	Displays the configured LDAP server groups.

# user-switch-bind

To set the user-switch-bind, use the user-switch-bind command. To disable this feature, use the no form of the command.

**user-switch-bind attribute-name attribute-name search-filter string base-DN string**  
**no user-switch-bind attribute-name attribute-name search-filter string base-DN string**

<b>Syntax Description</b>	attribute-name attribute-name	Specifies LDAP attribute name. The maximum size is 128 characters.
	search-filter	Specifies LDAP search filter. The maximum length is 128 characters.
	string	Specifies search map search filter . The maximum length is 128 characters.
	base-DN	Configure base DN to be used for search operation. The Maximum length is 63 characters.
	string	Specifies search map base DN name. The Maximum length is 63 characters.

**Command Default** None.

**Command Modes** Configuration mode.

<b>Command History</b>	<b>Release</b>	<b>Modification</b>
	NX-OS 5.0(1a)	This command was introduced.

**Usage Guidelines** None.

## Examples

```
The following example shows how to set the pubkey matching :
switch(config)#ldap search-map s1
switch(config-ldap-search-map)# user-switch-bind attribute-name a search-filter a base-DN
a
switch(config-ldap-search-map) #
```

<b>Related Commands</b>	<b>Command</b>	<b>Description</b>
	<b>show ldap-server groups</b>	Displays the configured LDAP server groups.