



# Deploying in Existing Red Hat Enterprise Linux Installation

---

- [Prerequisites and Guidelines, on page 1](#)
- [Deploying Nexus Dashboard in Existing Red Hat Enterprise Linux Installation, on page 3](#)
- [Uninstalling Nexus Dashboard Software, on page 10](#)
- [Troubleshooting Nexus Dashboard Deployments in RHEL, on page 10](#)

## Prerequisites and Guidelines

Before you proceed with deploying the Nexus Dashboard cluster, you must:

- Review and complete the general prerequisites described in the [Deployment Overview](#).  
The guide is available from the Nexus Dashboard UI or online at [Cisco Nexus Dashboard User Guide](#)
- Review and complete any additional prerequisites described in the *Release Notes* for the services you plan to deploy.
- Ensure that your server is running Red Hat Enterprise Linux (RHEL) release 8.4 or 8.6.  
This release of Nexus Dashboard support both physical and virtual deployments of RHEL.



---

**Note** For non-production deployments, such as labs or testing, you can deploy in other Linux distributions by passing an additional parameter to the installer in **Step 4** of the [Deploying Nexus Dashboard in Existing Red Hat Enterprise Linux Installation, on page 3](#) section:

```
./nd-installer setup ./examples/nd-linux-input.yaml  
skip-os-version-check
```

---

- You can deploy only a single-node or three-node (all `master` nodes) cluster in RHEL.  
Adding `worker` or `standby` node is not supported for this cluster form factor.
- Clusters deployed in RHEL support only Nexus Dashboard Fabric Controller (NDFC), Release 12.1(1) or later service with **SAN Controller** deployment type.

You must deploy one of the other form factors if you want to run any other Nexus Dashboard services or another deployment type of NDFC. For more information about services supported one each Nexus Dashboard cluster form factor, see [Cisco Nexus Dashboard Cluster Sizing](#) and [Nexus Dashboard and Services Compatibility Matrix](#).

- Ensure that the following system-level requirements are satisfied:
  - An existing Linux user on each cluster node, which you will provide to the installer and which can be used to manage and troubleshoot the node.
 

Only one system user can connect to the Nexus Dashboard node's system. For more information, see [Troubleshooting Nexus Dashboard Deployments in RHEL, on page 10](#) after the deployment.
  - System clocks across all nodes must be synchronized.
 

You can use a system utility such as `chrony` to ensure proper time synchronization between the nodes.




---

**Note** By default, the Nexus Dashboard installer for RHEL verifies that the system clock is synchronized using `chrony`. If you use a different system to synchronize the clock, you can use `./nd-installer setup input.yaml skip-ntp-check` during installation to bypass the default verification.

---

- Skopeo package is installed.
 

Skopeo is outside the scope of this document, but in short you can use `yum install skopeo` command to install the package.
- Swap file is disabled.
 

You can disable swap by removing its entry from the `/etc/fstab` file and restarting the server.
- The `firewalld` and `libvirt` services are stopped and disabled.




---

**Note** The following additional system-level changes will be applied when you deploy Nexus Dashboard software to allow executables from additional directories and the cluster's own SSH server:

```
/usr/bin/chcon -R -t bin_t /mnt/atom
/usr/bin/chcon -R -t bin_t /mnt/linux
/usr/bin/chcon -R -t bin_t /opt/apic-sn

/usr/bin/chcon -t ssh_home_t -R /data/services/issh/ssh_host_rsa_key
/usr/bin/chcon -t ssh_home_t -R /data/services/issh/intssh
/usr/sbin/semanage port -a -t ssh_port_t -p tcp 1022
```

---

- Ensure you have enough system resources.

When deploying in RHEL, you can deploy two types of nodes:

Table 1: Deployment Requirements

Nexus Dashboard Version	Default Node Profile	Large Node Profile
Release 2.3.x	<ul style="list-style-type: none"> <li>• 16 vCPUs</li> <li>• 64 GB of RAM</li> <li>• 500GB SSD storage for the data volume and an additional 100GB for the system volume.</li> </ul> <p>All nodes must be deployed on SSD or faster storage.</p> <ul style="list-style-type: none"> <li>• Two network interfaces in addition to the RHEL's management interface.</li> </ul>	<ul style="list-style-type: none"> <li>• 32 vCPUs</li> <li>• 128 GB of RAM</li> <li>• 3TB SSD storage for the data volume and an additional 100GB for the system volume.</li> </ul> <p>The data volume may be a combination of multiple drives (such as in RAID configuration) as long as the drive is presented as a single device to the operating system.</p> <p>All nodes must be deployed on SSD or faster storage.</p> <ul style="list-style-type: none"> <li>• Two network interfaces in addition to the RHEL's management interface.</li> </ul>

# Deploying Nexus Dashboard in Existing Red Hat Enterprise Linux Installation

This section describes how to configure and bring up a Nexus Dashboard cluster in RHEL.

## Before you begin

- Ensure that you meet the requirements and guidelines described in [Prerequisites and Guidelines, on page 1](#).

## Step 1

Obtain the Cisco Nexus Dashboard software archive package (tarball).

- Browse to the Software Download page.

<https://www.cisco.com/c/en/us/support/data-center-analytics/nexus-dashboard/series.html>

- Click the **Downloads** tab.
- Choose the Nexus Dashboard release version you want to download.
- Click the **Download** icon next to the Nexus Dashboard tarball (`nd-rhel-<version>.tar`).

## Step 2

Extract the downloaded archive.

```
tar -xvf nd-rhel-<version>.tar
```

**Step 3** Modify the installation `yaml` file.

The distribution tarball includes a sample YAML file (`./nd-linux/examples/nd-linux-input.yaml`), which you can modify to provide the values appropriate to your deployment.

For example, the following sample node configuration YAML file highlights the specific fields which you must provide:

- For `blkdev`, provide the SSD devices for the node's image and data volumes.

You must provide two devices, one for the image and one for the data. The order of the devices in the YAML file does not matter—the smaller disk will be used for image and the larger disk will be used for data.

**Note** Both devices will be erased and consumed for the Nexus Dashboard node.

For more information on the node device requirements, see [Prerequisites and Guidelines, on page 1](#).

- For `oobNetwork`, provide the management network information:
  - For `uplinks`, provide the names of the network interfaces which will be used for the cluster's Management and Data networks.
 

These interfaces must be dedicated exclusively to the Nexus Dashboard.
  - For `ipNet`, provide the node's management network IPv4 address and netmask in the `172.23.152.214/24` format.
  - For `gatewayIP`, provide the node's management network IPv4 gateway.
  - For `ipv6Net`, provide the node's management network IPv6 address and netmask in the `2001:420:286:2000:6:15:152:220/112` format.
 

You can leave this parameter out if you are not configuring dual stack IPv4/IPv6 for your cluster.
  - For `gatewayIPv6`, provide the node's management network IPv6 gateway.
 

You can leave this parameter out if you are not configuring dual stack IPv4/IPv6 for your cluster.
- For `inbandNetwork`, you must provide only the interface(s) in the `uplinks` section as the rest of the configuration is defined during the GUI bootstrap process.
- For `firstMaster`, ensure that only one of the node is set to `true` and the other 2 nodes are set to `false`.
 

You will use the `firstMaster` node to complete the cluster bootstrap process using the GUI.
- For `clusterName`, provide the name of the cluster.
- For `installProfile`, choose either `Default` or `Large`.
 

For more information on the node profile requirements, see [Prerequisites and Guidelines, on page 1](#).
- For `serviceUser`, provide an existing Linux account name which will be used for managing and troubleshooting the Nexus Dashboard node.

**Note** The `serviceUser` must be different from the system's `root` user.

```
# Node Definition
# 'Master' / 'Worker' / 'Standby'. Only Master supported in 2.2
nodeRole: Master

# Block devices. Can be complete device or partition. Should meet profile requirements.
blkdev:
```

```

- type: SSD
  name: "/dev/sdb"
- type: SSD
  name: "/dev/sdc"

# Networking
# ND needs exclusively 2 interfaces. Has to be separate from the linux management interface.
oobNetwork:
  uplinks:
    - ens924
  ipNet: 172.23.152.214/24
  gatewayIP: 172.23.152.1
  ipv6Net: 2001:420:286:2000:6:15:152:220/112
  gatewayIPv6: 2001:420:286:2000:6:15:152:1

# Just the interface for the inbandNetwork, rest can be provided at ND bootstrap UI
inbandNetwork:
  uplinks:
    - ens956

# 'true' for one of the masters in a cluster
firstMaster: true

clusterName: nd-cluster

#Installation Profile. Default / Large. Large is used for NDFC SAN installations
installProfile: Default

#Linux username. Cannot be root. Only this user will have privileges to execute certain ND diag
commands.
serviceUser: nduser

```

**Step 4** Install Nexus Dashboard node software.

```

cd nd-linux
./nd-installer setup ./examples/nd-linux-input.yaml

```

You will be asked to provide the password, which will be used for the Nexus Dashboard cluster `admin` account.

**Note** By default, the installer verifies that the system clock is synchronized using `chrony`. If you use a different system to synchronize the clock, you can use `./nd-installer setup ./examples/nd-linux-input.yaml skip-ntp-check` to bypass the default verification.

**Step 5** Repeat the previous steps to deploy the 2nd and 3rd nodes.

If you are deploying a single-node cluster, you can skip this step.


You do not need to wait for the first node's installation to complete, you can begin deploying the other two nodes simultaneously.

**Note** When providing the node details in the configuration YAML file for the 2nd and 3rd nodes, ensure that `firstMaster` parameter is set to `false`.

**Step 6** Wait for all three nodes to finish deploying.**Step 7** Open your browser and navigate to `https://<first-node-mgmt-ip>` to open the GUI.

The rest of the configuration workflow takes place from one of the node's GUI. You must use the IP address you provided for the node which you designated as `firstMaster`.

Enter the password you provided in a previous step and click **Begin Setup**

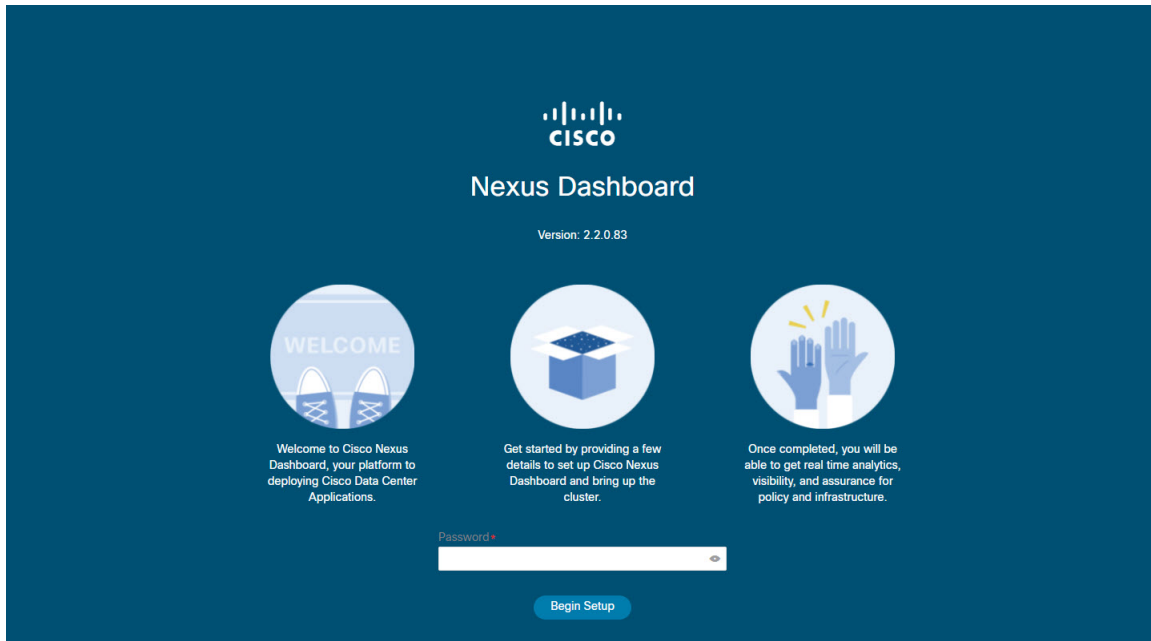

## Step 8 Provide the **Cluster Details**.

In the **Cluster Details** screen of the initial setup wizard, provide the following information:

- Provide the **Cluster Name** for this Nexus Dashboard cluster.
- Click **+Add NTP Host** to add one or more NTP servers.

You must provide an IP address, fully qualified domain name (FQDN) are not supported.

After you enter the IP address, click the green checkmark icon to save it.

- Click **+Add DNS Provider** to add one or more DNS servers.

After you enter the IP address, click the green checkmark icon to save it.

- Provide a **Proxy Server**.

For clusters that do not have direct connectivity to Cisco cloud, we recommend configuring a proxy server to establish the connectivity, which will allow you to mitigate risk from exposure to non-conformant hardware and software in your fabrics.

If you want to skip proxy configuration, click the information (i) icon next to the field, then click **Skip**.

- (Optional) If your proxy server required authentication, change **Authentication required for Proxy** to **Yes** and provide the login credentials.
- (Optional) Expand the **Advanced Settings** category and change the settings if required.

Under advanced settings, you can configure the following:

- Provide one or more search domains by clicking **+Add DNS Search Domain**.

After you enter the IP address, click the green checkmark icon to save it.

- Provide custom **App Network** and **Service Network**.

The application overlay network defines the address space used by the application's services running in the Nexus Dashboard. The field is pre-populated with the default `172.17.0.1/16` value.

The services network is an internal network used by the Nexus Dashboard and its processes. The field is pre-populated with the default `100.80.0.0/16` value.

Application and Services networks are described in the [Prerequisites and Guidelines](#) section earlier in this document.

- g) Click **Next** to continue.

### Step 9

In the **Node Details** screen, provide the node's information.

- a) Click the **Edit** button next to the first node.  
b) In the **Password** field, enter the password for this node and click **Validate**.

This will auto-populate the **Name**, **Serial Number**, and **Management Network** information for the node.

The hostname of the RHEL server where the node software is installed is used for the node's **Name**.

- c) Provide the node's **Data Network** information.

The **Management Network** information is already pre-populated with the information you provided for the first node.

You must provide the data network IP address/netmask (for example, `172.31.140.58/24`) and gateway (for example, `172.31.140.1`). Optionally, you can also provide the VLAN ID for the network. For most deployments, you can leave the VLAN ID field blank.

- d) (Optional) Provide IPv6 addresses for the management and data networks.

Nexus Dashboard supports either IPv4 or dual stack IPv4/IPv6 for the management and data networks.

**Note** If you want to provide IPv6 information, you must do that now during cluster bootstrap process. If you deploy the cluster using only IPv4 stack and want to add IPv6 information later, you would need to redeploy the cluster.

All nodes in the cluster must be configured with either only IPv4 or dual IPv4/IPv6 stack.

- e) (Optional) If required, **Enable BGP** for the data network.

BGP configuration is required for the Persistent IPs feature required by some services, such as Nexus Dashboard Insights with NDFC fabrics. This feature is described in detail in the "Persistent IP Addresses" sections of the *Nexus Dashboard User's Guide*.

**Note** You can enable BGP at this time or in the Nexus Dashboard GUI after the cluster is deployed.

When you enable BGP, you must also provide the following information:

- **ASN** (BGP Autonomous System Number) of this node.  
You can configure the same ASN for all nodes or a different ASN per node.
- **BGP Peer Details**, which includes the peer's IPv4 or IPv6 address and peer's ASN.

- f) Click **Save** to save the changes.

### Step 10

In the **Node Details** screen, click **Add Node** to add the second node to the cluster.

The **Node Details** window opens.

- a) In the **Deployment Details** section, provide the node's **Management IP Address** and **Password**, then click **Verify**.

This is the password you provided to the `./nd-installer setup` command during installation in Step 4.

Verifying the IP and password will auto-populate the **Name**, **Serial Number**, and **Management Network** information for the node.

The hostname of the RHEL server where the node software is installed is used for the node's **Name**.

- b) Provide the node's **Name**.
- c) Provide the node's **Data Network** IP address and gateway.

The **Management Network** information will be pre-populated with the information pulled from the node based on the management IP address and credentials you provided in the previous sub-step.

You must provide the data network IP address/netmask (for example, `172.31.141.58/24`) and gateway (for example, `172.31.141.1`). Optionally, you can also provide the VLAN ID for the network. For most deployments, you can leave the VLAN ID field blank.

- d) (Optional) Provide IPv6 information for the management and data networks.

Nexus Dashboard supports either IPv4 or dual stack IPv4/IPv6 for the management and data networks.

**Note** If you want to provide IPv6 information, you must do it during cluster bootstrap process. If you deploy the cluster using only IPv4 stack and want to add IPv6 information later, you would need to redeploy the cluster.

All nodes in the cluster must be configured with either only IPv4 or dual IPv4/IPv6 stack.

- e) (Optional) If required, **Enable BGP** for the data network.
- f) Click **Save** to save the changes.

**Step 11** Repeat the previous step to add the 3rd node.

**Step 12** In the **Node Details** screen, click **Next** to continue.

After you've provided the information for all 3 nodes in the cluster, continue to the next screen of the bootstrap process.



Cluster Details    **2** Node Details    Confirmation

Node Details

Provide the necessary node details to set up Nexus Dashboard and bring up the User Interface.

Site Site Site

Fabric 0/1 Fabric 0/1 Fabric 0/1

Mgmt 0/1 Mgmt 0/1 Mgmt 0/1

Data Network Management Network

General

Serial Number	Name	Management Network	Data Network		
EA986C528737	node-ova-app1	IPv4/mask: 172.31.140.46/24 IPv4 Gateway: 172.31.140.1 IPv6/mask: - IPv6 Gateway: -	IPv4/mask: 172.31.141.58/24 IPv4 Gateway: 172.31.141.1 IPv6/mask: - IPv6 Gateway: - VLAN: -	/	🗑️
B734BC2033AD	node-ova-app2	IPv4/mask: 172.31.140.60/24 IPv4 Gateway: 172.31.140.1 IPv6/mask: - IPv6 Gateway: -	IPv4/mask: 172.31.141.68/24 IPv4 Gateway: 172.31.141.1 IPv6/mask: - IPv6 Gateway: - VLAN: -	/	🗑️
AED5046A16E2	node-ova-app3	IPv4/mask: 172.31.140.70/24 IPv4 Gateway: 172.31.140.1 IPv6/mask: - IPv6 Gateway: -	IPv4/mask: 172.31.141.72/24 IPv4 Gateway: 172.31.141.1 IPv6/mask: - IPv6 Gateway: - VLAN: -	/	🗑️

Previous Next

**Step 13** In the **Confirmation** screen, review and verify the configuration information and click **Configure** to create the cluster.

During the node bootstrap and cluster bring-up, the overall progress as well as each node's individual progress will be displayed in the UI. If you do not see the bootstrap progress advance, manually refresh the page in your browser to update the status.

It may take up to 30 minutes for the cluster to form and all the services to start. When cluster configuration is complete, the page will reload to the Nexus Dashboard GUI.

**Step 14** Verify that the cluster is healthy.

It may take up to 30 minutes for the cluster to form and all the services to start.

After all three nodes are ready, you can log in to any one node via SSH using the `serviceUser` you provided in the configuration YAML and run the following command to verify cluster health:

a) After logging in to the Linux system, connect to the node using the `/usr/bin/attach-nd` command.

This command can be used only by the `serviceUser` user.

b) Verify that the cluster is up and running.

You can check the current status of cluster deployment by logging in to any of the nodes and running the `acs health` command.

While the cluster is converging, you may see the following outputs:

```
$ acs health
k8s install is in-progress
```

```
$ acs health
k8s services not in desired state - [...]
```

```
$ acs health
k8s: Etcd cluster is not ready
```

When the cluster is up and running, the following output will be displayed:

```
$ acs health
All components are healthy
```

- c) Log in to the Nexus Dashboard GUI.

After the cluster becomes available, you can access it by browsing to any one of your nodes' management IP addresses. The default password for the `admin` user is the same as the password you provided to the `./nd-installer setup` command during installation in Step 4.

## Uninstalling Nexus Dashboard Software

When the Nexus Dashboard node software is deployed, the uninstaller is copied into the `/usr/bin` directory.

If at any point you want to uninstall the software, simply run the following command as the `root` user:

```
/usr/bin/nd-installer uninstall
```



**Note** If you log in to the RHEL system using SSH, you must connect to the system's management IP address to uninstall; you must not use the Nexus Dashboard's management IP addresses.

This will remove the software and undo the file system changes done during the installation process.

## Troubleshooting Nexus Dashboard Deployments in RHEL

This section describes common troubleshooting steps for Nexus Dashboard software deployed in RHEL.

**Step 1** Check installation logs.

Nexus Dashboard installation logs are available in the following directory:

```
/logs/ndlinux/
```

**Step 2** Access the Nexus Dashboard environment after installation.

- a) Log in to your RHEL system using the Nexus Dashboard user you provided in the YAML configuration file during installation.
- b) Access the Nexus Dashboard environment.

```
/usr/bin/attach-nd
```

- c) Use the common Nexus Dashboard troubleshooting commands.

After you access the Nexus Dashboard environment, you can use all the common Nexus Dashboard commands described in the "Troubleshooting" section of the *Cisco Nexus Dashboard User Guide*.

---

