



Analyzing and Troubleshooting Your Network, Release 4.1.1

Table of Contents

New and Changed Information	1
Analyzing and troubleshooting your network using Analysis Hub	2
Gathering fabric resource information using Policy CAM	3
Associated policies	5
Policy CAM Statistics	6
Policy CAM Rules	7
All Anomalies	8
Defining communication and configuration rules using Compliance (ACI fabrics)	10
Types of compliance	10
Communication	10
Configuration	10
Examples of compliance	11
Compliance rules	16
Interpretation of compliance rules	17
Compliance analysis	18
Compliance anomalies	18
Guidelines and limitations for compliance	18
Guidelines for compliance	19
Guidelines for creating a compliance rule	19
Guidelines for import configuration compliance	19
Guidelines for compliance rule naming	19
Verified scalability guidelines for template-based compliance	19
Guidelines for template-based compliance	20
Limitations for compliance analysis	20
Create compliance communication rule	20
Create compliance rule with snapshot selection	21
Import configuration compliance	21
Create compliance rule with manual configuration	21
Create template-based compliance	22
Trigger a compliance analysis	22
Templates to configure object selectors	23
Selection, status, and match criteria	23
Tags and annotations	27
Communication compliance	29
Communication types	29
Communication type and traffic selector rules selections with the resultant compliance rule type	30
Traffic selector rules available	30
Manual configuration compliance	31
Attribute requirement that can be set according to the objects selected	31
BD to EPG relationship configuration	32

Matching criteria	33
Objects available as matching criteria for a selected object type	33
Define matching criteria objects	33
Operators for custom definitions	34
Understanding the hardware and software lifecycles for your network using Conformance	36
Access conformance report	37
View conformance report	37
Analyzing endpoint flows using Connectivity Analysis	39
Connectivity Analysis options	39
Layer 2 ToR support	40
Guidelines and limitations for all fabrics	40
Guidelines and limitations for Cisco ACI fabrics	40
Guidelines and limitations for standalone NX-OS fabrics	41
Supported topologies	41
Create connectivity analysis	42
View connectivity analysis	44
Manage connectivity analysis	47
Filtering information	48
Monitoring the latency, congestion, and drops for your network, using traffic analytics	50
Traffic analytics conversations	51
Traffic analytics for multi-fabric and external conversations	52
Traffic analytics support for traffic redirection to L4-L7 services	52
Traffic analytics support for north-south filters	52
Guidelines for traffic analytics	52
Support information for traffic analytics with any fabric type	53
Guidelines and limitations for traffic analytics compatibility mode	53
Support information for traffic analytics with Cisco ACI fabrics	54
Support information for traffic analytics with NX-OS fabrics	54
Limitations for traffic analytics with NX-OS fabrics	55
Limitations for traffic analytics with multi-fabric and external conversations	55
Configure traffic analytics flow collection	55
Apply the traffic analytics configuration	56
Apply the traffic analytics compatibility mode configuration	57
Disable traffic analytics flow collection for multi-fabric and external conversations	57
View traffic analytics	58
View traffic analytics for an individual fabric	58
View traffic analytics for all fabrics	61
Manage service categories	64
Apply filters to restrict traffic analytics for north-south filtering	65
Create an interface filter rule	66
View traffic analytics for endpoints	68
View traffic analytics for service endpoints	69
View service endpoint details for a fabric	70

Viewing ESG and endpoint association	72
Use the flow troubleshoot workflow	73
Exploring the energy usage for your network using Sustainability	75
Cisco Energy Manager	76
View the sustainability report for switches	76
View the sustainability report for PDUs	79
Comparing the configurations between two time periods for your fabric using Delta analysis	82
Health Delta	82
Policy Delta for ACI	82
Policy Delta for standalone NX-OS	82
Guidelines and limitations for delta analysis	82
Create delta analysis	83
View delta analysis	84
View health delta analysis	84
View policy delta analysis	86
Viewing the impact of configuration changes using Pre-Change analysis (ACI fabrics)	89
Pre-change analysis options	91
Guidelines and limitations for pre-change	92
Support for multiple objects in pre-change analysis	93
Known issues for pre-change analysis	94
Create pre-change analysis job	95
Download pre-change analysis job	95
Collecting and analyzing your device logs using Log Collector	97
Device connectivity notifier for TAC-initiated collector	97
Guidelines and Limitations	97
Log collector dashboard	97
TAC-initiated log collector	98
Upload logs to Cisco Intersight Cloud	99
Guidelines and Limitations	101
Collecting information on bugs that might affect your network using Bug Scan	103
Bug scan schedule	103
View active and known bugs	104
View active and known bugs for an individual fabric	105
Tracking endpoints within a data center using Endpoint Locator (NX-OS fabrics)	107
Backup and Restore	109
EPL Connectivity Options	109
Nexus Dashboard Cluster Mode: Physical Server to VM Mapping	109
Configuring Endpoint Locator	109
Flushing the Endpoint Database	111
Configuring Endpoint Locator for Single VXLAN EVPN Site	111
Configuring Endpoint Locator for interconnected VXLAN fabrics	114
Configuring Endpoint Locator for vPC Fabric Peering Switches	117
Configuring Endpoint Locator for External Fabrics	118

Configuring Endpoint Locator for eBGP EVPN Fabrics	119
Monitoring Endpoint Locator	119
Disabling Endpoint Locator	119

New and Changed Information

The following table provides an overview of the significant changes up to this current release. The table does not provide an exhaustive list of all changes or of the new features up to this release.

Release Version	Feature	Description
Nexus Dashboard 4.1.1	Improved analysis and troubleshooting for your networks	Beginning with Nexus Dashboard 4.1.1, the analysis and troubleshooting for your Nexus Dashboard networks has been enhanced.
Nexus Dashboard 4.1.1	Policy CAM support for VXLAN iBGP and VXLAN external fabrics	With this release, Nexus Dashboard Policy CAM feature is supported on VXLAN iBGP fabrics and VXLAN external fabrics. For more information, see Gathering fabric resource information using Policy CAM .
Nexus Dashboard 4.1.1	Traffic analytics support for compatibility mode.	You can choose to configure traffic analytics compatibility mode whenever traffic analytics full mode is not supported by the fabric. For more information, see Monitoring the latency, congestion, and drops for your network, using traffic analytics .
Nexus Dashboard 4.1.1	Traffic analytics support for traffic redirection to L4-L7 services	With this release, Nexus Dashboard added Traffic analytics support for traffic redirected to Layer 4 to Layer 7 (L4-L7) services. For more information, see View traffic analytics for endpoints .
Nexus Dashboard 4.1.1	Traffic analytics support for north-south filters	Beginning with Nexus Dashboard 4.1.1, you can apply filters to external interfaces. For more information, see Traffic analytics support for north-south filters .
Nexus Dashboard 4.1.1	Traffic analytics support for UDP service endpoints	You can now visualize the UDP service endpoints in the traffic analytics table. For more information, see Manage service categories .
Nexus Dashboard 4.1.1	Endpoint Security Group (ESG) support for segmentation and security visibility	With this release, Nexus Dashboard ESG enhances Segmentation and security, allowing you to view ESGs and their associated endpoints within the ACI fabric. For more information, see Viewing ESG and endpoint association .

Analyzing and troubleshooting your network using Analysis Hub

In the Analysis Hub area, you can analyze and troubleshoot your network using advanced analytics tools, which allows you to gain valuable insights into the performance and health of your network.

These sections provide more information on different ways that you can analyze and troubleshoot your network:

- [Gathering fabric resource information using Policy CAM](#)
- [Defining communication and configuration rules using Compliance \(ACI fabrics\)](#)
- [Understanding the hardware and software lifecycles for your network using Conformance](#)
- [Analyzing endpoint flows using Connectivity Analysis](#)
- [Monitoring the latency, congestion, and drops for your network using Traffic Analytics](#)
- [Exploring the energy usage for your network using Sustainability](#)
- [Comparing the configurations between two time periods for your fabric using Delta analysis](#)
- [Viewing the impact of configuration changes using Pre-Change analysis \(ACI fabrics\)](#)
- [Collecting and analyzing your device logs using Log Collector](#)
- [Collecting information on bugs that might affect your network using Bug Scan](#)
- [Tracking endpoints within a data center using Endpoint Locator \(NX-OS fabrics\)](#)

Gathering fabric resource information using Policy CAM

The Policy CAM feature determines how and where resources in the fabric are used. Policy CAM provides information about the resource utilization in the network, and the amount of policy content-addressable memory (Policy CAM) utilization.

Navigate to **Analyze > Analysis Hub > Policy CAM**.

After you get to Policy CAM, choose a fabric, choose the appropriate snapshot of time within which to view the resource utilization, and click **Apply**.

With Nexus Dashboard 4.1.1, the Policy CAM feature is supported on VXLAN iBGP and VXLAN external fabrics in addition to ACI fabrics which were already supported in previous Nexus Dashboard releases. In the Nexus Dashboard UI, you can now view associations between Security groups, Contracts, and Filters on NX-OS switches. You can also view the rules created by each Contract and packet hit count for each rule on your fabric.

The Policy CAM feature for NX-OS fabrics requires the VXLAN Group Policy Option (GPO) security group configuration on your fabrics. For more information, see the "Working with security groups" section in [Working with Segmentation and Security for Your Nexus Dashboard VXLAN Fabric](#). For VXLAN external fabrics, you must manually configure the security group configuration to see the Policy associations utilization in the Nexus Dashboard **Analysis Hub** UI.

The Policy CAM feature is supported on these platforms:

- Cisco Nexus 9300-FX3, 9300-GX, and 9300-GX2 switches with NX-OS Release 10.4(3) and later releases.
- Cisco Nexus 9000 FX/FX/H switches with NX-OS Release 10.5.2 and later releases.
- Cisco Nexus 9000 C9408FX with NX-OS Release 10.5.1 and later releases.

← Analysis hub

Policy CAM analyzer

DC-NX1 | Active now | Re-sync successful | Last Re-sync completed at 11:41 PM on July 28, 2025

Refresh | Re-sync

Showing report as of Jul 28, 2025, 11:41 PM

Associated policies

Selecting any combination of objects or policies will update the tables below

Source security group	Destination security group	Contract	Filter	Switch
DG_vlan96_SC1_S1_1	DG_vlan96_SC1_S1_1	Contract-S1-1000_TCP_port_401	TCP_port_401	blr6-leaf3
DG_vlan96_SC1_S1_10	DG_vlan96_SC1_S1_10	Contract-S1-1001_TCP_port_401	TCP_port_402	blr6-leaf4
DG_vlan96_SC1_S1_100	DG_vlan96_SC1_S1_100	Contract-S1-1002_TCP_port_401	TCP_port_403	

Policy CAM statistics

All Policy CAM Rules by Hit Count by ☒ Security groups ☐ Switches ☐ Contracts ☐ Filters

Filter by attributes

Source security group	Destination security group	Source VRF	Action	1 Month	1 Week	1 Day	2 Hours	Cumulative
SG_vlan95_SC1_S1_10	DG_vlan96_SC1_S1_10	myvrf_80001	Permit	-	-	1025	1025	1025
SG_vlan95_SC1_S1_100	DG_vlan96_SC1_S1_100	myvrf_80001	Permit	-	-	1025	1025	1025
SG_vlan95_SC1_S1_101	DG_vlan96_SC1_S1_101	myvrf_80001	Permit	-	-	1025	1025	1025
SG_vlan95_SC1_S1_102	DG_vlan96_SC1_S1_102	myvrf_80001	Permit	-	-	1025	1025	1025
SG_vlan95_SC1_S1_103	DG_vlan96_SC1_S1_103	myvrf_80001	Permit	-	-	1025	1025	1025
SG_vlan95_SC1_S1_104	DG_vlan96_SC1_S1_104	myvrf_80001	Permit	-	-	1025	1025	1025
SG_vlan95_SC1_S1_105	DG_vlan96_SC1_S1_105	myvrf_80001	Permit	-	-	1025	1025	1025
SG_vlan95_SC1_S1_106	DG_vlan96_SC1_S1_106	myvrf_80001	Permit	-	-	1025	1025	1025
SG_vlan95_SC1_S1_107	DG_vlan96_SC1_S1_107	myvrf_80001	Permit	-	-	1025	1025	1025
SG_vlan95_SC1_S1_108	DG_vlan96_SC1_S1_108	myvrf_80001	Permit	-	-	1025	1025	1025

There are some minor variations in how the latest snapshot report is generated for Cisco ACI and NX-OS fabric types:



- In Cisco ACI fabrics, within the time range you choose, the last snapshot is considered for each of the fabrics included in the fabric. Therefore, you get the latest state of the application within the chosen time range.
- In NX-OS fabrics, when you choose the time range, the report is based on the end time.
- In NX-OS fabrics, the **Resync** button helps to detect any discrepancies between the NX-OS fabric and the intended configuration. This helps to make sure the latest policy changes are detected and reflected in the Nexus Dashboard UI.
- TCAM utilization count for each policy is not supported for NX-OS fabrics in this release.

The **Policy CAM Analyzer** page for Cisco ACI fabrics displays the **Associated Policies** and **Policy CAM Statistics**.

Analyze > Analysis Hub > Policy CAM Analyzer

Policy CAM Analyzer

ACI-Paris Feb 15th 2024, 6:02 AM

Associated Policies
Selecting any combination of objects or policies will update the tables below

☒ Provider Tenant View All (10)
 ☒ Consumer Tenant View All (10)
 ☐ Provider EPG View All (72)
 ☐ Consumer EPG View All (44)

openshift462 708 of 1.5 K Entries	openshift462 708 of 1.5 K Entries	aci-containers-nodes 684 of 1.5 K Entries	aci-containers-default 226 of 1.5 K Entries
openshift414 519 of 1.5 K Entries	openshift414 524 of 1.5 K Entries	aci-containers-nodes 320 of 1.5 K Entries	aci-containers-system 198 of 1.5 K Entries
common 69 of 1.5 K Entries	pcv_prod_pci_tn 62 of 1.5 K Entries	aci-containers-system 108 of 1.5 K Entries	aci-containers-system 160 of 1.5 K Entries

☒ Contract View All (51)
 ☐ Filter View All (38)
 ☐ Node View All (2)

Policy CAM Statistics						
All Policy CAM Rules by Hit Count by <input checked="" type="checkbox"/> EPGs <input type="checkbox"/> Tenants <input checked="" type="checkbox"/> Leafs <input checked="" type="checkbox"/> Contracts <input checked="" type="checkbox"/> Filters						
Filter by attributes						
Provider EPG	Consumer EPG	Leaf	Contract	Filter	Consumer VRF	Action
aci-containers-nodes	aci-containers-default	leaf-102 ACI-Paris	openshift-monitoring	openshift-monitoring-filter	openshift-external	Permit
aci-containers-nodes	dom34	leaf-102 ACI-Paris	openshift-monitoring	openshift-monitoring-filter	openshift-external	Permit
aci-containers-nodes	aci-containers-system	leaf-102 ACI-Paris	openshift-monitoring	openshift-monitoring-filter	openshift-external	Permit
aci-containers-nodes	annoateddom	leaf-102 ACI-Paris	openshift-monitoring	openshift-monitoring-filter	openshift-external	Permit
aci-containers-nodes	annoateddom	leaf-101 ACI-Paris	openshift-monitoring	openshift-monitoring-filter	openshift-external	Permit
aci-containers-nodes	dom34	leaf-101 ACI-Paris	openshift-monitoring	openshift-monitoring-filter	openshift-external	Permit

Policy CAM Analyzer displays the following information:

- Associated Policies
- Policy CAM Statistics
- Policy CAM Rules
- All Anomalies



The **All Anomalies** information is not supported for NX-OS fabrics.

Associated policies

Associated policies lists the various objects or policies available. When the policies are viewed in a top to down manner, the lists start with the node that has the maximum utilization followed by the next lower utilization. For Cisco ACI fabrics, each item in each column can be chosen to show relevant associations and relationships between the tenants, contracts, and EPGs. Similarly, for NX-OS fabrics, these columns show the associations and relationships between the Security group, Contracts, and Filters.

Click **View All** to view all the nodes or switches for the chosen object in a side panel.

These objects or policies are available for fabrics.

- Cisco ACI fabrics:
 - Provider Tenant
 - Consumer Tenant
 - Provider EPG
 - Consumer EPG
 - Contract
 - Filter
 - Node
- NX-OS fabrics:
 - Source security group

- Destination security group
- Contract
- Filter
- Switch

Click any of the objects to show all related objects and policies.

Policy CAM Statistics

The policy CAM statistics displays all the nodes and associated rules, and you can drill into details for a specific node here. Click the checkboxes for objects you want to see in the table.

These objects are available.

- For Cisco ACI fabrics:

- EPGs
- Tenants
- Leafs
- Contracts
- Filters

- For NX-OS fabrics:

- Security groups
- Switches
- Contracts
- Filters

You can filter the table based on these attributes.

- For Cisco ACI fabrics:

- Provider EPG
- Consumer EPG
- Leaf
- Contract
- Filter
- Consumer VRF
- Action

- For NX-OS fabrics:

- Source security group
- Source security group policy ID
- Destination security group
- Destination security group policy ID

- Source VRF
- Contract
- Filter
- Action

The table also shows the hit count in these timelines. * For Cisco ACI fabrics: **1 month** 1 week **1 day** Cumulative

- For NX-OS fabrics:

- 1 month
- 1 week
- 1 day
- 2 hours
- Cumulative

The gear icon allows you to toggle columns to customize the table as per your view.

Policy CAM Rules

In the **Policy CAM Rules** table, you can view the listings for all of the nodes based on the chosen snapshot.

You can filter the table based on these attributes.

- For Cisco ACI fabrics:

- Leaf
- Provider EPG
- Consumer EPG
- Contract
- Filter
- Rule
- Provider Tenant name
- Consumer Tenant name
- Consumer VRF

- For NX-OS fabrics:

- Source security group
- Source security group policy ID
- Destination security group
- Destination security group policy ID
- Source VRF
- Switch

- Contract
- Filter
- Rule

These details are available in the Rules table.

- For Cisco ACI fabrics:
 - Leaf
 - Provider EPG
 - Consumer EPG
 - Contract
 - Filter
 - Rule
 - Valid Hardware Entry Count
 - Provider Tenant name
 - Consumer Tenant name
 - Consumer VRF

For NX-OS fabrics:

- Source security group
- Source security group policy ID
- Destination security group
- Destination security group policy ID
- Source VRF
- Switch
- Contract
- Filter
- Rule

The gear icon allows you to toggle columns to customize the table as per your view.

All Anomalies

In the **Anomalies** table, you can view the anomalies that are generated in the chosen snapshot of time, individually by nodes or as an aggregate.



The **Anomalies** table is not supported on the NX-OS fabrics.

You can filter the anomalies based on the following attributes:

- Anomaly Level
- App Profile Name

- Attachable Access Entity Profiles name
- BD Name
- Concrete Device
- Concrete Interface
- Consumer App Profile Name
- Consumer EPG name
- Contract
- Contract Name
- Device Cluster
- Device Cluster Interface
- Device Selection Policy
- EPG name
- Encap VLAN
- Fabric IP
- Filter name
- Interface Policy Group Name
- Internal/External
- L2 Out Name
- L3 Out Name
- Leaf Interface Profile Name
- Leaf Profile Name
- Logical Interface Context
- Physical Domains Name
- Provider App Profile Name
- Provider EPG Name
- Provider Tenant Name
- Rule Name
- Fabrics
- Spine Name
- Tenant Name
- Virtual Port Channel

Defining communication and configuration rules using Compliance (ACI fabrics)

Compliance allows you to define a set of rules to enforce your communication and configuration standards or expectations.

Navigate to **Manage > Anomaly and Compliance Rules > Compliance Rules > Create Rule**.

You can change the state of any rule after the rules have been created. If the rule is in the Enabled state, the rule will be used to generate the Compliance Report the next time it gets generated. If the rule is in Disabled state, it will not be used.

Go to **Configure > Rules** and enable or disable the specific rule from the Rule State column in the table. Click the Actions menu for the row and click **Edit** to open **Edit Compliance Rule**. In the **State** field, change the state to **Enabled** and click **Save**.

Types of compliance

There are two compliance types:

- [Communication](#)
- [Configuration](#)

Communication

The Communication compliance type enables communication or isolation between network objects that meet business and regulatory purposes. To create a compliance communication rule, see [Create compliance communication rule](#).

Communication Compliance consists of the following Compliance Rule Types:

- **Service Level Agreement (SLA) Compliance:** You can set up rules for entities that must talk with other entities. You can use the Compliance feature to set up regulatory compliance rules.
- **Traffic Restriction Compliance:** You can specify restrictions on protocols and ports for communication between objects.
- **Segmentation Compliance:** You can establish walled areas around a set of entities that must not communicate with other entities.

Configuration

The Configuration compliance type enables and enforces the configuration to meet best practices and business requirements.

Configuration Compliance helps perform a configuration compliance check against a specified configuration.

Configuration compliance can be further classified into four types:

- **Snapshot Settings Compliance:** This is similar to the configuration compliance check method but

you also select a snapshot. With this method, you can make sure that certain attributes of objects are not changed when going from one snapshot to another snapshot. To create a compliance rule with snapshot selection, see [Create compliance rule with snapshot selection](#).

- **Manual Configuration:** You can configure this for certain objects such as BD, VRF, EPG, Contract, Subject, and Filter. All objects types are not supported. To create a compliance rule with manual configuration, see [Create compliance rule with manual configuration](#).
- **Template based Compliance:** With template-based compliance, you have the flexibility to select objects based on any attributes and provide different types of matching criteria that are not supported when you configure other compliance tasks. To create a template-based compliance, see [Create template-based compliance](#).

Template-based compliance allows you to configure a template and specify types of queries to select objects and attributes that enforce specific conditions when enabled. The Template Query Language enables you to select any configurable object and define what attributes to apply to the compliance.

With other types of Compliance configurations releases you can upload a JSON/XML file and all the attributes in the file will be matched as is. Alternatively, you can also select a few specific objects based on name matches, and you can configure select attributes supported for those specific objects. This allows you to search for existing or future objects matching the names that are checked for compliance for the specified parameters.

- **Import Configuration Compliance:** You can perform an import configuration against a specified configuration. You specify a configuration file or snapshot, and Nexus Dashboard continuously checks against it and enables you to identify changes for the objects and configurable attributes defined in Cisco APIC. If the configuration deviates from the specified configuration, then violations are raised. For each violation, there will be a separate violation anomaly displayed. Additionally, a single anomaly will be raised that includes every variable for every object of the tenant that is not a violation. To create an import configuration compliance, see [\[Create import configuration compliance\]](#).

Examples of compliance

- Example of template-based compliance
 - The following is an example of a Template Based Configuration Compliance. In this example, choose all the contracts where **name** starts with **Ctrct_(1-3)**. Then, match **scope** which must be **context**. Select contract subjects which have **name** as any (wildcard) and **nameAlias** must be ABC. The **status MUST_EXIST** means for all the parent nodes that exists, at least one of obj_type must exist. If a select is defined it should obey that condition.

```
{
  "vzBrCP":
  {
    "attributes":
    {
      "STATUS": " MUST_EXIST",
      "SELECT(name)": " REGEX(Ctrct_[1-3])",
      "MATCH(scope)": " EXACT(context)"
    }
  }
}
```

```

},
"children":
[
{
"vzSubj":
{
"attributes":
{
"SELECT(name)": " REGEX(.*)",
"nameAlias": " ABC"
},
"children":
[
{
"vzRsSubjFiltAtt":
{
"attributes":
{
"SELECT(tnVzFilterName)": " ENDS_WITH(3_1_1)",
"MATCH(action)": " deny"
}
}
}
]
}
}
]
}
}
}

```

- o Does BD has a IPv4 subnet and an L3Out associated with it for specific tenants? This can be evaluated in the below template.

```

{
"fvTenant":
{
"attributes":
{
"SELECT(dn)": " OR(uni/tn-mgmt,uni/tn-tcam_comp_aepg_aepg,uni/tn-
Corp102)"
},
"children":
[
{
"fvBD":

```

```

{
  "attributes":
  {
    "SELECT(name)": "REGEX(.*)"
  },
  "children":
  [
    {
      "fvSubnet":
      {
        "attributes":
        {
          "SELECT(ip)": "REGEX(^[A-Fa-f0-9]{1,4}\\\:*)",
          "ctrl": "nd",
          "ipDPLearning": "enabled",
          "scope": "public"
        }
      }
    },
    {
      "fvRsBDToOut":
      {
        "attributes":
        {
          "STATUS": "MUST_EXIST",
          "MATCH(tnL3extOutName)": "REGEX(L3Out_W02_[A-Za-z0-9])"
        }
      }
    },
    {
      "fvRsCtx":
      {
        "attributes":
        {
          "MATCH(tnFvCtxName)": "REGEX(VRF_W02_[A-Za-z]*)",
          "STATUS": "MUST_NOT_EXIST"
        }
      }
    },
    {
      "fvRsBDToNdP":
      {
        "attributes":
        {
          "STATUS": "MUST_EXIST"
        }
      }
    }
  ]
}

```

```

    }
  }
}
]
}
}
]
}
}
}

```

- o EPG must not has a VMM Domain Configured. This can be evaluated in the below template.

```

{
  "fvTenant": {
    {
      "attributes": {
        {
          "SELECT(dn)": "STARTS_WITH(uni/tn-NAE_contract)"
        },
        "children": [
          {
            "fvAp": {
              {
                "attributes": {
                  {
                    "SELECT(name)": "REGEX(.*)"
                  },
                  "children": [
                    {
                      "fvAEPg": {
                        {
                          "attributes": {
                            {
                              "floodOnEncap": "disabled",
                              "hasMcastSource": "no",
                              "MATCH(name)": "REGEX(^EPG_W02_[A-Za-z0-9_-]*)",
                              "pcEnfPref": "unenforced",
                              "prefGrMemb": "include",
                              "MATCH(prio)": "REGEX(^level[0-9])",
                              "shutdown": "no"
                            },
                          },
                        "children":

```

```

[
  {
    "fvRsDomAtt":
    {
      "attributes":
      {
        "instrlmedcy": " lazy",
        "reslmedcy": " pre-provision",
        "STATUS": " MUST_NOT_EXIST"
      },
      "children":
      [
        {
          "fvAEPgLagPolAtt":
          {
            "attributes":
            {
              "annotation": " "
            },
            "children":
            [
              {
                "fvRsVmmVSwitchEnhancedLagPol":
                {
                  "attributes":
                  {
                    "MATCH(tDn)":
"ENDS_WITH(LACP_SDN)"
                  }
                }
              }
            ]
          }
        }
      ]
    }
  }
]

```



```
}
```

- Invalid Example of template-based compliance
 - In the following *invalid* example, if there is a BD named **ABCXYZ**, it will be selected by both the child object templates snippets for **fvBD**. This is a violation because you cannot allow two SELECT criteria to coexist for the same object time because as can lead to two different ways of selection and validation of objects. So **type** can either be **regular** or **fc**.

```
{
  "fvTenant":
  {
    "attributes":
    {
      "SELECT(name)": "EXACT(tenantABC)"
    },
    "children":
    [
      {
        "fvBD":
        {
          "attributes":
          {
            "MATCH(type)": "EXACT(regular)",
            "SELECT(name)": "REGEX(.ABC.)"
          }
        }
      },
      {
        "fvBD":
        {
          "attributes":
          {
            "MATCH(type)": "EXACT(fc)",
            "SELECT(name)": "REGEX(.XYZ.)"
          }
        }
      }
    ]
  }
}
```

Compliance rules

Compliance rules are created to generate anomalies where compliance can be violated or satisfied.

Once you create compliance rules, you can generate the Compliance Report to check how much the fabrics and networks align to the rules.

Click **Manage > Anomaly and Compliance Rules > Compliance Rules**. This is where all the created rules are listed. The Compliance Rules page allows you to view all the rules created in one place.

You can perform the following actions on this page:

- Edit or Delete a rule with the "..." button
- Select multiple rules by clicking the checkbox and delete/edit them collectively
- Create a new rule from the **Create Compliance Rule** button.
- Filter the rules using search by the following attributes:
 - Name
 - Description
 - Rule Type
 - State
 - Last Modified Time
- Click on any rule to view the slide-in that brings up the rule summary. It displays the following information:
 - General - Rule description, Fabric, and State
 - Settings - Rule type, objects used to create the rule, and the configuration compliance rules used.
- **Actions** allows you to edit, delete and disable the rule.

Interpretation of compliance rules

The following table lists some examples of compliance rules and what condition they create.

Compliance Rule	Condition Created
Contains EPGs in tenants with names that start with "a" or ending with "z"	EPGs in tenants such as "abz" that satisfy both criteria are included only once.
Contains EPGs in tenants with names that start with "a" and are also in VRF instances where the tenant is "xyz" and the VRF instance name contains "c"	When an EPG under tenant "abc" that is in a VRF instance with DN uni/tn-xyz/ctx-abcde is selected, verify that both the tenant and the VRF instance criteria match. An EPG under tenant "abc" that is in a VRF instance with DN uni/tn-xyz1/ctx-abcde is not selected because the VRF instance tenant does not match.
Contains all EPGs under tenants that begin with "a" except those that contain "d"	An EPG under tenant "abc" is selected. An EPG under tenant "abcd" is not selected.
Contains all EPGs under tenants that begin with "a" except those EPGs that are also in the VRF instance with DN uni/tn-rrr/ctx-sss	An EPG under tenant "abc" that is in a VRF instance with DN uni/tn-rrr/ctx-sss is selected because the VRF instance tenant matches.

Compliance analysis

A banner will be displayed if any rule has been modified or a new rule has been added. You can re run the analysis for updated data. A 'modified' or 'new' tag will appear under any rule that has been recently modified or added.

The **Actions** button allows you to re run the analysis.

The **Summary** displays the number of violations, the top rules by anomaly count, the anomalies from violations and the violations by rule type. You can click on any of the rules in 'Top rules by Violation' to view more details and click the count under 'Number of anomalies from violations' to view the list of anomalies.

The **Anomalies from Violations** lists all the anomalies that were triggered by the rules created. Click any rule in the 'Grouped' view to see the list of anomalies categorized under that group. If you click any rule in the 'Ungrouped' view, you will be redirected to the compliance rule detail page. This can be listed in a group view for all fabrics or individual view for a specific fabric. The table lists the severity level of the anomaly, the type of rule that triggered the anomaly, the detection time, and the status.

When you click any rule, it takes you to a slide-in that gives you a summary of your rule (**What's wrong, What triggered this anomaly, What's the impact?, How do I fix it?**).

Use search to filter by attributes like App Profile Name, BD Name, Category, Compliance Object Name, Compliance Object Type, Contract Name, EPG Name, Filter Name, L2 Out Name, L3 Out Name, Level, Rule Name, Subject Name, Tenant Name, and VRF Name. The gear icon is used to customize the columns in the table.

The **Compliance Rules** table shows a summary of the rules enforced and violated along with the number for each rule type. The table lists all the rules used to generate the current report. The table specifies whether it's a configuration rule or a communication rule and the number of anomalies from violations for each rule.

Use search to filter by attributes like Name, Rule Type, Enforcement Status, and Verified. The **Create Compliance Rule** button takes you to the rule creation page.

Compliance anomalies

In the UI, you specify your compliance rules and Nexus Dashboard will verify in the subsequent snapshots, whether the compliance rules are satisfied by the policy that is configured on Cisco APIC.

The number of anomalies raised is defined by the number of rules associated with a snapshot. For example, if an assurance group runs a compliance analysis on a snapshot every 15 minutes, and there are two rules associated with the snapshot, two anomalies will be raised.

Guidelines and limitations for compliance

Guidelines for compliance

- A single compliance rule can be associated with multiple fabrics.
- You can have a maximum of 30 active Communication Compliance rules and 600 active Configuration Compliance rules per fabric. If you exceed this limit, you cannot add more requirements in the **Manage Compliance** area.
- When a compliance job is in progress for one or more fabrics, it is recommended that you do not start a bug scan for those fabrics.
- Fabric list can be modified at any point in time.
- Name of the rule is unique across fabrics.
- Compliance is supported in the following Cisco APIC releases:
 - 3.2(x) release
 - 4.0(x) release
 - 4.1(x) release
 - 4.2(x) release
 - 5.0(x) release
 - 5.1(x) release
 - 5.2(x) release
 - 5.3(x) release
 - 6.0(x) release

Guidelines for creating a compliance rule

- When you create a compliance rule, you can add a custom description, which appears in the compliance violation anomaly.
- Compliance Rules are created at the fabric level.
- A compliance rule can either be offline or online.

Guidelines for import configuration compliance

- You can check the box to allow addition of new configuration objects. This will raise a violation for every new object which is missing in the uploaded configuration file.

Guidelines for compliance rule naming

- Name should be a minimum of three characters
- Name should not include special characters
- Name should be unique.
- No two rules can have the same name.

Verified scalability guidelines for template-based compliance

- Number of Template rules are 5 for APIC with total configurable objects of 150,000.

- Each template selects 15,000 objects on an average.
- Number of tenants per template is 30 tenants, with each tenant selecting 500 objects on an average.
- You may create more than 5 templates (the upper limit is 30 total rules), if the total objects selected by all the templates are less than 5*15,000 and the total configurations in APIC are < 150,000 objects.
- You can have a maximum of 30 active Communication Compliance rules and 600 active Configuration Compliance rules per fabric.

Guidelines for template-based compliance

- The template follows the same structure as used in APIC files. It has objects, attributes, and children.
- The template file size that you upload can be up to 15 MB including white spaces. Pretty JSON files will have white spaces to support indentation. To reduce the file size, you can remove white spaces and upload the file.
- In a template, defining **attributes** is mandatory because the Compliance is applied on the attribute.
- In a template, defining **children** is optional. If children are defined in the query, the selection is applied to the real children of the selected objects.
- In a template, you can include the same object type only once per child array. This prevents the possibility of creating requirements that will result in conflicting compliance rules that result in violation anomalies.
- A JSON file is currently supported. XML file is not supported.
- The template file size that you upload can be up to 15 MB. The view feature will not be available if the file size is greater than 5 MB. If the file size is greater than 5 MB, you can download the file and view the contents.

Limitations for compliance analysis

- No telemetry is available for offline analysis.
- The compliance report is generated once every two hours.

Create compliance communication rule

1. Provide the name and description for your rule.
2. Select the fabrics you would like to apply the rule to.

You can pick one, or many, or all fabrics.

3. Choose to enable or disable the rule, then click **Next**.
4. In the **Compliance Rule Type** field, choose **Communication**.
5. Under **Criteria**, for the **Communication Type** field, choose the appropriate communication type. The options are **Must Talk To**, **Must Not Talk To**, **May Talk To**. The communication types are applied between two different object groups.

6. In the **Object Type** fields and the **Traffic Selector** area, choose the appropriate objects and traffic selector.
7. Select the appropriate criteria for both groups. Select any object type and the corresponding matching criteria object. See [Matching criteria](#) for the available object types and to understand how the various matching criteria objects can be defined.
8. After you define the criteria in the **Add Criteria** area, click the **View Selected Objects** link, and verify that the selected objects are appropriate. Based upon your selections of communication type and traffic selector rules, the compliance rule type that you defined will be displayed. See [Communication compliance](#) for more information about the communication types and the traffic selectors.
9. After you complete defining the objects, criteria, traffic restrictions as appropriate for your fabric/s, you can view the entire overview of the rule create and click **Save Rule** to complete the configuration.
10. When the rule is saved, you see the post success screen. You can choose to **View compliance rules**, **View Compliance**, or **Create another Compliance rule** from this page.



You can view/edit Direction based traffic settings from the **Direction settings** column.

Create compliance rule with snapshot selection

1. Under **Compliance Rule Type**, choose **Configuration**.
2. In the **Base Configuration Settings** field, choose **Snapshot Settings**.
3. In the **Time of Snapshot** field, choose the desired snapshot time, and click **Apply**.



When using offline datasets to save compliance rules, ensure the offline fabrics are configured with Premier. Offline datasets configured with Essentials result in an incorrect UUID value in the payload, preventing the rules from being saved. This issue is observed in Nexus Dashboard 4.1.1 and NDI 6.7.0 releases.

4. In **New Rule**, click **Save**. Nexus Dashboard starts performing a check.
5. To download the snapshot, click the **Download** link from **Settings**.

Import configuration compliance

1. Under **Compliance Rule Type**, choose **Configuration**.
2. In the **Base Configuration Settings** field, choose **Import Configuration**. You cannot edit the configuration rules when you upload a JSON/XML file. In such a case, after uploading a file, you can view or download it by navigating from **Actions**.
3. Drag and drop your file into the provided field to upload. Click **Save**.

Create compliance rule with manual configuration

1. Provide the name and description for your rule. You can choose to Enable or Disable state.
2. Select the fabrics you would like to apply the rule to. You can pick one, or many, or all fabrics.

3. In the **Compliance Rule Type** field, choose **Configuration**.
4. In the **Base Configuration Settings** field, choose **Manual Configuration**.
5. Under Object Selection, select the **Object Type** and add the criteria as appropriate. You can also view the selected objects with the 'View Selected Objects' button. Select any object type and the corresponding matching criteria object. See [Matching criteria](#) for the available object types and to understand how the various matching criteria objects can be defined. See [Manual configuration compliance](#) for information about the attribute requirements.
6. Add the rules for the matching criteria selected above here. Click 'Add Rule' and select the Attribute, Operator and Value for the rule.



The name and name alias attribute requirement has an additional option to select Matches Regular Expression.

7. You can view the entire overview of the rule you want to create and click **Save Rule**. Nexus Dashboard to start performing a check based on the Naming compliance requirements that you specified.
8. When the rule is saved, you see the post success screen. You can choose to **View compliance rules**, **View Compliance**, or **Create another Compliance rule** from this page.



For BDs in context to VRFs, an extra requirement is needed. The EPG association requirement is to be added which requires an EPG association count. This can be **equal to/at least/at most**. However you can choose to add either the EPG Association Requirement or the Name and Attribute Requirement for BD. You cannot have all the attributes selected. See [Manual configuration compliance](#).

Create template-based compliance

1. In the **Base Configuration Settings** field, choose **Template Based Compliance**.
2. In the **Choose a file or drag and drop to upload** area, upload your template based file.
3. After the file upload is complete, you can click the View icon to review the contents of the file that you uploaded.
4. Click **Save**.

For more information about template syntax, see [Templates to configure object selectors](#). For information on how to configure object selectors for the template, see [Templates to configure object selectors](#).

Trigger a compliance analysis

The Compliance Analysis will internally trigger assurance analysis and generate compliance anomalies.

1. Navigate to **Analyze > Analysis Hub > Compliance**.
2. Select a fabric from the dropdown menu.
3. Select the date for which you would like to see the report.

Templates to configure object selectors

When you create a configuration rule using manual configuration, only a few specific object selectors are supported (such as BD, EPG, VRF). By using a template, you can select any object and apply match criteria on its attributes.

An object can be any managed object from Cisco APIC, and its selection is based on the distinguished name of the object. If you prefer to have a different attribute as the selection criteria, you can use any valid attribute of that object. You can configure object selectors for selection and match criteria and based on tags and annotations.

Selection, status, and match criteria

For naming compliance, the compliance rules are on the name and nameAlias fields that are indicated by **MATCH**.

- **STATUS** defines the state of the specific object in the template, whether an object exists or does not exist. The **STATUS** criteria can be defined using one of the following keywords.

- MUST_EXIST
- MUST_NOT_EXIST

The following is a syntax example:

```
{
  "vzBrCP" :
  {
    "attributes" :
    {
      "STATUS" : "<status selected>",
      "SELECT(name)" : "<KEY_WORD>(<value>)",
      "MATCH(nameAlias/name)" : "<KEY_WORD>(<value>)"
    }
  }
}
```

- The **SELECT** and **MATCH** criteria can be defined using one of the following keywords. The **MATCH** criteria is used to define the Compliance rule. **SELECT** allows to define a criteria to select group of objects and **MATCH** allows to define attributes and values that those selected objects must have. These compliance rules will be applied on objects that are selected using the **SELECT** criteria.

- STARTS_WITH
- ENDS_WITH
- EXACT
- OR
- REGEX

Syntax for **SELECT**:

SELECT(<attribute_name>): KEY_WORD(<value>)

Syntax for **MATCH**:

MATCH(<attribute_name>): KEY_WORD(<value>)



Attribute_name can be any attribute of the object. REGEX(<value>) - where the value must follow the standard regex expression syntax "SELECT(name)": "REGEX(Ctrct_[1-3])". For more details about keyword regular expressions, see [Summary of Regular-Expressions Constructs](#).

The following is a syntax example:

```
{
  "<object>":
  {
    "attributes":
    {
      "SELECT(dn)": "<KEY_WORD>(<value>)",
      "MATCH(nameAlias/name)": "<KEY_WORD>(<value>)"
    }
  }
}
```

If **SELECT** is not specified for an attribute, then **rn** and **dn** will be considered as **SELECT** by default.

The following is a syntax example where if the KEY_WORD is not defined, the default behavior is **EXACT**. When you use MATCH(dn) and MATCH(rn), they are defined as match criteria.



If an attribute (other than **dn** and **rn**) does not have **MATCH** or **SELECT** specified, it will be considered as **MATCH** by default.

```
{
  "fvAEPg":
  {
    "attributes":
    {
      "SELECT(dn)": "uni/tn-aepg_vzanycons_imd_ctx_pass_7/ap-CTX1_AP1/epg-CTX1_BD1_AP1_EPG7",
      "MATCH(isAttrBasedEPg)": "EXACT(no)",
      "prio": "OR(unspecified, prio1)"
    }
  }
}
```

In the above example, by default, "prio" will be a **MATCH**.

Example template to configure a Naming Compliance to match selected objects to **name** or **nameAlias**:

```
{
  "vzSubj":
  {
    "attributes":
    {
      "SELECT(dn)":" EXACT(subj1)",
      "MATCH(nameAlias)":" STARTS_WITH(ABC)"
    }
  }
}
```

As the attribute **dn** is always considered as **SELECT** by default and any other attribute is always considered as **MATCH**, the above template can be simplified as displayed in the example below. Additionally, if the keyword is not defined, the default behavior is **EXACT**.

```
{
  "vzSubj":
  {
    "attributes":
    {
      "dn":" subj1" "nameAlias":" STARTS_WITH(ABC)"
    }
  }
}
```



In the above template, you can use any object instead of "vzSubj", and you can use any attribute instead of "dn".

▪ Template Syntax for {}

The following is a syntax example of a generic template where the **KEY_WORD** is {}. You can use this template to customize your requirements, select attributes, regular expressions.

The **KEY_WORD** values can be as follows:

- STARTS_WITH
- ENDS_WITH
- EXACT
- OR
- REGEX

```

{
  "<MO type>":
  {
    "attributes":
    {
      "SELECT(<attribute>)": " KEY_WORD(<expression>)",
      "MATCH(<attribute>)": " KEY_WORD (<value>)"
    },
    "children":
    [
      {
        "<MO type>":
        {
          "attributes":
          {
            "SELECT(<attribute>)": " KEY_WORD (<value>)",
            "MATCH(<attribute>)": " KEY_WORD (<value>)"

          },
          "children":
          [
            {
              "<MO type>":
              {
                "attributes":
                {
                  "SELECT((<attribute>)": " KEY_WORD (<value>)",
                  "MATCH(<attribute>)": " KEY_WORD (<value>,<value>)"

                }
              }
            }
          ]
        }
      }
    ]
  }
}

```

- Template With Attribute Value **NULL** or **EMPTY**

The following are examples of templates where the attribute value is null or empty.

```
"REGEX(^.{0}$)"
```

```
"EXACT()"
"OR(test, )" ← use space
```

```
{
  "fvTenant":
  {
    "attributes":
    {
      "MATCH(annotation)": "OR(orchestrator:msc, )",
      "SELECT(name)": "REGEX(aepg_aepg_imd_tnt_pass_[0-9]+)",
    }
  }
}
```

For the procedure to configure Object Selectors for Naming Compliance using the above template, see [Create template-based compliance](#).

Tags and annotations

As an APIC user, you can create tags on managed objects (MOs) that result in creating child objects of type **tagInst** or **tagAnnotation** (based on which APIC version is in use).

Therefore, if you select objects based on a tag created in APIC, you can follow the templates provided in this section to configure object selectors on tags and annotations.

*Example that displays the child object as type **tagInst**:*

```
{
  "<object>":
  {
    "attributes":
    {
      "MATCH(<attribute_name>)" : "<KEY_WORD(<value>)"
    },
    "children":
    [
      {
        "<tagInst>":
        {
          "attributes":
          {
            "SELECT(<attribute_name>)" : "<KEY_WORD(<value>)"
          }
        }
      }
    ]
  }
}
```

```

    ]
  }
}

```

Example that displays the child object as type **tagAnnotation**:

```

{
  "<object>":
  {
    "attributes":
    {
      "MATCH(<attribute_name>)" : "<KEY_WORD(<value>)"
    },
    "children":
    [
      {
        "<tagAnnotation>":
        {
          "attributes":
          {
            "SELECT(<key or value>)" : "<KEY_WORD(<value>)"
          }
        }
      }
    ]
  }
}

```

An object can be any valid APIC object with **tagAnnotation** or **tagInst** as a child. Object selection is defined in the **tagInst** or **tagAnnotation** object using **SELECT** on the name in the case of **tagInst**, and **key or value** in the case of **tagAnnotation**.

The selection criteria can be any of the following keywords:

- STARTS_WITH
- ENDS_WITH
- EXACT
- OR
- REGEX

Compliance rules are defined at the parent object level using **MATCH** and the criteria can be defined using any **KEY_WORD**. **tagInst** or **tagAnnotation** do not participate in compliance rules as they only provide the selection criteria.

Example template where you **SELECT** all the fVBDs where the tag is “BDs_in_cisco”, and those BDs

must have name as **BD** or **app1BD**.

```
{
  "fvBD":
  {
    "attributes":
    {
      "MATCH(name)":"OR(BD, app1BD)"
    },
    "children":
    [
      {
        "tagInst":
        {
          "attributes":
          {
            "SELECT(name)":"EXACT(BDs_in_cisco)"
          }
        }
      }
    ]
  }
}
```

For the procedure to configure object selectors based on Tags and Annotations using a template, see [Create template-based compliance](#).



When using the steps to [Create template-based compliance](#), to configure object selectors for tags and annotations, you must perform an additional step. Before you click **Save**, in **Create New Rule**, you must check the checkbox for the field **Enable Object Selection Based on tagAnnotation/tagInst**. Therefore, if any object has a tag annotation or tagInst, the parent based on the selection criteria in these two objects will be selected.

Communication compliance

Communication types

- **Must Talk To:** This allows you to configure objects where *selector A **must talk to** objects selected by selector B* under defined traffic restriction rules.
- **Must Not Talk To:** Choose this configuration if your intention is that an object selected by object *selector A **must not talk to** objects selected by object selector B* using a defined type of traffic. The traffic restriction rule is optional in this configuration.

Two different types of communication compliances can be configured using this option:

- o Traffic Restriction compliance: You can specify a traffic selector rule that objects selected by *selector A* **must not talk to** objects selected by *selector B*, using a selected type of traffic that uses traffic restriction rules. This communication is restricted.
- o Segmentation compliance: By not defining a traffic selector rule, you can configure segmentation compliance where objects in *selector A* **cannot talk to** objects in *selector B* using any type of traffic. In this case, no traffic restriction rules are defined by you.
- **May Talk To:** This allows you to create a traffic restriction compliance. Objects selected by *selector A* **may talk to** objects selected by *selector B* using only a specific type of traffic using traffic restriction rules.

As a Nexus Dashboard Insights user, to verify that EPG A can talk to EPG B using the traffic type TCP IP, configure the traffic restriction rule EPG A **May Talk To** EPG B using TCP IP.

Communication type and traffic selector rules selections with the resultant compliance rule type

Communication Type	Select a Traffic Selector Rule?	Objects You Can Select	Compliance Requirement Type
Must Talk To	Mandatory to select	EPG	Service Level Agreement (SLA)
Must Not Talk To	Not mandatory to select	<ul style="list-style-type: none"> • EPG • Tenant 	<ul style="list-style-type: none"> • If you select a Traffic Selector Rule, the Compliance Rule is Traffic Restriction • If you do not select a Traffic Selector Rule, the Compliance Rule is Segmentation
May Talk To	Mandatory to select	EPG	Traffic Restriction

Traffic selector rules available

Ether Type	Protocol Type
ARP	-
FCOE	-

Ether Type	Protocol Type
IP	<ul style="list-style-type: none"> ▪ All ▪ EGP ▪ EIGRP ▪ ICMP ▪ ICMPV6 ▪ IGMP ▪ IGP ▪ L2TP ▪ OJPFIGP ▪ PIM ▪ TCP ▪ UDP
MAC_SECURITY	-
MPLS_UNICAST	-
TRILL	-

Manual configuration compliance

Attribute requirement that can be set according to the objects selected

Object	Associated Attributes
EPG	<p>The associated attributes are:</p> <ul style="list-style-type: none"> ▪ Preferred Group Member- The preferred group member can be equal to or not equal to either <i>Include</i> or <i>Exclude</i>. ▪ Infra EPG Isolation- The Infra EPG Isolation can be equal to or not equal to Unenforced/Enforced. ▪ QoS Class- The QoS Class can be equal to or not equal to Unspecified/Level 1/Level 2/Level 3.

Object	Associated Attributes
VRF	<p>The associated attributes are:</p> <ul style="list-style-type: none"> ▪ Enforcement Preference - The enforcement preference can be set to equal to or not equal to Unenforced/Enforced. ▪ Enforcement Direction - The enforcement direction can be set to equal to or not equal to Ingress/Egress. ▪ Preferred Group - The preferred group can be set to equal to or not equal to Disabled/Enabled. ▪ BD Enforcement - The BD enforcement can be set to equal to or not equal to Yes/No.
Bridge Domain (BD)	<p>The attributes are:</p> <ul style="list-style-type: none"> ▪ BD Type - The BD type can be equal to or not equal to regular/FC. The default value is set as equal to regular. ▪ L2 Unknown Unicast - This can be equal to or not equal to Flood/Hardware Proxy. ▪ L3 Unknown Multicast Flooding - This can be equal to or not equal to Flood/ Optimized Flood. ▪ BD Multi Destination Flooding - This can be equal to or not equal to Flood in Encapsulation/Drop/Flood in BD. ▪ PIM - This can be equal to or not equal to Enabled/Disabled. ▪ ARP Flooding - This can be set to equal to or not equal to Yes/No. ▪ Limit IP Learning to Subnet - This can be set to equal to or not equal to Yes/No. ▪ Unicast Routing - This can be set to equal to or not equal to Yes/No. ▪ Subnets - This can be set to All/ None/ At least one to Shared/ Private/ Public.

BD to EPG relationship configuration

With this feature, you can specify a BD selector to have a fixed number of EPGs. By configuring a BD compliance rule, you can set the maximum number of EPGs with which a BD can be associated.

As a result of this compliance rule, when the requirement set is not satisfied, a violation anomaly will be raised. If the requirement is satisfied, it will raise an enforcement anomaly. Only when the BD selector is not resolved, a warning anomaly will be generated.

The user can configure a requirement to verify that a specified number of EPGs are being associated with a BD. The supported operators for this requirement are **At least /At most /Equal to**. As an example, if a requirement is configured that the BD must have at least 5 EPGs associated, violation anomalies will be raised if the BD has less than 5 EPGs (0-4). However, if the BD has ≥ 5 anomalies, then an enforcement anomaly will be raised.

Matching criteria

Objects available as matching criteria for a selected object type

Object Type	Matching Criteria Object
EPG	<ul style="list-style-type: none">▪ Tenant▪ VRF▪ BD▪ EPG▪ App profile▪ L3 Out▪ L3 InstP▪ L2 Out▪ L2 InstP
Tenant	<ul style="list-style-type: none">▪ Tenant
BD	<ul style="list-style-type: none">▪ Tenant▪ VRF▪ BD
VRF	<ul style="list-style-type: none">▪ Tenant▪ VRF
Contract	<ul style="list-style-type: none">▪ Tenant▪ Contract
Subject	<ul style="list-style-type: none">▪ Tenant▪ Subject
Filter	<ul style="list-style-type: none">▪ Tenant▪ Subject▪ Filter

Define matching criteria objects

Matching Criteria Object Type 1	How to define
Tenant	tn - operator <i>value</i> Object type 2 (Could be either VRF or BD) a. If you select VRF, the rule is further defined as tn - operator <i>value</i> ctx - operator <i>value</i> a. If you select BD, the rule is further defined as tn - operator <i>value</i> bd - operator <i>value</i>
VRF	tn - operator <i>value</i> ctx - operator <i>value</i>
BD	tn - operator <i>value</i> bd - operator <i>value</i>
EPG	tn - operator <i>value</i> ap - operator <i>value</i> epg - operator <i>value</i>
App Profile	tn - operator <i>value</i> ap - operator <i>value</i>
L3 Out	tn - operator <i>value</i> out - operator <i>value</i>
L3 InstP	tn - operator <i>value</i> out - operator <i>value</i> instp - operator <i>value</i>
L2 Out	tn - operator <i>value</i> l2out - operator <i>value</i>
L2 InstP	tn - operator <i>value</i> l2out - operator <i>value</i> instp - operator <i>value</i>
Contract	tn - operator <i>value</i> brc - operator <i>value</i>
Subject	tn - operator <i>value</i> brc - operator <i>value</i> subj - operator <i>value</i>
Filter	tn - operator <i>value</i> flt - operator <i>value</i>



operator and *value* can be set to anything.

Operators for custom definitions

Operator	Description
Must Equal to	This operator returns an exact match of the specified value.
Must Not Equal to	This operator returns all that do not have the same value.
Must Contain	This operator returns all that contain the specified value.
Must not contain	This operator returns all that do not contain the specified value.

Operator	Description
Must begin with	This operator returns all that begin with the specified value.
Must end with	This operator returns all that end with the specified value.
Must not begin with	This operator returns all that do not begin with the specified value.
Must not end with	This operator returns all that do not end with the specified value.

Understanding the hardware and software lifecycles for your network using Conformance

Conformance reports enable you to visualize and understand the lifecycle of your hardware and software in the network. This assists you in planning upgrades and hardware refresh. Conformance Report is generated everyday for each fabric for hardware and software conformance and weekly for each fabric for scale conformance. In the report you can view the conformance status of software, hardware, combination of both software and hardware, and scale conformance status for fabrics.

You can use Conformance Report to view current and project the future status of software and hardware inventory in your network against known EoS and EoL notices to ensure conformance. You can also monitor scale conformance status for onboarded fabrics.

Using Conformance Report you can,

- Minimize risk of running End-of-Sale (EoS) or End-of-Life (EoL) switches.
- View current status of software and hardware inventory in your network against known EoS and EoL notices to ensure conformance.
- Project the future outlook of software and hardware inventory in your network.
- Monitor scale conformance status for onboarded fabrics.

Conformance Report displays the summary of conformance status for software, hardware, and scale for selected fabrics.

In the Conformance report, for hardware and software conformance switches are classified into 3 severities based on the software release or hardware platform EoL dates and end of PSIRT dates. The severities include:

- Critical: End of PSIRT date or Last Date of Support occurs in the past.
- Warning: EoL date for software release or EoS for hardware release occurs in the past.
- Healthy: End of PSIRT date, or Last Date of Support and EoL date or software release or EoS for hardware release occurs in the future, or EoL for software release or EoS for hardware release is not announced.

The End of SW Maintenance Releases Date in the End-of-Sale and End-of-Life Announcement and the end of PSIRT date is used as reference milestone to classify the inventory into a category of Critical, Warning, or Healthy.

In the Conformance report, the scale conformance status for fabrics is based on Cisco's Verified Scalability Guidelines for the software version running in switches and controllers when applicable. The severities include:

- Conformant: All metric values are under 90%.

- Approaching limits: One or more metric values are between 90% and 100%.
- Violated Limits: One or more metric values are over 100%.

Access conformance report

Navigate to **Analyze > Analysis Hub > Conformance**.

Choose a fabric from the drop-down list.

OR

Navigate to **Manage > Fabrics**.

Choose a fabric.

In the General section, click **Conformance**.

Click **View Report**.

View conformance report



You can save conformance report as a PDF with the browser print option (Only supported on Chrome and Firefox).

1. Navigate to a Conformance Report. See [Access conformance report](#).
2. Choose a fabric or **All Fabrics** from the drop-down menu.
3. Choose a current month or a previous month from the drop-down menu. You can choose a previous month only if previous month reports are available.

Conformance Report displays the conformance summary, hardware and software conformance, and scale conformance.

4. The Summary page displays devices by hardware conformance status, devices by software conformance status and scale conformance status for fabrics or switches. Click **View Conformance Criteria** to learn more.
5. The Hardware or Software page displays conformance status, conformance outlook, and device details.
 - a. In the Conformance Outlook section, click **Overall**, or **Software**, or **Hardware** to view the conformance for software and hardware, software only or hardware only.
 - b. The Device Details lists details for hardware and software.
 - c. The details for hardware include device name, fabric name, hardware conformance status, model, role, hardware end of vulnerability support for a particular device. Click the device name to view additional details.
 - d. The details for software include device name, fabric name, software conformance status, model, software version, role, software end of vulnerability support for a particular device. Click the device name to view additional details.
 - e. Use search to filter by attributes such as device, fabric, hardware conformance status,

software conformance status, model, software version, and role.

f. Use the gear icon to customize the columns in the table.

6. The Scale page displays all fabrics summary, scale conformance, and scale metrics.

a. The All fabrics Summary section displays overall scale conformance level, top 5 switches by scalability metric violations, scalability metrics for controller and switches, and total scalability metrics violations.

b. Click **View Conformance Criteria** to learn more.

c. The Scale Conformance section displays the scale conformance for controller and switch in the last 6 months if the scale reports for previous months are available.

d. The All Scale Metrics section displays the scale metrics details for fabrics and switches. The All Scale Metrics section displays if you choose **All Fabrics** from the drop-down menu.

i. The details for fabrics include fabric name, type, software version, controller metrics conformance, switch metrics conformance. Click the fabric name to view additional details.

ii. The details for switches include switch name, fabric name, software version, model, forward scale profile, metrics conformance. Click the switch name to view additional details.

iii. Use search to filter by attributes such as fabric, type, software version.

iv. Use the gear icon to customize the columns in the table.

e. The Fabric Level Scale Metrics and Switch Level Scale Metrics displays the scale metrics details for a fabric and switches associated with the fabric. These sections are displayed, if you choose one fabric from the drop-down menu.

i. The details for a fabric include metric, conformance status, and resource usage,

ii. The details for switches include switch name, fabric name, software version, model, forward scale profile, metrics conformance. Click the switch name to view additional details.

7. From the Actions menu, click **Run Report** to run an on-demand report.

Analyzing endpoint flows using Connectivity Analysis

Connectivity Analysis allows you to analyze flows between two different endpoints, provide insight into how your endpoints are connected, and helps you spot where problems might be occurring. Starting with this release, connectivity analysis now includes multi-fabric capabilities.

Connectivity Analysis detects and isolates offending nodes in the network for a given flow and includes the following functionalities:

- Traces all possible forwarding paths for a given flow across source to destination endpoints.
- Identifies the offending device with issue, resulting in the flow drop.
- Helps in troubleshooting by narrowing down the root cause of the issue, including running forwarding path checks, software and hardware state programming inconsistencies through consistency-checks, and further details related to packets walkthrough.

Connectivity Analysis options

- Embedded Logic Analyzer Module (ELAM)--ELAM is a diagnostic tool that helps troubleshoot ethernet traffic flows. It captures the packet from an active flow and analyzes the ethernet frames for packet drops. ELAM requires an active flow between the source and destination hosts. You can enable this option to analyze an available active flow.
- Operations, Administration, and Maintenance (OAM)--For standalone NX-OS fabrics, OAM is a protocol for monitoring and troubleshooting ethernet networks. You can enable this option to locate potential drops for active hosts or to track details such as reachability and probable route of the flow in a VXLAN EVPN-based fabric topology, without the need of active traffic between the hosts. OAM is supported only on VXLAN fabrics.



The OAM option is not available for NX-OS multi-fabric environments.

- Consistency Checker--For standalone NX-OS fabrics, Consistency Checker ensures system consistency and aids in root cause analysis and fault isolation by verifying the alignment between software and hardware tables. These checks are performed within each switch between data plane and control plane for all the networking entities related to the chosen endpoint conversation. You can enable this option to detect control plane and data plane configuration and operational inconsistencies along the flow between specified endpoints or routes.

The checks performed by Connectivity Analysis include:

- Topology checks such as overall health, connectivity of leaf switches, spine switches, or remote leaf switches
- VRF instance and bridge domain mappings for endpoints
- Interfaces connectivity such as PC, vPC, SVI, Breakouts, and Sublfs
- Routing tables, EPM, and EPMC tables
- L3Out information and mapping
- Adjacency (ARP) tables

- Tunnel information
- Synthetic routes (COOP) tables on spine switches

Layer 2 ToR support

For standalone NX-OS fabrics, with Layer 2 ToR support, Connectivity Analysis offers the following capabilities:

- Incorporate the device into the topology of a connectivity analysis job.
- Provide detailed node-level flow information, including ingress interfaces and egress paths.
- Initiate ELAM (Embedded Logic Analyzer Module) and capture packet details on ToR switches.
- Conduct consistency-check validations on ToR switches.

Supported topologies

- ToR switch with port channel directly connected to a leaf switch.
- ToR switch connected to leaf switches in a vPC pair.
- ToR switches with port channels connected to leaf switches individually. The leaf switches are in a vPC pair.
- ToR switches in vPC with leaf switches along with ToR switches connected to hosts in a vPC pair.

Guidelines and limitations for all fabrics

- You can submit up to 10 jobs.
- At any point of time, you can run only 1 connectivity analysis job per fabric. You can stop a job in the queue and run another job.
- You can run Connectivity Analysis only on online fabrics.
- ELAM captures the VXLAN outer packet in multi-site fabrics for both ACI and NX-OS.
- Egress paths from transit fabrics to border gateway groups may not all appear green. This happens because ELAM can only capture a single packet at a time, showing just one active path. However, if ELAM is triggered at the border, an active path exists even if some paths from transit fabric to border switches appear grey.
- Troubleshooting multi-fabric flows between ACI and standalone NX-OS fabrics is not supported.

Guidelines and limitations for Cisco ACI fabrics

- Connectivity Analysis feature is supported on Cisco APIC release 6.0(2h) and Cisco ACI-Mode Switch release 16.0(2h) and later.
- Cisco Nexus Insights Cloud Connector (NICC) app version 3.0.0.350 is pre-packaged with Cisco APIC release 6.0(2h) and is required for this feature.



If your ACI fabrics are running version of 6.1.2 or later and your Nexus Dashboard version is 3.2.1 or earlier, you will not be able to perform connectivity analysis.

- Connectivity Analysis is not supported for endpoints where the bridge domain that they belong to is configured with **Advertise Host Routes** (Host Border Routes [HBR]).
- Nexus Dashboard 4.1.1 does not support ESG functionality within Search and Explore, Connectivity Analysis, or Traffic Analytics/Flow Telemetry.

Guidelines and limitations for standalone NX-OS fabrics

- Connectivity Analysis is supported on Cisco NX-OS release 9.3(7a) and later.
- Connectivity Analysis job is not triggered if all onboarded devices are shown as incompatible.
- You must update the Fabric Agent on the switches to the latest available. Updating the Fabric Agent does not affect the traffic on the switch. Hence, a switch reload is not required. The View Nodes banner displays the number of nodes that are compatible and up-to-date. Click **Update** to initiate the update process. After the update is complete, in the Node page, click **Refresh** to view the status.

Analyze > Analysis Hub > Connectivity Analysis > Create Connectivity Analysis

Create Connectivity Analysis

Source* IP Address ▾

Site3-100-Node / default / IP

↔

Destination IP Address*

Select an endpoint ▾

Only 3 out of 74 nodes are compatible, 71 nodes can be upgraded [View Nodes/Update](#)

- OAM is only supported on VXLAN fabrics.
- OAM is only supported between VTEPS and as a result the OAM path will be displayed between Layer 3 networks.

Supported topologies

- Endpoint combinations:
 - EP-EP
 - EP-L3Out
 - L3Out-EP
 - L3Out-L3Out
- Conversation types:
 - L2, L3, L4 (ICMP/TCP/UDP)



ICMP is not supported for ACI fabrics.

- V4 and V6 support
 - Transit and Proxy flows
 - Shared Service
- Topologies for Cisco ACI fabrics:
 - Single-Pod and Multi-Pod
 - ACI Multi-Site
 - Remote Leaf-Direct

- o M-Topology (stretched fabric design)
- o vPC
- o 3-tier architectures
- Topologies for standalone NX-OS fabrics:
 - o VXLAN
 - o VXLAN Multi-Site
 - o vPC
 - o Classic LAN

Create connectivity analysis

Follow these steps to create a connectivity analysis.

1. Navigate to **Analyze > Analysis Hub > Connectivity**.
2. Click **Create Connectivity Analysis**.

Analyze > Analysis Hub > Connectivity Analysis > Create Connectivity Analysis

Create Connectivity Analysis

Fabric Agent Status ⓘ
 View all

3

Compatible

Source **IP address**

Select an endpoint

Destination IP address

Select an endpoint

Layer 4 Parameters ⓘ

Protocol

Select an Option

Source Port Number

Destination Port Number

3. In the **Create Connectivity Analysis** page, you can view the **Fabric Agent Status** card which shows the number of onboarded fabrics and their compatibility status.

Click **View all**. The **Fabric Agent Status** dialog box opens. You can view all the onboarded fabrics and compatibility status of the fabric with respect to a specific fabric agent that runs across all the NXOS switches.

Click **Update all agents** to update all the fabric agents. You can update fabric agents for each fabric or for all the fabrics.

You can click a fabric to view the switches that are part of the fabric and their agent versions in the **Switches for *fabric_name*** dialog box.



If all the fabrics are compatible, the **Fabric Agent Status** card in the **Create Connectivity Analysis** page shows status as **Compatible**.

4. Complete the following for Layer2 and Layer 3 parameters.
 - a. From the **IP address** drop-down list choose **IP address** or **MAC address** for **Source** and **Destination** to analyze the flow between two endpoints.
 - b. Choose the source endpoint from the drop-down list or enter the endpoint. A maximum of 20

IP or MAC addresses are displayed at a given time.

- c. You can also manually populate the Layer2 and Layer 3 parameters. Click **Edit Details Manually** to enter the source IP or MAC address, destination IP or MAC address, and fabric type. For ACI fabrics, also enter the source tenant, source VRF instance, destination tenant, and destination VRF instance. For standalone NX-OS fabrics, also enter the VRF instance and source VLAN.

Analyze > Analysis Hub > Connectivity Analysis > Create Connectivity Analysis

Create Connectivity Analysis

Source IP Address ▼

Source IP/Mac address

Fabric * teleixia-cs2-a-0 ▼

Source Tenant * Select Tenant ▼

Source VRF * Select VRF ▼

Destination IP Address *

Destination IP/Mac address

Destination Tenant Select Tenant ▼

Destination VRF Select VRF ▼

Layer 4 Parameters ⌵ ?

Protocol Select an Option ▼

Port Number

Analysis Options ? ☒ ELAM ☐ OAM

[Run Analysis](#)

- d. Choose the destination endpoint from the drop-down list or enter the destination endpoint.
5. For standalone NX-OS fabrics, choose the **Fabric Type**, **VXLAN** or **Classic**.
6. Complete the following for Layer 4 parameters.
 - a. From the Protocol drop-down menu, choose **ICMP**, **TCP**, or **UDP** protocol.
 - b. Enter the source and destination port number.
7. Choose the **Analysis Options**.
 - a. Check **ELAM** option to analyze an available active flow.
 - b. For standalone NX-OS fabrics, check **OAM** option to locate potential drops for active hosts or to track details such as reachability and actual route of the flow in a VXLAN EVPN based fabric topology, without the need of active traffic between the hosts. OAM is supported only on VXLAN fabrics.



The OAM option is not available for NX-OS multi-fabric environments.

- c. Check **Consistency Checker** option to detect control plane and data plane configuration and operational inconsistencies along the flow between specified endpoints or routes.



You cannot select both ELAM and OAM options for Connectivity Analysis.

8. Click **Run Analysis**.
9. After the Connectivity Analysis is completed, the analysis is displayed in the **Connectivity Analysis Jobs** table. Navigate to **Analyze > Analysis Hub > Connectivity** to view the Connectivity Analysis Jobs. The Analysis is assigned a default name and you can rename the analysis.
 - a. Select the analysis and then from the Actions drop-down menu click **Rename Analysis** to rename.

OR

- b. Click on analysis name. In the **View Connectivity Analysis** page, from the Actions drop-down

menu click **Rename Analysis** to rename.

View connectivity analysis

Follow these steps to view connectivity analysis.

1. Navigate to **Analyze > Analysis Hub > Connectivity**. The Connectivity Analysis jobs are displayed.

The screenshot shows the 'Connectivity Analysis' page. At the top, there's a breadcrumb trail: 'Analyze > Analysis Hub > Connectivity Analysis'. Below this, the page title 'Connectivity Analysis' is displayed, along with 'Refresh' and 'Create Connectivity Analysis' buttons. A subtitle explains: 'Connectivity Analysis allows you to analyze flows between two different endpoints, provides insight into how your endpoints are connected, and helps you spot where problems might be occurring'.

Under 'Connectivity Analysis Jobs', there's a 'Current' dropdown and a 'Filter' input field. Below the filter, there are two status indicators: 'Job Status' showing '1 Complete' and 'Flow Status' showing '1 Success'. A table lists the jobs:

Name	Fabric Name	Job Status	Flow Status	Source IP	Destination IP	Creation Time	End Time	
prod-fabric 19-07-2024 13:37:23	prod-fabric	Completed	Success			Jul 19 2024 01:37:24.000 PM	Jul 19 2024 01:38:59.000 PM	...

2. Choose a time range from the drop-down menu.
3. The Summary area displays the overall status of the Connectivity Analysis jobs and the flow status.
4. Use the filter bar to filter the list of jobs. The Connectivity Analysis table displays filtered jobs.
 - a. Click the column heading to sort the jobs in the table.
 - b. Click the gear icon to configure the columns in the table.
 - c. Hover around a failed Flow Status to learn more.
5. Click **Name** to view the Connectivity Analysis details. The View Connectivity Analysis page displays the input parameters you had entered for the job, the job details, and topology.

The screenshot shows the 'View Connectivity Analysis' page. It has a header with 'Source' and 'Destination' fields, each with a dropdown menu. Below these are 'Protocol' and 'Source Port Number' fields. There are also 'Analysis Options' (SLAVE, DMZ, Consistency Checker) and 'Show Job Details' and 'Run Analysis' buttons.

The main content area is titled 'Analysis Complete' and shows a 'OK: Pending' status. Below this is a detailed topology diagram showing a network structure with various nodes and connections.

- a. In the **Source** field, enter the source site name/VRF name/source IP.
- b. In the **Destination** field, enter the destination site name/VRF name/destination IP.
- c. Click **Show Job Details** to view the job details.
- d. Click **Re-run Analysis** to run the analysis again.

- e. Below the **Show Job Details**, you can see a banner that displays the status of the job. A green banner represents a successful analysis and a red banner represents a failed analysis.
- f. You can view the routing status between the source end point and destination end point in the **Routing** card. Routing card states **OK** or **Not OK**.




You will see a green check mark, if the routing status is okay and a red cross (x) mark if there are any routing errors. You can click the red cross (x) mark to open the **Event Log** page. The routing errors will be highlighted in the **Event Log** page.

- g. For standalone NX-OS fabrics, use toggle enable or disable **Highlight Active Path**. When you enable **Highlight Active Path**, all the OAM paths in the topology are highlighted.
- h. Click **Re-run Analysis** to run the analysis again.
- i. In the topology area, you can visualize hierarchial view of the fabric. You can double-click on the node to view interconnections of the nodes in the fabric. The active path between nodes is highlighted in green color. See [Topology](#).



Starting from Nexus Dashboard release 4.0.1, connectivity analysis includes multi-fabric capabilities.

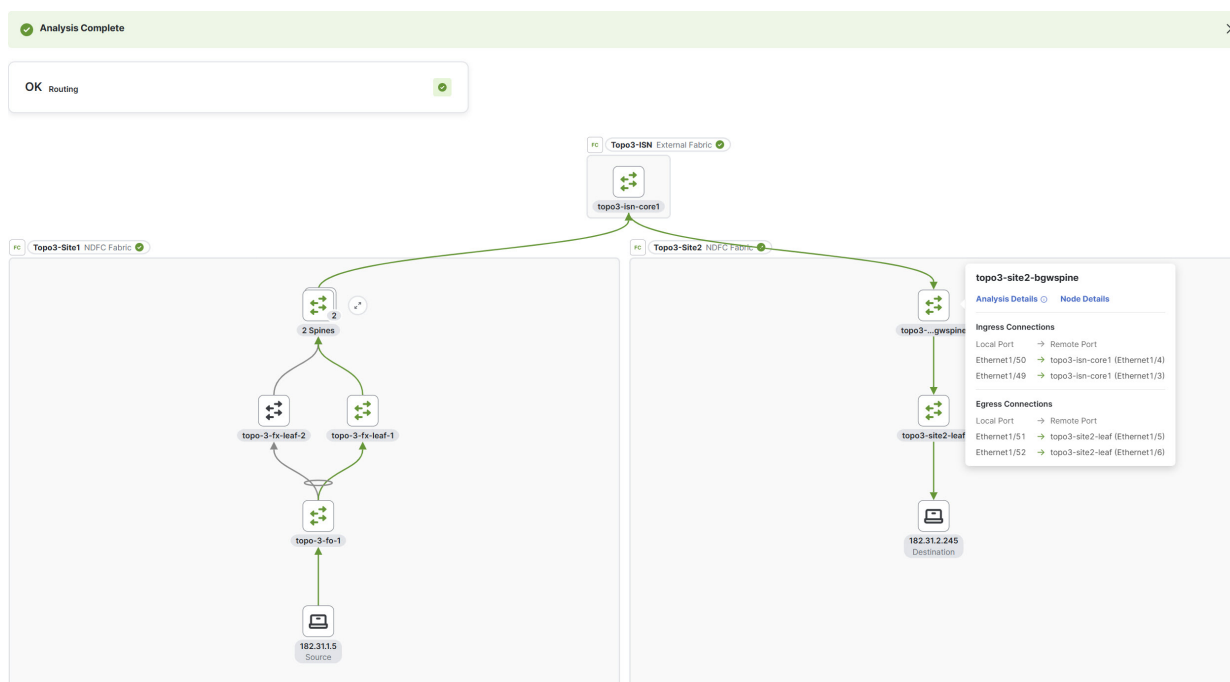

- j. Click a node to view the tooltip. The tooltip displays the node name, node type, and the ingress and egress connections for that node, as well as OAM information if applicable. In the ingress and egress connections, only physical interfaces are displayed. For standalone NX-OS fabrics, egress information is not displayed on the first VTEP node.
- k. Click **Analysis Details** to view the path and data plane information.
 - i. Click **Paths** to view path details such as ingress and egress information, and OAM information if applicable. In the ingress and egress connections area logical interfaces are displayed.

Analysis Results for scaleleaf-204



Paths **Data Plane**

General

Source IP

Destination IP

Ingress and Egress

Ingress Information

Local Ingress Logical Interface

Local Ingress Physical Interface

-

eth1/51

✓ Active Path

Egress Information

Local Egress Logical Interface

Local Egress Physical Interface

Peer Device

Peer Ingress Physical Interface

-

eth1/1

Destination

Destination

✓ Active Path

- ii. Click **Data Plane** to view the analysis options results.
- iii. Click **ELAM** to view the ELAM report. Click **View Full Report** to download the report.

Analysis Results for scaleleaf-204



Paths **Data Plane**

Data Plane Details

ELAM

Basic Information

Device Type

LEAF

Packet Direction

egress

Incoming Interface

Eth1/51

Inner L2 Header

Inner Destination MAC

Source MAC

802.1Q tag is valid

no

CoS

0

Access Encap VLAN

0

Outer L2 Header

Destination MAC

Source MAC

802.1Q tag is valid

yes

CoS

0

Access Encap VLAN

2

VN-Tag is valid

no

Src VIF(in from leaf/IPN)

0

Dst VIF(out to leaf/IPN)

0

Inner L3 Header

L3 Type

IPv4

DSCP

0

Don't Fragment Bit

0x0

TTL

60

IP Protocol Number

ICMP

Destination IP

Source IP

Outer L3 Header

L3 Type

IPv4

DSCP

0

Don't Fragment Bit

0x0

TTL

31

IP Protocol Number

UDP

Destination IP

Source IP

Outer L4 Header

L4 Type

IPv4LAN

Don't Learn Bit

1

Src Policy Applied Bit

0

Dst Policy Applied Bit

0

sclass(src pCtag)

0x4002

VRF or BD VNID

2818048(0x2B0000)

- iv. For standalone NX-OS fabrics, click **Consistency Checks** to view the consistency check results.

Analysis Results for topo-3-fx-leaf-1

Paths Data Plane

Data Plane Details

ELAM Consistency Checks

Ethernet1/43		
✔	Spanning Tree Protocol state validator show consistency-checker stp-state vlan 2401 brief	No Issues Found ▾
✔	L2 Switchport state validator show consistency-checker l2-state interface Ethernet1/43 brief	No Issues Found ▾
Analysis Results for topo-3-fx-leaf-1		
✔	Gateway mac state validator show consistency-checker gwmacdb interface vlan 2401 brief	No Issues Found ▾
✔	L3 physical routed port state validator show consistency-checker l3-interface interface vlan 2401 brief	No Issues Found ▾
✔	L2 MAC state validator show consistency-checker vxlan l2 mac-address 0050.0100.0001 module 1 brief	No Issues Found ▾
Analysis Results for topo-3-fx-leaf-1		
✔	VxLAN VLAN state validator show consistency-checker vxlan vlan 2401 brief	No Issues Found ▾
✔	Physical Front Panel Port Link state validator show consistency-checker link-state interface Ethernet1/43 brief	No Issues Found ▾
loopback1		
✔	Physical Front Panel Port Link state validator show consistency-checker link-state interface Ethernet1/50 brief	No Issues Found ▾
✔	Physical Front Panel Port Link state validator show consistency-checker link-state interface Ethernet1/49 brief	No Issues Found ▾
✔	L3 physical routed port state validator show consistency-checker l3-interface interface Ethernet1/49 brief	No Issues Found ▾
✔	L3 physical routed port state validator show consistency-checker l3-interface interface Ethernet1/50 brief	No Issues Found ▾
✔	L3 route state validator show consistency-checker forwarding single-route ipv4 10.3.0.3/32 vrf default brief	No Issues Found ▾

- v. For standalone NX-OS fabrics, click **OAM** to view the OAM report.
- l. Click **Node Details** to view the node details in inventory. See [Inventory](#).

Manage connectivity analysis

Follow these steps to manage connectivity analysis.

1. Navigate to **Analyze > Analysis Hub > Connectivity**.
2. Click **Name** to view Connectivity Analysis details.

Analyze > Analysis Hub > Connectivity Analysis > Topo3-Site1 Topo3-Site2 14-01-2025 15:15:04

View Connectivity Analysis

Source

Topo3-Site1 / vrf_50001 / 182.31.1.5

Destination

Topo3-Site2 / vrf_50001 / 182.31.1.5

Layer 4 Parameters

Protocol

Select an Option

Source Port Number

Destination Port Number

Analysis Options

☒ ELAM
☐ OAM
☐ Consistency Checker

Show Job Details

Re-Run Analysis

actions

Stop Analysis

Re-Run Analysis

Run Reverse Analysis

Rename Analysis

Show event log

Fabric Type

VXLAN

Classic

- From the Actions drop-down menu choose **Stop Analysis** to stop the analysis.
- From the Actions drop-down menu choose **Re-Run Analysis** to run the analysis again.
- From the Actions drop-down menu choose **Run Reverse Analysis** to run the analysis in the reverse direction.
- From the Actions drop-down menu choose **Rename Analysis** to rename the analysis.
- From the Actions drop-down menu choose **Show Event Log** to view the logs for the analysis. In the event log, you can view the error message for a failed analysis.



You can also stop, re-run, run reverse, and rename an analysis by clicking the ellipses (...) for each job from the **Connectivity Analysis Jobs** table in the **Connectivity Analysis** page.

Filtering information

In some cases, you might be able to filter results to find information more easily.

For example, you might have a situation where there a large number of endpoints under a single leaf switch, but you are only interested in endpoints that have a certain VLAN value.

You could filter the information to show only those specific endpoints in this situation.

Use the following operators for the filter refinement:

Operator	Description
==	With the initial filter type, this operator, and a subsequent value, returns an exact match.
!=	With the initial filter type, this operator, and a subsequent value, returns all that do not have the same value.
contains	With the initial filter type, this operator, and a subsequent value, returns all that contain the value.
!contains	With the initial filter type, this operator, and a subsequent value, returns all that do not contain the value.

Operator	Description
<	With the initial filter type, this operator, and a subsequent value, returns a match less than the value.
< =	With the initial filter type, this operator, and a subsequent value, returns a match less than or equal to the value.
>	With the initial filter type, this operator, and a subsequent value, returns a match greater than the value.
> =	With the initial filter type, this operator, and a subsequent value, returns a match greater than or equal to the value.

Monitoring the latency, congestion, and drops for your network, using traffic analytics

Traffic analytics enables you to monitor your network's latency, congestion, and drops. In Nexus Dashboard, you can now configure the traffic analytics mode best suited for your fabric type and requirements. You must enable traffic analytics at the cluster level before configuring it for your fabrics.

You can choose to configure one of these Traffic analytics modes.

- Traffic analytics full
- Traffic analytics compatibility
- Disabled

Traffic analytics full

The **Traffic analytics full** mode matches well-known TCP and UDP (optional) Layer 4 ports to their corresponding service endpoint categories to automatically discover services running in your network. Nexus Dashboard then assesses service performance based on thresholds for these metrics.

- **Latency**—Measures the overall time in microseconds it takes a packet to go between the ingress and egress leaf switches for specific traffic flow. Latency is tracked for both ingress and egress traffic between a service endpoint and its clients.
- **Congestion**—Measures network bandwidth utilization and quality of service (QoS) activation mechanisms to determine if a service is experiencing network congestion. For ACI fabrics, this also measures priority flow control (PFC) and explicit congestion notification (ECN) counters.
- **Drops**—Measures the score or number of dropped packets versus transmitted packets considering factors such as CRC errors, faulty cables, and other devices.

An anomaly is raised if there is any deviation in the performance metrics such as latency, congestion, and drops. The performance score is calculated for each conversation and aggregated to the service endpoint or endpoint level to raise anomalies.

The performance score is calculated based on these factors.

- **Congestion**—Consistent congestion avoidance active between endpoints is calculated.
- **Latency**—Deviation from the average latency of the previous conversations is calculated.
- **Drops**—Directly correspond to an issue with the conversation or service.

Using traffic analytics, you can

- monitor traffic pervasively
- report performance issues using anomalies raised for performance metrics
- sort top talking services and clients and determine the top talkers in the system
- determine the SYN or RST counts per service, and
- troubleshoot conversations or flows on-demand.

You can configure the **Traffic analytics full** mode from the Nexus Dashboard **Fabric > Edit Fabric Settings** page. For more information, see [Configure traffic analytics flow collection](#).



Traffic analytics is supported on ACI version 6.1.1 or later and NX-OS version 10.4(2) and later.

Traffic analytics compatibility

The **Traffic analytics compatibility** mode allows you to configure traffic analytics for fabrics that do not support the full mode capability, such as fabrics running ACI or NX-OS software versions not compatible with the full mode feature. Traffic analytics compatibility mode is also intended to support other fabrics that are not full mode capable. Note that traffic analytics compatibility mode has limited capabilities compared to full mode, review the limitations noted here for more information.

[NOTE]:

- Traffic analytics compatibility mode is only supported with Netflow.
- You must manually configure Netflow for both ACI and NX-OS fabrics. Nexus Dashboard will not configure the fabric to send Netflow information.
- Traffic analytics compatibility mode currently supports only congestion anomalies. Latency and drop anomalies are not supported.
- View the **Traffic Analytics Capability** column on the **System Status** page to see which switches support **Traffic analytics full** mode and which support the **Traffic analytics compatibility** mode.

Enabling the traffic analytics compatibility mode helps with service identification using well known ports. You can configure the compatibility mode from the Nexus Dashboard **Fabric > Edit Fabric Settings** page. For more information, see [Configure traffic analytics flow collection](#).

Disabled

You can choose to configure the **Disabled** mode to turn off the traffic analytics feature for your fabric. When **Disabled** mode is configured, you cannot generate or view flow collection data for your fabrics. For more information on configuring the **Disabled** mode, see [Configure traffic analytics flow collection](#).

Traffic analytics conversations

A TCP conversation is a 4-tuple including source IP address, destination IP address, destination port, and protocol. A non-TCP conversation is a 3-tuple including source IP address, destination IP address, and protocol. In case a single client establishes multiple communication flows initiated by multiple source ports toward a service endpoint, all related statistics would be aggregated as a single entry in the Traffic analytics table. A service endpoint is defined by an IP address, a port, and a protocol.

An anomaly is raised after the conversation rate limit is exceeded. Navigate to **Admin > System Settings > Flow Collection**. In the Traffic analytics status for the last hour area, you can view if the conversation rate approaches or exceeds the limits. You can also view if there are any Traffic analytics record drops.

Traffic analytics for multi-fabric and external conversations

By default, traffic analytics monitors traffic that is external to the fabric in a multi-fabric configuration. Remote fabric endpoints are identified with the "External" tag and have a link that takes you to the respective endpoint page to assist with visibility.

Traffic analytics support for traffic redirection to L4-L7 services

Nexus Dashboard traffic analytics capability now supports monitoring of traffic redirected to Layer 4 to Layer 7 (L4-L7) services. A new tag (L4-L7) is introduced in conversations when traffic is redirected. Ingress and egress traffic statistics, drops, congestion, and latency values are also represented in the traffic analytics statistics. This feature is supported on the Classic LAN, Enhanced Classic LAN, VXLAN, and BGP fabrics. For more information, see the "View traffic analytics for service endpoints" section in [View traffic analytics for endpoints](#).

Traffic analytics support for north-south filters

By default, Nexus Dashboard enables traffic analytics on all L3Out interfaces to monitor traffic flows. You can create rules and apply them to external interfaces as an additional option to choose traffic that needs monitoring. Applying interface rules can filter traffic collection and prevent overloading. It also allows for visibility into specific subnets and enables targeted monitoring of key traffic. For more information on applying interface filter rules, see [Apply filters to restrict traffic analytics for north-south filtering](#).



- Data Center Interconnect (DCI) rules are not required for monitoring traffic within a fabric. They are only needed for monitoring traffic between multiple ACI sites. When you enable DCI rules for the first time, the system automatically creates a default rule on the spine Inter-Pod Network and Inter-Site Network (IPN/ISN) interfaces with the subnet 0.0.0.0/00::0/0. You can update these subnets to monitor only the traffic that needs monitoring.
- Egress TCAM carving must be configured on NX-OS fabrics when using the interface filter rule feature. For detailed instructions, refer to the "Performing Egress NetFlow TCAM Carving" section in the [Cisco Nexus 9000 Series NX-OS System Management Configuration Guide](#). This configuration is required the first time interface filters are created. If Egress TCAM carving is not performed, the interface filter rule configuration fails on the switch, and the issue is reported as a configuration failure anomaly.
- Traffic analytics filter rules do not apply on east-west traffic.
- Configuring interface filter rules will apply in the hardware/ASIC, this will also limit third-party NetFlow monitoring on that interface.

Guidelines for traffic analytics

These guidelines apply for traffic analytics:

- By default, traffic analytics monitors traffic that is both internal to and external to the fabric in a multi-fabric configuration. However, if you disable flow collection of traffic that is external to the fabric, then this becomes the behavior:
 - Traffic analytics monitors only traffic flows between IPv4 or IPv6 endpoints for which at least

one of them is directly connected to the fabric. One or both endpoints should be visible in the **Manage > Fabrics > Connectivity > Endpoints** page.

- If both the source and destination endpoints exist outside the fabric (for example, connected to an L3Out), then the conversation will not be displayed in the Traffic analytics table.
- Ensure that you have configured NTP, enabled PTP on the fabric, and PTP is synchronized within the fabric and between the fabric and the cluster. See the [Cisco Nexus Dashboard Deployment and Upgrade Guide](#) and [Precision Time Protocol \(PTP\) for Cisco Nexus Dashboard Insights](#) for more information.

Support information for traffic analytics with any fabric type

- Traffic analytics does not support multicast.
- Traffic analytics does not support EX switches.
- IPv6 underlay is not supported.
- L4-L7 traffic details are only supported and displayed for Layer 3 traffic. These details are not supported for Layer 2 bridged traffic.

Guidelines and limitations for traffic analytics compatibility mode

These guidelines and limitations apply for traffic analytics compatibility mode:

- In a multi-fabric configuration, you can configure each fabric for either **Traffic analytics full** mode or **Traffic analytics compatibility** mode. However, within a single fabric, mixed mode (where some switches operate in full mode and others in compatibility mode) is not supported.
- The following features are not supported in **Traffic analytics compatibility** mode:
 - Flow troubleshoot workflows
 - Traffic analytics support for traffic redirection to L4-L7 services
 - Traffic analytics support for north-south filters
 - Latency and drop anomalies are not supported
- In **Traffic analytics compatibility** mode, for NX-OS fabrics, the recommended template data timeout value is 300 seconds, and the flow records timeout value is 60 seconds.

We recommend configuring the flow export timeout to 60 seconds to view the congestion anomaly.

- If **Traffic analytics compatibility** mode is disabled before the upgrade and then enabled afterward, the **Nexus Dashboard > Traffic Analytics** page will not display any conversations. To view the conversations, disable **Telemetry** at the fabric level, and then re-enable both **Telemetry** and **Traffic analytics compatibility** mode, re-add any custom categories in the **Manage service categories**.
- On fabrics configured with **Traffic analytics compatibility** mode, the switch Flow collection status incorrectly shows **Failed** for all the spine nodes. However, Nexus Dashboard event history does not indicate that it pushed any flow telemetry configuration in compatibility mode. Additionally, the flow telemetry configuration displays the message **!Netflow is not supported on this switch** for the switches that do not support Netflow.

- If you have **Traffic analytics full** mode configured on a fabric, you cannot enable **Traffic analytics compatibility** mode on the same fabric. To switch from **Traffic analytics compatibility** mode to full mode, you must upgrade the controller or switches to the supported versions. **Traffic analytics full** mode requires ACI release 6.1.1f or later, or NX-OS version 10.4 or later. **Traffic analytics compatibility** mode supports versions earlier than ACI 6.1.1f and NX-OS 10.4.
- The following table lists the number of sites supported for Traffic analytics compatibility mode

Form factor	Recommended site limit
1 virtual Nexus Dashboard (vND)	2 sites with defaults and additional custom categories.
1 physical Nexus Dashboard (pND)	2 sites with defaults and additional custom categories.
3 data virtual Nexus Dashboard (vND)	2 sites may work or 1 site with custom ports.
3 physical Nexus Dashboard (pND)	3 sites with defaults and additional custom categories.
6 physical Nexus Dashboard (pND)	14 sites with defaults and additional custom categories.

Support information for traffic analytics with Cisco ACI fabrics

This support information applies for Traffic Analytics with Cisco ACI fabrics:

- Traffic analytics is supported on Cisco Application Policy Infrastructure Controller release 6.1(1f) and later release. Fabrics running Cisco Application Policy Infrastructure Controller version earlier than release 6.1(1f) can enable compatibility mode.
- Traffic analytics support for traffic redirection to Layer 4 to Layers 7 (L4-L7) feature requires Cisco Application Policy Infrastructure Controller release 6.1(2g) or later releases.
- Traffic analytics support for UDP service endpoints requires Cisco Application Policy Infrastructure Controller release 6.1(2g) or later releases.
- Traffic analytics support for north-south interface filter requires Cisco Application Policy Infrastructure Controller 6.1(4) release.

Support information for traffic analytics with NX-OS fabrics

This support information applies for traffic analytics with NX-OS fabrics:

- Traffic analytics full mode is supported on Cisco NX-OS release 10.4(2)F and later. Fabrics running NX-OS version earlier than the Cisco NX-OS release 10.4(2) can enable Traffic analytics compatibility mode.
- Traffic analytics UDP service endpoints and north-south interface filter features requires Cisco NX-OS release 10.5.(2) or later.
- Traffic analytics configurations or export are not supported on the Cisco Nexus 9500 modular chassis, but flow troubleshoot jobs are supported for FX platform switches and Cisco Nexus 9500 modular chassis.

- Traffic analytics is supported on VXLAN fabrics and enhanced classic LAN for NX-OS fabrics.

Limitations for traffic analytics with NX-OS fabrics

These limitations apply for Traffic analytics with NX-OS fabrics:

- Traffic analytics may display partial data when the VRF instance is configured with the new L3VNI mode. For more information about the new L3VNI mode, see the [Cisco Nexus 9000 Series NX-OS VXLAN Configuration Guide](#).
- Traffic analytics configurations or export is not supported on Cisco Nexus 9500 modular chassis, however flow troubleshoot jobs is supported for FX platform switches and Cisco Nexus 9500 modular chassis.
- You can apply traffic analytics filters in VXLAN fabrics for VRF-Lite external interfaces only, and switches must have Cisco NX-OS release 10.5(3) or later.
- The timestamp tagging (TTAG-strip) should be configured on DCI interfaces. Nexus Dashboard displays only the inter-fabric flow latency, that is, the latency between the border router and the internal flow endpoint. The end-to-end latency is not displayed in this case.

Limitations for traffic analytics with multi-fabric and external conversations

These limitations apply for traffic analytics with a multi-fabric configuration:

- Flow troubleshoot jobs are local to a fabric.
- Latency computation is local to the fabric. The computed latency is from the endpoint to the border node and not end-to-end.
- Remote endpoints with overlapping IP addresses are not enriched with remote fabric properties.
- Traffic analytics does not show conversations between external endpoints. One endpoint in the conversation should be learned or local to the fabric. This applies for both a single fabric and a multi-fabric.

Configure traffic analytics flow collection

Before you begin

- Ensure traffic analytics is enabled for your cluster in the **Admin > System Settings > Flow collection**.

To enable traffic analytics, choose **Traffic analytics** in the **Flow collection mode**.

- Review the guidelines and limitations described in [Guidelines for traffic analytics](#) for the traffic analytics mode you choose for your fabric.
- If you are configuring **Traffic analytics compatibility** mode, review the support information in [\[Support information for traffic analytics compatibility mode\]](#) section.



If flow telemetry is already enabled on the fabric, you must first disable flow telemetry for all the fabrics and remove all flow rules before enabling traffic analytics.

Apply the traffic analytics configuration

Follow these steps to apply the traffic analytics configuration.

1. Navigate to the main **Fabrics** page.

Manage > Fabrics

2. Locate the fabric you want to edit.
3. Click the circle next to the fabric you want to edit, then click **Actions > Edit Fabric Settings**.

The **Edit *fabric_name* Settings** page appears.

4. Click **Telemetry > Configuration**.
5. Navigate to **Flow collections modes** under **Traffic analytics**.
6. Choose one of these modes.
 - o **Traffic analytics full** to configure all traffic analytics features.
 - o **Traffic analytics compatibility** to configure compatibility mode and follow the additional steps described in [Apply the traffic analytics compatibility mode configuration](#) section.
 - o **Disabled** to turn off the traffic analytics configuration on your fabric.
7. Click **Save** to save your changes.

Navigate to your fabric's **Overview** page to review the traffic analytics mode information for your fabric. Depending on the traffic analytics mode you configured, the traffic analytics status (enabled or disabled) and summary are available in the **Analytics summary > Traffic analytics**. For more information, see [View traffic analytics](#).

You can view the traffic analytics data for your fabrics after applying the traffic analytics configuration.

- o In the **Conversation rate status** area, you can see the number of conversations that exceed the limit and traffic analytics drops.

You must make sure that you do not exceed the maximum conversation rate limit. If you exceed the maximum conversation rate limit, you will see drops in flows records, which will impact the visibility.

- o Click **View all traffic analytics rate statistics** to view the statistics for each switch in a fabric.
- o In the **Traffic analytics for multi-fabric and external conversations** area, choose whether you want this feature to be **Enabled** or **Disabled**.

Click **Enabled** for this feature if you want to track multi-fabric and external conversations (north to south).

- o If you enabled the **Traffic analytics for multi-fabric and external conversations** feature, determine if you want to disable this feature at some point.

After the 80% traffic analytics conversation threshold is surpassed, you might want to disable the **Traffic analytics for multi-fabric and external conversations** feature to preserve capacity and avoid missing data for intra data center traffic (east to west).

Apply the traffic analytics compatibility mode configuration

You must manually configure Netflow to apply the traffic analytics compatibility mode configuration on your NX-OS and Cisco ACI fabrics.

Follow these steps to apply the traffic analytics compatibility mode configuration.

For NX-OS Fabrics:

1. Navigate to **Admin > System Status > Telemetry**.
2. Click the **Switches** tab in the **Telemetry Status** area.
3. Click the ellipsis icon for the NX-OS 9000 switch and then click **Expected Configuration**.

The **Expected Configuration for *switch_name*** page appears.

4. View and copy configurations under **Software Telemetry** and **Flow Telemetry**.
5. Using the command line, log in to the switch.
6. Paste the configuration copied in step 4 to the switches.



The configuration shown in the **Expected Configuration for *switch_name*** is a sample configuration. You must customize this configuration before applying it to the switch. For more information, see [NetFlow](#) documentation.

For Cisco ACI fabrics:

- Follow the configuration details described in [Cisco APIC and NetFlow](#).
- Configure Netflow from the APIC with the exporter IP addresses as the Nexus Dashboard's collector persistent IP addresses. Navigate to **Admin > System Settings > External pools** to see the Nexus Dashboard's collector persistent IP addresses. The port number should be **5641**.
- Verify that you have the NetFlow priority configured under the fabric node control policy in APIC.

View flow collection status

For NX-OS fabrics, you can view the **Flow Collection** status for each node in the **Switch Configuration Status** column.

- Green—Flow collection is successfully enabled.
- Red—Flow collection is not enabled.
- Orange—Flow collection is partially enabled.
- Gray—Flow collection is not supported or data cannot be found. If a switch is in the disabled state, it is included in the gray category.

Disable traffic analytics flow collection for multi-fabric and external conversations

Follow these steps to disable traffic analytics flow collection for multi-fabric and external conversations.


1. Navigate to **Admin > System Settings**.
2. Click **Flow collection**.
3. For **Traffic analytics for multi-fabric and external conversations**, choose **Disabled**.

View traffic analytics

View traffic analytics for an individual fabric

Follow these steps to view Traffic analytics for an individual fabric.

1. Navigate to **Manage > Fabrics** page.
2. Click the fabric name.

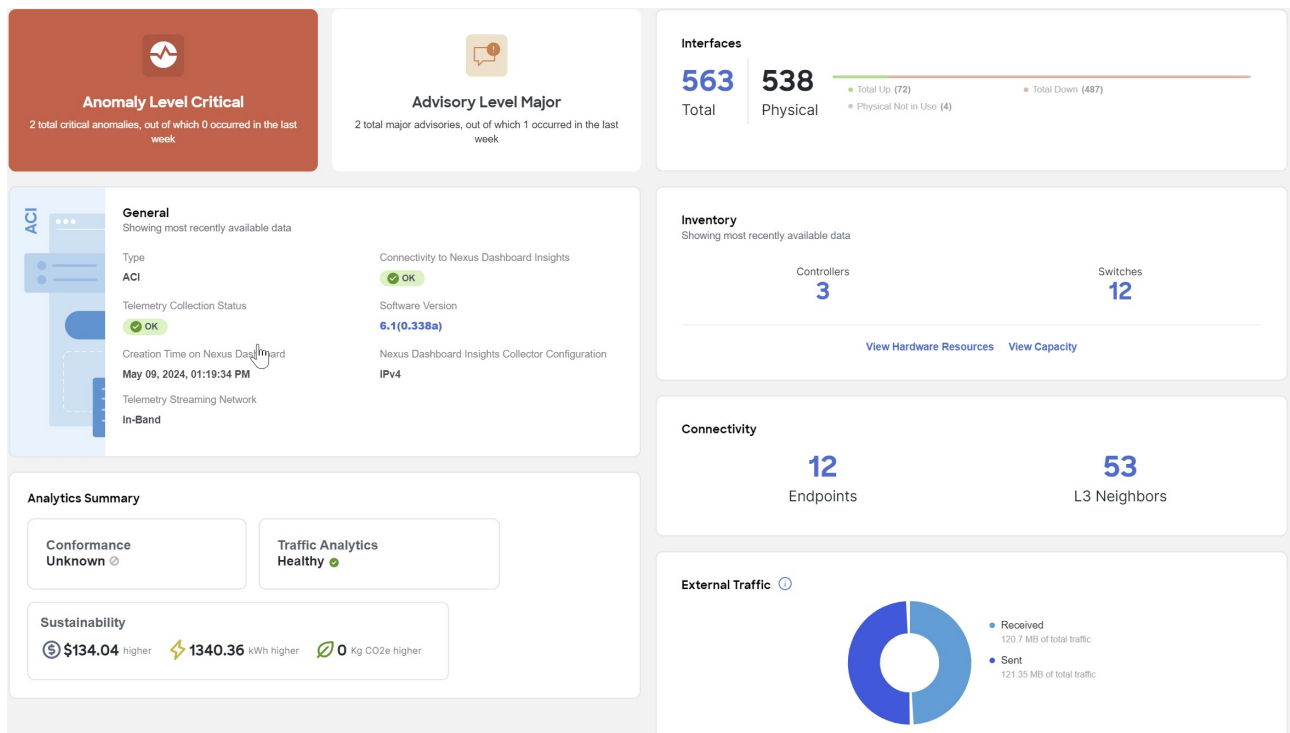

3. Choose a time range from the drop-down list. By default the Current time (last 2 hours) is chosen.
4. In the **Analytics summary** area, click **Traffic analytics** to view traffic analytics details for that fabric. In the **Traffic analytics** page, all information is grouped as service categories for that fabric.

Traffic Analytics

[View Analysis](#)

Traffic Analytics Score reached Warning

6 service endpoint categories have Warning Traffic Analytics Scores.

Summary

Trends and Statistics

Metric Scores



Latency

Major

Amount of time it takes for a data packet to go from one place to another.



Congestion

Healthy

Reduced quality of service that occurs when a network node or link is carrying more data than it can handle.




Drops

Healthy


Lost packets not reaching their destination due to congestion, faulty cables/devices or other problems.

Endpoint Service Category by Score

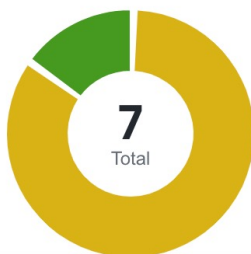

Critical	0
Major	0
Warning	6
Healthy	1
Info	0

Endpoint Service Category by Category

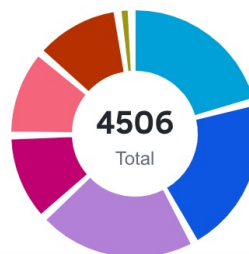

Web	1002
Remote_Connection	1001
Email	1000
Database	502
File_Sharing	500
File_Transfer	500
Other	

- The **Summary** area displays the **Traffic Analytics Score** and how the metrics is determined. You can view the traffic profile for **Endpoint Service Category** by score and category.
- Click **Trends and Statistics** to view **Traffic profile**, **Top Endpoint Service Score Changes**, and **Top Endpoint Categories**.




Traffic Analytics Score reached Warning
6 service endpoint categories have Warning Traffic Analytics Scores.

Summary Trends and Statistics

Traffic Profile

Tx

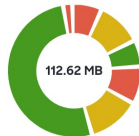

- Database 6.85 MB
- Email 11.69 MB
- File_Sharing 5.91 MB
- File_Transfer 9.36 MB
- Other

Rx



- Database 8.69 MB
- Email 11.70 MB
- File_Sharing 5.91 MB
- File_Transfer 177.97 MB
- Other

Top Endpoint Service Score Changes

Categories	Score Change	Affecting Metric
Database	Warning → Healthy	Latency ↘
File_Transfer	Warning → Healthy	Latency ↘
Remote_Connection	Warning → Healthy	Latency ↘
Email	Warning → Warning	Latency →
File_Sharing	Warning → Warning	Latency →
RoCE	Unknown → Healthy	-
Web	Warning → Warning	Latency →

7 items found Rows per page 10 1

Top Endpoint Categories by Rx Latency

Categories	Average	Trend
File_Transfer	2.01 us	↗ 3%
Remote_Connection	2 us	↗ 1%
Database	2 us	↘ 0%
Email	2 us	↘ 0%
File_Sharing	2 us	→
RoCE	0 us	→
Web	2 us	↘ 0%

- a. In the **Traffic Profile** area you can view the traffic amount for the endpoint service category.
 - b. In the **Top Endpoint Service Score Changes** area, you can view the anomaly score change across the chosen time range and the metrics (such as latency, congestion, or drops) affecting the score change.
 - c. In the **Top Endpoint Categories by area** you can see the top categories by **Rx and Tx Latency, Congestion Score, and Drop Score**.
7. Click **View Analysis** to view traffic analytics for all the fabrics.

View traffic analytics for all fabrics

Follow these steps to view traffic analytics for all fabrics.

1. Navigate to **Analyze > Analyze Hub > Traffic analytics**.
2. Choose a fabric from the first drop-down list.
3. Choose a time range from the second drop-down list. The default is **Current**, which specifies that any issues observed over the last 2 hours are displayed.

Traffic Analytics

Refresh

Data is shown based on telemetry-monitored hardware. You can [learn more about our methodology here](#).

hahamed-sal Current

Summary



Traffic Analytics Score reached Warning
6 service endpoint categories have Warning Traffic Analytics Scores.

Traffic Analytics Metrics



Latency Major

Amount of time it takes for a data packet to go from one place to another.



Congestion Healthy

Reduced quality of service that occurs when a network node or link is carrying more data than it can handle.



Drops Healthy


Lost packets not reaching their destination due to congestion, faulty cables/devices or other problems.

Service Category by Score




[Manage Service Endpoint Categories](#)

Number of Service Endpoints by Category

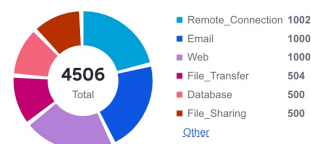

View Service Categories by Traffic Analytics Score

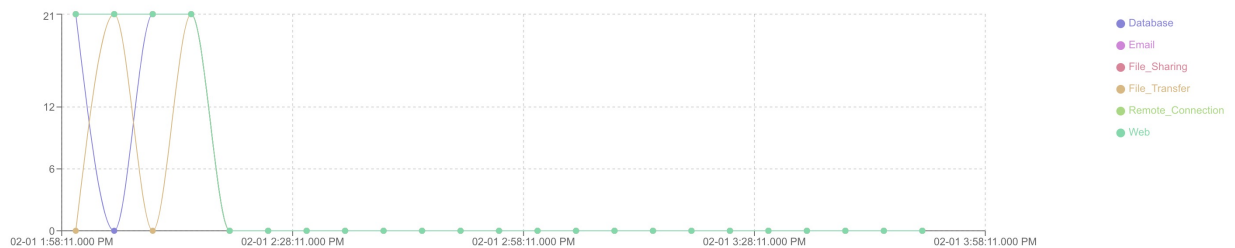


Endpoint	Service Port	VRF	Node	Interface	Traffic Analytics Score	Category	Protocol	Client Count	Session Count	Reset Count	Tx Rate	Rx Rate
20.11.12.13	22	myvrf_50003	n9k-leaf-2 n9k-leaf-1	po1	Warning	Remote_Con nection	TCP	12	66	-	9.45 Kbps	11.14 Kbps
20.11.12.14	25	myvrf_50003	n9k-leaf-2 n9k-leaf-1	po1	Warning	Email	TCP	10	56	-	8.83 Kbps	10.96 Kbps
20.11.12.15	445	myvrf_50003	n9k-leaf-1 n9k-leaf-2	po1	Warning	File_Sharing	TCP	10	53	-	8.67 Kbps	10.33 Kbps
20.11.12.18	443	myvrf_50003	n9k-leaf-1 n9k-leaf-2	po1	Warning	Web	TCP	12	65	-	8.69 Kbps	11.00 Kbps
20.11.12.19	22	myvrf_50003	n9k-leaf-1 n9k-leaf-2	po1	Warning	Remote_Con nection	TCP	12	61	-	10.25 Kbps	12.27 Kbps
20.11.12.28	445	myvrf_50003	n9k-leaf-2 n9k-leaf-1	po1	Warning	File_Sharing	TCP	12	62	-	9.62 Kbps	12.03 Kbps
20.11.12.4	25	myvrf_50003	n9k-leaf-1 n9k-leaf-2	po1	Warning	Email	TCP	12	64	-	9.79 Kbps	11.53 Kbps
20.11.12.45	80	myvrf_50003	n9k-leaf-2 n9k-leaf-1	po1	Warning	Web	TCP	12	62	-	9.43 Kbps	11.28 Kbps
20.11.12.47	80	myvrf_50003	n9k-leaf-1 n9k-leaf-2	po1	Warning	Web	TCP	12	61	-	9.96 Kbps	11.98 Kbps
20.11.12.6	143	myvrf_50003	n9k-leaf-1 n9k-leaf-2	po1	Warning	Email	TCP	12	65	-	10.03 Kbps	12.62 Kbps

4. The **Summary** area displays the traffic analytics score and how the metrics are determined.

You can view the information for a service endpoint category by Score and Category. Service endpoint categories consist of ports that have been assigned to categories based on standard

networking defaults and any categories you may have created. These categories are dynamic and can be updated any time. See [Manage service categories](#).

5. Use the drop-down list to view the **Service Categories** or **Service Endpoints** information for attributes such as Traffic Score, Congestion Score, Latency Score, and Drop Score in a graphical format. When you choose **Service Endpoints**, you can also view the top 10 endpoints for various attributes such as **Traffic Analytic Score**, **Latency Score**, **Congestion Score**, **Drop Score**, **Session Count**, **Reset Count**, **TX Rate**, and **Rx Rate**. For Current Time, when you choose view **Service Categories** for **Traffic Analytics Score**, you can use the graph to view the transition between healthy and unhealthy score.
6. In the traffic analytics table, you can view the service categories or service endpoints information. The Traffic Score information for service endpoints is a combination of congestion score, latency score, and drop score. When the score is calculated, congestion score has the lowest weighage, and drop score has the highest weighage.
 - a. You can hover on the **Traffic Analytics Score** column to view the **Traffic Analytics Score** breakdown for the service.
 - b. Use the search bar to filter by **Service Categories**, **Service Endpoints values**, or other values.
 - c. Click the gear icon to configure the columns in the traffic analytics table.
7. In the table under the graph, click a service port to view information about a service endpoint and its clients. By default, you see the overview.

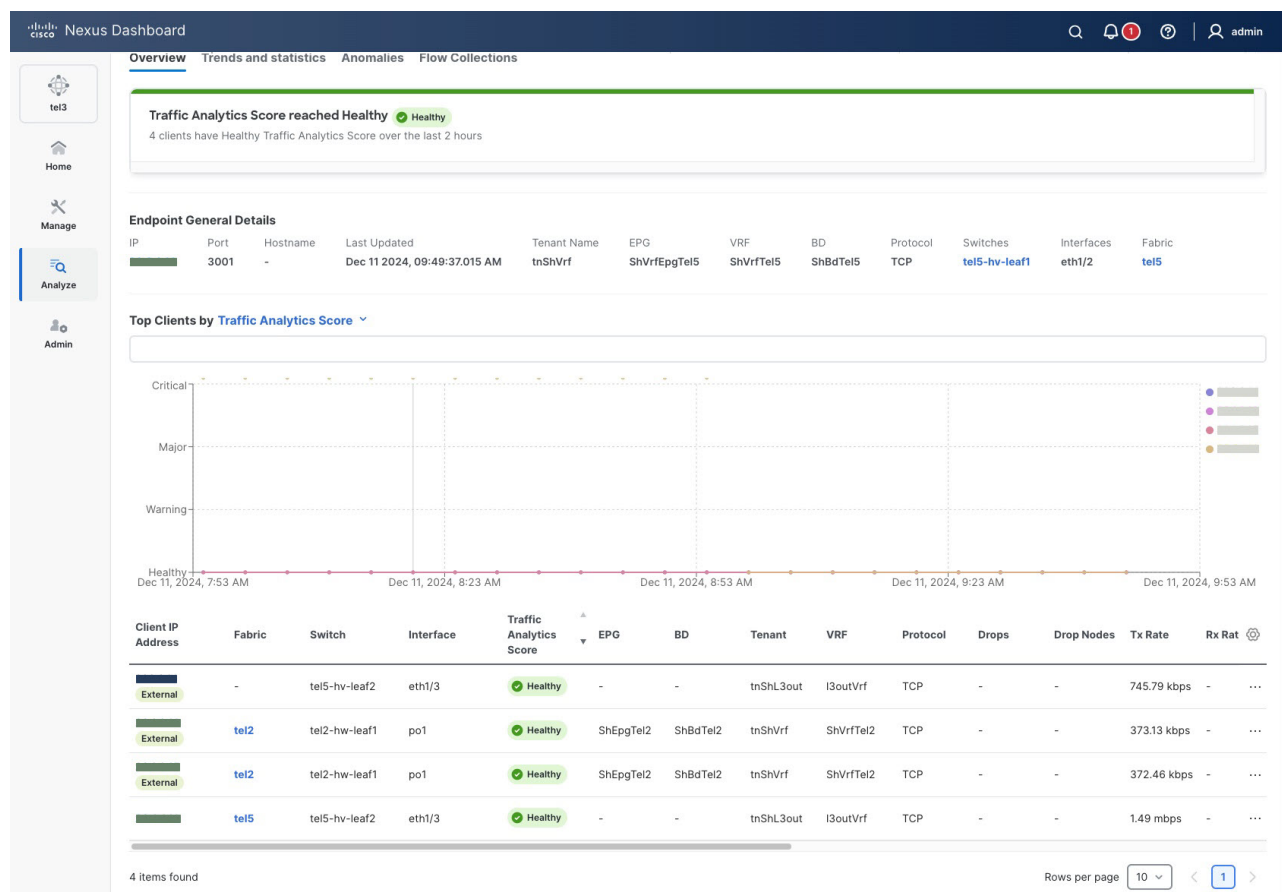

- a. Click **Overview** to view traffic analytics information about the service endpoint.
 - i. In the **Endpoint General Details** area, click an IP address to view that endpoint's details. You can view all services hosted on that endpoint and connections to other services and IP addresses from this endpoint.

- ii. Use the **Top Clients by** drop-down list to view the top clients information by traffic analytics score, latency score, drop score, and other stats.
- iii. In the **Top Clients** table, hover on the traffic analytics score to view the traffic analytics score breakdown for that client or service.
- b. Click **Trends and Statistics** to view the trends such clients, sessions, latency and other stats for that service.
- c. Click **Anomalies** to view the anomalies for the particular service endpoint based on the traffic score.
- d. Click **Flow Collections** to view the flow collections for that service.

Manage service categories

In the **Manage Service Categories** area, you can view the ports that have been assigned to categories based on standard networking defaults and any categories you may have created. If a port has not been assigned to a category, you can assign it to one of the existing categories or create a new category. This helps you to organize and manage your network ports more efficiently.

With this release, in Nexus Dashboard, you can view the UDP conversations in the traffic analytics table along with the TCP conversations. You can create a new category or modify existing category and choose UDP or TCP protocol to view and monitor the conversations.

< Manage Service Categories
×

Below are ports that have been assigned to categories based on standard networking defaults and any categories you may have created. If a port has not been assigned to a category, you can assign it to one of the existing categories or create a new category. This helps you to organize and manage your network ports more efficiently

Known ports on categories

New category

Category name	Port selectors
Analytics	<div>TCP 3000 TCP 4739-4740 TCP 5000 TCP 5601</div> <div>UDP 4739-4740</div>
Database	<div>TCP 66 TCP 118 TCP 591 TCP 1186 TCP 1433-1434</div> <div>TCP 2399 TCP 2483-2484 TCP 3050 TCP 3306 TCP 5432</div> <div>TCP 5984 TCP 7474 TCP 8000 TCP 8091 TCP 8999-9000</div> <div>TCP 9042 TCP 9090 TCP 9200 TCP 9300 TCP 27017</div> <div>UDP 66 UDP 118 UDP 591 UDP 1186 UDP 1433-1434</div> <div>UDP 2399 UDP 2483-2484 UDP 3050 UDP 3306 UDP 5432</div> <div>UDP 5984 UDP 8000 UDP 8091</div>
Distributed_DataStore	<div>TCP 76 UDP 76</div>
Email	<div>TCP 24-25 TCP 50 TCP 58 TCP 102 TCP 109-110 TCP 143</div> <div>TCP 220 TCP 465 TCP 587 TCP 691 TCP 993 TCP 995</div> <div>UDP 24-25 UDP 50 UDP 58 UDP 102 UDP 109-110 UDP 220</div> <div>UDP 587 UDP 691 UDP 995</div>
File_Sharing	<div>TCP 20-21 TCP 59 TCP 69 TCP 115 TCP 119 TCP 445</div> <div>TCP 563 TCP 873 TCP 989-990 TCP 1214 TCP 2049</div> <div>TCP 5402 UDP 20-21 UDP 59 UDP 69 UDP 115 UDP 119</div> <div>UDP 445 UDP 563 UDP 873 UDP 989-990 UDP 1214</div> <div>UDP 2049 UDP 5402</div>
Gaming	<div>TCP 1725 TCP 3071 TCP 3074 TCP 3724 UDP 1725</div> <div>UDP 3071 UDP 3074 UDP 3724</div>

Follow these steps to manage service categories.

1. Navigate to **Analyze > Analyze Hub > Traffic analytics**.
2. Choose a fabric from the drop-down list.
3. In the **Service Category by Score** area, click **Manage > Fabrics > Edit Fabric Settings**.
4. Click **Manage service categories**.

The **Manage Service Categories** page appears.

5. Click **New category** to create a new category.

6. Enter the name of the category.
7. From the **Protocol** drop-down list, choose **TCP** or **UDP** protocol.
8. In the **Ports** field, enter a port number or range.
9. Click **Add** to add additional protocols.
10. Click **Save**.
11. To edit a category, click the ellipsis icon and choose **Edit**.
 - a. Edit the values and click **Save**.
12. To delete a category, click the ellipsis icon and choose **Delete**.
 - a. Click **Confirm**.

Apply filters to restrict traffic analytics for north-south filtering

Follow these steps to apply filters to restrict traffic analytics for north-south filtering.

1. Navigate to the main **Fabrics** page.

Manage > Fabrics

2. Locate the fabric you want to edit.
3. Click the circle next to the fabric you want to edit, then click **Actions > Edit Fabric Settings**.

The **Edit *fabric_name* Settings** page appears.

4. Click **Telemetry > Configuration**.
5. Navigate to **Flow Collections Modes** under **Traffic analytics**.
6. Choose **Traffic analytics full** mode.
7. Click **Manage service categories** and check the **Traffic analytics filters rules** check box.

Analysis Settings☒ Enable**Traffic analytics****Flow Collection Modes** ⓘ

- ☒ Traffic analytics full ⓘ
- ☐ Traffic analytics compatibility ⓘ
- ☐ Disabled

☒ Enable UDP categorization[Manage service categories](#)☒ Traffic analytics filters rules ⓘ

i System generated rules are created for all detached L3 connections permitting all subnets (0.0.0.0/0). To restrict Traffic analytics flows, modify existing rule with a subnet prefix, or create a new rule.

Filter by attributes

Actions ▼

<input type="checkbox"/> Rule	▲ Rule Status ▼	L3Out	Switch	Interfaces	Type	Subnets	⚙
<input type="checkbox"/> rule_enable	✔ Enabled	myvrf_50000	tel7-sc-spine3	Ethernet1/16.2	subInterface	101.101.101.0/24	

- Check the check box next to the filter **Rule**. If you do not have an existing filter rule, you can create a rule, see [Create an interface filter rule](#) for details.
- Click **Save**.

Create an interface filter rule

Follow these steps to create an interface filter rule.

- Navigate to the main **Fabrics** page.

Manage > Fabrics

- Locate the fabric you want to edit.
- Click the circle next to the fabric you want to edit, then click **Actions > Edit Fabric Settings**.

The **Edit *fabric_name* Settings** page appears.

- Click **Telemetry > Configuration**.
- Navigate to **Flow Collections Modes** under **Traffic analytics**.
- Choose **Traffic analytics full** mode.
- Click **Manage service categories** and check the **Traffic analytics filters rules** check box.

8. Click the **Actions** drop-down list and choose **Create**.

The **Edit *fabric_name* Settings** page appears.

9. Enter the appropriate values for the fields.



The field information for creating filters differs depending on the fabric for which you are creating filter rules.

- o For ACI fabrics, enter a value for these fields.
 - **Rule Name**—Specify a name for the filter rule.
 - **DCI/ISN**—Check the check box if this is a Data Center Interconnect (DCI) and Intersite Network (ISN) connectivity. This field is only applicable for ACI fabrics.
 - **Enable Rule**—Check the check box to enable this rule for your fabric.
 - **Tenant**—Click on the plus sign to add these tenant field values.
 - **L3Out**—Choose the Layer 3 out or external-routed network.
 - **Switch**—Specify the switch name.
 - **Interfaces/VLAN**—Specify the interfaces/VLAN information.
 - **Subnet**—Enter one or more subnet IP addresses and press the **Enter** key from your keyboard.
- o For NX-OS fabrics, enter a value for these field.



You must create VRF Lite connectivity before creating the filter rules. For more information on VRF Lite connectivity, see the "Establishing inter-fabric connectivity using VRF Lite" section in [Working with Connectivity in Your Nexus Dashboard LAN Fabrics](#).

- **Rule Name**—Specify a name for the filter rule.
- **Enable Rule**—Check the check box to enable this rule for your fabric.
- **VRF**—Click the plus sign and choose a VRF name from the drop-down list.
- **Switch**—Choose a switch name from the drop-down list.
- **Interfaces**—Choose interfaces from the drop-down list, check the check box for each interface you want to add for this rule.
- Click on the check icon to save the information.
- Click the plus sign to add interfaces.
- **Subnet**—Enter one or more subnet IP addresses and press the **Enter** key from your keyboard.

10. Click **Save** to save this rule.


In addition to creating filter rules, you can perform edit (modify), disable, enable, or delete actions using the **Actions** drop-down list.

- o Check the check box next to the filter rule, click **Actions**.
 - Choose **Edit** to modify the filter rule. Note that you cannot modify the name of an existing rule.
 - Choose **Enable** to enable the filter rule or re-enable the rule that you disabled.
 - Choose **Disable** to disable the filter rule. Once the rule is disabled, the filter rule remains in the system but stays inactive.
 - Choose **Delete** to delete the filter rule for the fabric.

View traffic analytics for endpoints

Follow these steps to view Traffic analytics for endpoints.

1. Navigate to **Manage > Fabrics**.
2. Click the *fabric* name.
3. Navigate to **Connectivity > Endpoints**.
 - a. In the Endpoint table click an *IP address*.
 - b. In the **IP details** page, click **Traffic analytics** tab to display the Traffic analytics view for endpoints.

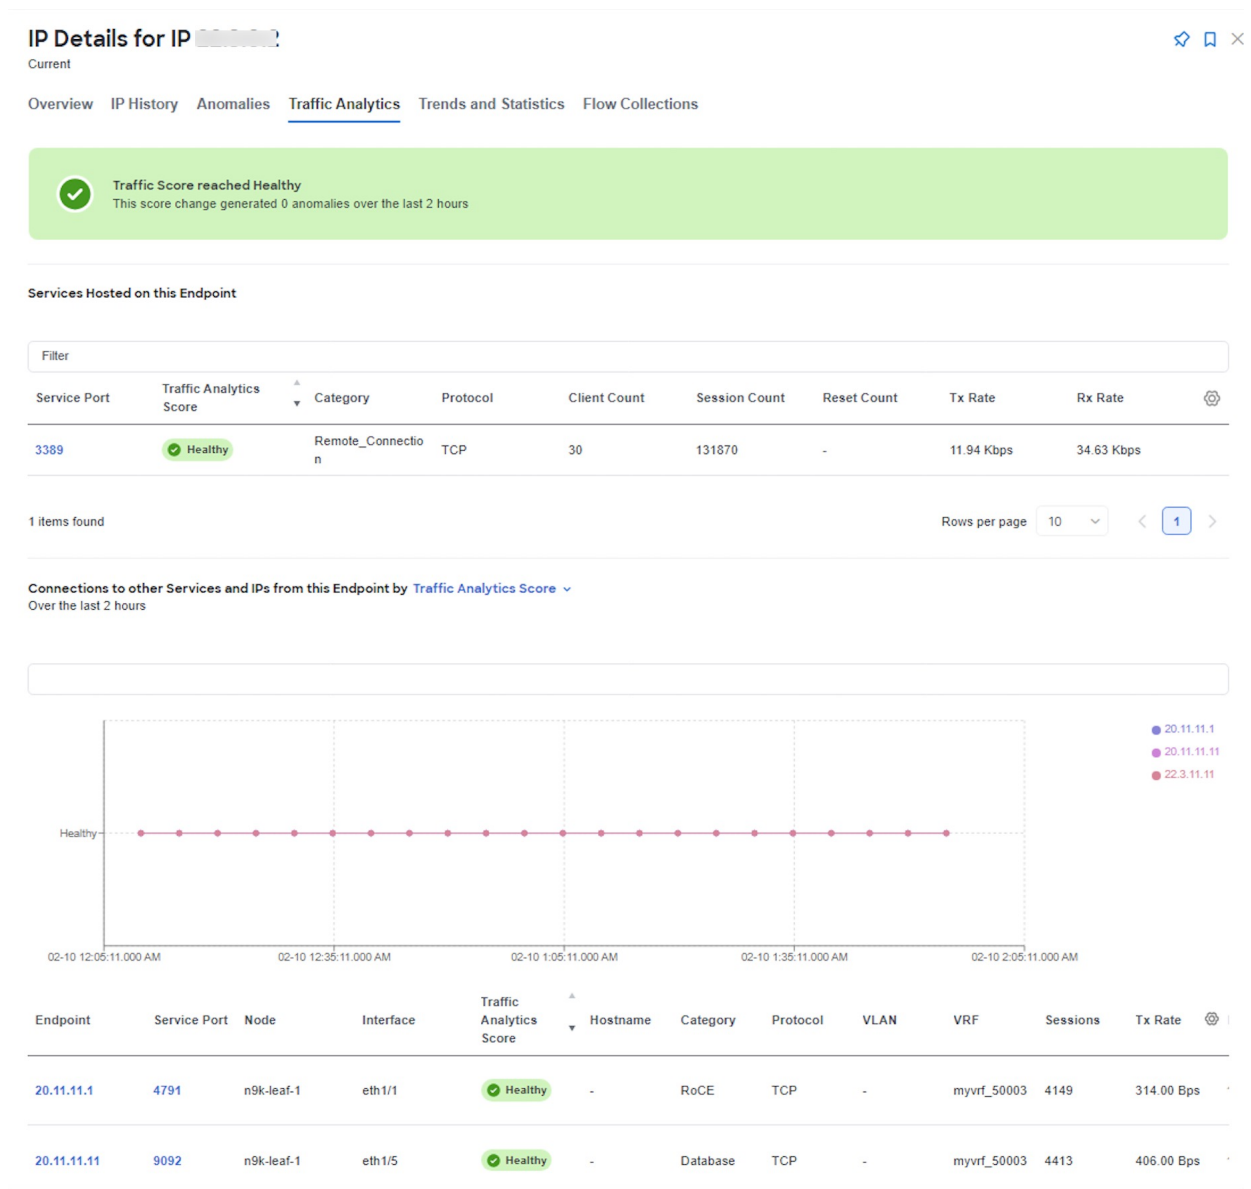

View traffic analytics for service endpoints

You can view the service endpoint details from the **Analysis hub** page.

Follow these steps to view Service Endpoint details.

1. Navigate to **Analyze > Analysis hub > Traffic analytics**.
2. Scroll down to the **Service Endpoints** table.
3. Click on a port number listed in the **Service port** column in the endpoints table to view the **Service Endpoints Details** page.
4. In the **Service Endpoints Details** page, scroll down to the **Client Endpoint** table to view the **Client Endpoint, Attributes, L4-L7 cluster, L4-L7 attach**, and other field information.

The **Attributes** column displays various flags, an "L4-L7" flag indicates the flow is passing through an L4-L7 device.

The **L4-L7 cluster** column displays the name of the device and interface details if the interface details are available. The **L4-L7 attach** column displays where it is attached.

For example, you can click on the service port 80 for the endpoint **51.1.1.250** to launch the **Service Endpoint Details** page for the endpoint **51.1.1.250**.

Endpoint	Service port	Tenant	VRF	Switches	Traffic analytics score	Category	Protocol	
51.1.1.250	22	tnfw11	vrf1	blr5-leaf2	Healthy	Login_Uilities	TCP	...
51.1.1.250	443	tnfw11	vrf1	blr5-leaf2	Healthy	Web	TCP	...
51.1.1.250	80	tnfw11	vrf1	blr5-leaf2	Healthy	Web	TCP	...
51.1.2.250	22	tnfw11	vrf1	blr5-leaf4	Healthy	Login_Uilities	TCP	...

Service Endpoint Details for 51.1.1.250:80

Category: Web

×

Apr 29 2025 02:24:58 PM - Apr 29 2025 04:24:58 PM

OverviewTrends and statisticsAnomaliesFlow collections

Traffic analytics score reached Healthy

2 clients have Healthy Traffic Analytics Score over the last 2 hours

Endpoint general details

IP address	Port	Hostname	Last updated	Tenant name	EPG
51.1.1.250	80	—	Apr 29 2025, 04:19:54.270 PM	tnfw11	epg1
VRF	BD	Protocol	Switches	Interfaces	Fabric
vrf1	bd1	TCP	blr5-leaf2	eth1/40	DC-blr5

Client Endpoint	Attributes	Fabric	Traffic analytics score	Switch	Interface	L4-L7 cluster	L4-L7 attach	EPG	BD	Tenant	VRF	Protocol
51.1.2.250	L4L7	DC-blr5	Healthy	blr5-leaf4	eth1/40	ASA-New:N/A	blr5-tier2-leaf1:eth1/2 blr5-tier2-leaf1:eth1/1	epg2	bd2	tnfw11	vrf2	TCP

The L4-L7 value in the **Attribute** column for the **Client Endpoint** **51.1.2.5** indicates traffic flowing through an L4-L7 device.

The **L4-L7 cluster** column displays the name of the device and interface details, if the interface details are available. The **L4-L7 attach** column displays where it is attached.

View service endpoint details for a fabric

Follow these steps to view service endpoint details for a fabric.

1. Navigate to **Manage > Fabrics** page.
2. Click the *fabric* name.
3. In the fabric overview page, navigate to **Connectivity > Endpoints**.

You can also navigate to the **Connectivity** area in your fabric's **Overview** page and click on **Endpoints** to launch the **Endpoints** page.

DC-blr5
Refresh
View in topology
Actions
X

Overview
Inventory
Connectivity
Segmentation and security
Anomalies
Advisories
Integrations
History

Interfaces
L3 neighbors
Endpoints
Flow collections
Inter-fabric
Routes

Current

Anomaly level

21

- Critical 0
- Healthy 21
- Major 0
- Minor 0
- Warning 0

Change summary ⓘ

0 Endpoint New or modified
+

0 Endp

Filter

MAC	IP addresses	Hostname	Anomaly level	Connected to	Interface	Status
00:21:00:01:00:01	30.8.0.3 30:0:0:8::3 +1 More	-	Healthy	blr5-leaf4	eth1/1	Active
00:00:02:22:22:22	511.4.25	-	Healthy	blr5-leaf4	eth1/8	Active
00:00:07:91:20:5B	511.1.250	-	Healthy	blr5-leaf2	eth1/40	Active
00:16:00:01:00:01	50.3.0.2 50::3:0:2	-	Healthy	blr5-leaf1	eth1/40	Active
00:14:00:01:00:01	50.1.0.2 50::1:0:2	-	Healthy	blr5-leaf3 blr5-leaf4	accBndlGrp_	Active
00:19:00:01:00:01	30.6.0.3 30:0:0:6::3 +1 More	-	Healthy	blr5-leaf3	eth1/40	Active
00:15:00:01:00:01	50.2.0.3 50::2:0:3	-	Healthy	blr5-leaf2	accBndlGrp_	Active
00:26:00:01:00:01	50.13.0.2	-	Healthy	blr5-leaf3	eth1/1	Active
00:00:01:11:11:11	511.3.25	-	Healthy	blr5-leaf3	eth1/8	Active
00:27:00:01:00:01	50.14.0.2	-	Healthy	blr5-leaf4	eth1/2	Active

21 items found

4. Locate the IP address for the endpoint and click on the IP address to launch the IP details page for the endpoint. For example, you can click on the endpoint **51.1.1.250**.

- Click on the **Traffic analytics** tab.

IP details for IP 51.1.1.250

Refresh [View in topology](#) ×

Overview IP history Anomalies **Traffic analytics** Trends and statistics Flow collections

Traffic analytics score reached Healthy ✓ Healthy
This score change generated 0 anomalies over the last 2 hours [View anomalies](#)

Services hosted on this endpoint

Filter									
Service port	VLAN	Traffic analytics score	Category	Protocol	Session count	Reset count	Client count	Tx rate	Rx rate
22	0	✓ Healthy	Login_Utilities	TCP	6838	0	1	-	772.91 kl
443	0	✓ Healthy	Web	TCP	6838	0	1	-	772.91 kl
80	0	✓ Healthy	Web	TCP	6801	0	2	-	1.04 kbp



Service port numbers are displayed for TCP traffic, for ICMP traffic, no service port is displayed.

- In **Service hosted on this endpoint** table, click on the service port to launch the **Service Endpoint Details** page for the endpoint. For example, click service port 80 to launch the **Service Endpoint Details** page for the endpoint 51.1.1.250.80.

Viewing ESG and endpoint association

This section describes how to view the ESGs and endpoints that are associated with ACI fabric.

- Navigate to the fabrics page.

Manage > Fabrics

- Click any fabric to view.

The *Overview* page appears.

- Click **Segmentation and security**.

- Click **ESGs (Security Groups)**.

The ESG details are listed with the endpoint count.

- Click any number that is displayed in the **Endpoints** column.

The endpoints associated to ESG page appear with the list of endpoints.

- Click **Connectivity**.

- Click **Endpoints**.

- b. Click settings icon, in the **Table Configuration** page to enable ESG option.
- c. Click **Save**.

The ESG values associated with each endpoint are displayed in the ESG column alongside.

5. Click on an endpoint **MAC or IP/IPV6** address to view **Endpoint Details** for the MAC or IP/IPV6.

If the endpoint attribute is associated with an ESG, the configured ESG name is displayed in the **ESG** field in the **Endpoint Details** page.

Use the flow troubleshoot workflow


The flow troubleshoot workflow enables you to collect all the flow records between two endpoints. Nexus Dashboard allows you to specify the duration for flow collection and then collect records between specific endpoints for the specified duration. As a result you can view the path visualization, 5-tuple flow information, and any issues seen on individual flows.



The flow troubleshoot workflow feature is not supported in **Traffic analytics compatibility** mode.

Follow these steps to use the flow troubleshoot workflow.

1. Navigate to **Analyze > Analyze Hub > Traffic analytics**.
 2. Choose a fabric from the drop-down list.
 3. Choose a time range from the drop-down list. By default the current time (last 2 hours) is chosen.
 4. Click on a port number listed in the **Service port** column in the endpoints table to view the **Service Endpoints Details** page.
1. In the **Service Endpoint Details** page, click the ellipsis icon for a client IP address and choose **Start Flow Collection**. You might need to scroll all the way to the right in the table of client IP addresses to see the ellipsis icon.

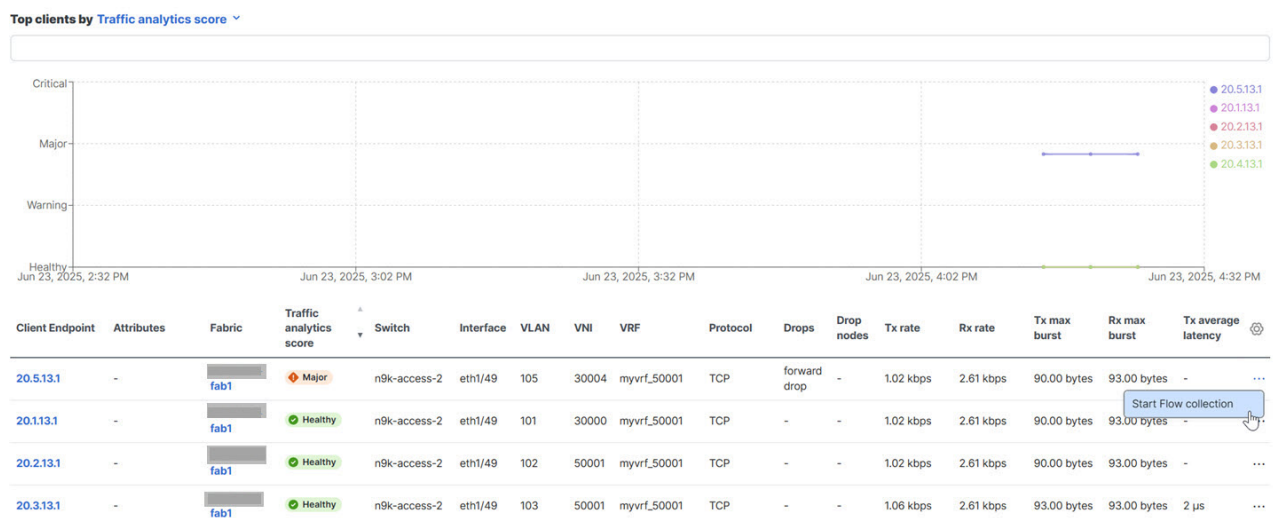

2. Choose the duration to collect flow records for a specific time period. Click **Start and go to Flow Collections Tab**.

← Service Details for [redacted] Category: Congestion_Category

Service Details for [redacted] Category: Congestion_Category

Jun 27 2024 03:56:59 PM - Jun 27 2024 05:56:59 PM

Overview Trends and Statistics Anomalies Flow Collections

Filter

Source	Destination	Destination Port	Protocol	Start Time	End Time	Collection Status	
[redacted]	[redacted]	85	TCP	Jun 27 2024, 6:01:08 PM	-	Scheduling	No Records

1 items found Rows per page 10 < 1 >

3. After the **Collection Status** displays **Completed**, click **View Records** to view the flow record details for that specific service endpoint.

← Service Details for [redacted] Category: Congestion_Category

Flow Records between [redacted] and [redacted]

Job details

Start Time: Jun 27 2024 06:01:08.050 PM End Time: Jun 27 2024 06:10:41.604 PM Collection Status: Completed

Source Address: [redacted] Source Tenant: tenant1 Source VRF: ctx

Destination Address: [redacted] Destination Tenant: tenant1 Destination VRF: ctx Destination Port: 85 Protocol: TCP

Filter

Anomaly Level	Record Time	Switches	Source		Ingress		Dest
			Address	TCP/UDP Port	Tenant	VRF	Address
Healthy	Jun 27 2024 06:02:07.820 PM	ifav22-leaf8	[redacted]	84	tenant1	ctx	[redacted]
Healthy	Jun 27 2024 06:03:07.882 PM	ifav22-leaf8	[redacted]	84	tenant1	ctx	[redacted]
Healthy	Jun 27 2024 06:03:07.882 PM	ifav22-leaf8	[redacted]	85	tenant1	ctx	[redacted]
Healthy	Jun 27 2024 06:04:08.003 PM	ifav22-leaf8	[redacted]	85	tenant1	ctx	[redacted]
Healthy	Jun 27 2024 06:06:07.125 PM	ifav22-leaf8	[redacted]	84	tenant1	ctx	[redacted]

4. To view the flow collection for a fabric, navigate to **Manage > Fabrics**, choose a fabric, and click **Connectivity > Flow Collections**.
5. To perform flow collection for non-TCP flows follow these substeps.
- In the endpoints table, click the service port for an endpoint. The **Service Endpoint Details** page for that endpoint appears.
 - In the **Endpoint general details** area, click the IP address. The **IP details** page for that IP address appears.
 - Click the **Traffic analytics** tab.
 - In the endpoints table, click the ellipsis icon for an endpoint and choose **Start Flow Collection**. You might need to scroll all the way to the right in the table of endpoints to see the ellipsis icon.

Exploring the energy usage for your network using Sustainability

The Nexus Dashboard sustainability report helps you monitor, predict, and improve your network's energy usage, its related carbon emissions, and its total energy cost. The sustainability report enables you to get insights on energy utilization, CO2 emissions, and energy cost for all your fabrics on a monthly basis.

The report is generated by calculating the monthly values for Power Consumption and by summing the usage data across all of your devices at each of your fabrics for every single day in the chosen month. This data is then combined with the Cisco Energy Manager to provide greater insight into what that usage means in terms of energy cost, estimated emissions, and estimated switch power consumption. For more information about the Cisco Energy Manager, see [Cisco Energy Manager](#).

The summary area of the report contains information such as estimated cost, estimated switch power consumption, sources of emission, and estimated emissions.

- Estimated Cost gives you insight into any expected increase or decrease in your fabrics' energy bills based on your monthly energy use.
- Estimated Switch Power Consumption gives you insight into how efficiently your switches are using electricity. Estimated PDU Power Consumption gives you insight into how much electricity your devices or Panduit power distribution units (PDUs) are using.
- Estimated Emissions gives you insight into the sustainability your fabrics have on your total CO2 emissions, based on the sources and amount of energy used.

If you have Panduit PDUs onboarded to Nexus Dashboard, you can use the **Data Source** toggle to see two different electricity values on the sustainability report: one for switches only, and one for PDUs.

- Switch Data: Uses only the electricity data reported by individual switches added to a fabric.
- PDU Data: Uses the electricity data reported by a supported PDU, which could include switches, fans, and any other devices physically plugged into the PDU.

Depending on which value you choose in the **Data Source** toggle, the values calculated for your other metrics, including estimated cost and emissions, will vary.

Using the sustainability report, you can:

- Better anticipate increases in your fabrics' energy bills so that your budgets more accurately reflect real-world usage.
- Better follow the hourly energy usage of an individual fabric. By spreading out usage to avoid peak hours surcharges, you may be able to lower your electricity bill over time.
- See the direct sustainability impact running your fabric has on climate change. Following your emissions over time also gives you the ability to choose lower-carbon sources and track your progress toward meeting ESG goals.



The retention time for the sustainability report in Nexus Dashboard is 12 months.

Cisco Energy Manager

The Cisco Energy Manager is a service developed by Cisco that collects data from various data providers and consolidates the GHG emissions and the source of the energy from the data. The Cisco Energy Manager is hosted in a Cisco Intersight cloud.

View the sustainability report for switches

1. Navigate to **Analyze > Analysis Hub > Sustainability Report**.
2. Choose an online fabric or multiple online fabrics from the drop-down menu.
3. Choose a time range from the drop-down menu.
4. Use the **Display data from** toggle to display data from switches.
5. Click **Prepare Report**.

The sustainability report displays At A Glance, Cost, Energy, and Emissions information for a particular fabric in the chosen month.

6. Examine the **At A Glance** area to see a summary of the estimated cost, estimated switch power consumption, and estimated emissions in the chosen month. Click the **Learn More** icon for more information.

The screenshot shows the 'Sustainability Report' interface. At the top, it says 'Showing data for This Month'. There are two dropdown menus: 'All Fabrics (28)' and 'This Month'. To the right, there is a toggle switch labeled 'Display data from Switches' which is currently turned off, and 'PDUs' is selected. Below this, the 'May At a Glance' section is displayed. It includes a note about emissions estimates and a 'Monthly Summary' box. The summary box contains three items: 'Estimated Cost \$7622.89', 'Estimated Switch Power Consumption 76228.87 kWh', and 'Estimated Emissions 29989899.50 kgCO2e'. Each item has a small icon and a 'Learn More' icon.

Sustainability Report Actions ▾

Showing data for This Month

All Fabrics (28) ▾ This Month ▾

⚡ Display data from Switches PDU

May At a Glance ⓘ


Emissions are estimates based on fabric locations and utilities' self-reported energy sources, plus third-party services like Electricity Maps. You can learn more about our methodology [here](#)

Monthly Summary

Estimated Cost ⓘ \$7622.89	Estimated Switch Power Consumption ⓘ 76228.87 kWh	Estimated Emissions ⓘ 29989899.50 kgCO2e
--------------------------------------	---	--

7. Examine the **Cost** area to see the estimated daily cost in the chosen month and share of daily cost per fabric.


Cost

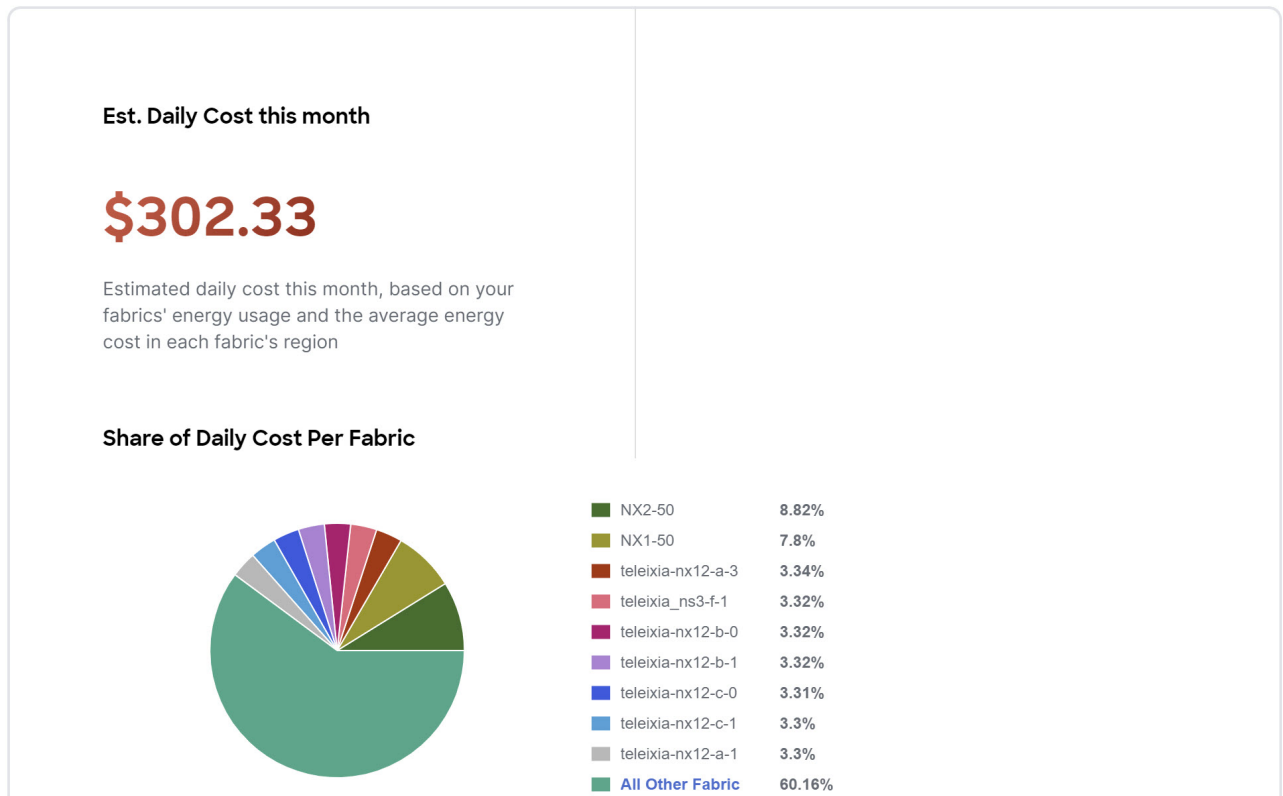

- (Optional) From the **Actions** menu, choose **Fabric Energy Settings** to customize your average cost for the current month for a more accurate estimate. To calculate cost estimates, Nexus Dashboard uses values based on the average cost of grid energy for each region.
- Examine the **Energy** area to see the energy usage in the chosen month in kWh.

Energy

This month, you've used significantly more energy from the grid across your sites

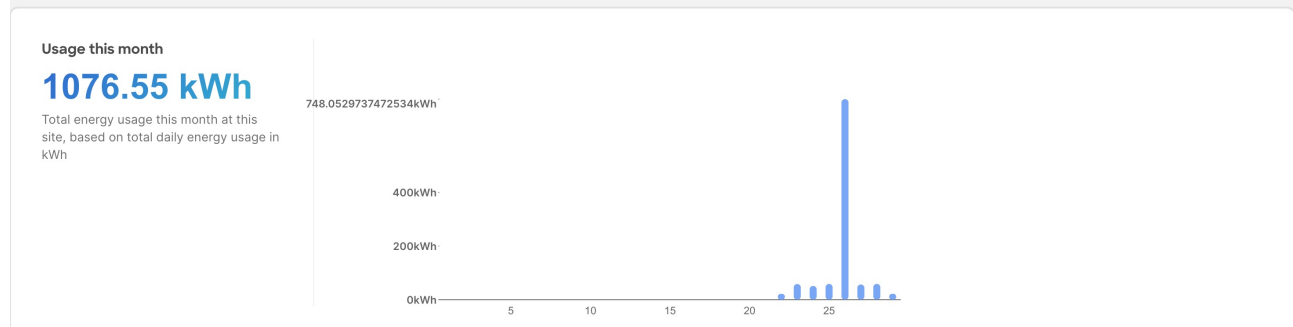


- Examine the **Emissions** area to see the total emissions or efficiency index per fabric, estimated monthly carbon dioxide equivalent emissions, average percentage of energy from low-carbon sources and other sources, and percent of total energy used during each three-hour reporting period by source over all of the days in the chosen month.

For total emissions or efficiency index per fabric, use the toggle to view the information in graphical format or tabular format.

Emissions

About 51% of your energy this month came from low-carbon sources on average with nuclear making up the majority

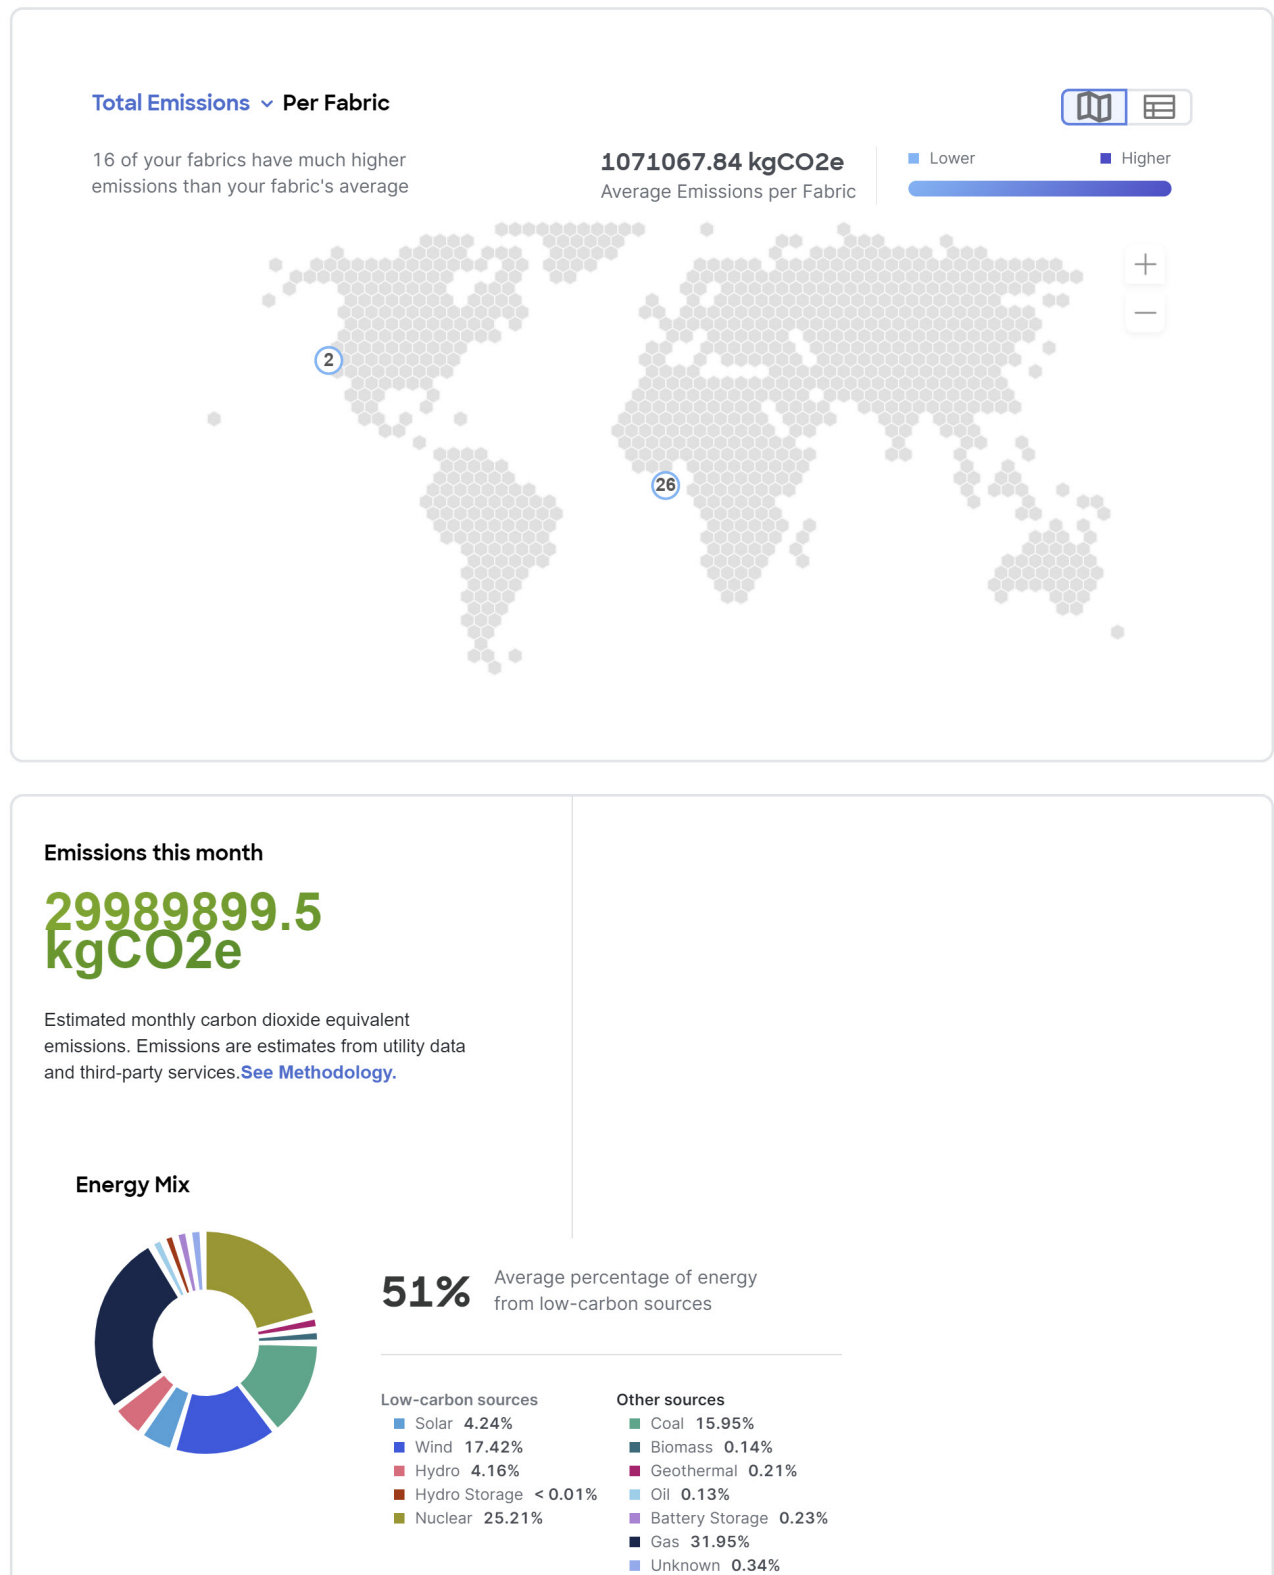
















11. Examine the **Top 5 Devices** area to see the top 5 devices for the highest estimated cost, most energy consumed, and highest estimated greenhouse gas (GHG) emissions.

Top 5 Devices

[View all devices](#)


Showing devices by highest est. cost, energy consumption, and est. GHG emissions for the selected time period

Estimated Cost	Energy Consumption	Estimated GHG Emissions
<div> SJ-Switch-1a \$1.30 USD estimated</div> <div> SJ-Switch-1b \$1.27 USD estimated</div> <div> SJ-Switch-1c \$1.18 USD estimated</div> <div> Controller-1 \$1.12 USD estimated</div> <div> Controller-2 \$1.09 USD estimated</div>	<div> SJ-Switch-1a 4.2 kWh Energy Consumed</div> <div> Controller-1 4.1 kWh Energy Consumed</div> <div> Controller-2 3.8 kWh Energy Consumed</div> <div> SJ-Switch-1b 3.6 kWh Energy Consumed</div> <div> SJ-Switch-1c 3.5 kWh Energy Consumed</div>	<div> Switch_Alaska_AA 8 kg CO₂e</div> <div> Switch_Alaska_AB 5 kg CO₂e</div> <div> SJ-Switch-1a 3 kg CO₂e</div> <div> Switch_Alaska_AC 3 kg CO₂e</div> <div> Switch_Alaska_AD 3 kg CO₂e</div>

Click **View all devices** to see the data for all devices, not just the top 5.

- Choose a fabric from the fabric drop-down menu to view the hourly energy mix.

Hourly energy mix displays the amount of total energy used during each three-hour reporting period by source, over all of the days in the chosen month. The minimum period before you can generate the next report is 3 hours.

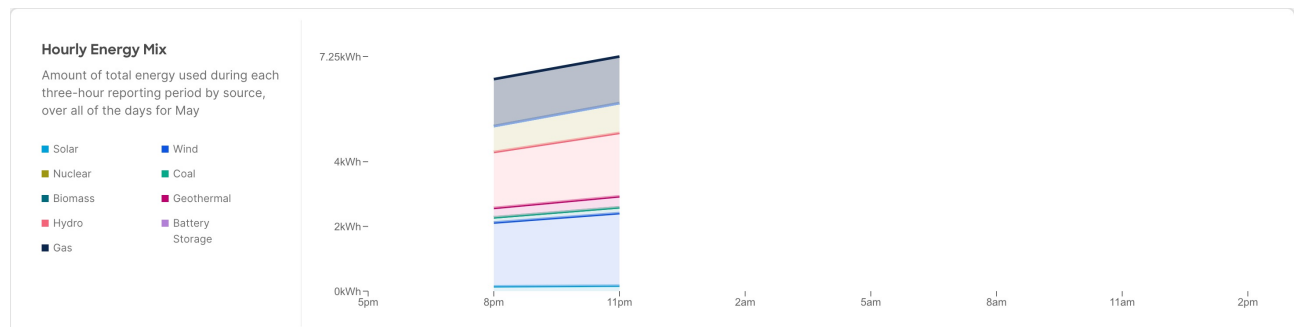

View the sustainability report for PDUs

- Navigate to **Analyze > Analysis Hub > Sustainability Report**.
- Choose an online fabric or multiple online fabrics from the drop-down menu.
- Choose a time range from the drop-down menu.
- Use the **Display data from** toggle to display data from PDUs.
- Click **Prepare Report**.

The sustainability report displays At A Glance, Cost, Energy, and Emissions information for a particular fabric in the chosen month.

- Examine the **At A Glance** area to see a summary of the estimated cost, estimated switch power consumption, and estimated emissions in the chosen month. Click the **Learn More** icon for more information.

December At a Glance ⓘ

Emissions are estimates based on site locations and utilities' self-reported energy sources, plus third-party services like Electricity Maps. You can learn more about our methodology [here](#)

Monthly Summary



Estimated Cost ⓘ
\$485.41



Estimated PDU Power Consumption ⓘ
4854.14 kWh



Estimated Emissions ⓘ
1097.85 kgCO2e

- Examine the **Cost** area to see the estimated daily cost in the chosen month and share of daily cost per fabric.


Cost

Est. Daily Cost for December

\$15.66

Estimated daily cost for December, based on your sites' energy usage and the average energy cost in each site's region

Share of Daily Cost Per Site

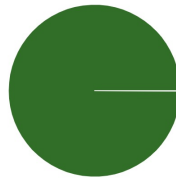

candid-scale2	99.95%
telexia-cs2-a-0	0.05%
candid7	0%
candid8	0%

- (Optional) From the **Actions** menu, choose **Fabric Energy Settings** to customize your average cost for the current month for a more accurate estimate. To calculate cost estimates, Nexus Dashboard uses values based on the average cost of grid energy for each region.
- Examine the **Energy** area to see the energy usage in the chosen month in kWh.

Energy

For December, you've used significantly more energy from the grid across your sites


Usage December

Higher

Total usage from December 1 to date, when compared to your usage for last month November 2023

Daily usage versus prior month's average

0-5% lower	0-24% higher
5-12% lower	24-51% higher
12%+ lower	51%+ higher

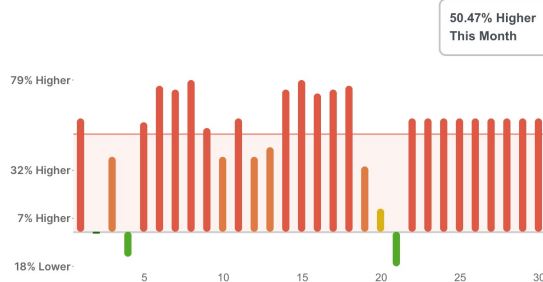


- Examine the **Emissions** area to see the total emissions per fabric, estimated monthly carbon dioxide equivalent emissions, average percentage of energy from low-carbon sources and other sources, and percent of total energy used during each three-hour reporting period by source over all of the days in the chosen month.

For total emissions per fabric, use the toggle to view the information in graphical format or tabular format.

Emissions

About 41 of your energy for December came from low-carbon sources on average with nuclear making up the majority

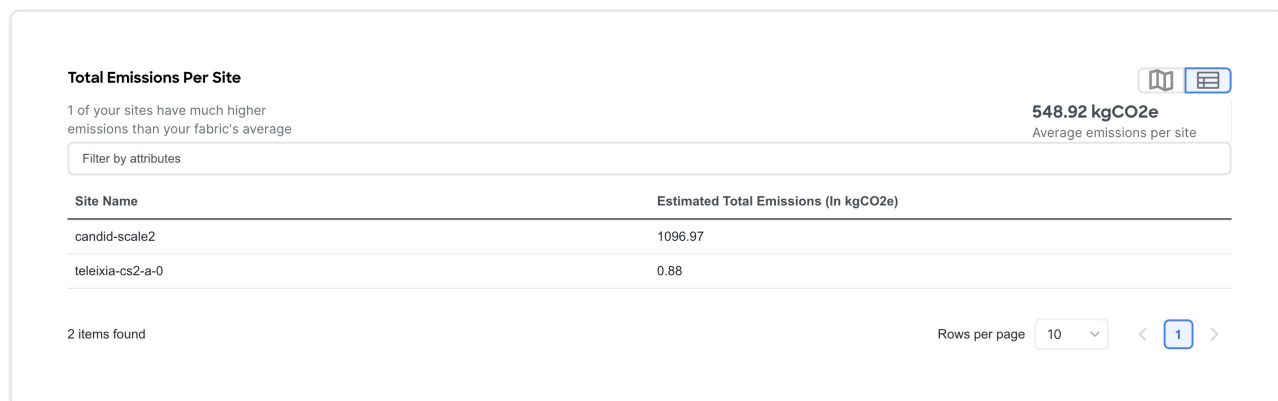


11. Examine the **Top 5 Devices** area to see the top 5 devices for the highest estimated cost, most energy consumed, and highest estimated greenhouse gas (GHG) emissions.

Click **View all devices** to see the data for all devices, not just the top 5.

12. Choose a fabric from the fabric drop-down menu to view the hourly energy mix.

Hourly energy mix displays the amount of total energy used during each three-hour reporting period by source, over all of the days in the chosen month. The minimum period before you can generate the next report is 3 hour.

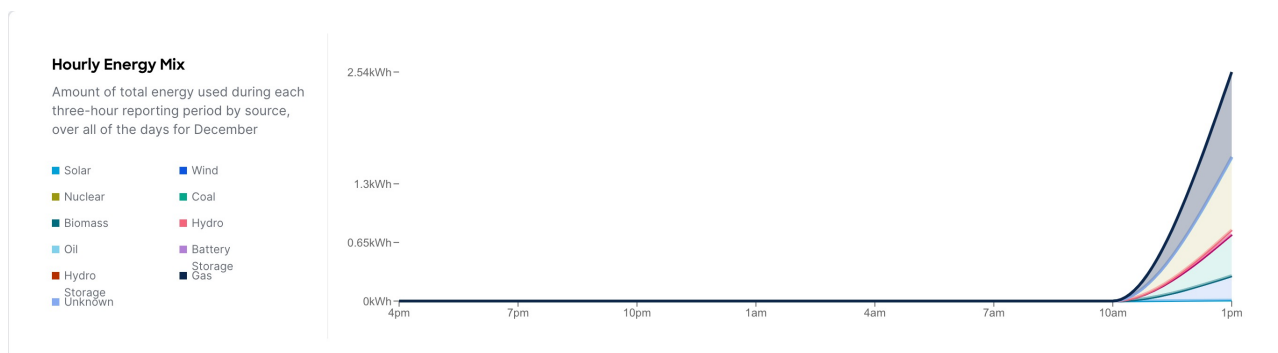

Comparing the configurations between two time periods for your fabric using Delta analysis

Nexus Dashboard performs analysis of fabrics at regular intervals and the data is collected at an interval depending on the number of nodes.

Number of nodes	Interval
Fewer than 100	2 hours
100 to 400	3 hours
Greater than 400	12 hours

At each interval, Nexus Dashboard captures a snapshot of the controller policies and the fabric run time state, performs analysis, and generates anomalies. The anomalies generated describe the health of the network at that snapshot.

Delta analysis enables you to analyze the difference in the policy, run time state, and the health of the network between two snapshots.

Create Delta Analysis enables you to create a new delta analysis and manage existing analysis. See [Create delta analysis](#).

Health Delta

Health Delta analyses the difference in the health of the fabric across the two snapshots.

See [Health Delta](#) for more details.

Policy Delta for ACI

Policy Delta for ACI fabrics analyzes the differences in the policy between the two snapshots and provides a co-related view of what has changed in the ACI Fabric.

See [Policy Delta](#) for more details.

Policy Delta for standalone NX-OS

Policy Delta for standalone NX-OS fabrics analyzes the changed nodes or switches across two snapshots and obtains a co-related view of what has changed in the NX-OS switches.

See [View policy delta analysis](#) for more details.

Guidelines and limitations for delta analysis

- For NX-OS fabrics, the Delta Analysis functionality currently supports the local authentication domain only.

- While you are currently allowed to create more than one Delta Analyses at any given time, we recommend that you do not queue more than one Delta Analysis at any given time. In addition, we recommend that you wait for some time (approximately 10 minutes) between creating new analyses to avoid the risk of adversely impacting the run time of the concurrent online fabric analysis.

The interdependency arises because the Delta Analysis results in an increased load on the database. Sustained high-database load from multiple back-to-back Delta Analyses may affect the run-time of the online analysis.

- For ACI fabrics, the **APIC Configuration Export Policy** must be of the same format (XML/JSON) for both the snapshots.
- For ACI fabrics, the policy delta will not be performed if there are any APIC configuration export policy collection errors.
- For ACI fabrics, the toggle for 'Include Acknowledged Anomalies' which allows you to filter out the acknowledged anomalies from the results displayed does not show anomalies that are manually acknowledged.
- For NX-OS fabrics, when you choose a switch in the **Changed Nodes** area, in **Policy Delta**, the difference in the configuration between the two snapshots is displayed.
- For NX-OS fabrics, for Policy Delta, **Audit Logs** is not currently supported.

Create delta analysis

For ACI Assurance Group users, APIC admin writePriv privileges allow information collection on the APIC host and leaf switches. You must have APIC admin writePriv privileges to configure the **APIC Configuration Export Policy**. This is not a requirement for NX-OS fabrics.

Choose **Analyze > Analysis Hub > Delta Analysis > Create Delta Analysis**.

1. In the **Delta Analysis Name** field, enter the name. The name must be unique across all the analyses.
2. Click **Fabric** to choose the fabric.
3. Click **Choose Earlier Snapshot** and choose the first snapshot for the delta analysis. Click **Apply**.
4. Click **Choose Later Snapshot** and choose the second snapshot for the delta analysis. Click **Apply**.



The two snapshots chosen for the delta analysis must belong to the same fabric.

5. View the Summary of the Delta Analysis created in **Summary**.
6. Click **Save**. The status of the delta analysis is displayed in the **Delta Analysis** table. Post completion, you can **View Delta Analysis** or **Create another Delta Analysis**.

You can perform one delta analysis at a time. To perform another delta analysis, you must stop the current delta analysis and then start the another delta analysis.

1. (Optional) From the Status column, choose an In Progress or Scheduled analysis and click **STOP** in the "..." option to stop the delta analysis.
2. The **Delete** in the "..." allows you to delete the analysis created.



If there are any errors in the creation of a delta rule, it will be displayed on the summary page of the rule creation as a banner.

View delta analysis

The delta analysis page displays the analysis in a tabular form. The analysis are sorted by status. The **Create Delta Analysis** button lets you create a new delta analysis. Click any delta analysis to view more details.

The status of analysis can be either **Aborted**, **Pending**, **Scheduled**, **Stopped**, **Stopping**, **Success**, **Failed**, **Partially Failed**, **Queued**, **Completed** or **In progress**.

The filter bar allows you to filter the analysis by the following factors:

- Name
- Status
- Fabric
- Submitter ID

The delta analysis dashboard displays the general details of the analysis along with the health and policy delta.

- To view the results of health delta analysis, see [View health delta analysis](#).
- To view the results of policy delta analysis, see [View policy delta analysis](#).

View health delta analysis

Health Delta analyses the difference in the health of the fabric across the two snapshots. The results are displayed in the following areas:

The toggle for 'Include Acknowledged Anomalies' allows you to filter out the acknowledged anomalies from the results displayed if enabled. If it is disabled, manually acknowledged anomalies are included in the Anomaly Count.

- **Anomaly Count:** Displays the difference in anomaly count per severity across the snapshots. If you click on the difference that shows, the **All Anomalies** table gets filtered accordingly.

The first count represents the anomalies found only in the earlier snapshot. The second count represents the anomalies common in both the snapshots. The third count represents the anomalies found only in the later snapshot.

Delta analysis now performs an object delta rather than a count delta. So along with the count, you can now view how many anomalies were cleared, how many are unchanged and how many are new anomalies.

The anomaly count also displays the difference for the different types of anomalies. It is displayed for **Critical**, **Major** and **Warning**.

- **Delta by Resources:** Displays the count of resources by type that are new, lost or unchanged. You can also specifically view the resources whose count has changed by clicking the **View**

Changed Only toggle. The filter bar allows you to filter the data by resource. The gear icon allows you to customize the columns as per your view. The table also shows the count delta and the health delta. Count delta includes both healthy and unhealthy resources. Healthy resources will not have any anomalies associated with it if filtered. Health delta shows only unhealthy resources and will return anomalies if filtered by anomalies.

If you click any of the counts for the Count and Health Delta resources, you can view the list of resources along with the node information. For SVI, the node column provides the VNI association.

- **All Anomalies:** The **Grouped** view displays the delta status for grouped anomalies across the snapshots. The **Ungrouped** view displays the delta status for each anomaly across the snapshots.

For ACI fabrics, the Anomalies can be listed for the following kinds of snapshots:

- Earlier Snapshot
- Later Snapshot
- Earlier Snapshot Only
- Later Snapshot Only
- Both Snapshots

For NX-OS fabrics, the Anomalies can be listed for the following types:

- New
- Unchanged
- Cleared
- From Earlier Snapshot
- From Later Snapshot

The anomalies are displayed in a tabular form with the following fields:

- Title
- Anomaly Level
- Category
- Count

The gear icon allows you to customize the columns as per your view.

For ACI fabrics, you can filter the results based on the following attributes:

- Anomaly Level
- App Profile DN
- BD DN
- Title
- Contract DN
- EPGs


- External Routes
- Interfaces
- Internal Subnets
- L3Out DN
- Leaf DN
- Tenant DN
- Endpoints
- VRF DN

For NX-OS fabrics, you can filter the results based on the following attributes:

- Border Gateways (Leaf)
- Border Leafs (Leaf)
- Interfaces
- L2VNIs
- L3VNIs
- Leafs
- Spines
- SVIs
- VLANs
- VNIs
- VPCs
- VRFs

Choose an anomaly to view the anomaly details.

View policy delta analysis

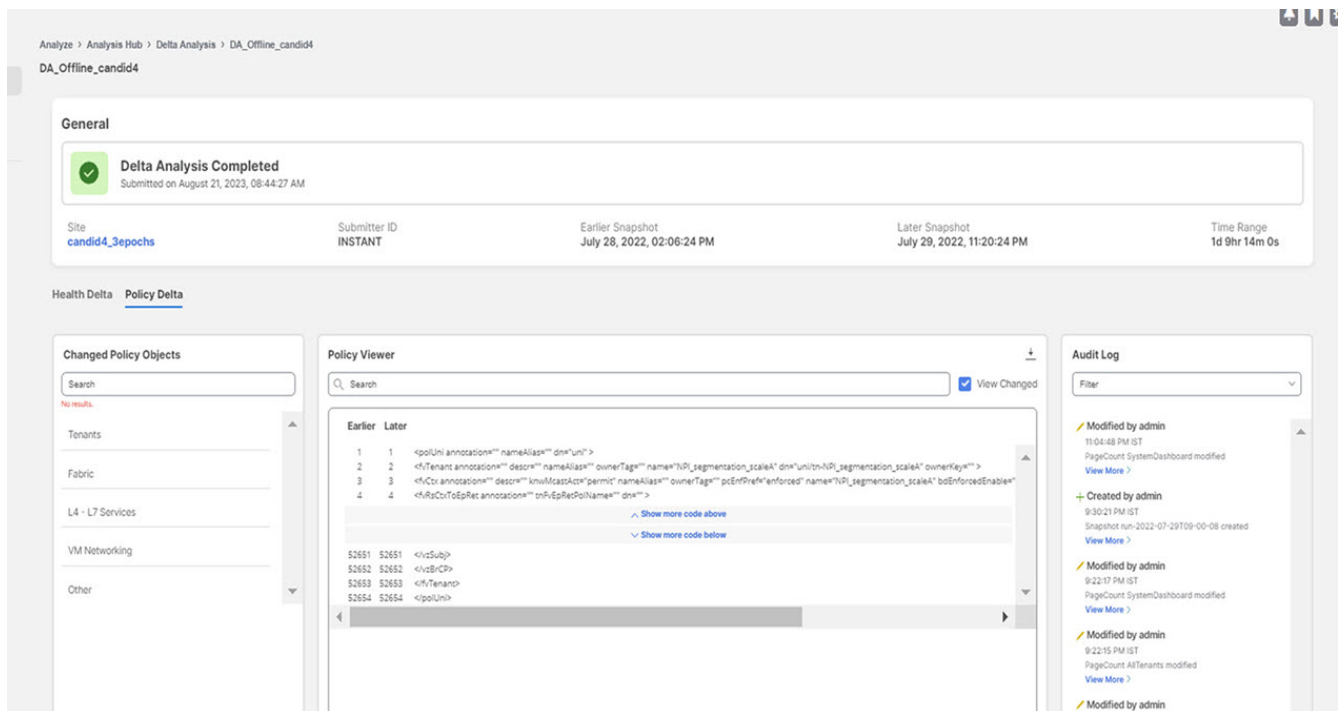

Click **Policy Delta** to view the policy changes across the two snapshots. Policy Delta includes Changed Policy Object and Policy Viewer. ACI fabrics also include Audit Log.

1. **Changed Policy Object** displays the changed policy object tree across the two snapshots. The corresponding changes in the Policy Viewer and Audit Log panels are highlighted. Use the **Search** bar to perform a DN search.
 - a. Drill down on a particular object to view the object types that have changed. The number indicates the number of changes to the object.
 - b. Choose the changed object type to view the anomalies that have changed.
 - c. Click DN link to access the affected object type in APIC.
 - d. Click **Show Changes** to view the changes in the Policy Viewer and Audit Log panels.
2. The **Policy Viewer** panel displays the policy configuration across the earlier and later snapshots. It also helps view the added, modified, and deleted policy configurations between the two snapshots and view the context around the modified areas in the policy delta.
 - a. Use the color coding to visualize the added, deleted, modified, and unchanged content across the two policies.
 - b. Click **Show More Code Above** or **Show More Code Below** to display more content.
 - c. Click the download icon to export the policy configuration for the earlier snapshots policy and later snapshots policy.
 - d. Enter a value in the **Search** bar to perform a text search in added, modified, deleted, and unchanged areas in the policy delta.
3. The **Audit Log** panel then displays all the audit logs that were created between the two snapshots. Nexus Dashboard collects audit logs from APIC and computes the difference in the audit logs between the two snapshots.

A correlated view of what has change in the data center is displayed in the **Audit Log** panel. When you choose a particular object in the **Changed Policy Objects** panel, the relevant difference is highlighted in the **Policy Viewer** panel and the relevant audit log is highlighted in the **Audit Log** panel.

APIC audit logs are records of user-initiated events such as logins and logouts or configuration changes that are required to be auditable. For every snapshot, the audit log history is limited to last 24 hrs.

- a. Use the **Filter** bar to filter by DN, User ID, or Any.
- b. Click **View More** on an audit log entry to view when the changes were made and who made the changes. The timestamp on the audit log entry corresponds to the the timestamp on the APIC audit log.
- c. Click Audit Log entry to access the affected object type in APIC.

Viewing the impact of configuration changes using Pre-Change analysis (ACI fabrics)

Navigate to **Analyze > Analysis Hub > Pre-Change**.

Pre-Change Analysis allows you to change a configuration for a fabric, to model the intended changes, perform a Pre-Change Analysis against an existing base snapshot in the fabric, and verify if the changes generate the desired results.

Analyze > Analysis Hub > Pre-Change Analysis

Pre-Change Analysis

Create New Pre-Change Analysis

Filter by attributes

<input type="checkbox"/>	Pre-Change Analysis Name	Assurance Entity Name	Base Epoch	Analysis Status	Analysis Submission Time	Submitter ID	
<input type="checkbox"/>	test2	ACI-Paris	February 01, 2024, 11:24:35 PM	Completed	February 01, 2024, 11:48:29 PM	Local: admin	...
<input type="checkbox"/>	test	ACI-Paris	February 01, 2024, 11:24:35 PM	Completed	February 01, 2024, 11:43:47 PM	Local: admin	...

2 items found

Rows per page 10 < 1 >

© Cisco Systems, Inc.

Current date and time is Thursday, February 15, 07:50 AM (IST)

After you model the changes for a Pre-Change Analysis job, you can choose **Save** or **Save And Analyze**. By choosing **Save**, you can save the Pre-change Analysis job without having to start the analysis right away. You can return to the job later, edit the changes if required, and then run the analysis later. The **Save** option is supported only for a Pre-Change Analysis job with manual changes.

If you choose **Save And Analyze**, the job gets scheduled and an analysis is provided. The changes are applied to the chosen base snapshot, the analysis is performed, and results are generated. For every pre-change analysis job listed in the table, a delta analysis is performed between the base snapshot and the newly generated snapshot.

In Pre-Change Analysis, to see the details of a completed Pre-Change Analysis job, click that job in the table. This opens a new page that displays the following information:

- Dashboard
- Delta Analysis
- Compliance Analysis

Analyze > Analysis Hub > Pre-Change Analysis > test2

test2

Pre-Change Analysis information is based on the simulation created for the Feb 01, 2024, 11:24 PM snapshot.

Dashboard Delta Analysis Compliance Analysis

General Information

Site
ACI-Paris

Snapshot
02/01/2024 11:24:35 PM

Description (Optional)
Unspecified

Change Definition
Manual

Change Type
ADD

Object Type
fvBD

Bridge Domain's Parent
uni/tn-OOB_Management

Bridge Domain (BD-)
bd1

Private Network

Optimize Wan Bandwidth between sites
no

ARP Flooding
no

Description
-

rogue exception mac wildcard support for bd
no

Clear Endpoints
no

General Information shows the following data:

- Fabric name
- Snapshot details
- Description
- Change Definition

In case of Manual Changes, you see list of changes that were modeled for that job(Change type, Object type, name alias, Priority, Description, App profile) and in case of JSON/ XML file upload you see the Change Simulation.

As the job is complete, the severity area displays the anomalies that are generated for these changes. To understand the data displayed under Delta Analysis, view [\[Delta analysis\]](#).

To understand the data displayed under Compliance Analysis, view [\[Compliance\]](#).

The ... button allows you to perform the following actions:

- Edit Pre Change Analysis
- Clone Pre Change Analysis
- Delete Pre Change Analysis

You can also perform these actions by clicking the checkbox for the desired job or by using the **Actions** button.

Things to remember while performing the three actions:

1. You can clone Pre-Change Analysis jobs for manual changes only.
2. You can delete up to 10 Pre-Change Analysis jobs at a time. You cannot delete a job in the

Running state. If you attempt to do that, an appropriate notification will display.

If anomalies are raised in the analysis, make the required modifications based on the results and re-run the analysis until you obtain satisfactory results. The download option in a Pre-Change Analysis job allows you to download a JSON file that can be uploaded to Cisco APIC. However, if you choose the file upload approach, you can upload a JSON or an XML Cisco APIC configuration file to run a Pre-Change Analysis job.

Once the analysis starts, the status of the job will be shown as Running. During this time, the specified changes will be modeled on top of the base snapshot, and complete logical checks will be run, including Policy Analysis and Compliance. No switch software or TCAM checks will be performed. The status of the Pre-Change Analysis job is marked **Completed** when the entire analysis including Delta Analysis completes. The Delta Analysis is automatically triggered and the associated Pre-Change Analysis job is displayed as running during that time. The Delta Analysis is performed only on checks supported in Pre-Change Analysis job.

You can view changes applied by a user to a specific Pre-Change Analysis job by clicking the job in the table. If the changes are applied manually, you can view the different changes chosen by the user. If the job is created using a JSON file, the Change Definition field displays the name of the JSON file from where the changes were imported.

Pre Change Analysis lists all the analyses performed in a tabular form with the following fields:

1. Analysis Name
2. Assurance Entity Name
3. Base Epoch
4. Analysis Status
5. Submitter ID

Pre-change analysis options

The following list specifies the options you can choose on your pre-change analysis job. Only the objects listed are supported.

1. Add, modify, or remove Tenant.
2. Add, modify, remove App EPG (*supported attributes*: preferred group member, intra EPG isolation; *relations for App EPG*: BD, provided, consumed and taboo contracts; *export/import of contracts* is not supported.)
3. Add, modify, or remove a VRF (*supported attributes*: policy control enforcement preference, policy control enforcement direction, BD enforcement status, preferred group member, description).
4. Add, modify, or remove a BD (*supported attributes*: description, optimize WAN bandwidth, type, ARP flooding, IP learning, limit IP learning to subnet, L2 unknown unicast, unicast routing, multi-destination flooding, multicast allow, and L3 unknown multicast flooding).
5. Add, modify, or remove a contract (*supported attributes*: scope, description).
6. Add, modify, or remove a contract subject (*supported attributes*: reverse filter ports, description, priority, target DSCP, filter name, forward filter name, and reverse filter name).

7. Add, modify, or remove subnets (*supported attributes*: scope, preferred, description, primary IP address, virtual IP address, and subnet control).
8. Add, modify, or remove an App profile (priority, description).
9. Add, modify, or remove an L3Out (*supported attributes*: description, VRF name, Target DSCP, and route control enforcement).
10. Add, modify, or remove an L2Out (*supported attributes*: description, BD name, encapsulation type, and encapsulation ID).
11. Add, modify, or remove an L3 Ext EPG (*supported attributes*: preferred group member, description, priority; *supported relations*: VRF, provided contracts, consumed contracts, taboo, and target DSCP).
12. Add, modify, or remove an L2 Ext EPG (*supported attributes*: preferred group member, description, priority, target DSCP and provided contracts, supported contracts, and taboo contracts).
13. Add, modify, or remove L3 Ext EPG Subnets (*supported attributes*: description, and scope).
14. Add, modify, or remove a Taboo Contract (*supported attributes*: description).
15. Add, modify, or remove a Taboo Subject (*supported attributes*: name, description; *supported relations*: vzRsDenyRule).
16. Add, modify, or remove a Filter and Filter entries.

For Fabric Access Policies, you can choose to add the following to your pre-change analysis job:

1. Add, modify, or remove relationship between EPG and a physical domain.
2. Add, modify, or remove relationship between physical domain and a corresponding VLAN pool.
3. Add, modify, or remove relationship between physical domain and Attachable Entity Profile.
4. Add, modify, or remove a leaf interface profile.
5. Add, modify, or remove a port selector.
6. Add, modify, or remove a switch profile.
7. Add, modify, or remove a switch selector.
8. Add, modify, or remove an interface policy group.
9. Add, modify, or remove an interface policy for CDP and LLDP.

Guidelines and limitations for pre-change

When using Pre-Change Analysis follow these guidelines and limitations:

- Pre-change Analysis can be conducted for fabrics and uploaded files.
- More than one Pre-change Analysis can be run on the same base snapshot.
- Pre-Change Analysis cannot be run for a pre-change snapshot being used as a base snapshot.
- Only logical configuration anomalies are modeled and run in a Pre-Change Analysis. Switch software and TCAM changes are not modeled. After the analysis completes, a Delta Analysis will automatically start to compare the snapshot, generated due to the Pre-Change Analysis, with the base snapshot. Delta Analysis is performed only on checks supported in the Pre-Change Analysis job.

- During a pre-change analysis, certain anomalies that exist in the base snapshot will not be analyzed in the pre-change analysis. As a result, these anomalies will not appear in the Pre-Change Analysis snapshot even though the violation continues to exist. The reason that such an event is not analyzed in a pre-change analysis is because these anomalies require not just logical data, but they also require switch software and TCAM data.
- Compliance Analysis displays the results of compliance checks in the Pre-Change Analysis snapshot.
- A local search of anomalies from a Pre-Change Analysis snapshot can be performed and viewed in the results section by navigating to specific tabs for **Dashboard**, **Delta Analysis**, **Compliance Analysis**, and **Explore**.
- Pre-Change Analysis does not support or analyze any service chain related changes or objects.
- Delta Analysis does not allow a Pre-Change Analysis snapshot to be chosen.
- If configuration data does not exist for a base snapshot, and you run a pre-change analysis job using this snapshot, new logical configuration files will not be generated. For such pre-change analysis jobs, the Download icon will be grayed out/disabled in the side panel. You will not be able to download a new logical configuration.
- The Pre-Change Analysis could go into a Failed state if an imported configuration has unsupported objects. Figure out the Cisco ACI objects that are unsupported by referring to the [Pre-change analysis options](#) section, remove them, and import the configuration again before starting another Pre-Change Analysis job. If there is a failed Pre-Change Analysis, the error message for the failure is displayed in the Pre-Change Analysis table under **Analysis Status**.
- The Pre-change Analysis feature is supported in Cisco APIC release 3.2 or later. If you attempt to run a Pre-change Analysis with a Cisco APIC release earlier than release 3.2, an ERROR message indicates that Pre-Change verification is supported on APIC 3.2 or higher, and you cannot run the analysis.
- If there is an analysis that is currently running when you start a Pre-Change Analysis, that job is completed first. The new jobs are serviced in the order the jobs are scheduled. Nexus Dashboard runs the jobs in the order that best suites the schedule and the available resources. All jobs, including the Pre-Change Analysis job are given the same priority.
- You can upload a JSON or an XML Cisco APIC configuration file to run a Pre-Change Analysis job.
 - The maximum file size is 10 MB for vND and 50 MB for pND.
 - An uploaded file will be pruned by removing white spaces and endpoint objects (fvCEp) to reduce the file size.
- You can save as many Pre-Change Analysis jobs as you want. However, for a fabric, you can only run a Pre-Change Analysis job one at a time.
- If you modify an object that belongs to a tenant, the pre-change analysis file size for that tenant cannot be more than 10 MB.

Support for multiple objects in pre-change analysis

In addition to multiple tenants, you can also add multiple infrastructure objects as part of a Pre-Change Analysis JSON or XML job. The Pre-Change Analysis upload path allows you to add, modify, and delete multiple objects across the policy universe. There are no additional configurations required to use this feature. Your Pre-Change Analysis job for multiple objects will run, based upon the files you upload.

The following file upload formats are accepted:

- A JSON or XML file with IMDATA of size 1.
- An IMDATA that contains a single subtree of the intended changes. The root of the subtree can be the UNI or any other Managed Object as long as the changes are represented as a single subtree.
- Use the file that you had uploaded from a JSON or XML path to perform a Pre-change Analysis. After the Pre-Change Analysis is complete, you can upload the same file to ACI to be used to make the changes.

Known issues for pre-change analysis

- When pre-change analysis scale limits are exceeded, the analysis can fail with no error message.
- For pre-change analysis jobs, you must not modify configurations where the total number of EPGs, BDs, VRFs are greater than 16,000.
- When creating a new pre-change analysis, note the following:
 - If the JSON/XML file size being uploaded is less than 100 MB but greater than 15 MB, then the API validates the file and throws a validation error as follows: *Uploaded file size exceeds the 15MB(pND)/8MB(vND) maximum limit*. When users access Nexus Dashboard, and try to create a pre-change analysis job with a file size greater than 15MB(pND)/8MB(vND), the UI throws the following error: *File size cannot be larger than 15MB(pND)/8MB(vND)*. Therefore, files larger than 15MB(pND)/8MB(vND) are not supported in pre-change analysis.
 - If you upload a file with unsupported objects, Nexus Dashboard will remove the unsupported object and run the job.
- A pre-change analysis job may fail or return incorrect results if the Cisco ACI configuration has features that are unsupported by Nexus Dashboard.
- Pre-change analysis is not supported in Cisco ACI configurations that contain service chains.
- Nexus Dashboard performs a limited set of checks on the JSON file uploaded for pre-change analysis. Cisco ACI may reject this file.
- Pre-change analysis may incorrectly report errors for attributes of subnets of external routed networks.
- Pre-change analysis is supported in the following Cisco APIC releases:
 - For the 3.2(x) release, 3.2(9h) and earlier
 - For the 4.0(x) release, 4.0(1h) and earlier
 - For the 4.1(x) release, 4.1(2x) and earlier
 - For the 4.2(x) release, 4.2(7s) and earlier
 - For the 5.0(x) release, 5.0(2e) and earlier
 - For the 5.1(x) release, 5.1(4c) and earlier
 - For the 5.2(x) release, 5.2(4d) and earlier
 - For the 5.3(x) release, 5.3(1b) and earlier
 - For the 6.0(x) release, 6.0(4c) and earlier

Create pre-change analysis job

1. Navigate to **Analyze > Analysis Hub > Pre-Change**.
2. In **Pre-Change**, click **Create Pre-Change Analysis**. In **Create Pre-Change Analysis**, perform the following actions:

General

- a. In the **Pre-Change Analysis Name** field, enter a name.
- b. In the **Description** field, add a description for the analysis if you would like to.
- c. In the **Fabric** field, choose the appropriate fabric.
- d. In the **Snapshot** field, specify the appropriate snapshot.

Change

- a. Under **Change**, choose the appropriate option. (**Import JSON/XML File** or **Manual Changes**).



Depending upon your selection, the relevant fields are displayed for you to populate.

If you choose the file import option to upload a JSON or XML file upload, you must click **Save & Run** to start the Pre-Change Analysis operation.

If you choose the manual changes option, choose the **Change Type** and the **Object Type** and then you can either save & run the job, or save the job to start it at a later time by clicking **Actions > Edit Pre-Change Analysis** and clicking **Save & Run**. When in **Edit**, you can also change some of the fields if required.

Complete the selections as appropriate, and click **Save** or **Save & Run**.

After a Pre-Change Analysis job is completed, the **Pre-Change Analysis** table displays the status for the job as completed.

Click the Pre-Change Analysis Name for which you want to view the details. In a sidebar to the right, the details are displayed in a column including the general information such as the name of the job, snapshot, and change definition type. The list of changes modeled for the job are also available. If you are viewing a completed job, the anomalies that were generated as a result of the changes are displayed at the top of this page.

For completed jobs, click the icon on the top right of the sidebar to navigate to the results page. Further details about the job are available here under the specific tabs for **Dashboard**, **Delta Analysis**, **Compliance Analysis**.

Download pre-change analysis job

You can download an existing Pre-Change Analysis as follows:

- In the **Pre-Change Analysis** table, click the appropriate pre-change analysis name for a completed Pre-Change Analysis job. Click the download icon to download the file.

- The pre-change analysis downloads as an offline tar file with the pre-change analysis contents displayed in JSON format.



In the downloaded file, you can view all the attributes which include attributes that are modified and those that are not modified. If desired, the downloaded file can be uploaded to your Cisco APIC.

Collecting and analyzing your device logs using Log Collector

The Log Collector feature enables you to collect and upload the logs for the devices in your network to Cisco Intersight Cloud. It also enables Cisco TAC to trigger on-demand collection of logs for devices on the fabric and pulls the logs from Cisco Intersight Cloud.

The Log Collector has two modes:

- User initiated - The user collects the logs for devices on the fabric and then uploads the collected logs to Cisco Intersight Cloud after the log collection job is completed. You can automatically upload the log files to Cisco Intersight Cloud after the log collection job is completed.
- TAC initiated - Cisco TAC triggers on-demand collection of logs for specified devices and pulls the logs from Cisco Intersight Cloud.

Device connectivity notifier for TAC-initiated collector

Nexus Dashboard uses the device connectivity issue notifier on Nexus Dashboard to communicate with the devices. The notifier checks for TAC triggered on-demand collection of logs. In case the fabric is not configured properly to communicate with the device, Nexus Dashboard notifies the following:

- The device is not configured for node interaction.
- You can not run a Log Collector job on the device.
- Nexus Dashboard cannot connect to the device.

If the node interaction is not healthy on the device, you cannot choose the device for Log Collector to collect logs. In the GUI, the device is greyed out.

Guidelines and Limitations

- If you see the error message **Unable to Add Fabric** when you try to create a new log collector job, this can sometimes occur if the local time is not synchronized properly on the PC where you are accessing the Nexus Dashboard GUI. Synchronize the local time on your PC and attempt to create the log collector job again to resolve the issue.

Log collector dashboard

Navigate to **Analyze > Analysis Hub > Log Collector**.

The **Log Collector** dashboard displays a graph of Logs by Job status for a particular fabric and displays the latest log collections.

The filter bar allows you to filter the logs by Status, Name, Node, start time, and end time. For standalone NX-OS fabrics, you can also filter by Type.

Use the following operators for the filter refinement:

Operator	Description
==	With the initial filter type, this operator, and a subsequent value, returns an exact match.
!=	With the initial filter type, this operator, and a subsequent value, returns all that do not have the same value.
contains	With the initial filter type, this operator, and a subsequent value, returns all that contain the value.
!contains	With the initial filter type, this operator, and a subsequent value, returns all that do not contain the value.

The page also displays the log collection jobs in a tabular format. The jobs are sorted by status. Choose the log collection job in the table to view additional details.

General

This displays the status of the job along with a graph showing the number of devices by status.

Details

The following information is listed:

- Creation Time
- End Time
- Nodes
- Job ID

Selected Nodes

This displays the list of nodes in a tabular form along with the status of each job and the upload status for the files uploaded.



Upload All Files allows you to upload all the files.

... allows you to Download each file separately.

TAC-initiated log collector

The TAC initiated log collector enables Cisco TAC to trigger on-demand collection of logs for specified user devices in the Cisco Intersight Cloud to the Device Connector.

When the TAC assist job is complete, the new job appears in the **Log Collector** table. Choose the log collection job in the table to display additional details. The **Log Collection** status displays information such as status, general information, and node details.



You can save TAC assist job details as a PDF with the browser print option (Only supported on Chrome and Firefox).

Upload logs to Cisco Intersight Cloud

- Ensure that Nexus Dashboard is connected to Cisco Intersight Cloud.
- Ensure that Nexus Dashboard is connected to Cisco Intersight Device Connector.


Choose **Analyze > Analysis Hub > Log Collector > Create Log Collector Job**.

1. Enter the name.
2. Click **Select Fabric** to choose a fabric.
3. (Optional) Check **Auto Upload Log Files** to automatically upload the log files to Cisco Intersight Cloud after the log collection job is completed.
4. Click **Next**.
5. Click **Add Nodes** and then choose the nodes from the **Select Nodes** menu.
6. Click **Add**. The nodes are displayed in the **Select Nodes** table.
7. Click **Start Collection** to initiate the log collection process.

When the job is complete, the new job appears in the **Log Collector** table.


8. Click the job in the table to display additional job details.
9. Click

the

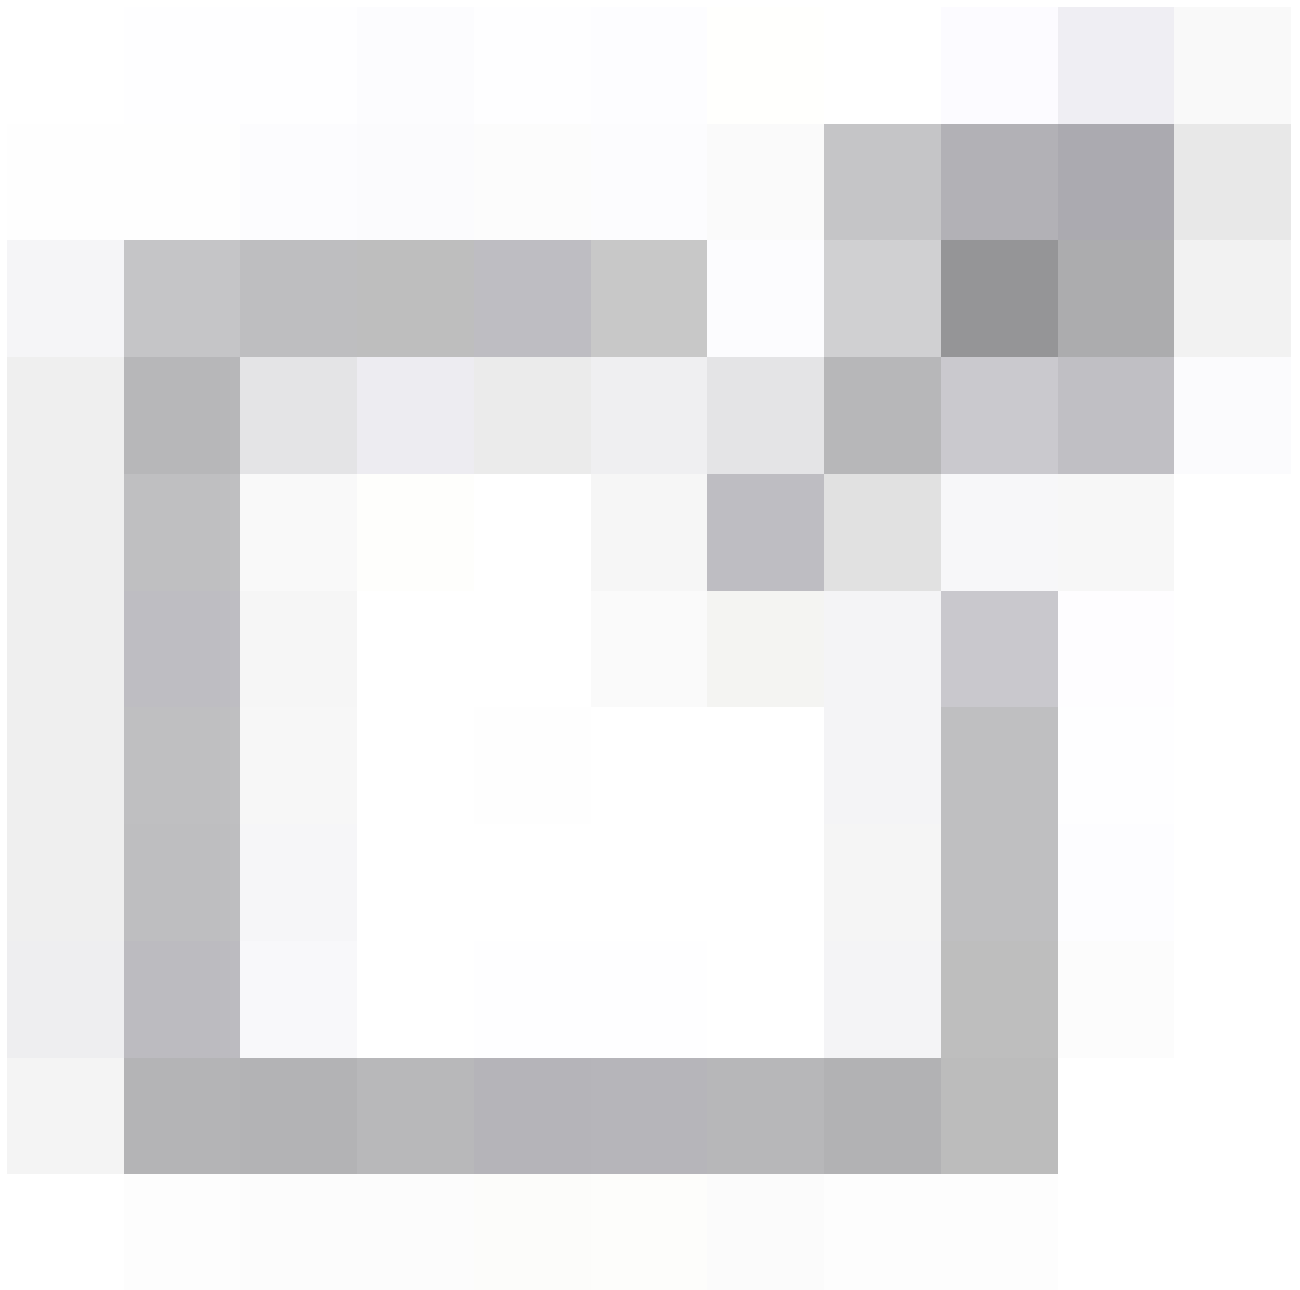

icon to display **Log Collection** status.

10. Choose the node and click

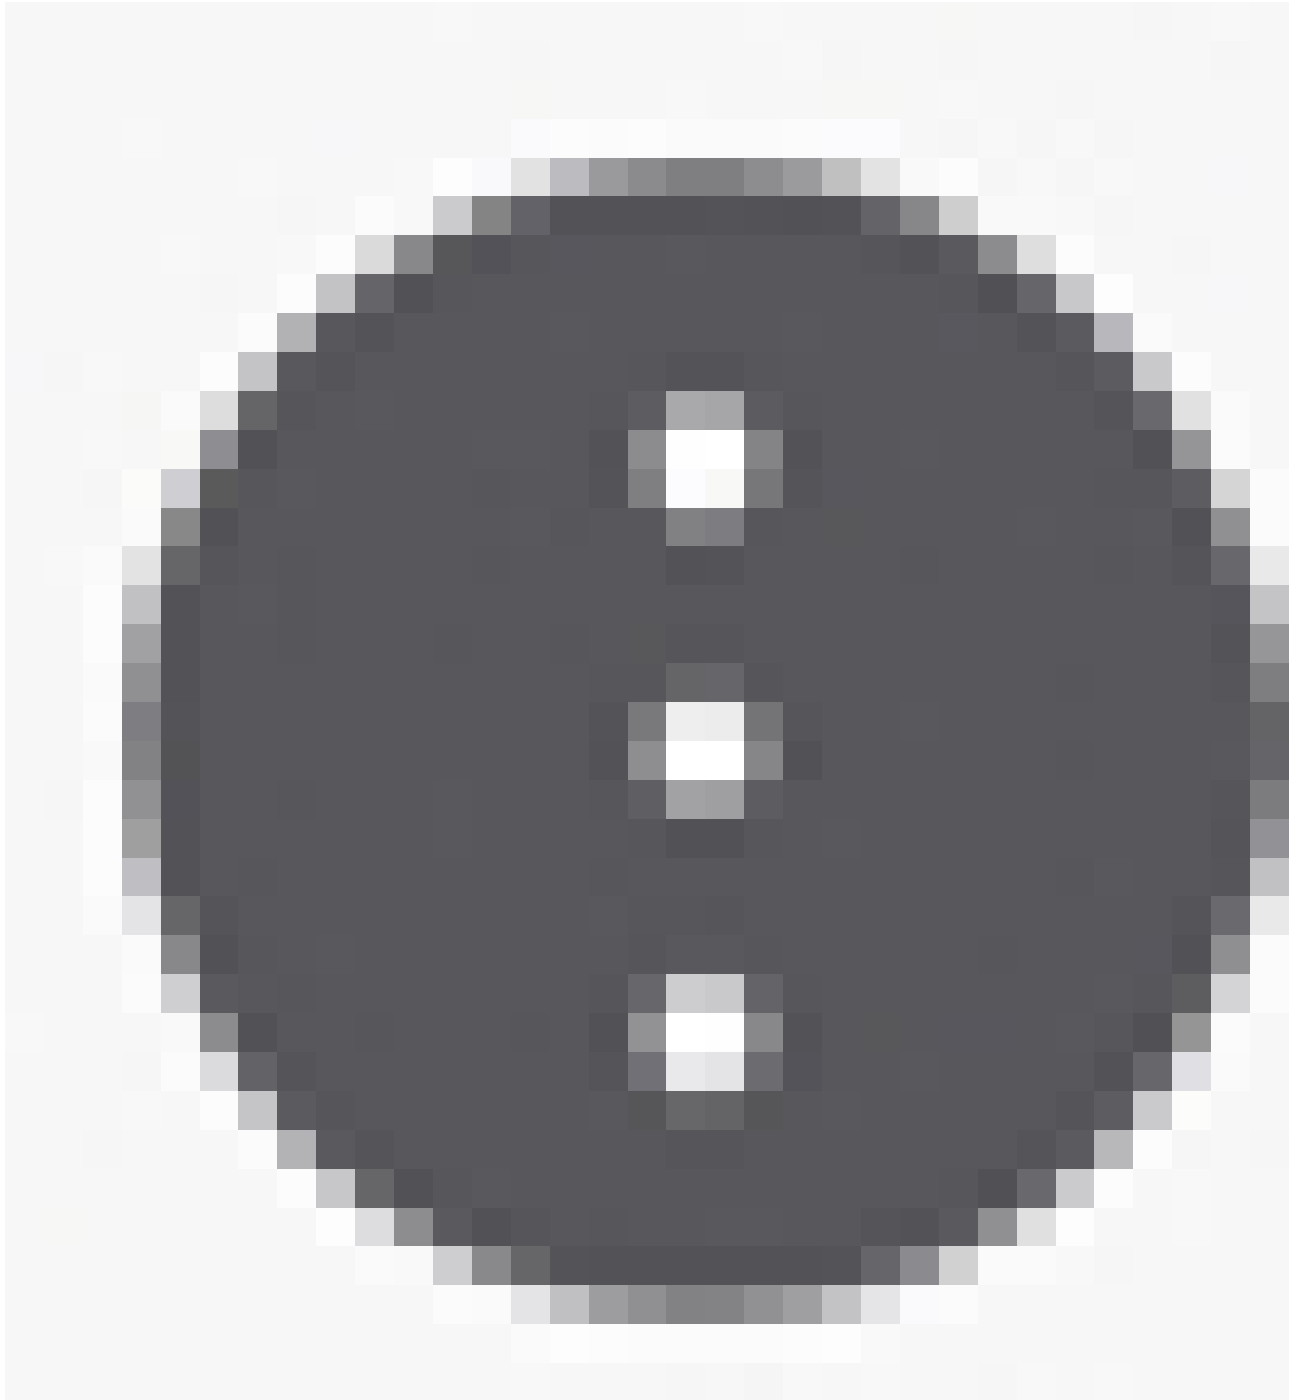

icon.

11. Click **Upload File to TAC Assist** to upload a single file for the chosen node manually.
12. Click **Upload** to upload all the log files generated for the chosen node manually.

The status of the upload is displayed in the **Selected Nodes** table.

Guidelines and Limitations

- If the upload logs fails for some of the nodes and succeeds for the rest of the nodes, then in the **Selected Nodes** table, the status is displayed as Completed.
- If the collection fails for some of the nodes, then the collection will continue for other nodes. After the collection is completed, the upload will start. In the **Selected Nodes** table, the combined status is displayed in the Status column.

- If the collection succeeds for some of the nodes, but the upload fails, then in the **Selected Nodes** table, the status is displayed as Failed.
- **Auto Upload Log Files** can be performed only on one node at a time.

Collecting information on bugs that might affect your network using Bug Scan

Nexus Dashboard collects technical support information from all the devices and runs them against known set of signatures, and flags the corresponding defects and PSIRTs. Nexus Dashboard also generates advisories for PSIRTs and anomalies for defects. See [Detecting Anomalies and Identifying Advisories in Your Nexus Dashboard](#) to learn more about Metadata support. Nexus Dashboard bug signatures are updated through Metadata information. The Metadata file is updated automatically if Nexus Dashboard is connected to [Working with Cisco Intersight](#) or can be manually updated.

The Bug Scan feature collects technical support logs from devices in a fabric and scans them for bugs that could have been hit. If the CPU and memory usage of the switches is below the set threshold of 65% then the tech support logs are collected and the Bug Scan is carried out for the devices. If the CPU and memory usage is above the set threshold, the devices are excluded from the Bug Scan and eventually will be reconsidered for the next default Bug Scan or when you run an on-demand Bug Scan for that device.

The switch connectivity must be healthy on the device for the Bug Scan process to successfully collect logs from the device.

You can also run an on-demand Bug Scan for a fabric. For more information, see the On-Demand Analysis section in [Understanding your Nexus Dashboard Fabrics](#).

Bug scan schedule

Bug Scan runs for all the fabrics onboarded to Nexus Dashboard with a timer auto-scheduled every 7 or 14 days for each device, depending on the number of nodes and fabrics on the Nexus Dashboard cluster. This schedule is fixed and is not customizable.

Bug Scan for all switches of a fabric are included in the auto-schedule once they are onboarded in Nexus Dashboard. After that initial bug scan run occurs, it is then run again every 7 or 14 days. In situations where the bug scan either executes correctly or fails to execute on the device (for example, if the CPU and memory of the switch is higher than the target threshold), bug scan will run again in the next auto-scheduled timer.

On-demand Bug Scans are a user-triggered collection of technical support information from selected switches of a fabric. Those on-demand scans are prioritized over auto-scheduled runs and do not consider the CPU and memory metrics. On demand bug scans can be executed for up to 10 switches concurrently. If auto-scheduled Bug Scan is in progress and on-demand Bug Scan is initiated on other switches, based on the available resources in the Nexus Dashboard nodes the on-demand Bug Scan will start while the current Bug Scan is in progress or after the current Bug Scan is completed.

Only one Bug Scan at the time can run on a specific device.



A Bug Scan is triggered automatically in the following scenarios:

- Switch or APIC controller upgrade or downgrade
- Switch or APIC controller reloads

View active and known bugs


The Bug Scan feature collects technical support logs from devices in a fabric and scans them for bugs. You can view the active and known bugs affecting your network after the Bug Scan is completed.

- **Active Bugs** - Bugs present in the software version that are detected in your network based on its configuration and tech support files based on bug signatures continuously updated through Cisco Nexus Dashboard Metadata files. A signature can identify a bug on a fabric or switch with a confidence level. The confidence level indicates the percentage of confidence the signature has in detecting that bug accurately. Active bugs are detected in Nexus Dashboard Insights only when the confidence level of a signature is 100% for ACI fabrics and over 75% for NX-OS fabrics. Note that not all bugs have a digital signature and some active bugs might not be identified as such.
- **Known Bugs** - Bugs present in the software version that may potentially impact your network. These bugs do not require a bug signature but are based only on the software version match and not on switch configurations or tech-support.



Only Severity 1 to Severity 3 bugs attached to the Release Notes of a certain ACI or NX-OS release are considered known bugs.

1. Navigate to **Analyze > Analysis Hub > Bug Scan**.
2. Choose an online fabric or multiple online fabrics from the drop-down menu.
3. Choose the software version from the drop-down menu. The active and known bugs for the chosen fabrics and software versions are displayed.

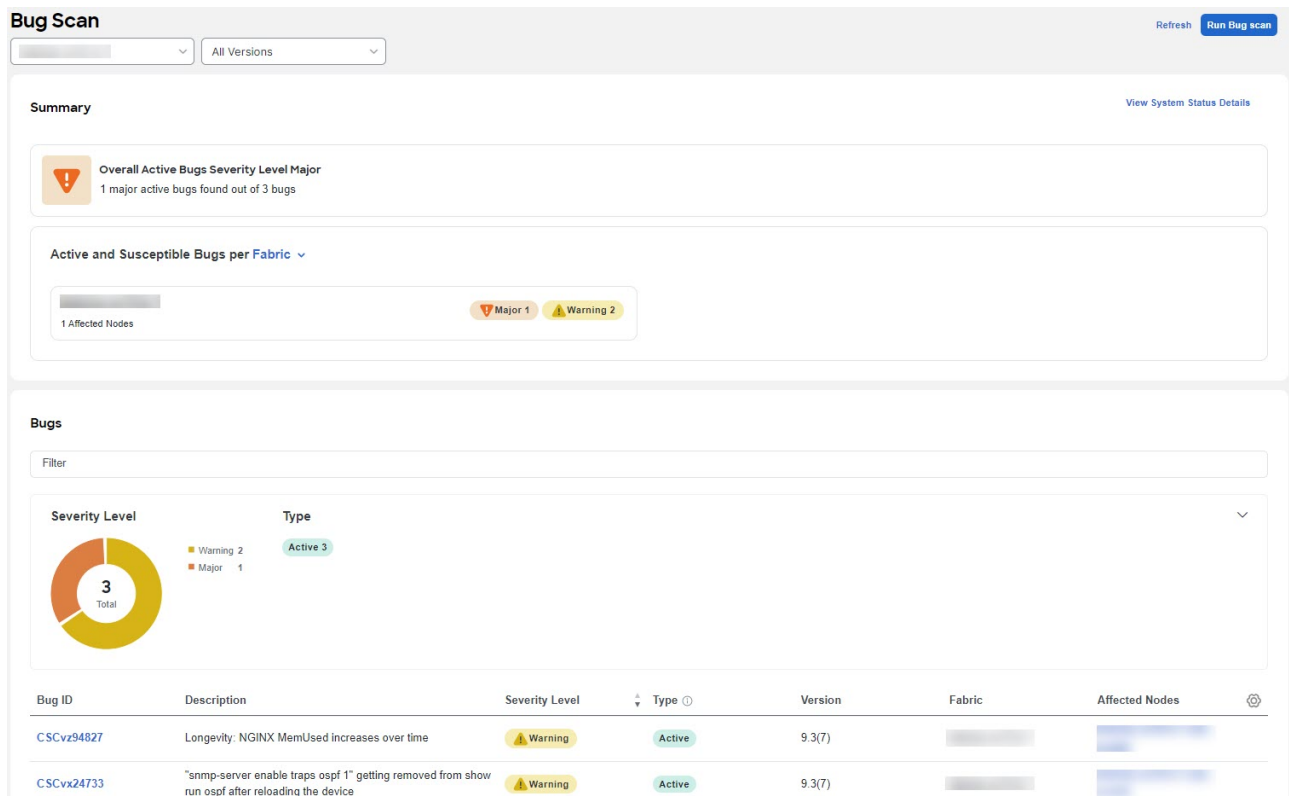

4. The Summary area displays the overall active bugs by severity. You can also view the Bugs per


fabric or software version using the drop-down menu.

5. In the Bugs area, use the filter bar to filter the bugs by bug ID, description, severity level, type, and affected nodes.
6. View the **Severity Level** donut chart to see the total number of bugs of Critical, Major, and Warning severity.
7. View the bugs table to see the filtered bugs.
 - a. Click the column heading to sort the bugs in the table.
 - b. Click the gear icon to configure the columns in the table.
 - c. Click **Bug ID** to view bug details.
8. Click **Run Bug Scan** to run an on-demand Bug Scan. Choose a fabric and click **Run Now**. For more information, see the On-demand analysis section in [Understanding your Nexus Dashboard Fabrics](#).

View active and known bugs for an individual fabric

In Nexus Dashboard, you can also view the bugs for an individual fabric in the following ways:

1. Navigate to **Manage > Fabrics**
2. Choose **Online Fabrics** from the drop-down menu.

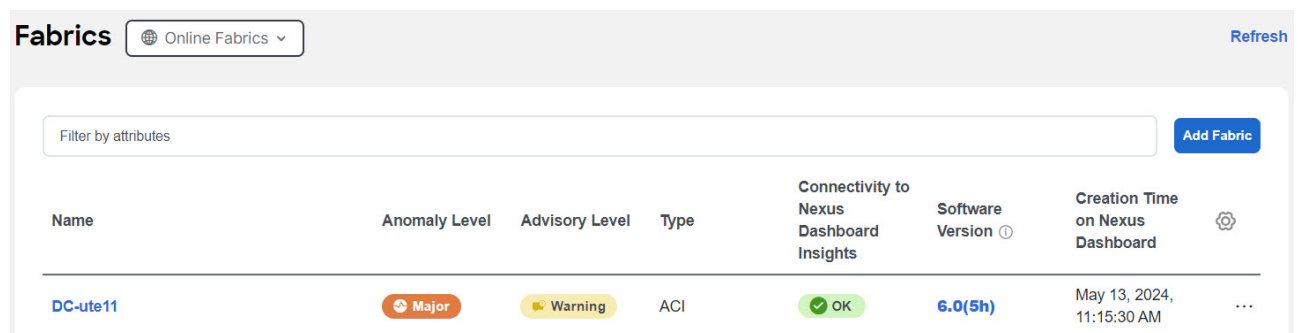


Name	Anomaly Level	Advisory Level	Type	Connectivity to Nexus Dashboard Insights	Software Version ⓘ	Creation Time on Nexus Dashboard	
DC-ute11	Major	Warning	ACI	OK	6.0(5h)	May 13, 2024, 11:15:30 AM	...

3. In the Software Version column, hover on the software version and click **View Bugs** to view the active and known bugs for that fabric.
4. From the Actions drop-down menu click **Run Bug Scan** to run an on-demand Bug Scan. For more information, see the On-demand analysis section in [Understanding your Nexus Dashboard Fabrics](#).

OR

1. Navigate to **Manage > Fabrics**.
2. Choose **Online Fabrics** from the drop-down menu.
3. Choose a fabric.

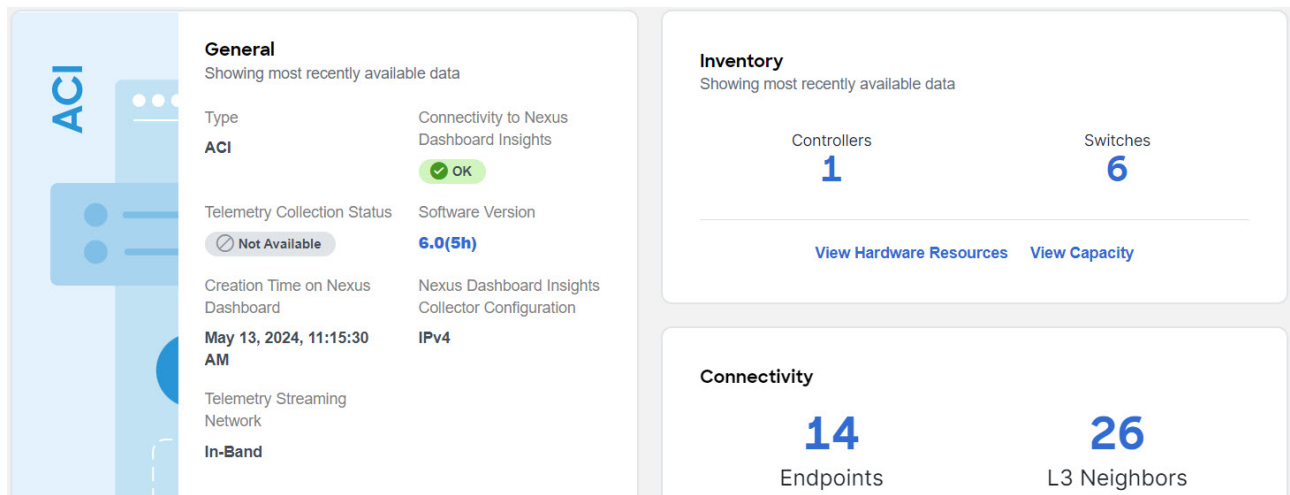

4. In the General area hover on the software version and click **View All Bugs** to view the active and known bugs for that fabric.
5. From the Actions drop-down menu click **Run Bug Scan** to run an on-demand Bug Scan. For more information, see the On-demand analysis section in [Understanding your Nexus Dashboard Fabrics](#).

OR

1. Navigate to **Manage > Inventory**
2. Choose **Online Fabrics** from the drop-down menu.
3. In the Controllers table hover on the software version in the Software Version column and click **View Bugs** to view the active and known bugs.
4. Click **Switches**. In the Switches table hover on the software version in the Software Version column and click **View Bugs** to view the active and known bugs.
5. From the Actions drop-down menu click **Run Bug Scan** to run an on-demand Bug Scan. For more information, see the On-demand analysis section in [Understanding your Nexus Dashboard Fabrics](#).

OR

1. Navigate to **Manage > Fabric Software Management**.
2. In the Software Management Jobs table click an analysis.
3. In the Firmware Summary area, hover on the Node Target Firmware and click **View Bugs** to view the active and known bugs for that particular software version on that fabric.
4. From the Actions drop-down menu click **Run Bug Scan** to run an on-demand Bug Scan. For more information, see the On-demand analysis section in [Understanding your Nexus Dashboard Fabrics](#).

Tracking endpoints within a data center using Endpoint Locator (NX-OS fabrics)

The Endpoint Locator (EPL) feature allows real-time tracking of endpoints within a data center. The tracking includes tracing the network life history of an endpoint and getting insights into the trends that are associated with endpoint additions, removals, moves, and so on. An endpoint is anything with at least one IP address (IPv4 and/or IPv6) and MAC address. EPL feature is also capable of displaying MAC-Only endpoints. By default, MAC-Only endpoints are not displayed. An endpoint can be a virtual machine (VM), container, bare-metal server, service appliance and so on.



- EPL is supported for VXLAN BGP EVPN fabric deployments only in the Nexus Dashboard LAN fabric installation mode. The VXLAN BGP EVPN fabric can be deployed as Easy fabric, Easy eBGP fabric, or an External fabric (managed or monitored mode). EPL is not supported for 3-tier access-aggregation-core based network deployments.
- EPL displays endpoints that have at least one IP address (IPv4 and/or IPv6). EPL is also capable of displaying MAC-Only endpoints. Select the **Process MAC-Only Advertisements** checkbox while configuring EPL to enable processing of EVPN Route-type 2 advertisements having a MAC address only. L2VNI:MAC is the unique endpoint identifier for all such endpoints. EPL can now track endpoints in Layer-2 only network deployments where the Layer-3 gateway is on a firewall, load-balancer, or other such nodes.

EPL relies on BGP updates to track endpoint information. Hence, typically the Nexus Dashboard must peer with the BGP Route-Reflector (RR) to get these updates. For this purpose, IP reachability from the Nexus Dashboard to the RR is required. This can be achieved over in-band network connection to the Nexus Dashboard Data Network interface. There is no option to configure static routes for pods on ND, so the selected RRs must be reachable through the default data network gateway.

Some key highlights of the Endpoint Locator are:

- Support for dual-homed and dual-stacked (IPv4 + IPv6) endpoints
- Support for up to two BGP Route Reflectors or Route Servers
- Support real-time and historical search for all endpoints across various search filters such as VRF, Network, Layer-2 VNI, Layer-3 VNI, Switch, IP, MAC, port, VLAN, and so on.
- Support for real-time and historical dashboards for insights such as endpoint lifetime, network, endpoint, VRF daily views, and operational heat map.
- Support for iBGP and eBGP based VXLAN EVPN fabrics. The fabrics may be created as Easy Fabrics or External Fabrics. EPL can be enabled with an option to automatically configure the spine or RRs with the appropriate BGP configuration.
- You can enable the EPL feature for upto 4 fabrics.
- EPL is supported on Multi-Site Domain (MSD).
- IPv6 underlay is not supported.
- Support for high availability
- Support for endpoint data that is stored for up to 60 days, amounting to a maximum of 2 GB storage space.

- Support for optional flush of the endpoint data to start afresh.
- Supported scale: Maximum of 50K unique endpoints per fabric. A maximum of 4 fabrics is supported. However, the maximum total number of endpoints across all fabrics should not exceed 100K.

If the total number of endpoints across all fabrics exceeds 100K, an alarm is generated and is listed under the **Alarms** icon at the top right of the window. This icon starts flashing whenever a new alarm is generated.

- Persistent or External IP addresses are required to enable EPL. For each VXLAN fabric, a specific container is spawned running a BGP instance to peer with the spines of the fabric. This container must have a persistent IP associated that is then configured as a iBGP neighbor on the spines. A different container is used for each fabric, so the number of fabrics that are managed by Nexus Dashboard where EPL is enabled decides how many persistent IP addresses must be distributed for EPL. Also, the EPL establishes iBGP sessions only over the Cisco Nexus Dashboard Data interface.
- You can disable promiscuous mode on the port-groups that are associated with the Nexus Dashboard Management or Data vNICs. The Persistent IP addresses are given to the pods (for example, SNMP Trap/Syslog receiver, Endpoint Locator instance per Fabric, SAN Insights receiver, and so on). Every POD in Kubernetes can have multiple virtual interfaces. Specifically for IP stickiness an extra virtual interface is associated with the POD that is allocated an appropriate free IP in the external service IP pool. The vNIC of the POD that has the Persistent IP shares the same MAC address of Nexus Dashboard bond0 or bond1 interface. Therefore, the POD sources the packets using the same MAC address of Nexus Dashboard bond0 or bond1 interfaces that are known by the VMware ESXi system.

If you are using a Virtual Cisco Nexus Dashboard Cluster before you begin, ensure that the Persistent IP addresses, EPL feature, and required settings are enabled. See the *Nexus Dashboard Installation and Upgrade Guide* for more information. === EPL behavior with NX-API configuration

When the **NX-API** option is enabled on supported fabrics, such as the VXLAN, Enhanced Classic LAN, eBGP, and Campus fabrics, the EPL feature behavior is as follows:

- Dashboard counter for dual attached endpoints is populated.
- Endpoints discovered under a vPC pair will have the switch name set to the specific switch the endpoint is found under.
- Endpoints under ports such as the vPC Peer-Link or as a port name that contains sup, for example, sup eth1(R), will be filtered out from being discovered.

For more information on **NX-API** field related information, see the Advanced section in [Fabric Management](#).

When the **NX-API** option is disabled, the EPL feature behavior is as follows:

- Dashboard counter for Dual Attached Endpoints is always 0.
- VLAN and port for endpoints are left empty.
- The VRF field for endpoints is set to VRF ID instead of VRF name.
- Endpoints under a vPC pair will have the switch name set to the name of both switches in the vPC pair.

- Endpoints with ports such as vPC Peer-Link(R) or has a port name that contains sup, for example, supeth1(R), will be discovered without the port name and displayed as part of the dashboard data.

Backup and Restore

EPL only backups data for fabrics that EPL has been configured. If EPL is disabled for a fabric (even if EPL has previously been configured there), then you cannot backup the data for that fabric. Also, you can backup only historical data (data on the Endpoint Search page).

If a backup is initiated when EPL is enabled, then when restoring the backup, the same external data IPs that EPL was using must be available on ND. If those IPs are not available, then select the **Ignore External Service IP Configuration** option in the restore backup form. However, there are chances that the EPL pods will be brought up with different IPs, so any existing EPL policies become invalid. If EPL was previously configured with the **Configure My Fabric** option, you need to disable and enable EPL so that the old policy is cleaned up and an updated policy is deployed. If you did not use the **Configure My Fabric** option, then manually update their config with the new IPs.

EPL Connectivity Options

Sample topologies for the various EPL connectivity options are as given below.

Nexus Dashboard Cluster Mode: Physical Server to VM Mapping

Refer to the *Nexus Dashboard Verified Scalability Guide* for more information.

Configuring Endpoint Locator

The Nexus Dashboard OVA or the ISO installation comes with two interfaces:

- Management
- Data

(Out-of-band or OOO) connectivity of switches via switch mgmt0 interface can be through data or Management interface. For more information refer to the *Nexus Dashboard Installation and Upgrade Guide*.

The Management interface provides reachability to the devices via the mgmt0 interface either Layer-2 or Layer-3 adjacent. This allows Nexus Dashboard to manage and monitor these devices including POAP. EPL requires BGP peering between the Nexus Dashboard and the Route-Reflector. Since the BGP process on Nexus devices typically runs on the default VRF, in-band IP connectivity from the Nexus Dashboard to the fabric is required. The data network interface can be configured during Nexus Dashboard installation. You can't modify the configured in-band network configurations.



The setup of Data network interface on the Nexus Dashboard is a prerequisite of any application that requires the in-band connectivity to the devices within fabric. This includes EPL and Network Insights Resources (NIR).

On the fabric side, for a standalone Nexus Dashboard deployment, if the Nexus Dashboard data network port is directly connected to one of the front-end interfaces on a leaf, then that interface can

be configured using the **epl_routed_intf** template.

However, for redundancy purposes, it is always advisable to have the server on which the Nexus Dashboard is installed to be dual-homed or dual-attached. With the OVA Nexus Dashboard deployment, the server can be connected to the switches via a port-channel. This provides link-level redundancy. To also have node-level redundancy on the network side, the server may be attached to a vPC pair of Leaf switches. In this scenario, the switches must be configured such that the HSRP VIP serves as the default gateway of the Data Network interface on the Nexus Dashboard.

For the HSRP configuration on terry-leaf3, the **switch_freeform** policy may be employed.

You can deploy a similar configuration on terry-leaf3 while using IP address 10.3.7.2/24 for SVI 596. This establishes an in-band connectivity from the Nexus Dashboard to the fabrics over the Data Network interface with the default gateway set to 10.3.7.3.

After you establish the in-band connectivity between the physical or virtual Nexus Dashboard and the fabric, you can establish BGP peering.

During the EPL configuration, the route reflectors (RRs) are configured to accept Nexus Dashboard as a BGP peer. During the same configuration, the Nexus Dashboard is also configured by adding routes to the BGP loopback IP on the spines/RRs via the Data Network Interface gateway.



Cisco Nexus Dashboard queries the BGP RR to glean information for establishment of the peering, such as ASN, RR, and IP.

To configure Endpoint Locator from the Cisco Nexus Dashboard Web UI, in the fabric **Overview** page, choose **Actions > Configuration > Configure Endpoint Locator**. Similarly, you can configure EPL on the **Topology** page. Right-click on the required fabric, then click **More > Configure Endpoint Locator**. The **Endpoint Locator** window appears.

You can enable EPL for one fabric at a time.

Select the switches on the fabric hosting the RRs from the drop-down list. Cisco Nexus Dashboard will peer with the RRs.

By default, the **Configure My Fabric** option is selected. This option only configures EPL as a BGP neighbor of the switch and this option does not configure network reachability between EPL and the switch. This knob controls whether BGP configuration will be pushed to the selected spines/RRs as part of the enablement of the EPL feature. If the spine/RR needs to be configured manually with a custom policy for the EPL BGP neighborship, then this option should be unchecked. For external fabrics that are only monitored and not configured by Nexus Dashboard, this option is greyed out as these fabrics are not configured by Nexus Dashboard.

Select the **Process MAC-Only Advertisements** option to enable processing of MAC-Only advertisements while configuring the EPL feature.



If EPL is enabled on a fabric with or without selecting the **Process Mac-Only Advertisements** checkbox and you want to toggle this selection later, then you have to first disable EPL and then click **Database Clean-up** to delete endpoint data before re-enabling EPL with the desired **Process Mac-Only Advertisements** setting.

Select **Yes** under **Collect Additional Information** to enable collection of additional information such as PORT, VLAN, VRF etc. while enabling the EPL feature. To gather additional information, NX-API must be supported and enabled on the switches, ToRs, and leafs. If the **No** option is selected, this information will not be collected and reported by EPL.



For all fabrics except external fabrics, NX-API is enabled by default. For external fabrics, you have to enable NX-API in the external fabric settings by selecting the **Enable NX-API** checkbox in the **Advanced** tab of the External_Fabric_11_1 fabric template.

Click the **i** icon to view a template of the configuration that is pushed to the switches while enabling EPL. This configuration can be copied and pasted on spines or border gateway devices to enable EPL on external monitored fabrics.

Once the appropriate selections are made and various inputs have been reviewed, click **Submit** to enable EPL. If there are any errors while you enable EPL, the enable process aborts and the appropriate error message is displayed. Otherwise, EPL is successfully enabled.

The Nexus Dashboard Data Service IP is used as BGP neighbor.

When the Endpoint Locator feature is enabled, there are a number of steps that occur in the background. Nexus Dashboard contacts the selected RRs and determines the ASN. It also determines the interface IP that is bound to the BGP process. Also, appropriate BGP neighbor statements are added on the RRs or spines in case of eBGP underlay, to get them ready to accept the BGP connection that will be initiated from the Nexus Dashboard. The external Nexus Dashboard Data Service IP address that is assigned to the EPL pod will be added as the BGP neighbor. Once EPL is successfully enabled, the user is automatically redirected to the EPL dashboard that depicts operational and exploratory insights into the endpoints that are present in the fabric.

For more information about the EPL dashboard, see [Monitoring Endpoint Locator](#).

Flushing the Endpoint Database

After you enable the Endpoint Locator feature, you can clean up or flush all the Endpoint information. This allows starting from a clean-slate with respect to ensuring no stale information about any endpoint is present in the database. After the database is clean, the BGP client re-populates all the endpoint information learnt from the BGP RR. You can flush the endpoint database even if you have not re-enabled the EPL feature on a fabric on which the EPL feature was previously disabled.

To flush all the Endpoint Locator information from the Cisco Nexus Dashboard Web UI, perform the following steps:


1. In the fabric **Overview** page, choose **Actions > Configuration > Configure Endpoint Locator**
2. Click **Database Cleanup**.
3. Click **Delete** to continue or **Cancel** to abort.

Configuring Endpoint Locator for Single VXLAN EVPN Site

Before you begin:

In the following figure, the Nexus Dashboard service application is attached to the VPC pair of Leaf

switches as it provides the link and node-level redundancy. The BGP instance running on EPL container establishes iBGP peering with the fabric spines. The iBGP peering is between Spine loopback addresses (loopback0) and EPL container persistent IP addresses. The loopback0 address of Spines is reachable via VXLAN Underlay, therefore, EPL container IP must have IP reachability towards the spines. We can configure an SVI on Leaf switches that can provide IP connectivity. The SVI will be a non-VXLAN enabled VLAN and will only participate in the underlay.

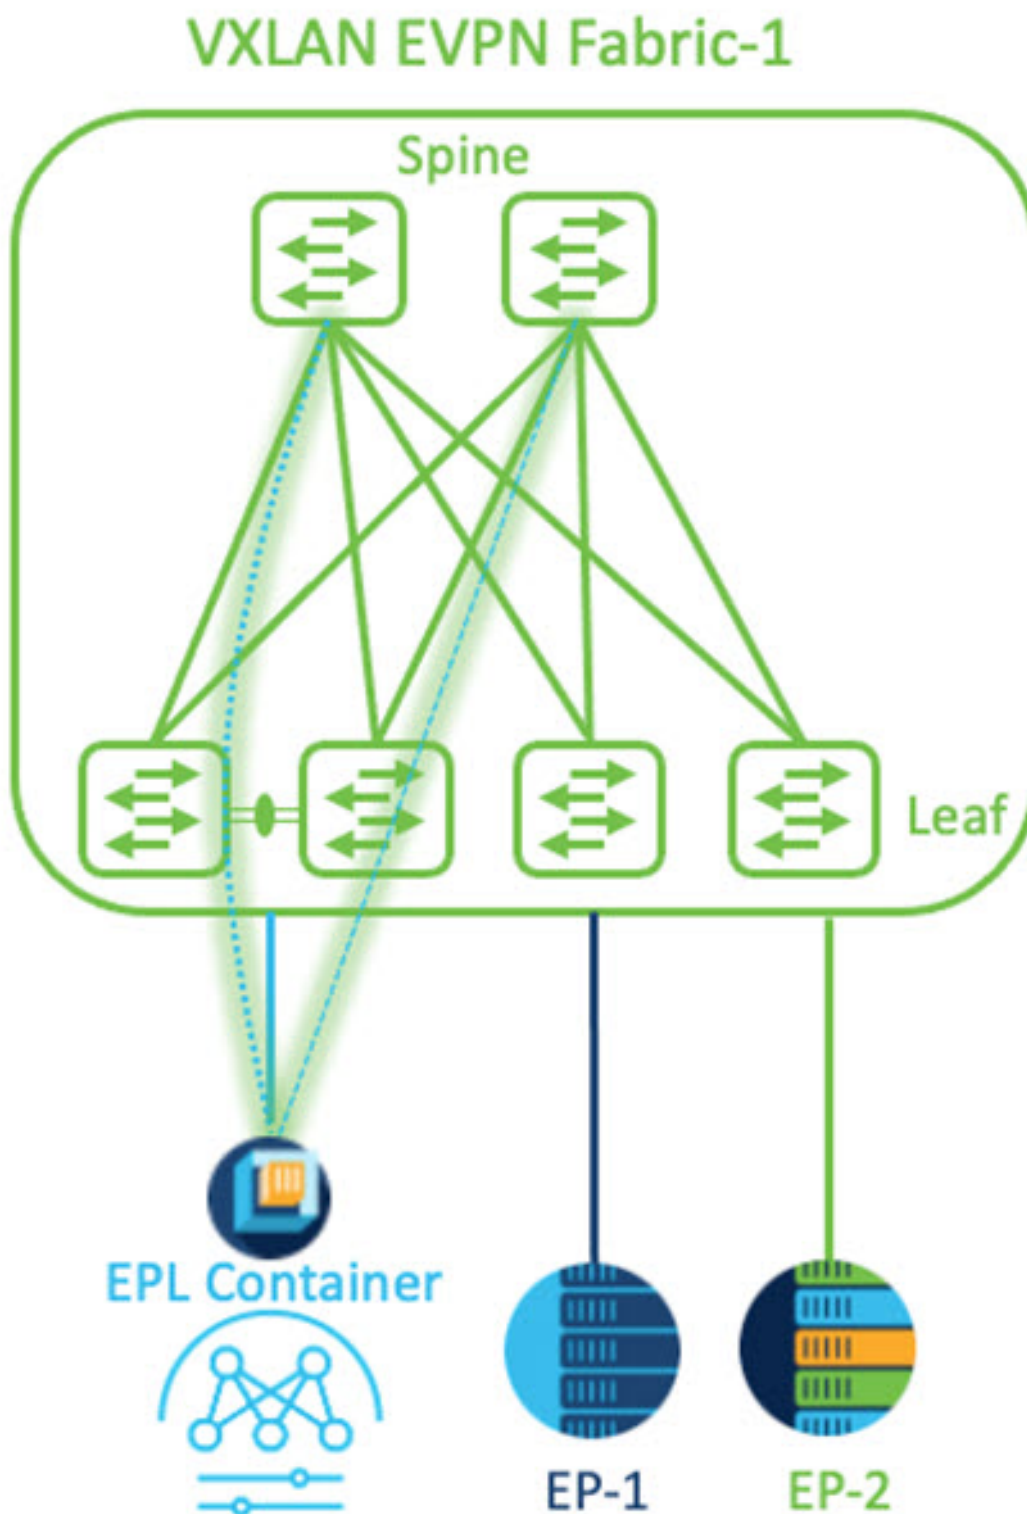

To configure endpoint locator for single VXLAN EVPN site, perform the following steps:

1. You must configure persistent IP addresses on Cisco Nexus Dashboard. On Nexus Dashboard, choose **Admin > System Settings**.

2. In the **External Pools** card, click **Edit**.

The **External Service Pools** window appears.

3. In the **Persistent data IPs** area, click **+ Add IP Address** and enter the necessary persistent IP addresses. Click the checkmark for each IP address that you enter.



The IP address must be associated with Nexus Dashboard Data Pool. A single persistent IP address is required to visualize and track EPs for a single site.

4. Configure SVI using FHRP for ND Data Interface and Underlay IP connectivity.

You can use **switch_freeform** policy on fabric Leaf 1.

To create a freeform policy, perform the following steps:

- a. Choose **Manage > Fabrics**, then click on the required fabric.

The fabric **Overview** page for this fabric appears.

- b. Click **Configuration Policies > Policies**.

- c. Click **Actions > Add policy**.

The **Create Policy** window appears.

- d. Choose the appropriate leaf switch from the **Switch List** drop-down list and click **Choose Template**.

- e. On **Select Policy Template** window, choose **switch_freeform** template and click **Select**.

Apply FHRP configurations and save the template.

Deploy the template configuration.

In this example, SVI 100 with HSRP gateway created on fabric Leaf 1. Similarly, repeat the steps for fabric Leaf 2.

The following is a configuration example:

```
feature hsrp
vlan 100
name EPL-Inband
interface Vlan100
  no shutdown
  no ip redirects
  ip address 192.168.100.252/24
  no ipv6 redirects
  ip router ospf 100 area 0.0.0.0
  hsrp 100
    ip 192.168.100.254
```

5. Verify IP reachability between Nexus Dashboard Data Interface and fabric switches.
6. Enable EPL at fabric level.
 - a. In the fabric **Overview** page, choose **Actions > Configuration > Configure Endpoint Locator**.
 - b. Choose the appropriate switches on the fabric hosting the Spine/Route Reflector RRs from the drop-down list.

Choose **Configure my Fabric** option for knob controls.

Whether BGP configuration will be pushed to the selected Spines/RRs as part of the enablement of the EPL feature. If the Spine/RR needs to be configured manually with a custom policy for the EPL BGP neighborship, then this option should be unchecked. For external fabrics that are only monitored and not configured on Nexus Dashboard this option is grayed out. As these fabrics are not configured on Nexus Dashboard.

Choose **Process MAC-Only Advertisements** option to enable processing of MAC-Only advertisements while configuring the EPL feature.



If EPL is enabled on a fabric with or without choosing the **Process Mac-Only Advertisements** checkbox and if you want to toggle this selection later, then you must disable EPL and click **Database Clean-up** to delete endpoint data before re-enabling EPL with the desired **Process Mac-Only Advertisements** setting.



Choose **Yes** in **Collect Additional Information** to enable collection of additional information such as PORT, VLAN, and VRF while enabling the EPL feature. To access additional information, NX-API must be supported and enabled on the switches, ToRs, and leafs. If you choose **No** option, this information won't be collected and reported by EPL.

For all fabrics except external fabrics, NX-API is enabled by default. For external fabrics, you must enable NX-API in the external fabric settings, choose **Enable NX-API** checkbox in the **Advanced** tab of the External_Fabric_11_1 fabric template.

Click the **Preview** icon to view a template of the configuration that is pushed to the switches enabling EPL. This configuration can be copied and pasted on spines or border gateway devices to enable EPL on external monitored fabrics.


Once the appropriate selections are made and various inputs have been reviewed, click **Save Config** to enable EPL. If there are any errors while you enable EPL, the enable process aborts and the appropriate error message are displayed. Otherwise, EPL is successfully enabled. Once the EPL is enabled, the Persistent IP will be in-use.

Configuring Endpoint Locator for interconnected VXLAN fabrics

Before you begin:

The below figure enables EPL for interconnected VXLAN fabrics. The BGP peering's are established between the Spines/RRs of each interconnected VXLAN fabric and Nexus Dashboard EPL Container. The Persistent IPs are required based on the number of VXLAN EVPN sites. The Nexus Dashboard application hosted on Cisco ND Cluster is located on Site 1. The routing information to reach the

Spines/RRs deployed in the remote site must be exchanged across the interconnected VXLAN fabrics. Once the BGP session is formed, local EPs of Fabric 2 can be visualized and tracked.

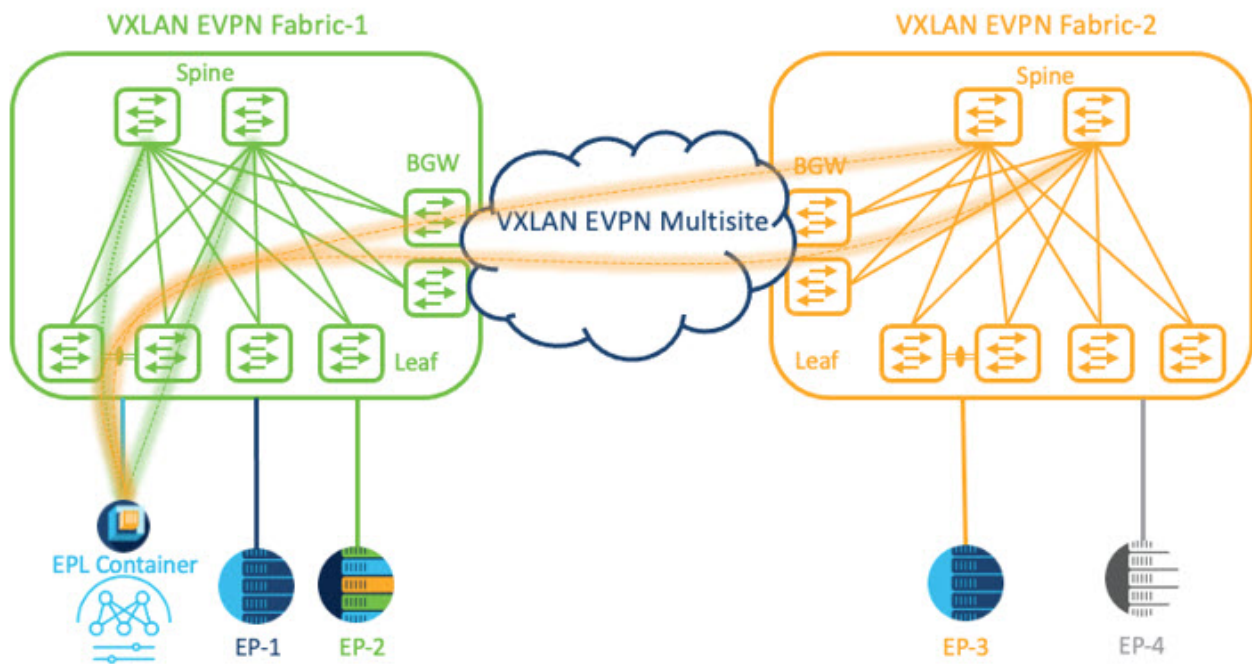

By default, Nexus Dashboard data Interface and Site 2 Spines/RRs loopback prefixes are not advertised across the BGWs. Therefore, prefixes must be exchanged using custom route maps and prefix lists across the sites. At the same time, route redistribution between OSPF and BGP is required as Spines/RRs loopback prefixes are part of OSPF protocol while BGWs peer with each other using BGP.

To configure endpoint locator for interconnected VXLAN fabrics, perform the following steps:

1. You must configure persistent IP addresses on Cisco Nexus Dashboard. On Nexus Dashboard, choose **Admin > System Settings**.
2. In the **External Pools** card, click **Edit**.

The **External Service Pools** window appears.

3. In the **Persistent data IPs** area, click **+ Add IP Address** and enter the necessary persistent IP addresses. Click the checkmark for each IP address that you enter.



Ensure that the IP addresses are associated with Nexus Dashboard Data Pool. Two persistent IP addresses are required to visualize and track EPs for a multisite with two member fabrics. One Persistent Data IP address is used as EPL container IP to establish BGP session with Site 1 fabric. A new Persistent IP address is configured that can be used to peer with Site 2 fabric.

4. Configure Route Redistribution for VXLAN EVPN Fabrics.

Route Redistribution for Fabric 1

The following `switch_freeform` policy can be used on Fabric 1 BGWs. To create a new **switch_freeform** policy, refer to the above examples.

The example below shows a sample configuration:

```
ip prefix-list site-2-rr seq 5 permit 20.2.0.1/32 >> Site 2 RR
ip prefix-list site-2-rr seq 6 permit 20.2.0.2/32 >> Site 2 RR
ip prefix-list epl-subnet seq 5 permit 192.168.100.0/24 >> EPL Subnet

route-map bgp-to-ospf permit 10
  match ip address prefix-list site-2-rr
route-map ospf-to-bgp permit 10
  match ip address prefix-list epl-subnet

router ospf 100
  redistribute bgp 100 route-map bgp-to-ospf

router bgp 100
  address-family ipv4 unicast
    redistribute ospf 100 route-map ospf-to-bgp
```

Route Redistribution for Fabric 2

The following `switch_freeform` policy can be used on Fabric 2 BGWs. To create a new **switch_freeform** policy, refer to the above examples.

The example below shows a sample configuration:

```
ip prefix-list site-2-rr seq 5 permit 20.2.0.1/32 >> Site 2 RR
ip prefix-list site-2-rr seq 6 permit 20.2.0.2/32 >> Site 2 RR
ip prefix-list epl-subnet seq 5 permit 192.168.100.0/24 >> EPL Subnet

route-map bgp-to-ospf permit 10
  match ip address prefix-list epl-subnet
route-map ospf-to-bgp permit 10
  match ip address prefix-list site-2-rr

router ospf 200
  redistribute bgp 200 route-map bgp-to-ospf

router bgp 200
  address-family ipv4 unicast
    redistribute ospf 200 route-map ospf-to-bgp
```

5. To configure EPL, in the fabric **Overview** page, choose **Actions > Configuration > Configure Endpoint Locator**.
6. Choose the appropriate switches on the fabric hosting the Spine/Route Reflector RRs from the drop-down list.

Once the appropriate selections are made and various inputs have been reviewed, click **Save Config** to enable EPL. If there are any errors while you enable EPL, the enable process aborts and the appropriate error message is displayed. Otherwise, EPL is successfully enabled. Once the EPL is enabled, the Persistent IP will be in-use.

You can view EPL enabled for fabric-1 and fabric-2 successfully. To view and track EPs, see [Monitoring Endpoint Locator](#).

Configuring Endpoint Locator for vPC Fabric Peering Switches

Networks Administrator can create vPC between a pair of switches using a Physical Peer Link or Virtual Peer link. vPC Fabric Peering provides an enhanced dual-homing access solution without the overhead of wasting physical ports for vPC Peer Link. For Virtual Peer link, EPL can still be connected to vPC pair of Leaf switches for the link and node-level redundancy. However, VXLAN VLAN (Anycast Gateway) as the First hop for EPL will be used. The loopback0 address of Spines/RRs is reachable only via VXLAN Underlay, while VXLAN VLAN will be part of a Tenant VRF. Therefore, to establish IP communication, route-leaking is configured between Tenant VRF and Default VRF. For more information, refer to vPC Fabric Peering section.

To configure endpoint locator for vPC Fabric Peering switches perform the following steps:

1. You must configure persistent IP addresses on Cisco Nexus Dashboard. On Nexus Dashboard, choose **Admin > System Settings**.
2. In the **External Pools** card, click **Edit**.

The **External Service Pools** window appears.

3. In the **Persistent data IPs** area, click **+ Add IP Address** and enter the necessary persistent IP addresses. Click the checkmark for each IP address that you enter.
4. Create a Tenant VRF and Anycast Gateway on the vPC fabric peering switches.
5. Configure Route-leaking between Tenant VRF and Default VRF.

Advertise from Tenant VRF to Default VRF.

The following switch_freeform policy can be used on fabric Leaf where ND is connected.

```
ip prefix-list vrf-to-default seq 5 permit 192.168.100.0/24 >> EPL subnet
route-map vrf-to-default permit 10
  match ip address prefix-list vrf-to-default
vrf context epl_inband
  address-family ipv4 unicast
    export vrf default map vrf-to-default allow-vpn
router ospf UNDERLAY
  redistribute bgp 200 route-map vrf-to-default
```

NOTE: For the hosts behind the orphan ports, the prefix-list used for route leaking in the route-map must include 'ge' keyword at the end for longer prefix matches, such as the /32 of a host route.

For example:

```
ip prefix-list vrf-to-default seq 5 permit 192.168.100.0/24 ge 24
```

Advertise from Default VRF to Tenant VRF.

The following switch_freeform policy can be used on fabric Leaf where ND is connected.


```
ip prefix-list default-to-vrf seq 5 permit 20.2.0.3/32 >> Spine loopback IP
ip prefix-list default-to-vrf seq 6 permit 20.2.0.4/32 >> Spine loopback IP
route-map default-to-vrf permit 10
  match ip address prefix-list default-to-vrf
vrf context epl_inband
  address-family ipv4 unicast
    import vrf default map default-to-vrf
    router bgp 200
  address-family ipv4 unicast
    redistribute ospf UNDERLAY route-map default-to-vrf
```

6. Enable EPL at fabric level.

- a. To configure EPL, in the fabric **Overview** page, choose **Actions > Configuration > Configure Endpoint Locator**.
- b. Choose the appropriate switches on the fabric hosting the Spine/Route Reflector RRs from the drop-down list.

Once the appropriate selections are made and various inputs have been reviewed, click **Save Config** to enable EPL. If there are any errors while you enable EPL, the enable process aborts and the appropriate error message is displayed. Otherwise, EPL is successfully enabled. Once the EPL is enabled, the Persistent IP will be in-use.

Configuring Endpoint Locator for External Fabrics

In addition to Easy fabrics, Nexus Dashboard allows you to enable EPL for VXLAN EVPN fabrics comprising of switches that are imported into the external fabric. The external fabric can be in managed mode or monitored mode, based on the selection of **Fabric Monitor Mode** flag in the **External Fabric** Settings. For external fabrics that are only monitored and not configured by Nexus Dashboard, this flag is disabled. Therefore, you must configure BGP sessions on the Spine(s) via OOB or using the CLI. To check the sample template, click  icon to view the configurations required while enabling EPL.

In case the **Fabric Monitor Mode** checkbox in the External Fabric settings is unchecked, then EPL can still configure the spines/RRs with the default **Configure my fabric** option. However, disabling EPL would wipe out the router bgp config block on the spines/RRs. To prevent this, the BGP policies must be manually created and pushed onto the selected spines/RRs.

Configuring Endpoint Locator for eBGP EVPN Fabrics

You can enable EPL for VXLAN EVPN fabrics, where eBGP is employed as the underlay routing protocol. Note that with an eBGP EVPN fabric deployment, there is no traditional RR similar to iBGP. The reachability of the in-band subnet must be advertised to the spines that behave as Route Servers.

To configure EPL for eBGP EVPN fabrics from the Cisco Nexus Dashboard Web UI, perform the following steps:

1. Choose **Manage > Fabrics**.

Select the fabric to configure eBGP on or create an eBGP fabric with the **VXLAN** template.

2. Use the **leaf_bgp_asn** policy to configure unique ASNs on all leaf switches.
3. Add the **ebgp_overlay_leaf_all_neighbor** policy to each leaf.

Fill **Spine IP List** with the spines' BGP interface IP addresses, typically the loopback0 IP addresses.

Fill **BGP Update-Source Interface** with the leaf's BGP interface, typically loopback0.

4. Add the **ebgp_overlay_spine_all_neighbor** policy to each spine.

Fill **Leaf IP List** with the leaves' BGP interface IPs, typically the loopback0 IPs.

Fill **Leaf BGP ASN** with the leaves' ASNs in the same order as in **Leaf IP List**.

Fill **BGP Update-Source Interface** with the spine's BGP interface, typically loopback0.

After the in-band connectivity is established, the enablement of the EPL feature remains identical to what is listed so far. EPL becomes a iBGP neighbor to the Route Servers running on the spines.

Monitoring Endpoint Locator

Information about the Endpoint Locator is displayed on a single landing page or dashboard. The dashboard displays an almost real-time view of data (refreshed every 30 seconds) pertaining to all the active endpoints on a single pane. The data that is displayed on this dashboard depends on the scope selected by you from the **SCOPE** drop-down list. The Nexus Dashboard scope hierarchy starts with the fabrics. Fabrics can be grouped into a VXLAN fabric group. A group of VXLAN fabric groups constitute a Data Center. The data that is displayed on the Endpoint Locator dashboard is aggregated based on the selected scope. From this dashboard, you can access Endpoint History, Endpoint Search, and Endpoint Life.

Disabling Endpoint Locator

To disable endpoint locator from the Cisco Nexus Dashboard Web UI, perform the following steps:

1. In the fabric **Overview** page, choose **Actions > Configuration > Configure Endpoint Locator**.

The **Endpoint Locator** window appears.

2. Click **Disable**.

First Published: 2025-01-31
Last Modified: 2025-01-31