



Working with Reports for LAN Fabrics, Release 4.3.1

Table of Contents

New and changed information	1
Understanding programmable reports	2
RBAC Support	2
Understanding programmable reports for performance monitoring.....	3
Prerequisites	4
Guidelines and limitations	5
Configure programmable reports	6
Example use case: Configure programmable report for switch performance monitoring.....	12
Copyright	16

New and changed information

The following table provides an overview of the significant changes up to this current release. The table does not provide an exhaustive list of all changes or of the new features up to this release.

Release Version	Feature	Description
Nexus Dashboard 4.3.1	Cisco Nexus 9000 Series name change	Cisco Nexus 9000 Series is now the Cisco N9000 Series.

Understanding programmable reports

The **Reports** area in Nexus Dashboard allows you to generate reports using Python 2.7 scripts. Report jobs are run to generate reports. Each report job can generate multiple reports. You can schedule a report to run for a specific device or fabric. These reports are analyzed to obtain detailed information about the devices.

The report template type is used to support the programmable reports feature. This template has two template subtypes: **UPGRADE** and **GENERIC**. For more information on the report template, see the "Report Template" section in the [Managing Your Template Library](#) article. A python SDK is provided to simplify report generation. This SDK is bundled with Nexus Dashboard Fabric Controller.

RBAC Support

- An admin or a network operator can create a report.
- A network operator can view reports created by other admins and operators.
- A network operator cannot delete/edit/rerun any reports created by an admin and other network operators.
- An admin can view and delete any report irrespective of the user creating them.
- Due to fabric and device association, an admin cannot edit any report created by another user, including the network operator.



A Jython template supports a maximum file size of 100k bytes. In case any report template exceeds this size, Jython execution may fail.

Understanding programmable reports for performance monitoring

Support is available for several programmable reports, such as switch inventory, ISSU pre-upgrade, post-upgrade checks, fabric resources, and so on. For example, a switch performance monitoring programmable report is available to monitor CPU, memory, traffic, and interface utilization. Programmable reports for switch performance monitoring can be enabled for a specific switch (at the device level).

You can also use email as an out-of-band notification method to receive the programmable reports externally using the periodic programmable report generation. This allows you to receive periodic information about your data center fabric health, utilization, and performance state, and the statistics.

Navigate to **Analyze > Reports** to display the latest reports across all report definitions, at both the fabric level and the device level.

Prerequisites

Complete the following prerequisites before enabling performance monitoring using programmable reports:

- Enable the Performance Monitoring option at the LAN fabric level:

1. Navigate to **Manage > Fabrics**.

The **Fabrics** page is displayed, with all of your configured fabrics listed.

2. Single-click the LAN fabric that you want to monitor.

The **Overview** page for this fabric is displayed.

3. Click **Actions > Edit Fabric Settings**.

The **Edit *fabric-name* Settings** page is displayed.

4. In the **Fabric Management > General Parameters** tab, click the box under the **Enable Performance Monitoring** option to enable this feature.

5. Click **Save**.

General **Fabric Management**

General Parameters Replication vPC Protocols Security Advanced Resources Manageability Bootstrap Configuration Backup Flow Monitor

Enable IPv6 Underlay ☐ If not enabled, IPv4 underlay is used

Enable IPv6 Link-Local Address ☐ If not enabled, Spine-Leaf interfaces will use global IPv6 addresses

Fabric Interface Numbering*
p2p Numbered(Point-to-Point) or Unnumbered

Underlay Subnet IP Mask*
30 Mask for Underlay Subnet IP Range

Underlay Subnet IPv6 Mask
Select an Option Mask for Underlay Subnet IPv6 Range

Underlay Routing Protocol*
ospf Used for Spine-Leaf Connectivity

Route-Reflectors*
2 Number of spines acting as Route-Reflectors

Anycast Gateway MAC*
2020.0000.00aa Shared MAC address for all leafs (xxxx.xxxx.xxxx)

Enable Performance Monitoring ☒

- If you want to enable email notifications, update the SMTP host information in **Admin > System Settings > General > Email**.

Guidelines and limitations

Following are the guidelines and limitations for performance monitoring using programmable reports in Nexus Dashboard:

- Only NX-OS switches are supported for switch performance monitoring using programmable reports in Nexus Dashboard.
- Prior to Nexus Dashboard release 4.1.1, the number of backup days for the CPU/memory performance monitoring data was 90 days. Beginning with Nexus Dashboard release 4.1.1, that number has been reduced to 30 days.

Configure programmable reports

Before you begin:

Complete all the tasks described in [Prerequisites](#) before proceeding with these procedures.

1. Navigate to **Analyze > Reports**.

The **Reports** page is displayed, with any configured report definitions displayed.

2. Click **Create Report**.

The **Create Custom Report** page is displayed.

Create Custom Report Refresh

Select Template

- ☐ **Inventory Report**
Summarized report of switch chassis, modules, functional roles and licenses for all discovered devices for one or more fabrics.
- ☐ **Performance Report**
Detailed performance report for switch metrics including Memory, CPU and Interfaces for all discovered devices in one or more fabrics with option to include customizable charts.
- ☐ **Switch Performance Report**
Detailed performance report for switch metrics including Memory, CPU and Interfaces for one or more switches with the option to include customizable charts.
- ☐ **Fabric Cloudsec Oper Status**
Fabric Cloudsec Oper Status
- ☐ **Fabric Macsec Oper Status**
Fabric Macsec Oper Status
- ☐ **Fabric Nve Vni Counter**
Summarized report of Virtual Network Interfaces (VNIs) for all discovered devices in one or more VXLAN fabrics.
- ☐ **Fabric Resources**
Summarized report that includes resource allocations for IP & Subnet Pools and ID allocation for Loopback, L2/L3 VNI, PortChannel/VPC and FEX for all devices within one or more fabrics.
- ☐ **Interface Policy Details**
Summarized report of all physical and sub-interfaces descriptions for all discovered devices in one or more fabrics.
- ☐ **Sfp Report**
Detailed inventory report of all optics including total counts, PIDs, serial numbers, speed capabilities and installed interfaces used by all devices in one or more fabrics.
- ☐ **Switch Inventory**
Detailed report per selected device that includes information such as uptime, HW and SW versions, serial numbers and licenses usage.

Cancel Next

3. Choose the report template that you want to use.

You have the following report templates to choose from:

- **Inventory Report:** Choose this report template to monitor the inventory for a specific fabric or a set of fabrics, such as the number of switches that you have in that fabric.
- **Performance Report:** Choose this report template to monitor the CPU, memory, traffic, or interface utilization for a fabric and all the switches within that fabric.
- **Switch Performance Report:** Choose this report template to monitor CPU, memory, traffic, or interface utilization for a specific switch in a fabric.
- **Fabric Cloudsec Oper Status:** Choose this report template to monitor the operational status related to CloudSec. For example, if you enable a security mechanism using CloudSec on top of the external multi-site, then you can see the counters of the traffic that is going between the multi-site border gateways that is encrypted using CloudSec.
- **Fabric Macsec Oper Status:** Choose this report template to monitor the operational status related to MACsec encryption at the Layer 2 level.
- **Fabric Nve Vni Counter:** Choose this report template to collect the **show nve vni counters** command output for each VNI in the fabric. This is essentially the VXLAN NVE terminal interface. Whenever there is an encap/decap on a specific Cisco N9000 VTEP, it uses this

report to capture the traffic that is coming on that NVE interface.

- o **Fabric Resources**: Choose this report template to display information about resource usage for a specific fabric. It allows you to monitor the number of resources that you have in a given fabric. For example, you might use this report to determine how many IP subnet pools that you have for loopback 0 and loopback 1.
- o **Interface Policy Details**: Choose this report template to display device information and interface details, such as interface descriptions. You can select a particular fabric or group of fabrics, and all devices across these fabrics will be shown under this report.
- o **Sfp Report**: Choose this report to gather information about utilization of SFPs at a fabric and device level. Use this report template to determine the SFP that is attached to a port, the name of that SFP, and the speed of the transceiver.
- o **Switch Inventory**: Choose this report to get a summary about the switch inventory.

Inventory Report, **Performance Report**, and **Switch Performance Report** report templates are used for performance management reports.

4. Click **Next** to select the template and move on to the next step of the **Create Custom Report** workflow.
5. Enter the name for the report in the **Report Name** field, then edit the parameters in the report template page to customize the report, if necessary.

The parameters that are available vary, depending on the type of report template you selected in the previous step. The following table provides additional information on the parameters that are available for each report template.



The following report templates do not have editable parameters and are therefore not included in the following table:

- o **Fabric Cloudsec Oper Status**
- o **Fabric Macsec Oper Status**
- o **Fabric Nve Vni Counter**
- o **Fabric Resources**
- o **Sfp Report**
- o **Switch Inventory**

Parameters	Description
Inventory Report	
Include Modules	Determine if you want to include modules if they are associated with the switch. Choices: ▪ true ▪ false

Include Licenses	Determine if you want to include licenses if they are associated with the switch. Choices: ▪ true ▪ false
Performance Report	
Top records to Chart	Choose the number of top records to chart.
Max Number of Rows to show per Table	Choose the maximum number of rows to show per table.
Include CPU	Determine if you want to include CPU statistics in the performance report. Choices: ▪ true ▪ false
Include Memory	Determine if you want to include memory statistics in the performance report. Choices: ▪ true ▪ false
Include Links	Determine if you want to include links statistics in the performance report. Choices: ▪ true ▪ false
Include Other Ports	Determine if you want to include other ports statistics in the performance report. Choices: ▪ true ▪ false
Switch Performance Report	
Include CPU	Determine if you want to include CPU statistics in the switch performance report. Choices: ▪ true ▪ false
Include Memory	Determine if you want to include memory statistics in the switch performance report. Choices: ▪ true ▪ false

Include Other Ports	Determine if you want to include other ports statistics in the switch performance report. Choices: ▪ true ▪ false
Top records to Chart	Choose the number of top records to chart.
Interface Policy Details	
Switch serial number	Enter the serial number for the switch.
Interface name filter	Filter based on the interface name (for example, ethernet , port-channel , and so on). Regex is not supported.

6. Click **Next** to move to the **Source** step.

7. Select the fabrics or devices where you want to generate the performance monitoring report.

- o Certain reports are generated at the fabric level, such as the **Inventory Report** and **Fabric Resources** reports; for those reports, select the fabrics where you want to generate the performance monitoring report. You can select a single fabric or multiple fabrics in this area; any fabrics that you select will be captured in the generated report.

Note that VXLAN fabric groups are displayed in this page in the following manner:

- The parent fabric for the VXLAN fabric groups will be displayed as a single entry, with **Fabric Group** shown as the entry in the **Fabric Type** column. If you select a VXLAN fabric group type of fabric, both the parent and the child fabrics within that fabric group will be captured in the generated report.
- The child fabric for the VXLAN fabric group will be displayed as two entries separated by a slash (/), where the parent fabric is shown first and the child fabric is shown second, after the slash.
- o Other reports are generated at the device (switch) level, such as the **Switch Performance Report** and **Switch Inventory** reports; for those reports, select the devices (switches) where you want to generate the performance monitoring report. You can select a single device or multiple devices in this area; any devices that you select will be captured in the generated report. You can select a single device or multiple devices in this area; any devices that you select will be captured in the generated report. Use the filter field to show only devices within a specific fabric to select all the devices in a specific fabric:

Fabric == *fabric_name*

8. Click **Next** to move to the **Recurrence** step.

9. Enter the necessary information in the **Recurrence** page.

- If you have email notifications enabled, in the **Email Report To** field, enter an email ID or mailer ID if you want the report in an email.

Note that the title of the report that you receive in your email will include the time in a different format than the format that is shown under the Reports tab.

As described in [Prerequisites](#), you must configure the SMTP settings in **Admin > System**

Settings > General > Email. If the data service IP address is in a private subnet, the static management route for the SMTP server must be added in the Nexus Dashboard cluster configuration.

- b. Choose the frequency at which the report job should be run.

The following table shows the options available and their description.

Available Option	Description
Now	The report is generated now.
Daily	The report is generated daily at a specified time between the Start Date and End Date that you provide.
Weekly	The report is generated once a week at a specified time between the Start Date and End Date that you provide.
Monthly	The report is generated once a month at a specified time between the Start Date and End Date that you provide.
Periodically	The report is generated periodically in a time period between the specified Start Date and End Date that you provide. The interval of time between the reports can be specified in minutes or hours.

10. Click **Next**.

You advance to the **Summary** page.

11. Verify that the information provided in the **Summary** page is correct, then click **Save**.

You are returned to the main **Reports** page. A new report and report definitions are created and appear on the **Reports** and **Report Settings** tabs, and the report that you just created begins to run in the background.

12. Review the information provided in the **Report Settings** tab.

The status for the new report shows as **RUNNING** in the Status column at first. Click the refresh icon or wait for a moment, then the status will change to **SUCCESS**.

You can also view other information on the new report in the **Report Settings** tab, such as the report template used for each report, the user who generated the report, and the recurrence setting for each report.

13. Click the **Reports** tab.

Information is provided for each programmable report that you configured, including the type of template used for each report, who created the report, and what the recurrence is for each report.

- o To download a report, click the box next to the report, then click **Actions > Download**.

- To compare two reports, click the boxes next to the reports that you want to compare, then click **Actions > Compare (2 Reports)**.

14. In the **Reports** tab, double-click on the report that you just created.

The overview information for the report is displayed, with additional information provided under these two tabs:

- **Details:** Provides detailed information on this programmable report, with additional details available in expandable areas that are specific to each type of programmable report.

For example, specifically for an **Inventory Report** programmable report, additional information is available underneath each of the following expandable areas:

- **Summary:** Provides general overview information, such as the number of chassis (switches), what version of NX-OS operation system is running on each switch, and the roles that are assigned to each switch within the selected fabric.
- **Chassis:** Provides information on the chassis (switches) within the selected fabric.
- **Modules:** For modular switches, provides information on the modules in each chassis (switch) within the selected fabric.
- **Switch Licenses:** Provides license information on each switch within the selected fabric.
- **ND Licenses:** Provides NDFC license information for a selected fabric.

- **Commands:** Provides information on executed commands, if available.

15. If you enabled email notifications in Step 9, open the email that contains detailed information from the programmable report.

For example, if you enabled email notifications for a **Performance Report** programmable report, the emailed report will show performance information for a particular fabric and the switches within that fabric, such as:

- The top five CPUs in the last day
- The top five memory and CPU utilization in the last day
- The top five links and interfaces utilization in the last day

For this type of programmable report, in each area, you can click on multiple components within that area to get comparison information for those components, such as clicking on two links to compare information between those two links.

Example use case: Configure programmable report for switch performance monitoring

Before you begin:

Complete all the tasks described in [Prerequisites](#) before proceeding with these procedures.

This section provides an example use case based on the procedures provided in [Configure programmable reports](#). In this example use case, you will be configuring a programmable report specifically for switch performance monitoring.

1. Navigate to **Analyze > Reports**.

The **Reports** page is displayed, with any configured report definitions displayed.

2. Click **Create Report**.

The **Create Custom Report** page is displayed.

The screenshot shows the 'Create Custom Report' interface. On the left, a sidebar lists five steps: 1. Select Template (active), 2. Settings, 3. Source, 4. Recurrence, and 5. Summary. The main content area is titled 'Select Template' and displays a grid of report templates. The templates include: Inventory Report, Performance Report, Switch Performance Report (highlighted), Fabric Cloudsec Oper Status, Fabric Macsec Oper Status, Fabric Nve Vni Counter, Fabric Resources, Interface Policy Details, Sfp Report, and Switch Inventory. Each template has a brief description. At the bottom of the main area, there are 'Cancel' and 'Next' buttons. A 'Refresh' button is located in the top right corner.

3. Choose the **Switch Performance Report** template to use for this use case.

You would choose this report template to monitor CPU, memory, traffic, or interface utilization for a specific switch in a fabric.

4. Click **Next** to select the template and move on to the next step of the **Create Custom Report** workflow.
5. Enter the name for the report in the **Report Name** field.

For this example use case, we will use the name **PM-VXLAN** for this programmable report for switch performance monitoring.

6. Edit the parameters in the report template page to customize the report.

Parameters	Description
------------	-------------

Include CPU	Determine if you want to include CPU statistics in the switch performance report. Choices: • true • false
Include Memory	Determine if you want to include memory statistics in the switch performance report. Choices: • true • false
Include Other Ports	Determine if you want to include other ports statistics in the switch performance report. Choices: • true • false
Top records to Chart	Choose the number of top records to chart.

7. Click **Next** to move to the **Source** step.

8. Select the devices where you want to generate the performance monitoring report.

As described in [Configure programmable reports](#), certain reports, such as the **Switch Performance Report**, are generated at the device (switch) level, so you will select the devices where you want to generate the performance monitoring report in this page. You can select a single device or multiple devices in this area; any devices that you select will be captured in the generated report.

You can also use the string **Fabric == fabric_name** in the filter field to show only devices within a specific fabric to select all the devices in a specific fabric.

9. Click **Next** to move to the **Recurrence** step.

10. If you have email notifications enabled, in the **Email Report To** field, enter an email ID or mailer ID if you want the report in an email.

As described in [Prerequisites](#), you must configure the SMTP settings in **Admin > System Settings > General > Email**. If the data service IP address is in a private subnet, the static management route for the SMTP server must be added in the Cisco Nexus Dashboard cluster configuration.

11. In the **Recurrence** field, choose the frequency at which the report job should be run.

The following table shows the options available and their description.

Available Option	Description
Now	The report is generated now.
Daily	The report is generated daily at a specified time between the Start Date and End Date that you provide.

Available Option	Description
Weekly	The report is generated once a week at a specified time between the Start Date and End Date that you provide.
Monthly	The report is generated once a month at a specified time between the Start Date and End Date that you provide.
Periodically	The report is generated periodically in a time period between the specified Start Date and End Date that you provide. The interval of time between the reports can be specified in minutes or hours.

- Click **Next**.

You advance to the **Summary** page.

- Verify that the information provided in the **Summary** page is correct, then click **Save**.

You are returned to the main **Reports** page. A new report and report definitions are created and appear on the **Report Settings** and **Reports** tabs, and the report that you just created begins to run in the background.

- Review the information provided in the **Report Settings** tab.

The status for the new report shows as **RUNNING** in the Status column at first. Click the refresh icon or wait for a moment, then the status will change to **SUCCESS**.

You can also view other information on the new report in the **Report Settings** tab, such as the report template used for each report, the user who generated the report, and the recurrence setting for each report.

- Click the **Reports** tab, then double-click on the report that you just created.

The overview information for the report is displayed, with additional information provided under these two tabs:

- **Details**
- **Commands**

- Click the **Details** tab, if it's not selected by default already, and expand on any area to get more information on this report.

For example:

- Expand the **Summary** line to get information on all of the fabric's switches from the CPU, memory, and traffic utilization points of view. Click on specific devices to get more information on those specific devices, or click on more than one device to compare information between those devices.
- Expand the **Performance-cpu** line to get average and peak CPU performance information for the switches in the fabric.

- Expand the **Performance-memory** line to get average and peak memory performance information for the switches in the fabric.
 - Expand the **Links** line to get link utilization information between devices, such as how a port on one switch is connected to a port on another switch, and the average transmit and receive time for the traffic between those ports. You can also see if there are any potential errors or discards between the links.
 - Expand the **Performance-ethernet** line to information about a switch's speeds and traffic utilization, and if there are any errors on a particular ethernet port.
17. If you enabled email notifications in Step 10, open the email that contains the programmable report for switch performance monitoring.

The emailed report will show performance information for a particular fabric and the switches within that fabric, such as:

- The top five CPUs in the last day
- The top five memory and CPU utilization in the last day
- The top five links and interfaces utilization in the last day

In each area, click on multiple components within that area to get comparison information for those components. For example, click on two links to compare information between those two links.

Copyright

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS IN THIS MANUAL ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS MANUAL ARE BELIEVED TO BE ACCURATE BUT ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED. USERS MUST TAKE FULL RESPONSIBILITY FOR THEIR APPLICATION OF ANY PRODUCTS.

THE SOFTWARE LICENSE AND LIMITED WARRANTY FOR THE ACCOMPANYING PRODUCT ARE SET FORTH IN THE INFORMATION PACKET THAT SHIPPED WITH THE PRODUCT AND ARE INCORPORATED HEREIN BY THIS REFERENCE. IF YOU ARE UNABLE TO LOCATE THE SOFTWARE LICENSE OR LIMITED WARRANTY, CONTACT YOUR CISCO REPRESENTATIVE FOR A COPY.

The Cisco implementation of TCP header compression is an adaptation of a program developed by the University of California, Berkeley (UCB) as part of UCB's public domain version of the UNIX operating system. All rights reserved. Copyright © 1981, Regents of the University of California.

NOTWITHSTANDING ANY OTHER WARRANTY HEREIN, ALL DOCUMENT FILES AND SOFTWARE OF THESE SUPPLIERS ARE PROVIDED "AS IS" WITH ALL FAULTS. CISCO AND THE ABOVE-NAMED SUPPLIERS DISCLAIM ALL WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING, WITHOUT LIMITATION, THOSE OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NONINFRINGEMENT OR ARISING FROM A COURSE OF DEALING, USAGE, OR TRADE PRACTICE.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: <https://www.cisco.com/go/trademarks>. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

© 2017–2026 Cisco Systems, Inc. All rights reserved.

Americas Headquarters

Cisco Systems, Inc.

170 West Tasman Drive

San Jose, CA 95134-1706

USA

<https://www.cisco.com>

Tel: 408 526-4000

800 553-NETS (6387)

Fax: 408 527-0883