



## **Cisco Nexus Dashboard Orchestrator Deployment Guide, Release 4.0(x)**

**First Published:** 2022-05-31

**Last Modified:** 2022-10-17

### **Americas Headquarters**

Cisco Systems, Inc.  
170 West Tasman Drive  
San Jose, CA 95134-1706  
USA  
<http://www.cisco.com>  
Tel: 408 526-4000  
800 553-NETS (6387)  
Fax: 408 527-0883

THE SPECIFICATIONS AND INFORMATION REGARDING THE PRODUCTS REFERENCED IN THIS DOCUMENTATION ARE SUBJECT TO CHANGE WITHOUT NOTICE. EXCEPT AS MAY OTHERWISE BE AGREED BY CISCO IN WRITING, ALL STATEMENTS, INFORMATION, AND RECOMMENDATIONS IN THIS DOCUMENTATION ARE PRESENTED WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED.

The Cisco End User License Agreement and any supplemental license terms govern your use of any Cisco software, including this product documentation, and are located at: <http://www.cisco.com/go/softwareterms>. Cisco product warranty information is available at <http://www.cisco.com/go/warranty>. US Federal Communications Commission Notices are found here <http://www.cisco.com/c/en/us/products/us-fcc-notice.html>.

IN NO EVENT SHALL CISCO OR ITS SUPPLIERS BE LIABLE FOR ANY INDIRECT, SPECIAL, CONSEQUENTIAL, OR INCIDENTAL DAMAGES, INCLUDING, WITHOUT LIMITATION, LOST PROFITS OR LOSS OR DAMAGE TO DATA ARISING OUT OF THE USE OR INABILITY TO USE THIS MANUAL, EVEN IF CISCO OR ITS SUPPLIERS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Any products and features described herein as in development or available at a future date remain in varying stages of development and will be offered on a when-and if-available basis. Any such product or feature roadmaps are subject to change at the sole discretion of Cisco and Cisco will have no liability for delay in the delivery or failure to deliver any products or feature roadmap items that may be set forth in this document.

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

The documentation set for this product strives to use bias-free language. For the purposes of this documentation set, bias-free is defined as language that does not imply discrimination based on age, disability, gender, racial identity, ethnic identity, sexual orientation, socioeconomic status, and intersectionality. Exceptions may be present in the documentation due to language that is hardcoded in the user interfaces of the product software, language used based on RFP documentation, or language that is used by a referenced third-party product.

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com go trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1721R)

© 2022 Cisco Systems, Inc. All rights reserved.



## CONTENTS

---

<b>CHAPTER 1</b>	<b>New and Changed Information 1</b>
	New and Changed Information 1

---

<b>CHAPTER 2</b>	<b>Deploying Nexus Dashboard Orchestrator 3</b>
	Deployment Overview 3
	Prerequisites and Guidelines 3
	Hardware Requirements For ACI Fabrics 5
	Hardware Requirements For NDFC Fabrics 7
	Installing Nexus Dashboard Orchestrator Service Using App Store 8
	Installing Nexus Dashboard Orchestrator Service Manually 9

---

<b>PART I</b>	<b>Day-0 Operations for APIC and Cloud Network Controller Sites 11</b>
---------------	--

---

<b>CHAPTER 3</b>	<b>Preparing Cisco APIC Sites 13</b>
	Pod Profile and Policy Group 13
	Configuring Fabric Access Policies for All APIC Sites 13
	Configuring Fabric Access Global Policies 14
	Configuring Fabric Access Interface Policies 15
	Configuring Sites That Contain Remote Leaf Switches 16
	Remote Leaf Guidelines and Limitations 16
	Configuring Routable Subnets for Remote Leaf Switches 17
	Enabling Direct Communication for Remote Leaf Switches 17
	Cisco Mini ACI Fabrics 18

---

<b>CHAPTER 4</b>	<b>Adding and Deleting Sites 19</b>
	Cisco NDO and APIC Interoperability Support 19

Adding Cisco ACI Sites 21  
 Removing Sites 22  
 Cross Launch to Fabric Controllers 23

---

**CHAPTER 5**      **Configuring Infra General Settings 25**  
                   Infra Configuration Dashboard 25  
                   Partial Mesh Intersite Connectivity 26  
                   Configuring Infra: General Settings 27

---

**CHAPTER 6**      **Configuring Infra for Cisco APIC Sites 31**  
                   Refreshing Site Connectivity Information 31  
                   Configuring Infra: On-Premises Site Settings 31  
                   Configuring Infra: Pod Settings 34  
                   Configuring Infra: Spine Switches 35

---

**CHAPTER 7**      **Configuring Infra for Cisco Cloud Network Controller Sites 37**  
                   Refreshing Cloud Site Connectivity Information 37  
                   Configuring Infra: Cloud Site Settings 37  
                   Recovering from Cloud Network Controller Site Downtime 40

---

**CHAPTER 8**      **Deploying Infra Configuration for ACI Sites 43**  
                   Deploying Infra Configuration 43  
                   Enabling Connectivity Between On-Premises and Cloud Sites 44

---

**PART II**            **Day-0 Operations for NDFC Fabrics 49**

---

**CHAPTER 9**      **Adding and Deleting Sites 51**  
                   Adding Cisco NDFC Sites 51  
                   Removing Sites 53  
                   Cross Launch to Fabric Controllers 54

---

**CHAPTER 10**     **Configuring Infra for Cisco NDFC Sites 55**  
                   Prerequisites and Guidelines 55

Configuring Infra: General Settings	55
Refreshing Site Connectivity Information	58
Configuring Infra: NDFC Site-Specific Settings	58
Deploying Infra Configuration	60

---

**PART III****Upgrading Nexus Dashboard Orchestrator 63**

---

**CHAPTER 11****Upgrading from Existing 4.0(x) Release 65**

Overview	65
Prerequisites and Guidelines	65
Upgrading NDO Service Using Cisco App Store	67
Upgrading NDO Service Manually	69
Resolve Configuration Drifts	71

---

**CHAPTER 12****Upgrading from 3.7(x) or Earlier Releases 75**

Overview	75
Prerequisites and Guidelines	77
Validate Existing Configuration and Create Backup	79
Uninstall Existing Nexus Dashboard Orchestrator	83
Upgrade Nexus Dashboard Cluster	84
Install Nexus Dashboard Orchestrator Release 4.0(x)	88
Restore Configuration	89
Resolve Configuration Drifts	93





# CHAPTER 1

## New and Changed Information

---

- [New and Changed Information](#), on page 1

### New and Changed Information

The following table provides an overview of the significant changes to the organization and features in this guide from the release the guide was first published to the current release. The table does not provide an exhaustive list of all changes made to the guide.

*Table 1: Latest Updates*

Release	New Feature or Update	Where Documented
4.0(1)	First release of this document.	--







## CHAPTER 2

# Deploying Nexus Dashboard Orchestrator

- [Deployment Overview](#), on page 3
- [Prerequisites and Guidelines](#), on page 3
- [Installing Nexus Dashboard Orchestrator Service Using App Store](#), on page 8
- [Installing Nexus Dashboard Orchestrator Service Manually](#), on page 9

## Deployment Overview

Cisco Nexus Dashboard Orchestrator (NDO) must be deployed as a service in Cisco Nexus Dashboard.

Cisco Nexus Dashboard is a central management console for multiple data center sites and a common platform for hosting Cisco data center services, such as the Nexus Dashboard Orchestrator or Nexus Insights. Nexus Dashboard provides a common platform and modern technology stack for these micro-services-based services, simplifying the life cycle management of the different modern services and reducing the operational overhead to run and maintain those services.

Each Nexus Dashboard cluster consists of 3 `master` nodes. You can also deploy additional `worker` nodes to enable horizontal scaling and a `standby` node for easy cluster recovery in case of a master node failure.

For detailed information about Nexus Dashboard cluster initial deployment and configuration, see [Cisco Nexus Dashboard Deployment Guide](#).

For more information about using Nexus Dashboard, see the [Cisco Nexus Dashboard User Guide](#).

This document describes initial installation requirements and procedures for the Nexus Dashboard Orchestrator service. Detailed configuration and use case information is available from the [Cisco Nexus Dashboard Orchestrator Configuration Guide for Cisco ACI](#) or [Cisco Nexus Dashboard Orchestrator Configuration Guide for Cisco NDFC](#) for your release and the Cisco Cloud Network Controller [use case documents](#), depending on the type of fabrics you plan to manage.

## Prerequisites and Guidelines

### Nexus Dashboard

You must have Cisco Nexus Dashboard cluster deployed and its fabric connectivity configured, as described in [Cisco Nexus Dashboard Deployment Guide](#) before proceeding with any additional requirements and the Nexus Dashboard Orchestrator service installation described here.

Orchestrator Release	Minimum Nexus Dashboard Release
Release 4.0(1) and later	Cisco Nexus Dashboard, Release 2.1(2d) or later

### Nexus Dashboard Networks

When first configuring Nexus Dashboard, you will need to provide two IP addresses for the two Nexus Dashboard interfaces—one connected to the Data Network and the other to the Management Network. The data network is used for the nodes' clustering and Cisco fabrics traffic. The management network is used to connect to the Cisco Nexus Dashboard GUI, CLI, or API.



**Note** The two interfaces must be in different subnets.

Connectivity between the nodes is required on both networks with the round trip time (RTT) not exceeding 150ms for Nexus Dashboard Orchestrator. Other services running in the same Nexus Dashboard cluster may have lower RTT requirements and you must always use the lowest RTT requirement when deploying multiple services in the same Nexus Dashboard cluster. We recommend consulting the [Cisco Nexus Dashboard Deployment Guide](#) for more information.

When Nexus Dashboard Orchestrator service is deployed in Nexus Dashboard, it uses each of the two networks for different purposes as shown in the following table:

NDO Traffic Type	Nexus Dashboard Network
Any traffic to and from: <ul style="list-style-type: none"> <li>• Cisco APIC</li> <li>• Cisco NDFC</li> <li>• Any other remote devices or controllers</li> </ul>	Data network
Intra-cluster communication	Data network
Audit log streaming (Splunk/syslog)	Management network
Remote backup	Management network

### Nexus Dashboard Cluster Sizing and Services Cohosting

Nexus Dashboard supports co-hosting of services. Depending on the type and number of services you choose to run, you may be required to deploy additional worker nodes in your cluster. For cluster sizing information and recommended number of nodes based on specific use cases, see the [Cisco Nexus Dashboard Capacity Planning](#) tool.

If you plan to host other services in addition to the Nexus Dashboard Orchestrator, ensure that you deploy and configure additional Nexus Dashboard nodes based on the cluster sizing tool recommendation, as described in the [Cisco Nexus Dashboard User Guide](#), which is also available directly from the Nexus Dashboard GUI.



---

**Note** This release of Nexus Dashboard Orchestrator can be co-hosted with other services on physical or virtual (ESX) Nexus Dashboard clusters only. If you are deploying the Nexus Dashboard Orchestrator service in a virtual (KVM) or cloud Nexus Dashboard cluster, you must not install other services in the same cluster.

---

### Network Time Protocol (NTP)

Nexus Dashboard Orchestrator uses NTP for clock synchronization, so you must have an NTP server configured in your environment.

## Hardware Requirements For ACI Fabrics

### Spine Switch Requirements

Multi-Site requires second generation (Cloud Scale) spine switches for intersite connectivity. All Cloud Scale spine switches supported by a given ACI release are supported by Nexus Dashboard Orchestrator.

Nexus 9000 first generation switches are not supported for Multi-Site intersite connectivity, but can still be used within a single fabric as long as that fabric is running an APIC release prior to 5.0(1).


Refer to the [ACI-mode Switches Hardware Support Matrix](#) for the complete list of supported spines for each release.

### Leaf Switch Requirements


Multi-Site has no dependency on the fabrics' leaf switches and as such supports the same leaf switch models as the Cisco APIC. The full list of supported hardware is available in the [ACI-mode Switches Hardware Support Matrix](#).

### IPN Connectivity Across Sites

The following figure shows how spine switches supported with Multi-Site are connected to the intersite network.

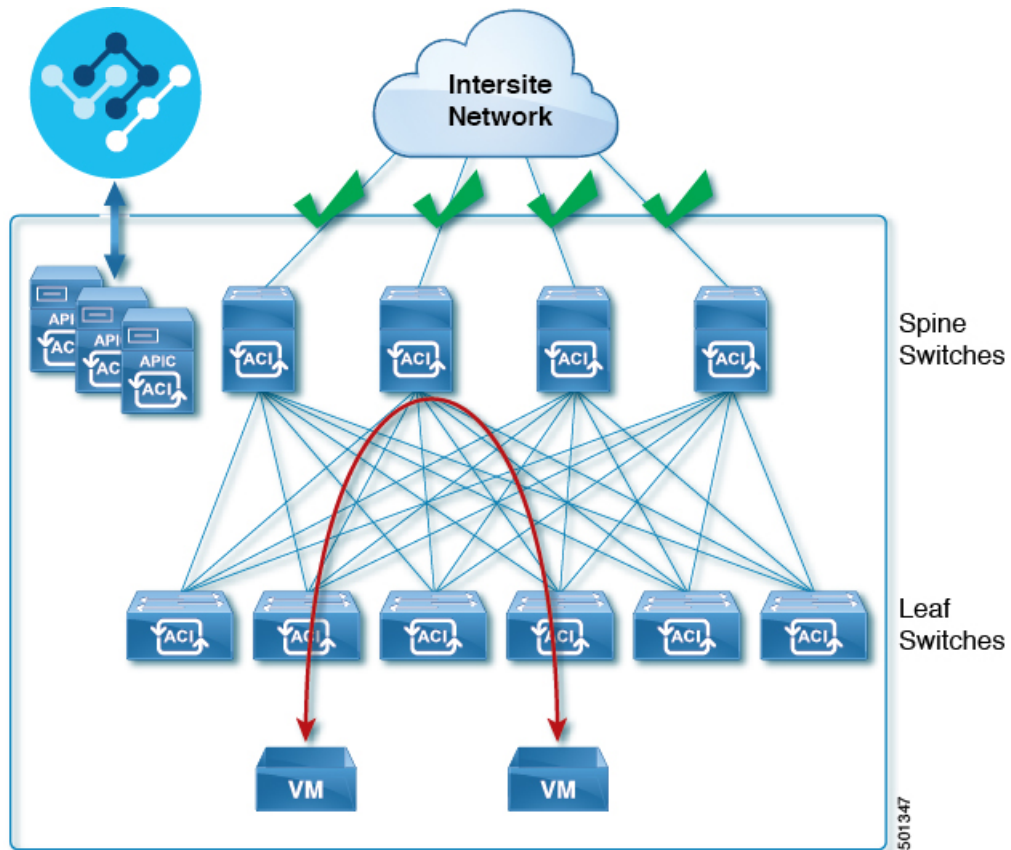

You can choose to mix spine switches supported by Multi-Site with switches that are not supported within the same Cisco APIC fabric, but only the supported switches can connect to the intersite network as shown in the following figure.

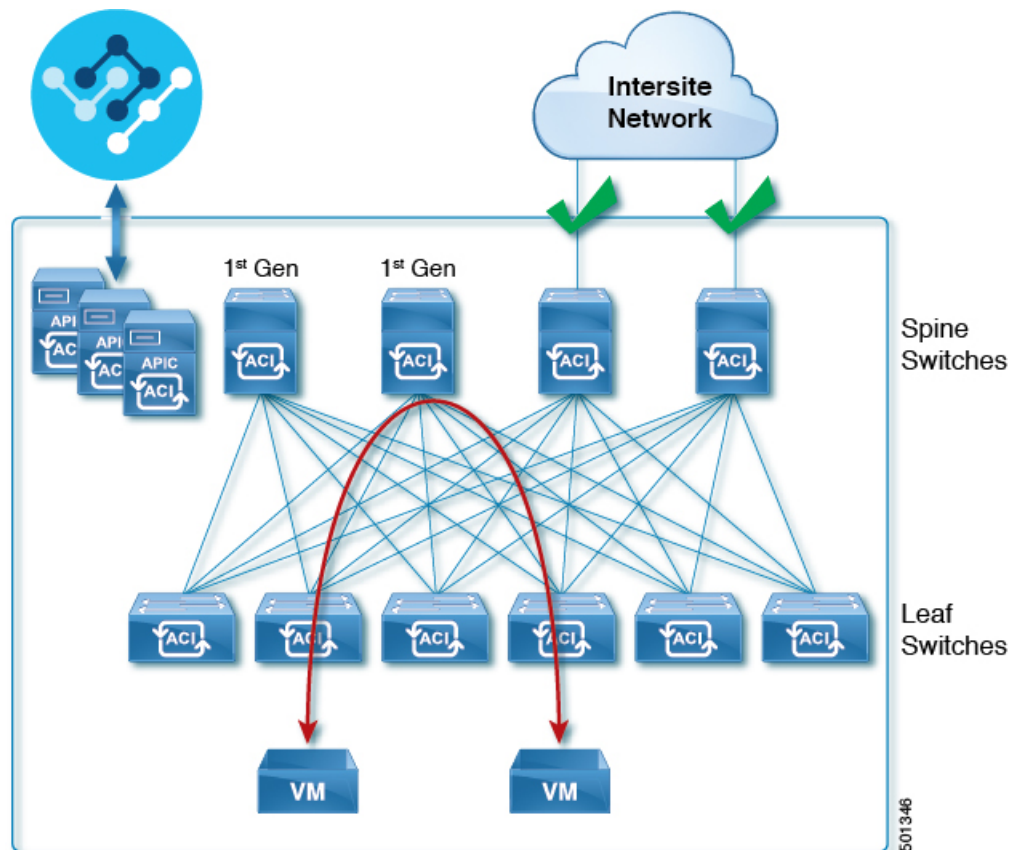

## Hardware Requirements For NDFC Fabrics

### Border Gateways Requirements

The following table summarizes the hardware requirements for EVPN Multi-Site Architecture:

- Cisco Nexus 9300 EX platform
- Cisco Nexus 9300 FX platform
- Cisco Nexus 9300 FX2 platform
- Cisco Nexus 9300-GX platform
- Cisco Nexus 9332C platform
- Cisco Nexus 9364C platform
- Cisco Nexus 9500 platform with X9700-EX line card
- Cisco Nexus 9500 platform with X9700-FX line card

The hardware requirements for the site-internal BGP Route Reflector (RR) and VTEP of a VXLAN BGP EVPN site remain the same as those without the EVPN Multi-Site Border Gateways (BGW). This document does not cover the hardware and software requirements for the VXLAN EVPN site-internal network.

# Installing Nexus Dashboard Orchestrator Service Using App Store

This section describes how to install Cisco Nexus Dashboard Orchestrator service in an existing Cisco Nexus Dashboard cluster.

## Before you begin

- Ensure that you meet the requirements and guidelines described in [Prerequisites and Guidelines, on page 3](#).
- The Cisco DC App Center must be reachable from the Nexus Dashboard via the Management Network directly or using a proxy configuration. Nexus Dashboard proxy configuration is described in the [Nexus Dashboard User Guide](#).

If you are unable to establish the connection to the DC App Center, skip this section and follow the steps described in [Installing Nexus Dashboard Orchestrator Service Manually, on page 9](#).

- The App Store allows you to install the latest version of the service only.


If you want to install a version prior to Release 3.3(1), see the *Nexus Dashboard Orchestrator Installation Guide* specific to that release for the available deployment options and procedures.

**Step 1** Log in to the Nexus Dashboard GUI.

**Step 2** From the left navigation menu, select **Admin Console**.

You must have `admin` privileges to deploy services.

**Step 3** Navigate to the App Store and choose Nexus Dashboard Orchestrator app.

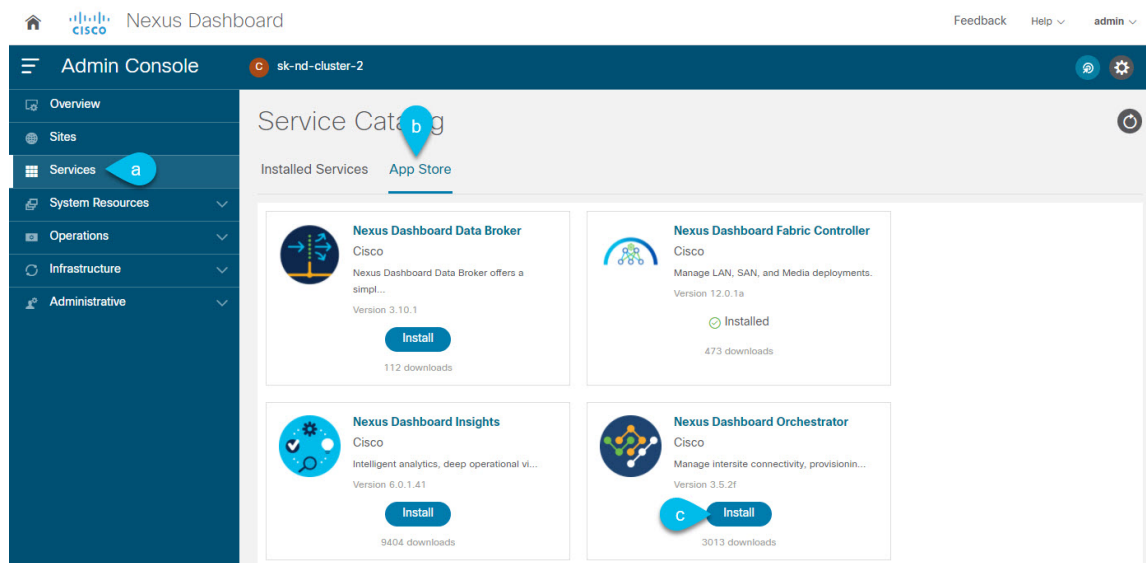

a) From the left navigation menu, select **Service Catalog**.

b) Select the **App Store** tab.

c) In the Nexus Dashboard Orchestrator tile, click **Install**.

**Step 4** In the License Agreement window that opens, click **Agree and Download**.

**Step 5** Wait for the service to be downloaded to the Nexus Dashboard and deployed.

**Step 6** Enable the app.

After installation is complete, the service will remain in the `Disabled` state by default and you must enable it.

To enable the app, click the `...` menu on the app and select **Enable**.

**Step 7** Launch the app.

To launch the app, simply click **Open** on the service tile in the Nexus Dashboard's **Service Catalog** page.

The single sign-on (SSO) feature allows you to log in to the service using the same credentials as you used for the Nexus Dashboard.

---

## Installing Nexus Dashboard Orchestrator Service Manually

This section describes how to manually upload and install Cisco Nexus Dashboard Orchestrator service in an existing Cisco Nexus Dashboard cluster.

### Before you begin

- Ensure that you meet the requirements and guidelines described in [Prerequisites and Guidelines, on page 3](#).

---

**Step 1** Download the Cisco Nexus Dashboard Orchestrator service.

a) Browse to the Nexus Dashboard Orchestrator page on DC App Center:

<https://dcappcenter.cisco.com/nexus-dashboard-orchestrator.html>


b) From the **Version** dropdown, choose the version you want to install and click **Download**.

c) Click **Agree and download** to accept the license agreement and download the image.

**Step 2** Log in to your Cisco Nexus Dashboard dashboard.

When deploying a service, you need to install it in only one of the Nexus Dashboard nodes, the service will be replicated to the other nodes in the cluster automatically. So you can log in to any one of your Nexus Dashboard nodes using its management IP address.

**Step 3** Choose to manually upload the image.

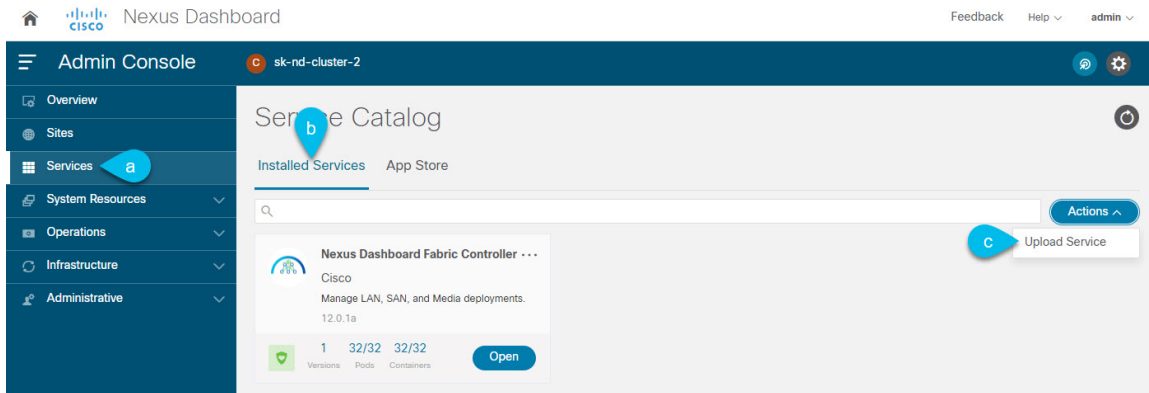

- a) In the left navigation bar, click **Service Catalog**.
- b) Select the **Installed Services** tab.
- c) In the top right of the main pane, select **Actions > Upload Service**.

**Step 4** Select the image file to upload.

- a) Choose the location of the image.
  - If you downloaded the service image to your system, choose **Local**.
  - If you are hosting the image on a server, choose **Remote**.
- b) Choose the file.
  - If you chose **Local** in the previous substep, click **Select File** and select the image you downloaded.
  - If you chose **Remote**, provide the full URL to the image file, for example `http://<ip-address>:<port>/<full-path>/cisco-mso-<version>.nap`.
- c) Click **Upload** to add the service to the cluster.

**Step 5** Wait for the service to be downloaded to the Nexus Dashboard and deployed.

**Step 6** Enable the service.

After installation is complete, the service will remain in the `Disabled` state by default and you must enable it. To enable the service, click the `...` menu and select **Enable**.

**Step 7** Launch the service.

To launch the service, simply click **Open** on the service tile in the Nexus Dashboard's **Service Catalog** page.

The single sign-on (SSO) feature allows you to log in to the service using the same credentials as you used for the Nexus Dashboard.





## PART I

# Day-0 Operations for APIC and Cloud Network Controller Sites

- [Preparing Cisco APIC Sites, on page 13](#)
- [Adding and Deleting Sites, on page 19](#)
- [Configuring Infra General Settings, on page 25](#)
- [Configuring Infra for Cisco APIC Sites, on page 31](#)
- [Configuring Infra for Cisco Cloud Network Controller Sites, on page 37](#)
- [Deploying Infra Configuration for ACI Sites, on page 43](#)





## CHAPTER 3

# Preparing Cisco APIC Sites

---

- [Pod Profile and Policy Group](#), on page 13
- [Configuring Fabric Access Policies for All APIC Sites](#), on page 13
- [Configuring Sites That Contain Remote Leaf Switches](#), on page 16
- [Cisco Mini ACI Fabrics](#), on page 18

## Pod Profile and Policy Group

In each site's APIC, you must have one Pod profile with a Pod policy group. If your site does not have a Pod policy group you must create one. Typically, these settings will already exist as you will have configured them when you first deployed the fabric.

- 
- Step 1** Log in to the site's APIC GUI.
- Step 2** Check that the Pod profile contains a Pod policy group.  
Navigate to **Fabric > Fabric Policies > Pods > Profiles > Pod Profile default**.
- Step 3** If necessary, create a Pod policy group.  
a) Navigate to **Fabric > Fabric Policies > Pods > Policy Groups**.  
b) Right-click **Policy Groups** and select **Create Pod Policy Group**.  
c) Enter the appropriate information and click **Submit**.
- Step 4** Assign the new Pod policy group to the default Pod profile.  
a) Navigate to **Fabric > Fabric Policies > Pods > Profiles > Pod Profile default**  
b) Select the default profile.  
c) Choose the new pod policy group and click **Update**.
- 

## Configuring Fabric Access Policies for All APIC Sites

Before your APIC fabrics can be added to and managed by the Nexus Dashboard Orchestrator, there is a number of fabric-specific access policies that you must configure on each site.

## Configuring Fabric Access Global Policies

This section describes the global fabric access policy configurations that must be created for each APIC site before it can be added to and managed by the Nexus Dashboard Orchestrator.

**Step 1** Log in directly to the site's APIC GUI.

**Step 2** From the main navigation menu, select **Fabric > Access Policies**.

You must configure a number of fabric policies before the site can be added to the Nexus Dashboard Orchestrator. From the APIC's perspective, this is something you do just like you would if you were connecting a bare-metal host, where you would configure domains, AEPs, policy groups, and interface selectors; you must configure the same options for connecting the spine switch interfaces to the inter-site network for all the sites that will be part of the same Multi-Site domain.

**Step 3** Specify the VLAN pool.

The first thing you configure is the VLAN pool. We use Layer 3 sub-interfaces tagging traffic with VLAN-4 to connect the spine switches to the inter-site network.

- a) In the left navigation tree, browse to **Pools > VLAN**.
- b) Right-click the **VLAN** category and choose **Create VLAN Pool**.

In the **Create VLAN Pool** window, specify the following:

- For the **Name** field, specify the name for the VLAN pool, for example `msite`.
- For **Allocation Mode**, specify `Static Allocation`.
- And for the **Encap Blocks**, specify just the single VLAN 4. You can specify a single VLAN by entering the same number in both **Range** fields.

**Step 4** Configure Attachable Access Entity Profiles (AEP).

- a) In the left navigation tree, browse to **Global Policies > Attachable Access Entity Profiles**.
- b) Right-click the **Attachable Access Entity Profiles** category and choose **Create Attachable Access Entity Profiles**.

In the **Create Attachable Access Entity Profiles** window, specify the name for the AEP, for example `msite-aep`.

- c) Click **Next** and **Submit**

No additional changes, such as interfaces, are required.

**Step 5** Configure domain.

The domain you configure is what you will select from the Nexus Dashboard Orchestrator when adding this site.

- a) In the left navigation tree, browse to **Physical and External Domains > External Routed Domains**.
- b) Right-click the **External Routed Domains** category and choose **Create Layer 3 Domain**.

In the **Create Layer 3 Domain** window, specify the following:

- For the **Name** field, specify the name the domain, for example `msite-13`.
- For **Associated Attachable Entity Profile**, select the AEP you created in Step 4.
- For the **VLAN Pool**, select the VLAN pool you created in Step 3.

- c) Click **Submit**.

No additional changes, such as security domains, are required.

---

### What to do next

After you have configured the global access policies, you must still add interfaces policies as described in [Configuring Fabric Access Interface Policies, on page 15](#).

## Configuring Fabric Access Interface Policies

This section describes the fabric access interface configurations that must be done for the Nexus Dashboard Orchestrator on each APIC site.

### Before you begin

You must have configured the global fabric access policies, such as VLAN Pool, AEP, and domain, in the site's APIC, as described in [Configuring Fabric Access Global Policies, on page 14](#).

---

**Step 1** Log in directly to the site's APIC GUI.

**Step 2** From the main navigation menu, select **Fabric > Access Policies**.

In addition to the VLAN, AEP, and domain you have configured in previous section, you must also create the interface policies for the fabric's spine switch interfaces that connect to the Inter-Site Network (ISN).

**Step 3** Configure a spine policy group.

- a) In the left navigation tree, browse to **Interface Policies > Policy Groups > Spine Policy Groups**.

This is similar to how you would add a bare-metal server, except instead of a Leaf Policy Group, you are creating a Spine Policy Group.

- b) Right-click the **Spine Policy Groups** category and choose **Create Spine Access Port Policy Group**.

In the **Create Spine Access Port Policy Group** window, specify the following:

- For the **Name** field, specify the name for the policy group, for example `Spine1-PolGrp`.
- For the **Link Level Policy** field, specify the link policy used between your spine switch and the ISN.
- For **CDP Policy**, choose whether you want to enable CDP.
- For the **Attached Entity Profile**, select the AEP you have configured in previous section, for example `msite-aep`.

- c) Click **Submit**.

No additional changes, such as security domains, are required.

**Step 4** Configure a spine profile.

- a) In the left navigation tree, browse to **Interface Policies > Profiles > Spine Profiles**.
- b) Right-click the **Spine Profiles** category and choose **Create Spine Interface Profile**.

In the **Create Spine Interface Profile** window, specify the following:

- For the **Name** field, specify the name for the profile, for example `Spine1-ISN`.
- For **Interface Selectors**, click the + sign to add the port on the spine switch that connects to the ISN. Then in the **Create Spine Access Port Selector** window, provide the following:
  - For the **Name** field, specify the name for the port selector, for example `Spine1-ISN`.
  - For the **Interface IDs**, specify the switch port that connects to the ISN, for example `5/32`.
  - For the **Interface Policy Group**, choose the policy group you created in the previous step, for example `Spine1-PolGrp`.

Then click **OK** to save the port selector.

- c) Click **Submit** to save the spine interface profile.

**Step 5** Configure a spine switch selector policy.

- a) In the left navigation tree, browse to **Switch Policies > Profiles > Spine Profiles**.  
 b) Right-click the **Spine Profiles** category and choose **Create Spine Profile**.

In the **Create Spine Profile** window, specify the following:

- For the **Name** field, specify the name for the profile, for example `Spine1`.
- For **Spine Selectors**, click the + to add the spine and provide the following:
  - For the **Name** field, specify the name for the selector, for example `Spine1`.
  - For the **Blocks** field, specify the spine node, for example `201`.

- c) Click **Update** to save the selector.  
 d) Click **Next** to proceed to the next screen.  
 e) Select the interface profile you have created in the previous step

For example `Spine1-ISN`.

- f) Click **Finish** to save the spine profile.

## Configuring Sites That Contain Remote Leaf Switches

Multi-Site architecture supports APIC sites with Remote Leaf switches. The following sections describe guidelines, limitations, and configuration steps required to allow Nexus Dashboard Orchestrator to manage these sites.

### Remote Leaf Guidelines and Limitations

If you want to add an APIC site with a Remote Leaf to be managed by the Nexus Dashboard Orchestrator, the following restrictions apply:

- You must upgrade your Cisco APIC to Release 4.2(4) or later.
- Only physical Remote Leaf switches are supported in this release

- Only -EX and -FX or later switches are supported as Remote Leaf switches for use with Multi-Site
- Remote Leaf is not supported with back-to-back connected sites without IPN switches
- Remote Leaf switches in one site cannot use another site's L3Out
- Stretching a bridge domain between one site and a Remote Leaf in another site is not supported

You must also perform the following tasks before the site can be added to and managed by the Nexus Dashboard Orchestrator:

- You must enable Remote Leaf direct communication and configure routable subnets directly in the site's APIC, as described in the following sections.
- You must add the routable IP addresses of Cisco APIC nodes in the DHCP-Relay configuration applied on the interfaces of the Layer 3 routers connecting to the Remote Leaf switches.

The routable IP address of each APIC node is listed in the **Routable IP** field of the **System > Controllers > <controller-name>** screen of the APIC GUI.

## Configuring Routable Subnets for Remote Leaf Switches

Before you can add a site that contains one or more Remote Leaf switches to the Nexus Dashboard Orchestrator, you must configure routable subnets for the pod with which the Remote Leaf nodes are associated.

- 
- Step 1** Log in directly to the site's APIC GUI.
  - Step 2** From the menu bar, select **Fabric > Inventory**.
  - Step 3** In the Navigation pane, click **Pod Fabric Setup Policy**.
  - Step 4** In the main pane, double-click the pod where you want to configure the subnets.
  - Step 5** In the **Routable Subnets** area, click the + sign to add a subnet.
  - Step 6** Enter the **IP** and **Reserve Address Count**, set the state to **Active** or **Inactive**, then click **Update** to save the subnet.  
When configuring routable subnets, you must provide a netmask between /22 and /29.
  - Step 7** Click **Submit** to save the configuration.
- 

## Enabling Direct Communication for Remote Leaf Switches

Before you can add a site that contains one or more Remote Leaf switches to the Nexus Dashboard Orchestrator, you must configure direct remote leaf communication for that site. Additional information about remote leaf direct communication feature is available in the *Cisco APIC Layer 3 Networking Configuration Guide*. This section outlines the steps and guidelines specific to the integration with Multi-Site.




---

**Note** Once you enable Remote Leaf switch direct communication, the switches will function in the new mode only

---

**Step 1** Log in directly to the site's APIC.

**Step 2** Enable direct traffic forwarding for Remote Leaf switches.

- a) From the menu bar, navigate to **System > System Settings**.
- b) From the left side bar, select **Fabric Wide Setting**.
- c) Check the **Enable Remote Leaf Direct Traffic Forwarding** checkbox.

**Note** You cannot disable this option after you enable it.

- d) Click **Submit** to save the changes.


## Cisco Mini ACI Fabrics

Cisco Multi-Site supports Cisco Mini ACI fabrics as typical on-premises sites without requiring any additional configuration. This section provides a brief overview of Mini ACI fabrics, detailed info on deploying and configuring this type of fabrics is available in [Cisco Mini ACI Fabric and Virtual APICs](#).

Cisco ACI, Release 4.0(1) introduced Mini ACI Fabric for small scale deployment. Mini ACI fabric works with Cisco APIC cluster consisting of one physical APIC and two virtual APICs (vAPIC) running in virtual machines. This reduces the physical footprint and cost of the APIC cluster, allowing ACI fabric to be deployed in scenarios with limited rack space or initial budget, such as a colocation facility or a single-room data center, where a full-scale ACI installations may not be practical due to physical footprint or initial cost.

The following diagram shows an example of a mini Cisco ACI fabric with a physical APIC and two virtual APICs (vAPICs):

**Figure 1: Cisco Mini ACI Fabric**

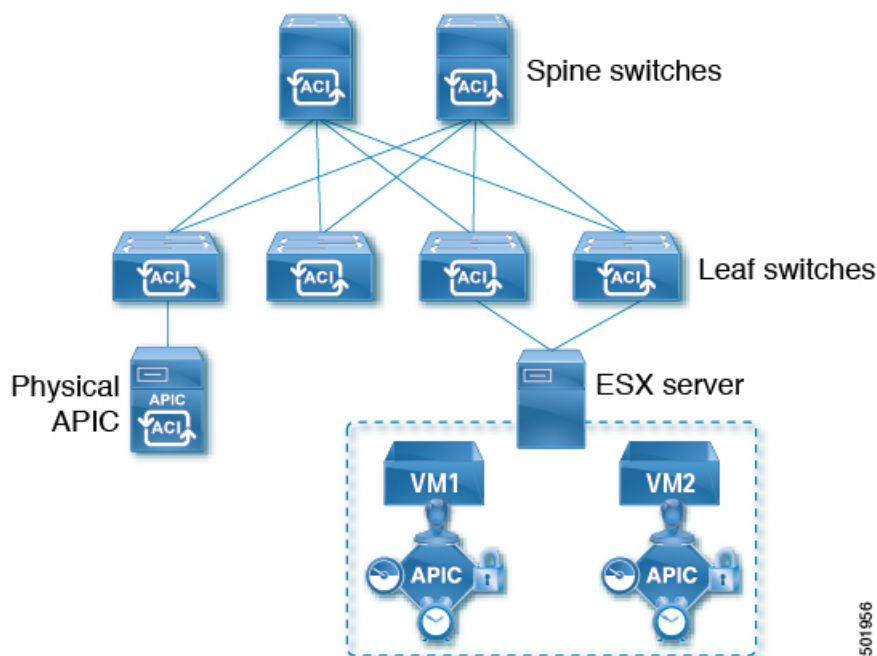

501956





## CHAPTER 4

# Adding and Deleting Sites

- [Cisco NDO and APIC Interoperability Support, on page 19](#)
- [Adding Cisco ACI Sites, on page 21](#)
- [Removing Sites, on page 22](#)
- [Cross Launch to Fabric Controllers, on page 23](#)

## Cisco NDO and APIC Interoperability Support

Cisco Nexus Dashboard Orchestrator (NDO) does not require a specific version of APIC to be running in all sites. The APIC clusters in each site as well as the NDO itself can be upgraded independently of each other and run in mixed operation mode as long as the fabric can be on-boarded to the Nexus Dashboard where the Nexus Dashboard Orchestrator service is installed. As such, we recommend that you always upgrade to the latest release of the Nexus Dashboard Orchestrator.

However, keep in mind that if you upgrade the NDO before upgrading the APIC clusters in one or more sites, some of the new NDO features may not yet be supported by an earlier APIC release. In that case a check is performed on each template to ensure that every configured option is supported by the target sites.

The check is performed when you save a template or deploy a template. If the template is already assigned to a site, any unsupported configuration options will not be saved; if the template is not yet assigned, you will be able to assign it to a site, but not be able to save or deploy the schema if it contains configuration unsupported by that site.

In case an unsupported configuration is detected, an error message will show, for example: `This APIC site version <site-version> is not supported by NDO. The minimum version required for this <feature> is <required-version> or above.`

The following table lists the features and the minimum required APIC release for each one:



**Note** While some of the following features are supported on earlier Cisco APIC releases, Release 4.2(4) is the earliest release that can be on-boarded to the Nexus Dashboard and managed by this release of Nexus Dashboard Orchestrator.

Feature	Minimum APIC Version
ACI Multi-Pod Support	Release 4.2(4)

<b>Feature</b>	<b>Minimum APIC Version</b>
Service Graphs (L4-L7 Services)	Release 4.2(4)
External EPGs	Release 4.2(4)
ACI Virtual Edge VMM Support	Release 4.2(4)
DHCP Support	Release 4.2(4)
Consistency Checker	Release 4.2(4)
vzAny	Release 4.2(4)
Host Based Routing	Release 4.2(4)
CloudSec Encryption	Release 4.2(4)
Layer 3 Multicast	Release 4.2(4)
MD5 Authentication for OSPF	Release 4.2(4)
EPG Preferred Group	Release 4.2(4)
Intersite L3Out	Release 4.2(4)
EPG QoS Priority	Release 4.2(4)
Contract QoS Priority	Release 4.2(4)
Single Sign-On (SSO)	Release 5.0(1)
Multicast Rendezvous Point (RP) Support	Release 5.0(1)
Transit Gateway (TGW) support for AWS and Azure Sites	Release 5.0(1)
SR-MPLS Support	Release 5.0(1)
Cloud LoadBalancer High Availability Port	Release 5.0(1)
Service Graphs (L4-L7 Services) with UDR	Release 5.0(2)
3rd Party Device Support in Cloud	Release 5.0(2)
Cloud Loadbalancer Target Attach Mode Feature	Release 5.1(1)
Support security and service insertion in Azure for non-ACI networks reachable through Express Route	Release 5.1(1)
CSR Private IP Support	Release 5.1(1)
Extend ACI policy model and automation for Cloud native services in Azure	Release 5.1(1)

Feature	Minimum APIC Version
Flexible segmentation through multiple VRF support within a single VNET for Azure	Release 5.1(1)
Private Link automation for Azure PaaS and third-party services	Release 5.1(1)
Openshift 4.3 IPI on Azure with ACI-CNI	Release 5.1(1)
Cloud Site Underlay Configuration	Release 5.2(1)

## Adding Cisco ACI Sites

This section describes how to add a Cisco APIC or Cloud Network Controller site using the Nexus Dashboard GUI and then enable that site to be managed by Nexus Dashboard Orchestrator.

### Before you begin

- If you are adding on-premises ACI site, you must have completed the site-specific configurations in each site's APIC, as described in previous sections in this chapter.
- You must ensure that the site(s) you are adding are running Release 4.2(4) or later.

**Step 1** Log in to your Nexus Dashboard and open the **Admin Console**.

**Step 2** From the left navigation menu, choose **Sites** and click **Add Site**.

**Step 3** Provide site information.

- For **Site Type**, select **ACI** or **Cloud Network Controller** depending on the type of ACI fabric you are adding.
- Provide the controller information.
  - You need to provide the **Host Name/IP Address**, **User Name**, and **Password** for the APIC controller currently managing your ACI fabrics.

**Note** For APIC fabrics, if you will use the site with Nexus Dashboard Orchestrator service only, you can provide either the in-band or out-of-band IP address of the APIC. If you will use the site with Nexus Dashboard Insights as well, you must provide the in-band IP address.

- For on-premises ACI sites managed by Cisco APIC, if you plan to use this site with Day-2 Operations applications such as Nexus Insights, you must also provide the **In-Band EPG** name used to connect the Nexus Dashboard to the fabric you are adding. Otherwise, if you will use this site with Nexus Dashboard Orchestrator only, you can leave this field blank.
- For Cloud Network Controller sites, **Enable Proxy** if your cloud site is reachable via a proxy.

Proxy must be already configured in your Nexus Dashboard's cluster settings. If the proxy is reachable via management network, a static management network route must also be added for the proxy IP address. For more information about proxy and route configuration, see [Nexus Dashboard User Guide](#) for your release.

- Click **Save** to finish adding the site.

At this time, the sites will be available in the Nexus Dashboard, but you still need to enable them for Nexus Dashboard Orchestrator management as described in the following steps.

- Step 4** Repeat the previous steps for any additional ACI or Cloud Network Controller sites.
- Step 5** From the Nexus Dashboard's **Services** page, open the Nexus Dashboard Orchestrator service. You will be automatically logged in using the Nexus Dashboard user's credentials.
- Step 6** In the Nexus Dashboard Orchestrator GUI, manage the sites.
- From the left navigation menu, select **Sites**.
  - In the main pane, change the **State** from `Unmanaged` to `Managed` for each fabric that you want the NDO to manage.
- When managing the sites, you must provide a unique site ID for each site.

## Removing Sites

This section describes how to disable site management for one or more sites using the Nexus Dashboard Orchestrator GUI. The sites will remain present in the Nexus Dashboard.

### Before you begin

You must ensure that all templates associated with the site you want to remove are not deployed.

- Step 1** Open the Nexus Dashboard Orchestrator GUI. You can open the NDO service from the Nexus Dashboard's **Service Catalog**. You will be automatically logged in using the Nexus Dashboard user's credentials.
- Step 2** Remove the site from all templates. You must remove the site from all templates with which it is associated before you can unmanage the site and remove it from your Nexus Dashboard.
- Navigate to **Application Management > Schemas**.
  - Click a schema that contains one or more templates associated with the site.
  - In the left sidebar's **Sites** area, select a template associated with the site, click the options menu (...) next to the template, and choose **Undeploy Template**. This will remove configurations that were deployed using this template to this site.
 

**Note** For non-stretched templates, you can choose to preserve the configuration by selecting **Dissociate Template** instead of **Undeploy Template**, but you must undeploy any stretched templates.
  - Repeat this step for all templates associated with the site that you want to unmanage in this and all other schemas.
- Step 3** Remove the site's underlay configuration.
- From the left navigation menu, select **Infrastructure > Site Connectivity**.
  - In the main pane, click **Configure**.
  - In the left sidebar, select the site you want to unmanage.
  - In right sidebar's **Inter-Site Connectivity** tab, disable the **Multi-Site** checkbox.

- e) Click **Deploy** to deploy the changes to the site.

**Step 4** In the Nexus Dashboard Orchestrator GUI, disable the sites.

- a) From the left navigation menu, select **Infrastructure > Sites**.
- b) In the main pane, change the **State** from *Managed* to *Unmanaged* for the site that you want to unmanage.

**Note** If the site is associated with one or more deployed templates, you will not be able to change its state to *Unmanaged* until you undeploy those templates, as described in the previous step.

**Step 5** Delete the site from Nexus Dashboard.

If you no longer want to manage this site or use it with any other applications, you can delete the site from the Nexus Dashboard as well.

**Note** Note that the site must not be currently in use by any of the services installed in your Nexus Dashboard cluster.

- a) In the top navigation bar, click the **Home** icon to return to the Nexus Dashboard GUI.
- b) From the left navigation menu of the Nexus Dashboard GUI, select **Sites**.
- c) Select one or more sites you want to delete.
- d) In the top right of the main pane, select **Actions > Delete Site**.
- e) Provide the site's login information and click **OK**.

The site will be removed from the Nexus Dashboard.

---

## Cross Launch to Fabric Controllers

Nexus Dashboard Orchestrator currently supports a number of configuration options for each type of fabrics. For many additional configuration options, you may need to log in directly into the fabric's controller.

You can cross launch into the specific site controller's GUI from the NDO's **Infrastructure > Sites** screen by selecting the actions ( . . . ) menu next to the site and clicking **Open in user interface**. Note that cross-launch works with out-of-band (OOB) management IP of the fabric.

If the same user is configured in Nexus Dashboard and the fabric, you will be logged in automatically into the fabric's controller using the same log in information as the Nexus Dashboard user. For consistency, we recommend configuring remote authentication with common users across Nexus Dashboard and the fabrics.





# CHAPTER 5

## Configuring Infra General Settings

- [Infra Configuration Dashboard, on page 25](#)
- [Partial Mesh Intersite Connectivity, on page 26](#)
- [Configuring Infra: General Settings, on page 27](#)

### Infra Configuration Dashboard

The **Infra Configuration** page displays an overview of all sites and inter-site connectivity in your Nexus Dashboard Orchestrator deployment and contains the following information:

**Figure 2: Infra Configuration Overview**

1. The **General Settings** tile displays information about BGP peering type and its configuration. This is described in detail in the next section.

2. The **On-Premises** tiles display information about every on-premises site that is part of your Multi-Site domain along with their number of Pods and spine switches, OSPF settings, and overlay IPs.

You can click on the **Pods** tile that displays the number of Pods in the site to show information about the Overlay Unicast TEP addresses of each Pod.

This is described in detail in [Configuring Infra for Cisco APIC Sites, on page 31](#).

3. The **Cloud** tiles display information about every cloud site that is part of your Multi-Site domain along with their number of regions and basic site information.

This is described in detail in [Configuring Infra for Cisco Cloud Network Controller Sites, on page 37](#).

4. You can click **Show Connectivity Status** to display intersite connectivity details for a specific site.

5. You can use the **Configure** button to navigate to the intersite connectivity configuration, which is described in detail in the following sections.

The following sections describe the steps necessary to configure the general fabric Infra settings. Fabric-specific requirements and procedures are described in the following chapters based on the specific type of fabric you are managing.

Before you proceed with Infra configuration, you must have configured and added the sites as described in previous sections.

In addition, any infrastructure changes such as adding and removing spine switches or spine node ID changes require a Nexus Dashboard Orchestrator fabric connectivity information refresh described in the [Refreshing Site Connectivity Information, on page 31](#) as part of the general Infra configuration procedures.

## Partial Mesh Intersite Connectivity

In addition to full mesh connectivity where you configure intersite connectivity from every site managed by your Nexus Dashboard Orchestrator to every other site, this release also supports partial mesh configuration. In partial mesh configuration, you can manage sites in standalone mode with no intersite connectivity to any other site or limit the intersite configuration to only a subset of other sites in your Multi-Site domain.

Prior to Nexus Dashboard Orchestrator, Release 3.6(1), you could stretch templates between sites and refer to policies from other templates, which were deployed to other sites, even if the intersite connectivity between those sites was not configured, resulting in intended traffic flow between the sites to not work.

Beginning with release 3.6(1), the Orchestrator will allow you to stretch template and remote reference policies from other templates (deployed on other sites) between two or more sites only if the intersite connectivity between those sites is properly configured and deployed.

When configuring site infra for Cisco APIC and Cisco Cloud Network Controller sites as described in the following sections, for each site you can explicitly choose to which other sites infra connectivity will be established and provide that configuration information only.

### Partial Mesh Connectivity Guidelines

When configuring partial mesh connectivity, consider the following guidelines:

- Partial mesh connectivity is supported between two cloud sites or a cloud and on-premises site.
  - Full mesh connectivity is automatically established between all on-premises sites.
- Partial mesh connectivity is supported using BGP-EVPN or BGP-IPv4 protocols.



Note however that stretching a template is allowed only for sites that are connected using BGP-EVPN protocol. If you are using BGP-IPv4 to connect two or more sites, any template assigned to any of those sites can be deployed to one site only.

## Configuring Infra: General Settings

This section describes how to configure general Infra settings for all the sites.



**Note** Some of the following settings apply to all sites, while others are required for specific type of sites (for example, Cloud Network Controller sites). Ensure that you complete all the required configurations in infra general settings before proceeding to the site-local settings specific to each site.

- 
- Step 1** Log in to the Cisco Nexus Dashboard Orchestrator GUI.
- Step 2** In the left navigation menu, select **Infrastructure > Site Connectivity**.
- Step 3** In the main pane, click **Configure**.
- Step 4** In the left sidebar, select **General Settings**.
- Step 5** Provide **Control Plane Configuration**.
- Select the **Control Plane Configuration** tab.
  - Choose **BGP Peering Type**.
    - full-mesh**—All border gateway switches in each site will establish peer connectivity with remote sites' border gateway switches.

In **full-mesh** configuration, Nexus Dashboard Orchestrator uses the spine switches for ACI managed fabrics and border gateways for NDFC managed fabrics.
    - route-reflector**—The route-reflector option allows you to specify one or more control-plane nodes to which each site establishes MP-BGP EVPN sessions. The use of route-reflector nodes avoids creating MP-BGP EVPN full mesh adjacencies between all the sites managed by NDO.

For ACI fabrics, the **route-reflector** option is effective only for fabrics that are part of the same BGP ASN.
  - In the **Keepalive Interval (Seconds)** field, enter the keep alive interval seconds.

We recommend keeping the default value.
  - In the **Hold Interval (Seconds)** field, enter the hold interval seconds.

We recommend keeping the default value.
  - In the **Stale Interval (Seconds)** field, enter stale interval seconds.

We recommend keeping the default value.
  - Choose whether you want to turn on the **Graceful Helper** option.
  - Provide the **Maximum AS Limit**.

We recommend keeping the default value.
  - Provide the **BGP TTL Between Peers**.

We recommend keeping the default value.

- i) Provide the **OSPF Area ID**.

If you do not have any Cloud Network Controller sites, this field will not be present in the UI.

This is OSPF area ID used by cloud sites for on-premises IPN peering.

- j) (Optional) Enable **IANA Assigned Port** for CloudSec encryption.

By default, CloudSec uses a proprietary UDP port. This option allows you to configure CloudSec to use the official IANA-reserved port 8017 for CloudSec encryption between sites.

**Note** The IANA-reserved port is supported for Cisco APIC sites running release 5.2(4) or later.

To change this setting, CloudSec must be disabled on all sites. If you want to enable IANA reserved port, but already have CloudSec encryption enabled for one or more of your sites, disable CloudSec for all sites, enable **IANA Reserve UDP Port** option, then re-enable CloudSec for the required sites.

For detailed information and steps for configuring CloudSec, see the "CloudSec Encryption" chapter of the [Nexus Dashboard Orchestrator Configuration Guide for ACI Fabrics](#).

## Step 6 Provide the **IPN Devices** information.

If you do not plan to configure inter-site connectivity between on-premises and cloud sites, you can skip this step.

When you configure inter-site underlay connectivity between on-premises and cloud sites as described in later sections, you will need to select an on-premises IPN device which will establish connectivity to the cloud CSRs. These IPN devices must first be defined here before they are available in the on-premises site configuration screen, which is described in more detail in [Configuring Infra: On-Premises Site Settings, on page 31](#).

- Select the **On Premises IPsec Devices** tab.
- Click **+Add On-Premises IPsec Device**.
- Choose whether the device is **Unmanaged** or **Managed** and provide the device information.

This defines whether or not the device is directly managed by NDFC:

- For **Unmanaged** IPN devices, simply provide the **Name** and the **IP Address** of the device.

The IP address you provide will be used as the tunnel peer address from the cloud CSRs, not the IPN device's management IP address.

- For **Managed** IPN devices, choose the NDFC **Site** that contains the device and then the **Device** from that site.

Then choose the **Interface** on the device that is facing the Internet and provide the **Next Hop** IP address, which is the IP address of the gateway that is connecting to the Internet.

- Click the check mark icon to save the device information.
- Repeat this step for any additional IPN devices you want to add.

## Step 7 Provide the **External Devices** information.

If you do not have any Cloud Network Controller sites, this tab will not be present in the UI.

If you do not have any Cloud Network Controller sites in your Multi-Site domain or you do not plan to configure connectivity between cloud sites and branch routers or other external devices, you can skip this step.

The following steps describe how to provide information about any branch routers or external devices to which you want to configure connectivity from your cloud sites.

- a) Select the **External Devices** tab.

This tab will only be available if you have at least one cloud site in your Multi-Site domain.

- b) Click **Add External Device**.

The **Add External Device** dialogue will open.

- c) Provide the **Name**, **IP Address**, and **BGP Autonomous System Number** for the device.

The IP address you provide will be used as the tunnel peer address from the Cloud Network Controller's CSRs, not the device's management IP address. The connectivity will be established over public Internet using IPsec.

- d) Click the check mark icon to save the device information.
- e) Repeat this step for any additional IPN devices you want to add.

After you have added all the external devices, ensure to complete the next step to provide the IPsec tunnel subnet pools from with the internal IP addresses will be allocated for these tunnels.

### Step 8 Provide the **IPsec Tunnel Subnet Pools** information.

If you do not have any Cloud Network Controller sites, this tab will not be present in the UI.

There are two types of subnet pools that you can provide here:

- **External Subnet Pool**—used for connectivity between cloud site CSRs and other sites (cloud or on-premises).

These are large global subnet pools that are managed by Nexus Dashboard Orchestrator. The Orchestrator, creates smaller subnets from these pools and allocates them to sites to be used for inter-site IPsec tunnels and external connectivity IPsec tunnels.

You must provide at least one external subnet pool if you want to enable external connectivity from one or more of your cloud sites.

- **Site-Specific Subnet Pool**—used for connectivity between cloud site CSRs and external devices.

These subnets can be defined when the external connectivity IPsec tunnels must be in a specific range. For example, where a specific subnet is already being used to allocate IP addresses to the external router and you want to continue using those subnets for IPsec tunnels for NDO and cloud sites. These subnets are not managed by the Orchestrator and each subnet is assigned to a site in its entirety to be used locally for external connectivity IPsec tunnels.

If you do not provide any named subnet pools but still configure connectivity between cloud site's CSRs and external devices, the external subnet pool will be used for IP allocation. .

**Note** The minimum mask length for both subnet pools is /24.

To add one or more **External Subnet Pools**:

- a) Select the **IPsec Tunnel Subnet Pools** tab.
- b) In the **External Subnet Pool** area, click **+Add IP Address** to add one or more external subnet pools.

This subnet will be used to address the IPsec tunnel interfaces and loopbacks of the Cloud Routers used for on-premises connectivity, which you previously configured in the Cloud Network Controller for inter-site connectivity in earlier Nexus Dashboard Orchestrator releases.

The subnets must not overlap with other on-premises TEP pools, should not begin with 0.x.x.x or 0.0.x.x, and should have a network mask between /16 and /24, for example 30.29.0.0/16.

- c) Click the check mark icon to save the subnet information.
- d) Repeat these substeps for any additional subnet pools you want to add.

To add one or more **Site-Specific Subnet Pools**:

- a) Select the **IPSec Tunnel Subnet Pools** tab.
- b) In the **Site-Specific Subnet Pools** area, click **+Add IP Address** to add one or more external subnet pools.

The **Add Named Subnet Pool** dialogue will open.

- c) Provide the subnet **Name**.

You will be able to use the subnet pool's name to choose the pool from which to allocate the IP addresses later on.

- d) Click **+Add IP Address** to add one or more subnet pools.

The subnets must have a network mask between /16 and /24 and not begin with 0.x.x.x or 0.0.x.x, for example 30.29.0.0/16.

- e) Click the check mark icon to save the subnet information.

Repeat the steps if you want to add multiple subnets to the same named subnet pool.

- f) Click **Save** to save the named subnet pool.

- g) Repeat these substeps for any additional named subnet pools you want to add.

---

### What to do next

After you have configured general infra settings, you must still provide additional information for site-specific configurations based on the type of sites (ACI, Cloud Network Controller, or NDFC) you are managing. Follow the instructions described in the following sections to provide site-specific infra configurations.



## CHAPTER 6

# Configuring Infra for Cisco APIC Sites

---

- [Refreshing Site Connectivity Information, on page 31](#)
- [Configuring Infra: On-Premises Site Settings, on page 31](#)
- [Configuring Infra: Pod Settings, on page 34](#)
- [Configuring Infra: Spine Switches, on page 35](#)

## Refreshing Site Connectivity Information

Any infrastructure changes, such as adding and removing spines or changing spine node IDs, require a Multi-Site fabric connectivity site refresh. This section describes how to pull up-to-date connectivity information directly from each site's APIC.

- 
- Step 1** Log in to the Cisco Nexus Dashboard Orchestrator GUI.
- Step 2** In the left navigation menu, select **Infrastructure** > **Site Connectivity**.
- Step 3** In the top right of the main pane, click **Configure**.
- Step 4** In the left pane, under **Sites**, select a specific site.
- Step 5** In the main window, click the **Refresh** button to pull fabric information from the APIC.
- Step 6** (Optional) For on-premises sites, in the **Confirmation** dialog, check the box if you want to remove configuration for decommissioned spine switch nodes.
- If you choose to enable this checkbox, all configuration info for any currently decommissioned spine switches will be removed from the database.
- Step 7** Finally, click **Yes** to confirm and load the connectivity information.
- This will discover any new or removed spines and all site-related fabric connectivity will be re-imported from the APIC.
- 

## Configuring Infra: On-Premises Site Settings

This section describes how to configure site-specific Infra settings for on-premises sites.

- Step 1** Log in to the Cisco Nexus Dashboard Orchestrator GUI.
- Step 2** In the left navigation menu, select **Infrastructure > Site Connectivity**.
- Step 3** In the top right of the main pane, click **Configure**.
- Step 4** In the left pane, under **Sites**, select a specific on-premises site.
- Step 5** Provide the **Inter-Site Connectivity** information.
- In the right **<Site> Settings** pane, enable the **Multi-Site** knob.  
This defines whether the overlay connectivity is established between this site and other sites.
  - (Optional) Enable the **CloudSec Encryption** knob encryption for the site.  
CloudSec Encryption provides inter-site traffic encryption. The "Infrastructure Management" chapter in the [Cisco Multi-Site Configuration Guide](#) covers this feature in detail.
  - Specify the **Overlay Multicast TEP**.  
This address is used for the inter-site L2 BUM and L3 multicast traffic. This IP address is deployed on all spine switches that are part of the same fabric, regardless of whether it is a single pod or Multi-Pod fabric.  
This address should not be taken from the address space of the original fabric's `Infra` TEP pool or from the `0.x.x.x` range.
  - Specify the **BGP Autonomous System Number**.
  - (Optional) Specify the **BGP Password**.
  - Provide the **OSPF Area ID**.  
The following settings are required if you are using OSPF protocol for underlay connectivity between the site and the IPN. If you plan to use BGP instead, you can skip this step. BGP underlay configuration is done at the port level, as described in [Configuring Infra: Spine Switches, on page 35](#).
  - Select the **OSPF Area Type** from the dropdown menu.  
The following settings are required if you are using OSPF protocol for underlay connectivity between the site and the IPN. If you plan to use BGP instead, you can skip this step. BGP underlay configuration is done at the port level, as described in [Configuring Infra: Spine Switches, on page 35](#).  
The OSPF area type can be one of the following:
    - `nssa`
    - `regular`
  - Configure OSPF policies for the site.  
The following settings are required if you are using OSPF protocol for underlay connectivity between the site and the IPN. If you plan to use BGP instead, you can skip this step. BGP underlay configuration is done at the port level, as described in [Configuring Infra: Spine Switches, on page 35](#).  
You can either click an existing policy (for example, `msc-ospf-policy-default`) to modify it or click **+Add Policy** to add a new OSPF policy. Then in the **Add/Update Policy** window, specify the following:
    - In the **Policy Name** field, enter the policy name.
    - In the **Network Type** field, choose either `broadcast`, `point-to-point`, or `unspecified`.  
The default is `broadcast`.

- In the **Priority** field, enter the priority number.  
The default is 1.
  - In the **Cost of Interface** field, enter the cost of interface.  
The default is 0.
  - From the **Interface Controls** dropdown menu, choose one of the following:
    - **advertise-subnet**
    - **bfd**
    - **mtu-ignore**
    - **passive-participation**
  - In the **Hello Interval (Seconds)** field, enter the hello interval in seconds.  
The default is 10.
  - In the **Dead Interval (Seconds)** field, enter the dead interval in seconds.  
The default is 40.
  - In the **Retransmit Interval (Seconds)** field, enter the retransmit interval in seconds.  
The default is 5.
  - In the **Transmit Delay (Seconds)** field, enter the transmit delay in seconds.  
The default is 1.
- i) (Optional) From the **External Routed Domain** dropdown, select the domain you want to use.  
Choose an external router domain that you have created in the Cisco APIC GUI. For more information, see the *Cisco APIC Layer 3 Networking Configuration Guide* specific to your APIC release.
- j) (Optional) Enable **SDA Connectivity** for the site.  
If the site is connected to an SDA network, enable the **SDA Connectivity** knob and provide the **External Routed Domain**, **VLAN Pool**, and **VRF Lite IP Pool Range** information.  
If you enable SDA connectivity for the site, you will need to configure additional settings as described in the SDA use case chapter of the *Cisco Multi-Site Configuration Guide for ACI Fabrics*.
- k) (Optional) Enable **SR-MPLS Connectivity** for the site.  
If the site is connected via an MPLS network, enable the **SR-MPLS Connectivity** knob and provide the Segment Routing global block (SRGB) range.  
The Segment Routing Global Block (SRGB) is the range of label values reserved for Segment Routing (SR) in the Label Switching Database (LSD). These values are assigned as segment identifiers (SIDs) to SR-enabled nodes and have global significance throughout the domain.  
The default range is 16000–23999.  
If you enable MPLS connectivity for the site, you will need to configure additional settings as described in the "Sites Connected via SR-MPLS" chapter of the *Cisco Multi-Site Configuration Guide for ACI Fabrics*.

**Step 6** Configure inter-site connectivity between on-premises and cloud sites.

If you do not need to create inter-site connectivity between on-premises and cloud sites, for example if your deployment contains only cloud or only on-premises sites, skip this step.

When you configure underlay connectivity between on-premises and cloud sites, you need to provide an IPN device IP address to which the Cloud Network Controller's CSRs establish a tunnel and then configure the cloud site's infra settings.

- a) Click **+Add IPN Device** to specify an IPN device.
- b) From the dropdown, select one of the IPN devices you defined previously.

The IPN devices must be already defined in the **General Settings > IPN Devices** list, as described in [Configuring Infra: General Settings, on page 27](#)

- c) Configure inter-site connectivity for cloud sites.

Any previously configured connectivity from the cloud sites to this on-premises site will be displayed here, but any additional configuration must be done from the cloud site's side as described in [Configuring Infra for Cisco Cloud Network Controller Sites, on page 37](#).

---

### What to do next

While you have configured all the required inter-site connectivity information, it has not been pushed to the sites yet. You need to deploy the configuration as described in [Deploying Infra Configuration, on page 43](#)

## Configuring Infra: Pod Settings

This section describes how to configure Pod-specific settings in each site.

- 
- Step 1** Log in to the Cisco Nexus Dashboard Orchestrator GUI.
  - Step 2** In the left navigation menu, select **Infrastructure > Site Connectivity**.
  - Step 3** In the top right of the main pane, click **Configure**.
  - Step 4** In the left pane, under **Sites**, select a specific site.
  - Step 5** In the main window, select a Pod.
  - Step 6** In the right **Pod Properties** pane, add the Overlay Unicast TEP for the Pod.

This IP address is deployed on all spine switches that are part of the same Pod and used for sourcing and receiving VXLAN encapsulated traffic for Layer2 and Layer3 unicast communication.

- Step 7** Click **+Add TEP Pool** to add an external routable TEP pool.

The external routable TEP pools are used to assign a set of IP addresses that are routable across the IPN to APIC nodes, spine switches, and border leaf nodes. This is required to enable Multi-Site architecture.

External TEP pools previously assigned to the fabric on APIC are automatically inherited by NDO and displayed in the GUI when the fabric is added to the Multi-Site domain.

- Step 8** Repeat the procedure for every Pod in the site.
-



# Configuring Infra: Spine Switches

This section describes how to configure spine switches in each site for Cisco Multi-Site. When you configure the spine switches, you are effectively establishing the underlay connectivity between the sites in your Multi-Site domain by configuring connectivity between the spines in each site and the ISN.

Prior to Release 3.5(1), underlay connectivity was establishing using OSPF protocol. In this release however, you can choose to use OSPF, BGP (IPv4 only), or a mixture of protocols, with some sites using OSPF and some using BGP for inter-site underlay connectivity. We recommend configuring either OSPF or BGP and not both, however if you configure both protocols, BGP will take precedence and OSPF will not be installed in the route table.

- 
- Step 1** Log in to the Cisco Nexus Dashboard Orchestrator GUI.
- Step 2** In the left navigation menu, select **Infrastructure > Site Connectivity**.
- Step 3** In the top right of the main pane, click **Configure**.
- Step 4** In the left pane, under **Sites**, select the specific on-premises site.
- Step 5** In the main pane, select a spine switch within a pod.
- Step 6** In the right **<Spine> Settings** pane, click **+Add Port**.
- Step 7** In the **Add Port** window, provide the underlay connectivity information.

Any port already configured directly in APIC for IPN connectivity will be imported and shown in the list. For any new ports you want to configure from NDO, use the following the steps:

a) Provide general information:

- In the **Ethernet Port ID** field, enter the port ID, for example 1/29.

This is the interface which will be used to connect to the IPN.

- In the **IP Address** field, enter the IP address/netmask.

The Orchestrator creates a sub-interface with VLAN 4 with the specified IP ADDRESS under the specified PORT.

- In the **MTU** field, enter the MTU. You can specify either `inherit`, which would configure an MTU of 9150B, or choose a value between 576 and 9000.

MTU of the spine port should match MTU on IPN side.

**Step 8** Choose the underlay protocol.

- a) Enable **OSPF** if you want to use OSPF protocol for underlay connectivity.

If you want to use BGP protocol for underlay connectivity instead, skip this part and provide the information required in the next substep.

- Set **OSPF** to `Enabled`.

The OSPF settings will become available.

- From the **OSPF Policy** dropdown, select the OSPF policy for the switch that you have configured in [Configuring Infra: On-Premises Site Settings, on page 31](#).

OSPF settings in the OSPF policy you choose should match on IPN side.

- For **OSPF Authentication**, you can pick either `none` or one of the following:

- `MD5`
- `Simple`

- Set **BGP** to `Disabled`.

- b) Enable **BGP** if you want to use BGP protocol for underlay connectivity.

If you're using OSPF protocol for underlay connectivity and have already configured it in the previous substep, skip this part.

**Note** BGP IPv4 underlay is not supported in the following cases:

- If your Multi-Site domain contains one or more Cloud Network Controller sites, in which case you must use the OSPF protocol for intersite underlay connectivity for both on-prem to on-prem and on-prem to cloud sites.
- If you are using GOLF (Layer 3 EVPN services for fabric WAN) for WAN connectivity in any of your fabrics.

In the above cases, you must use OSPF in the Infra L3Out deployed on the spines.

- Set **OSPF** to `Disabled`.

We recommend configuring either OSPF or BGP and not both, however if you configure both protocols, BGP will take precedence and OSPF routes will not be installed in the route table because only EBGP adjacencies with the ISN devices are supported.

- Set **BGP** to `Enabled`.

The BGP settings will become available.

- In the **Peer IP** field, provide the IP address of this port's BGP neighbor.

Only IPv4 IP addresses are supported for BGP underlay connectivity.

- In the **Peer AS Number** field, provide the Autonomous System (AS) number of the BGP neighbor.

This release supports only EBGP adjacencies with the ISN devices.

- In the **BGP Password** field, provide the BGP peer password.

- Specify any additional options as required:

- `Bidirectional Forwarding Detection`—enables Bidirectional Forwarding Detection (BFD) protocol to detect faults on the physical link this port and the IPN device.
- `Admin State`—sets the admin state on the port to enabled.

**Step 9** Repeat the procedure for every spine switch and port that connects to the IPN.

---



## CHAPTER 7

# Configuring Infra for Cisco Cloud Network Controller Sites

---

- [Refreshing Cloud Site Connectivity Information, on page 37](#)
- [Configuring Infra: Cloud Site Settings, on page 37](#)
- [Recovering from Cloud Network Controller Site Downtime , on page 40](#)

## Refreshing Cloud Site Connectivity Information

Any infrastructure changes, such as CSR and Region addition or removal, require a Multi-Site fabric connectivity site refresh. This section describes how to pull up-to-date connectivity information directly from each site's APIC.

- 
- Step 1** Log in to the Cisco Nexus Dashboard Orchestrator GUI.
  - Step 2** In the left navigation menu, select **Infrastructure** > **Site Connectivity**.
  - Step 3** In the top right of the main pane, click **Configure**.
  - Step 4** In the left pane, under **Sites**, select a specific site.
  - Step 5** In the main window, click the **Refresh** button to discover any new or changed CSRs and regions.
  - Step 6** Finally, click **Yes** to confirm and load the connectivity information.

This will discover any new or removed CSRs and regions.

- Step 7** Click **Deploy** to propagate the cloud site changes to other sites that have connectivity to it.  
After you refresh a cloud site's connectivity and CSRs or regions are added or removed, you need to deploy infra configuration so other sites that have underlay connectivity to that cloud site get updated configuration.

---

## Configuring Infra: Cloud Site Settings

This section describes how to configure site-specific Infra settings for Cloud Network Controller sites.

- 
- Step 1** Log in to the Cisco Nexus Dashboard Orchestrator GUI.
- Step 2** In the left navigation menu, select **Infrastructure > Site Connectivity**.
- Step 3** In the top right of the main pane, click **Configure**.
- Step 4** In the left pane, under **Sites**, select a specific cloud site.
- Step 5** Provide the general **Inter-Site Connectivity** information.
- In the right **<Site> Settings** pane, select the **Inter-Site Connectivity** tab.
  - Enable the **Multi-Site** knob.
 

This defines whether the overlay connectivity is established between this site and other sites.

Note that the overlay configuration will not be pushed to sites which do not have the underlay intersite connectivity established as described in the next step.
  - (Optional) Specify the **BGP Password**.
- Step 6** Provide site-specific **Inter-Site Connectivity** information.
- In the right properties sidebar for the cloud site, click **Add Site**.
 

The **Add Site** window opens.
  - Under **Connected to Site**, click **Select a Site** and select the site (for example, `site2`) to which you want to establish connectivity from the site you are configuring (for example, `site1`).
 

Once you select the remote site, the **Add Site** window will update to reflect both directions of connectivity: **Site1 > Site2** and **Site2 > Site1**.
  - In the **Site1 > Site2** area, from the **Connection Type** dropdown, choose the type of connection between the sites.
 

The following options are available:

    - Public Internet**—connectivity between the two sites is established via the Internet.
 

This type is supported between any two cloud sites or between a cloud site and an on-premises site.
    - Private Connection**—connectivity is established using a private connection between the two sites.
 

This type is supported between a cloud site and an on-premises site.
    - Cloud Backbone**—connectivity is established using cloud backbone.
 

This type is supported between two cloud sites of the same type, such as Azure-to-Azure or AWS-to-AWS.

If you have multiple types of sites (on-premises, AWS, and Azure), different pairs of site can use different connection type.
  - Choose the **Protocol** that you want to use for connectivity between these two sites.
 

If using **BGP-EVPN** connectivity, you can optionally enable **IPSec** and choose which version of the Internet Key Exchange (IKE) protocol to use: IKEv1 (`Version 1`) or IKEv2 (`Version 1`) depending on your configuration.

    - For `Public Internet` connectivity, IPsec is always enabled.
    - For `Cloud Backbone` connectivity, IPsec is always disabled.
    - For `Private Connection`, you can choose to enable or disable IPsec.

If using **BGP-IPv4** connectivity instead, you must provide an external VRF which will be used for route leaking configuration from the cloud site you are configuring.

After **Site1 > Site2** connectivity information is provided, the **Site2 > Site1** area will reflect the connectivity information in the opposite direction.

- e) Click **Save** to save the inter-site connectivity configuration.

When you save connectivity information from `Site1` to `Site2`, the reverse connectivity is automatically created from `Site2` to `Site1`, which you can see by selecting the other site and checking the **Inter-site Connectivity** information in the right sidebar.

- f) Repeat this step to add inter-site connectivity for other sites.

When you establish underlay connectivity from `Site1` to `Site2`, the reverse connectivity is done automatically for you.

However, if you also want to establish inter-site connectivity from `Site1` to `Site3`, you must repeat this step for that site as well.

### Step 7 Provide **External Connectivity** information.

If you do not plan to configure connectivity to external sites or devices that are not managed by NDO, you can skip this step.

Detailed description of an external connectivity use case is available in the [Configuring External Connectivity from Cloud CSRs Using Nexus Dashboard Orchestrator](#) document.

- a) In the right **<Site> Settings** pane, select the **External Connectivity** tab.
- b) Click **Add External Connection**.

The **Add External Connectivity** dialog will open.

- c) From the **VRF** dropdown, select the VRF you want to use for external connectivity.

This is the VRF which will be used to leak the cloud routes. The **Regions** section will display the cloud regions that contain the CSRs to which this configuration be applied.

- d) From the **Name** dropdown in the **External Devices** section, select the external device.

This is the external device you added in the **General Settings > External Devices** list during general infra configuration and must already be defined as described in [Configuring Infra: General Settings, on page 27](#).

- e) From the **Tunnel IKE Version** dropdown, pick the IKE version that will be used to establish the IPSec tunnel between the cloud site's CSRs and the external device.

- f) (Optional) From the **Tunnel Subnet Pool** dropdown, choose one of the named subnet pools.

Named subnet pool are used to allocate IP addresses for IPSec tunnels between cloud site CSRs and external devices. If you do not provide any **named** subnet pools here, the **external** subnet pool will be used for IP allocation.

Providing a dedicated subnet pool for external device connectivity is useful for cases where a specific subnet is already being used to allocate IP addresses to the external router and you want to continue to use those subnets for IPSec tunnels for NDO and cloud sites.

If you want to provide a specific subnet pool for this connectivity, it must already be created as described in [Configuring Infra: General Settings, on page 27](#).

- g) (Optional) In the **Pre-Shared Key** field, provide the custom keys you want to use to establish the tunnel.
- h) If necessary, repeat the previous substeps for any additional external devices you want to add for the same external connection (same VRF).

- i) If necessary, repeat this step for any additional external connections (different VRFs).

Note that there's a one-to-one relationship for tunnel endpoints between CSRs and external devices, so while you can create additional external connectivity using different VRFs, you cannot create additional connectivity to the same external devices.

---

### What to do next

While you have configured all the required inter-site connectivity information, it has not been pushed to the sites yet. You need to deploy the configuration as described in [Deploying Infra Configuration, on page 43](#)

## Recovering from Cloud Network Controller Site Downtime

When Cloud Network Controller (formerly Cloud APIC) instance/VM goes down for any reason while still being managed by NDO, you may be unable to undeploy or delete any existing templates associated with that cloud site. In this case, attempting to forcefully unmanage the site in NDO can cause stale configuration and deployment errors even if the site recovers.

To recover from this:

---

**Step 1** Bring up the new Cloud Network Controller sites and re-register the cloud sites.

- a) Log in to ND.
- b) Open the admin console.
- c) Navigate to the **Sites** page.
- d) From the **Actions** menu next to the site you redeployed, choose **Edit Site**.
- e) Check the "Re-register site" checkbox.
- f) Provide the new site details.

You need to provide the new public IP address of site and login credentials.

- g) Click **Save** to re-register the site.

Once the connectivity status of the site shows UP, the site IPs in NDO are also updated and the new sites will be in 'managed' state.

**Step 2** Undeploy the previously deployed templates for each schema.

- a) Log in to NDO.
- b) Navigate to **Application Management** and select **Schemas**.
- c) Click on a schema with the deployed templates.
- d) From the **Actions** menu next to the **Template Properties**, choose **Undeploy Template** and wait until the template is successfully undeployed.

**Step 3** Refresh the site's infra configuration to ensure that the new Catalyst 8000V switches are added in NDO.

- a) Navigate to **Infrastructure** and select **Site Connectivity**.
- b) Click **Configure** at the top right of the screen.
- c) Select the cloud site under the **Sites** panel and click **Refresh**.
- d) Click **Deploy** on the top right of the screen and wait until all sites are successfully deployed.

- Step 4** Redeploy all templates associated with this Cloud Network Controller site.
- a) Navigate to **Application Management** and select **Schemas**.
  - b) Click on a schema with the templates undeployed earlier.
  - c) Click **Deploy to Sites** and wait until the template is deployed.
-







## CHAPTER 8

# Deploying Infra Configuration for ACI Sites

- [Deploying Infra Configuration, on page 43](#)
- [Enabling Connectivity Between On-Premises and Cloud Sites, on page 44](#)

## Deploying Infra Configuration

This section describes how to deploy the Infra configuration to each APIC site.

- Step 1** In the top right of the main pane, click **Deploy** and choose the appropriate option to deploy the configuration. If you have configured only on-premises or only cloud sites, simply click **Deploy** to deploy the Infra configuration. However, if you have both, on-premises and cloud site, the following additional options may be available:
- **Deploy & Download IPN Device Config files:** Pushes the configuration to both the on-premises APIC site and the Cloud Network Controller site and enables the end-to-end interconnect between the on-premises and the cloud sites. In addition, this option downloads a zip file that contains configuration information that you will use to enable connectivity from the IPN devices to Cisco Cloud Services Router (CSR). A followup screen appears that allows you to select all or some of the configuration files to download.
  - **Deploy & Download External Device Config files:** Pushes the configuration to both the Cloud Network Controller sites and enables the end-to-end interconnect between the cloud sites and external devices. In addition, this option downloads a zip file that contains configuration information that you will use to enable connectivity from external devices to the Cisco Cloud Services Router (CSR) deployed in your cloud sites. A followup screen appears that allows you to select all or some of the configuration files to download.
  - **Download IPN Device Config files only:** Downloads a zip file that contains configuration information that you will use to enable connectivity from the IPN devices to Cisco Cloud Services Router (CSR) without deploying the configuration.
  - **Download External Device Config files only:** Downloads a zip file that contains configuration information that you will use to enable connectivity from external devices to Cisco Cloud Services Router (CSR) without deploying the configuration.
- Step 2** In the confirmation window, click **Yes**.

The `Deployment started`, refer to left menu for individual site deployment status message will indicate that Infra configuration deployment began and you can verify each site's progress by the icon displayed next to the site's name in the left pane.

### What to do next

The Infra overlay and underlay configuration settings are now deployed to all sites' controllers and cloud CSRs. The last remaining step is to configure your IPN devices with the tunnels for cloud CSRs as described in [Refreshing Site Connectivity Information, on page 31](#).

## Enabling Connectivity Between On-Premises and Cloud Sites

If you have only on-premises or only cloud sites, you can skip this section.

This section describes how to enable connectivity between on-premises APIC sites and Cloud Network Controller sites.

By default, the Cisco Cloud Network Controller will deploy a pair of redundant Cisco Cloud Services Router 1000vs. The procedures in this section creates two tunnels, one IPsec tunnel from the on-premises IPsec device to each of these Cisco Cloud Services Router 1000vs. If you have multiple on-premises IPsec devices, you will need to configure the same tunnels to the CSRs on each of the on-premises devices.

The following information provides commands for Cisco Cloud Services Router 1000v as your on-premises IPsec termination device. Use similar commands if you are using a different device or platform.

**Step 1** Gather the necessary information that you will need to enable connectivity between the CSRs deployed in the cloud site and the on-premises IPsec termination device.

You can get the required configuration details using either the **Deploy & Download IPN Device config files** or the **Download IPN Device config files only** option in Nexus Dashboard Orchestrator as part of the procedures provided in [Deploying Infra Configuration, on page 43](#).

**Step 2** Log into the on-premises IPsec device.

**Step 3** Configure the tunnel for the *first* CSR.

Details for the first CSR are available in the configuration files for the ISN devices you downloaded from the Nexus Dashboard Orchestrator, but the following fields describe the important values for your specific deployment:

- `<first-csr-tunnel-ID>`—unique tunnel ID that you assign to this tunnel.
- `<first-csr-ip-address>`—public IP address of the third network interface of the first CSR.

The destination of the tunnel depends on the type of underlay connectivity:

- The destination of the tunnel is the public IP of the cloud router interface if the underlay is via public internet
- The destination of the tunnel is the private IP of the cloud router interface if the underlay is via private connectivity, such as DX on AWS or ER on Azure
- `<first-csr-preshared-key>`—preshared key of the first CSR.

- *<onprem-device-interface>*—interface that is used for connecting to the Cisco Cloud Services Router 1000v deployed in Amazon Web Services.
- *<onprem-device-ip-address>*—IP address for the *<interface>* interface that is used for connecting to the Cisco Cloud Services Router 1000v deployed in Amazon Web Services.
- *<peer-tunnel-for-onprem-IPsec-to-first-CSR>*—peer tunnel IP address for the on-premises IPsec device to the first cloud CSR.
- *<process-id>* —OSPF process ID.
- *<area-id>*—OSPF area ID.

The following example shows intersite connectivity configuration using the IKEv2 protocol supported starting with Nexus Dashboard Orchestrator, Release 3.3(1) and Cloud Network Controller, Release 5.2(1). If you are using IKEv1, the IPN configuration file you downloaded from NDO may look slightly differently, but the principle remains the same.

```
crypto ikev2 proposal ikev2-proposal-default
  encryption aes-cbc-256 aes-cbc-192 aes-cbc-128
  integrity sha512 sha384 sha256 sha1
  group 24 21 20 19 16 15 14 2
exit

crypto ikev2 policy ikev2-policy-default
  proposal ikev2-proposal-default
exit

crypto ikev2 keyring key-ikev2-infra:overlay-1-<first-csr-tunnel-id>
  peer peer-ikev2-keyring
    address <first-csr-ip-address>
    pre-shared-key <first-csr-preshared-key>
  exit
exit

crypto ikev2 profile ikev2-infra:overlay-1-<first-csr-tunnel-id>
  match address local interface <onprem-device-interface>
  match identity remote address <first-csr-ip-address> 255.255.255.255
  identity local address <onprem-device-ip-address>
  authentication remote pre-share
  authentication local pre-share
  keyring local key-ikev2-infra:overlay-1-<first-csr-tunnel-id>
  lifetime 3600
  dpd 10 5 on-demand
exit

crypto ipsec transform-set infra:overlay-1-<first-csr-tunnel-id> esp-gcm 256
  mode tunnel
exit

crypto ipsec profile infra:overlay-1-<first-csr-tunnel-id>
  set pfs group14
  set ikev2-profile ikev2-infra:overlay-1-<first-csr-tunnel-id>
  set transform-set infra:overlay-1-<first-csr-tunnel-id>
exit

interface tunnel 2001
  ip address <peer-tunnel-for-onprem-IPsec-to-first-CSR> 255.255.255.252
  ip virtual-reassembly
  tunnel source <onprem-device-interface>
  tunnel destination <first-csr-ip-address>
  tunnel mode ipsec ipv4
  tunnel protection ipsec profile infra:overlay-1-<first-csr-tunnel-id>
  ip mtu 1400
```

```

ip tcp adjust-mss 1400
ip ospf <process-id> area <area-id>
no shut
exit

```

**Example:**

```

crypto ikev2 proposal ikev2-proposal-default
  encryption aes-cbc-256 aes-cbc-192 aes-cbc-128
  integrity sha512 sha384 sha256 sha1
  group 24 21 20 19 16 15 14 2
exit

```

```

crypto ikev2 policy ikev2-policy-default
  proposal ikev2-proposal-default
exit

```

```

crypto ikev2 keyring key-ikev2-infra:overlay-1-2001
  peer peer-ikev2-keyring
  address 52.12.232.0
  pre-shared-key 1449047253219022866513892194096727146110
  exit
exit

```

```

crypto ikev2 profile ikev2-infra:overlay-1-2001
  ! Please change GigabitEthernet1 to the appropriate interface
  match address local interface GigabitEthernet1
  match identity remote address 52.12.232.0 255.255.255.255
  identity local address 128.107.72.62
  authentication remote pre-share
  authentication local pre-share
  keyring local key-ikev2-infra:overlay-1-2001
  lifetime 3600
  dpd 10 5 on-demand
exit

```

```

crypto ipsec transform-set infra:overlay-1-2001 esp-gcm 256
  mode tunnel
exit

```

```

crypto ipsec profile infra:overlay-1-2001
  set pfs group14
  set ikev2-profile ikev2-infra:overlay-1-2001
  set transform-set infra:overlay-1-2001
exit

```

! These tunnel interfaces establish point-to-point connectivity between the on-prem device and the cloud Routers

! The destination of the tunnel depends on the type of underlay connectivity:

! 1) The destination of the tunnel is the public IP of the cloud Router interface if the underlay is via internet

! 2) The destination of the tunnel is the private IP of the cloud Router interface if the underlay is via private connectivity like DX on AWS or ER on Azure

```

interface tunnel 2001
  ip address 5.5.1.26 255.255.255.252
  ip virtual-reassembly
  ! Please change GigabitEthernet1 to the appropriate interface
  tunnel source GigabitEthernet1
  tunnel destination 52.12.232.0
  tunnel mode ipsec ipv4
  tunnel protection ipsec profile infra:overlay-1-2001
  ip mtu 1400
  ip tcp adjust-mss 1400

```

```
! Please update process ID according with your configuration
ip ospf 1 area 0.0.0.1
no shut
exit
```

**Step 4** Repeat the previous step for the 2nd and any additional CSRs that you need to configure.

**Step 5** Verify that the tunnels are up on your on-premises IPsec device.

Use the following command to display the status. If you do not see that both tunnels are shown as up, verify the information that you entered in the steps in this section to determine where you might have an issue. Do not proceed to the next section until you see that both tunnels are shown as up.

```
ISN_CSR# show ip interface brief | include Tunnel
Interface          IP-Address      OK? Method Status          Protocol
Tunnel1000         30.29.1.2      YES manual up              up
Tunnel1001         30.29.1.4      YES manual up              up
```

---





## PART II

# Day-0 Operations for NDFC Fabrics

- [Adding and Deleting Sites, on page 51](#)
- [Configuring Infra for Cisco NDFC Sites, on page 55](#)







## CHAPTER 9

# Adding and Deleting Sites

---

- [Adding Cisco NDFC Sites, on page 51](#)
- [Removing Sites, on page 53](#)
- [Cross Launch to Fabric Controllers, on page 54](#)

## Adding Cisco NDFC Sites

This section describes how to add a NDFC site using the Nexus Dashboard GUI and then enable that site to be managed by Nexus Dashboard Orchestrator.

### Before you begin

- You must ensure that the site(s) you are adding are running Cisco NDFC, Release 11.5(1) or later.

---

**Step 1** Log in to your Nexus Dashboard and open the **Admin Console**.

**Step 2** From the left navigation menu, choose **Sites** and click **Add Site**.


**Step 3** Provide site information.

- a) For **Site Type**, select **NDFC or NDFC**.
- b) Provide the NDFC controller information.

You need to provide the **Host Name/IP Address** of the in-band (eth2) interface, **User Name**, and **Password**, for the NDFC controller currently managing your NDFC fabrics.

- c) Click **Select Sites** to select the specific fabrics managed by the controller.

In the fabric selection window that opens, select the fabrics you want to add to the Nexus Dashboard and click **Select**.

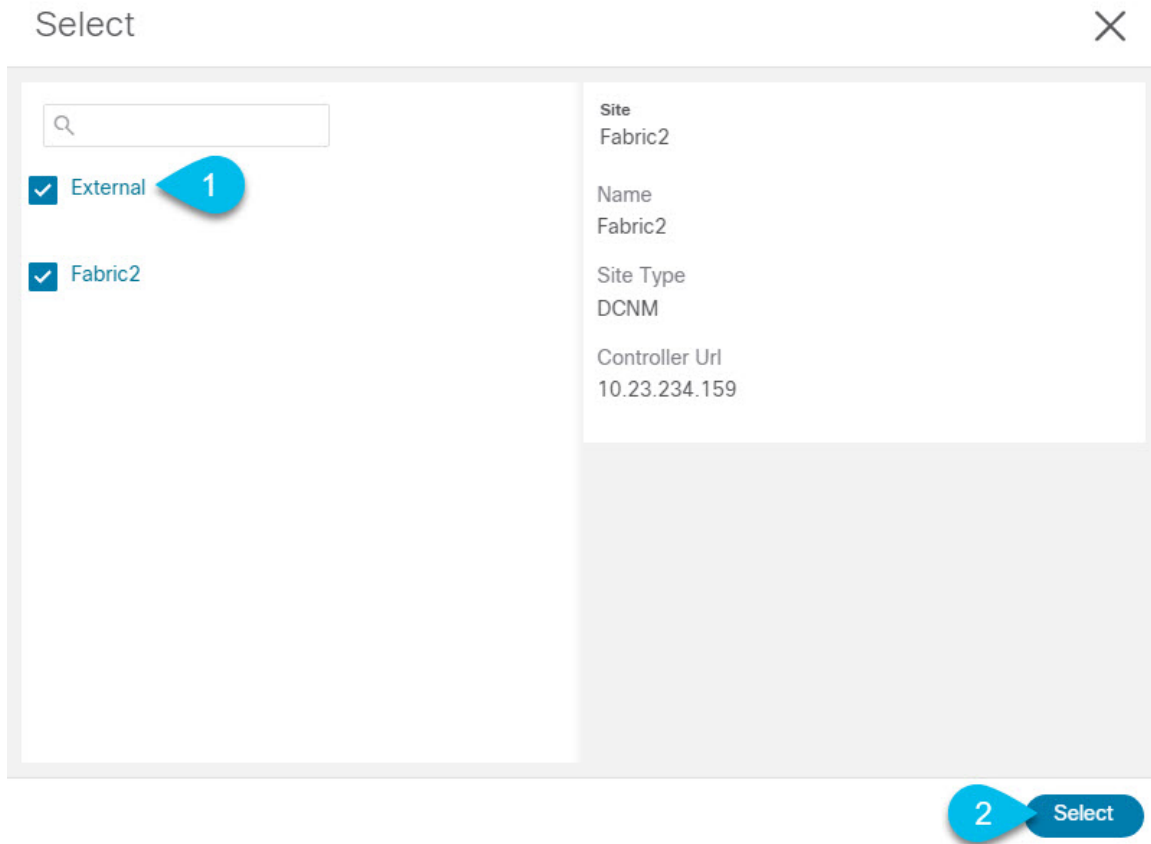


d) Click **Add Security Domains** to select one or more security domains that will have access to this site.

**Step 4** Repeat the previous steps for any additional NDFC sites.

**Step 5** From the Nexus Dashboard's **Service Catalog** page, open the Nexus Dashboard Orchestrator service.

You will be automatically logged in using the Nexus Dashboard user's credentials.

**Step 6** In the Nexus Dashboard Orchestrator GUI, manage the sites.

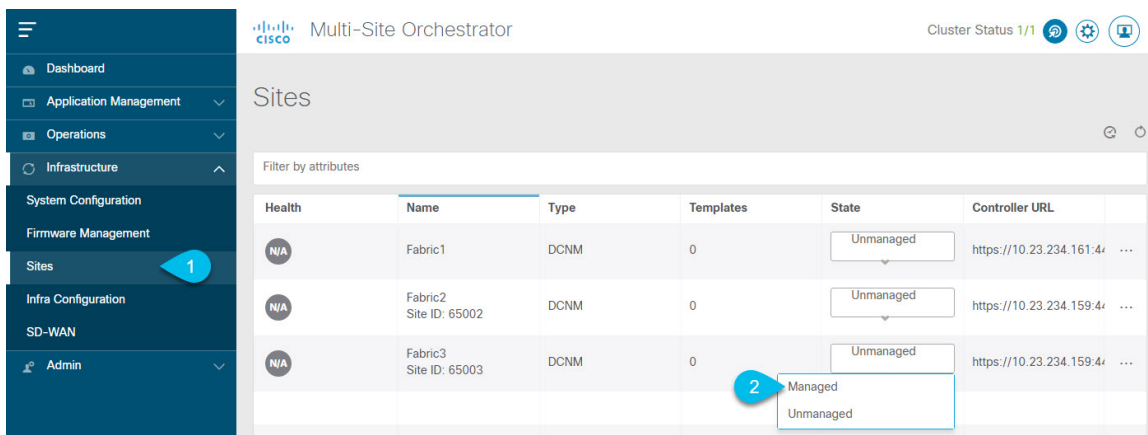

a) From the left navigation menu, select **Infrastructure** > **Sites**.

b) In the main pane, change the **State** from `Unmanaged` to `Managed` for each fabric that you want the NDO to manage.

If the fabric you are managing is part of a Multi-Site Domain (MSD), it will have a **Site ID** already associated with it. In this case, simply changing the **State** to `Managed` will manage the fabric.

However, if the fabric is not part of an MSD, you will also be prompted to provide a **Fabric ID** for the site when you change its state to `Managed`.

**Note** If you want to manage both kinds of fabrics, those that are part of an existing MSD and those that are not, you must on-board the MSD fabrics first, followed by any standalone fabrics.

---

## Removing Sites

This section describes how to disable site management for one or more sites using the Nexus Dashboard Orchestrator GUI. The sites will remain present in the Nexus Dashboard.

### Before you begin

You must ensure that all templates associated with the site you want to remove are not deployed.

---

**Step 1** Open the Nexus Dashboard Orchestrator GUI.

You can open the NDO service from the Nexus Dashboard's **Service Catalog**. You will be automatically logged in using the Nexus Dashboard user's credentials.

**Step 2** Remove the site from all templates.

You must remove the site from all templates with which it is associated before you can unmanage the site and remove it from your Nexus Dashboard.

- a) Navigate to **Application Management > Schemas**.
- b) Click a schema that contains one or more templates associated with the site.
- c) In the left sidebar's **Sites** area, select a template associated with the site, click the options menu (...) next to the template, and choose **Undeploy Template**.

This will remove configurations that were deployed using this template to this site.

**Note** For non-stretched templates, you can choose to preserve the configuration by selecting **Dissociate Template** instead of **Undeploy Template**, but you must undeploy any stretched templates.

- d) Repeat this step for all templates associated with the site that you want to unmanage in this and all other schemas.

**Step 3** In the Nexus Dashboard Orchestrator GUI, disable the sites.

- a) From the left navigation menu, select **Infrastructure > Sites**.
- b) In the main pane, change the **State** from `Managed` to `Unmanaged` for the site that you want to unmanage.

**Note** If the site is associated with one or more deployed templates, you will not be able to change its state to `Unmanaged` until you undeploy those templates, as described in the previous step.

**Step 4** Delete the site from Nexus Dashboard.

If you no longer want to manage this site or use it with any other applications, you can delete the site from the Nexus Dashboard as well.

**Note** Note that the site must not be currently in use by any of the services installed in your Nexus Dashboard cluster.

- a) In the top navigation bar, click the **Home** icon to return to the Nexus Dashboard GUI.
- b) From the left navigation menu of the Nexus Dashboard GUI, select **Sites**.
- c) Select one or more sites you want to delete.
- d) In the top right of the main pane, select **Actions > Delete Site**.
- e) Provide the site's login information and click **OK**.

The site will be removed from the Nexus Dashboard.

---

## Cross Launch to Fabric Controllers

Nexus Dashboard Orchestrator currently supports a number of configuration options for each type of fabrics. For many additional configuration options, you may need to log in directly into the fabric's controller.

You can cross launch into the specific site controller's GUI from the NDO's **Infrastructure > Sites** screen by selecting the actions ( . . . ) menu next to the site and clicking **Open in user interface**. Note that cross-launch works with out-of-band (OOB) management IP of the fabric.

If the same user is configured in Nexus Dashboard and the fabric, you will be logged in automatically into the fabric's controller using the same log in information as the Nexus Dashboard user. For consistency, we recommend configuring remote authentication with common users across Nexus Dashboard and the fabrics.



## CHAPTER 10

# Configuring Infra for Cisco NDFC Sites

---

- [Prerequisites and Guidelines, on page 55](#)
- [Configuring Infra: General Settings, on page 55](#)
- [Refreshing Site Connectivity Information, on page 58](#)
- [Configuring Infra: NDFC Site-Specific Settings, on page 58](#)
- [Deploying Infra Configuration, on page 60](#)

## Prerequisites and Guidelines

The following sections describe the steps necessary to configure the general as well as site-specific fabric Infra settings.

Before you proceed with Infra configuration, you must have added the sites as described in previous sections.

In addition, keep in mind the following:

- Adding or removing border gateway switches requires a Nexus Dashboard Orchestrator fabric connectivity information refresh described in the [Refreshing Site Connectivity Information, on page 58](#) as part of the general Infra configuration procedures.

## Configuring Infra: General Settings

This section describes how to configure general Infra settings for your NDFC sites that are onboarded and managed by Nexus Dashboard Orchestrator.

- 
- Step 1** Log in to your Nexus Dashboard and open the Nexus Dashboard Orchestrator service.
  - Step 2** In the left navigation menu, select **Infrastructure > Site Connectivity**.
  - Step 3** In the main pane, click **Configure**.
  - Step 4** In the left sidebar, select **General Settings**.
  - Step 5** Provide **Control Plane Configuration**.
    - a) Select the **Control Plane Configuration** tab.
    - b) Choose **BGP Peering Type**.

- `full-mesh`—All border gateway switches in each site will establish peer connectivity with remote sites' border gateway switches.
  - `route-server`—The route-server option allows you to specify one or more control-plane nodes to which each site establishes MP-BGP EVPN sessions. The route-server nodes perform a function similar to traditional BGP route-reflectors, but for EBGP (and not iBGP) sessions. The use of route-server nodes avoids creating MP-BGP EVPN full mesh adjacencies between all the VXLAN EVPN sites managed by NDO.
- c) If you set the **BGP Peering Type** to `route-server`, click **+Add Route Server** to add one or more route servers. In the **Add Route Server** window that opens:
- From the **Site** dropdown, select the site you want to connect to the route server.
  - The **ASN** field will be auto-populated with the site's ASN.
  - From the **Core Router Device** dropdown, select the route server to which you want to connect.
  - From the **Interface** dropdown, select the interface on the core router device.
- You can add up to 4 route servers. If you add multiple route servers, every site will establish MP-BGP EVPAN adjacencies to every route server.
- d) Leave the **Keepalive Interval (Seconds)**, **Hold Interval (Seconds)**, **Stale Interval (Seconds)**, **Graceful Helper**, **Maximum AS Limit**, and **BGP TTL Between Peers** fields at default values as they are relevant for Cisco ACI fabrics only.
- e) Skip the **OSPF Area ID** and **External Subnet Pool** fields at default values as they are relevant for Cloud Network Controller fabrics only.

#### Step 6 Provide the **On Premises IPsec Devices** information.

If your inter-site connectivity between on-premises and cloud sites is using private connection and you will not enable IPsec, you can skip this step. For connectivity over public Internet, IPsec is always enabled and you must provide the information in this step.

When you configure inter-site underlay connectivity between on-premises and cloud sites as described in later sections, you will need to select an on-premises IPN device which will establish connectivity to the cloud CSRs. These IPN devices must first be defined here before they are available in the on-premises site configuration screen.

- a) Select the **On Premises IPsec Devices** tab.
- b) Click **+Add On-Premises IPsec Device**.
- c) Choose whether the device is **Unmanaged** or **Managed** and provide the device information.

This defines whether or not the device is directly managed by NDFC:

- For **Unmanaged** IPN devices, simply provide the **Name** and the **IP Address** of the device.  
The IP address you provide will be used as the tunnel peer address from the cloud CSRs, not the IPN device's management IP address.
- For **Managed** IPN devices, choose the NDFC **Site** that contains the device and then the **Device** from that site.  
Then choose the **Interface** on the device that is facing the Internet and provide the **Next Hop** IP address, which is the IP address of the gateway that is connecting to the Internet.

- d) Click the check mark icon to save the device information.
- e) Repeat this step for any additional IPN devices you want to add.

**Step 7** Provide the **IPSec Tunnel Subnet Pools** information.

There are two types of subnet pools that you can provide here:

- **External Subnet Pool**—used for connectivity between cloud site CSRs and other sites (cloud or on-premises).

These are large global subnet pools that are managed by Nexus Dashboard Orchestrator. The Orchestrator, creates smaller subnets from these pools and allocates them to sites to be used for inter-site IPsec tunnels and external connectivity IPsec tunnels.

You must provide at least one external subnet pool if you want to enable external connectivity from one or more of your cloud sites.

- **Site-Specific Subnet Pool**—used for connectivity between cloud site CSRs and external devices.

These subnets can be defined when the external connectivity IPsec tunnels must be in a specific range. For example, where a specific subnet is already being used to allocate IP addresses to the external router and you want to continue using those subnets for IPsec tunnels for NDO and cloud sites. These subnets are not managed by the Orchestrator and each subnet is assigned to a site in its entirety to be used locally for external connectivity IPsec tunnels.

If you do not provide any named subnet pools but still configure connectivity between cloud site's CSRs and external devices, the external subnet pool will be used for IP allocation. .

**Note** The minimum mask length for both subnet pools is /24.

To add one or more **External Subnet Pools**:

- Select the **IPSec Tunnel Subnet Pools** tab.
- In the **External Subnet Pool** area, click **+Add IP Address** to add one or more external subnet pools.

This subnet will be used to address the IPsec tunnel interfaces and loopbacks of the Cloud Routers used for on-premises connectivity, which you previously configured in the Cloud Network Controller for inter-site connectivity in earlier Nexus Dashboard Orchestrator releases.

The subnets must not overlap with other on-premises TEP pools, should not begin with 0.x.x.x or 0.0.x.x, and should have a network mask between /16 and /24, for example 30.29.0.0/16.

- Click the check mark icon to save the subnet information.
- Repeat these substeps for any additional subnet pools you want to add.

To add one or more **Site-Specific Subnet Pools**:

- Select the **IPSec Tunnel Subnet Pools** tab.
- In the **Site-Specific Subnet Pools** area, click **+Add IP Address** to add one or more external subnet pools.

The **Add Named Subnet Pool** dialogue will open.

- Provide the subnet **Name**.  
You will be able to use the subnet pool's name to choose the pool from which to allocate the IP addresses later on.
- Click **+Add IP Address** to add one or more subnet pools.

The subnets must have a network mask between /16 and /24 and not begin with 0.x.x.x or 0.0.x.x, for example 30.29.0.0/16.

- Click the check mark icon to save the subnet information.  
Repeat the steps if you want to add multiple subnets to the same named subnet pool.
- Click **Save** to save the named subnet pool.

- g) Repeat these substeps for any additional named subnet pools you want to add.

**Step 8** Configure **NDFC Settings**.

- a) Select the **NDFC Settings** tab.
- b) Provide the **L2 VXLAN VNI Range**.
- c) Provide the **L3 VXLAN VNI Range**.
- d) Provide the **Multi-Site Routing Loopback IP Range**.

This field is used to auto-populate the **Multi-Site TEP** field for each fabric, which is described in [Configuring Infra: NDFC Site-Specific Settings](#), on page 58.

For sites that were previously part of a Multi-Site Domain (MSD) in NDFC, this field will be pre-populated with the previously defined value.

- e) Provide the **Anycast Gateway MAC**.
- 

## Refreshing Site Connectivity Information

Infrastructure changes, such as adding and removing border gateway switches, require a Nexus Dashboard Orchestrator fabric connectivity refresh. This section describes how to pull up-to-date connectivity information directly from each site's controller.

---

**Step 1** Log in to the Cisco Nexus Dashboard Orchestrator GUI.

**Step 2** In the left navigation menu, select **Infrastructure > Site Connectivity**.

**Step 3** In the top right of the main pane, click **Configure**.

**Step 4** In the left sidebar, under **Sites**, select a specific site.

**Step 5** In the main window, click the **Refresh** button to pull fabric information from the controller.

**Step 6** (Optional) In the **Confirmation** dialog, check the box if you want to remove configuration for decommissioned border gateway switches.

If you choose to enable this checkbox, all configuration info for any currently decommissioned border gateway switches will be removed from the database.

**Step 7** Finally, click **Yes** to confirm and load the connectivity information.

This will discover any new or removed spines and all site-related fabric connectivity will be re-imported from the site's controller.

---

## Configuring Infra: NDFC Site-Specific Settings

This section describes how to configure site-specific Infra settings for on-premises sites.

---

**Step 1** Log in to your Nexus Dashboard and open the Nexus Dashboard Orchestrator service.

**Step 2** In the left navigation menu, select **Infrastructure > Site Connectivity**.



**Step 3** In the main pane, click **Configure**.

**Step 4** In the left pane, under **Sites**, select a specific NDFC.

**Step 5** In the right **<Site> Settings** sidebar, specify the **Overlay Multicast TEP**.

This address is used for the inter-site L2 BUM and L3 multicast traffic. This IP address is deployed on all border gateway switches that are part of the same fabric.

**Note** If the site you are configuring is part of the NDFC Multi-Site Domain (MDS), this field will be pre-populated with the information imported from NDFC. In this case, changing the value and re-deploying the infra configuration, will impact traffic between the sites that are part of the MDS.

You can choose to **Auto Allocate** this field, which will allocate the next available address from the **Multi-Site Routing Loopback IP Range** you defined in previous section.

**Step 6** Within the **<fabric-name>** tile, select the border gateway.

**Step 7** In the right **<border-gateway>** setting sidebar, specify the **BGP-EVPN ROUTER-ID** and **BGW PIP**.

For border gateways that are part of a vPC domain, you must also specify a **VPC VIP**

**Step 8** Click **Add Port** to configure the port that connects to the IPN.

**Note** This release does not support importing the port configuration from the NDFC. If the site you are configuring is already part of the NDFC Multi-Site Domain (MDS), you must use the same values that are already configured in NDFC.

Update Port
✕

---

\* Ethernet Port ID

\* IP Address

\* Remote Address

\* Remote ASN

\* MTU

BGP Authentication

 None  Simple

Provide the following information specific to your deployment for the port that connects this border gateway to a core switch or another border gateway:

- From the **Ethernet Port ID** dropdown, select the port that connects to the IPN.
- In the **IP Address** field, enter the IP address and netmask.
- In the **Remote Address** field, provide the IP address of the remote device to which the port is connected.
- In the **Remote ASN** field, provide the remote site's ID.
- In the **MTU** field, enter the port's MTU.

MTU of the spine port should match MTU on IPN side.

You can specify either `inherit` or a value between 576 and 9000.

- For **BGP Authentication**, you can pick either `None` or `Simple` (MD5).  
If you select `Simple`, you must also provide the **Authentication Key**.

## Deploying Infra Configuration

This section describes how to deploy the Infra configuration to each NDFC site.

### Before you begin

You must have the general and site-specific infra configurations completed as described in previous sections of this chapter.

**Step 1** Ensure that there are no configuration conflicts or resolve them if necessary.

The **Deploy** button will be disabled and a warning will be displayed if there are any configuration conflicts from the already configured settings in each site. For example, if a VRF or network with the same name exists in multiple sites but uses different VNI in each site.

In case of configuration conflicts:

- Click **Click to View** link in the conflict notification pop-up.



- Note down the specific configurations that are causing the conflicts.

For example, in the following report, there are ID mismatches between VRFs and networks in `fab1` and `fab2` sites.

Error Type	Error Message
IDMismatch	Policy Name MyVRF_50001 Policy ID 50001 Sites [fab2] conflicting with Policy Name MyVRF_50001 Policy ID 60001 Sites [fab1]
IDMismatch	Policy Name MyNetwork_30000 Policy ID 40000 Sites [fab2] conflicting with Policy Name MyNetwork_30000 Policy ID 30000 Sites [fab1]

- c) Click the **X** button to close the report, then exit Infra configuration screen.
- d) Unmanage the site in NDO, as described in [Removing Sites, on page 53](#).


You do not need to remove the site from the Nexus Dashboard, simply unmanage it in NDO GUI.

- e) Resolve the existing configuration conflicts.
- f) Manage the site again, as described in [Adding Cisco NDFC Sites, on page 51](#).

Since the site is already added in Nexus Dashboard, simply enable it for management in NDO.

- g) Verify that all conflicts are resolved and the **Deploy** button is available.

## Step 2 Deploy configuration.

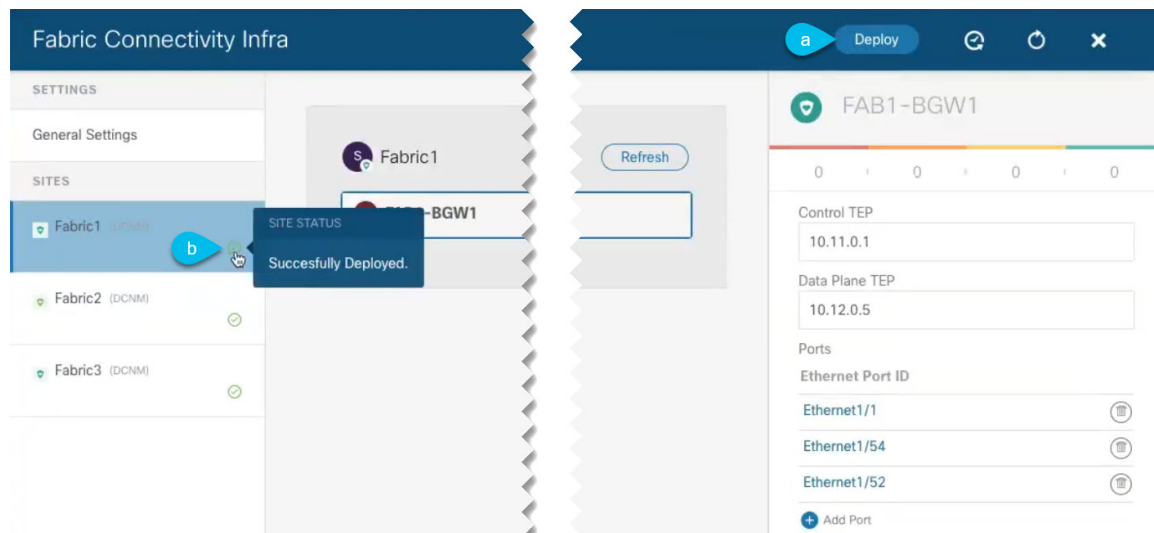

- a) In the top right of the **Fabric Connectivity Infra** screen, choose the appropriate **Deploy** option to deploy the configuration.

If you are configuring only NDFC sites, simply click **Deploy** to deploy the Infra configuration.

- b) Wait for configuration to be deployed.

When you deploy infra configuration, NDO will signal the NDFC to configure the underlay and the EVPN overlay between the border gateways.

When configuration is successfully deployed, you will see a green checkmark next to the site in the **Fabric Connectivity Infra** screen:





## PART **III**

# Upgrading Nexus Dashboard Orchestrator

- [Upgrading from Existing 4.0\(x\) Release, on page 65](#)
- [Upgrading from 3.7\(x\) or Earlier Releases, on page 75](#)





# CHAPTER 11

## Upgrading from Existing 4.0(x) Release

- [Overview, on page 65](#)
- [Prerequisites and Guidelines, on page 65](#)
- [Upgrading NDO Service Using Cisco App Store, on page 67](#)
- [Upgrading NDO Service Manually, on page 69](#)
- [Resolve Configuration Drifts, on page 71](#)

### Overview

The following sections describe how to upgrade Cisco Nexus Dashboard Orchestrator release 4.0(1) or later.

### Prerequisites and Guidelines

Before you upgrade your Cisco Nexus Dashboard Orchestrator cluster:

- Ensure that you are running Nexus Dashboard Orchestrator release 4.0(1) or later.



**Note** If you are running a release prior to release 4.0(1), skip this section and follow the instructions described in [Upgrading from 3.7\(x\) or Earlier Releases, on page 75](#) instead.

- Ensure that your current Nexus Dashboard cluster is healthy.


You can check the Nexus Dashboard cluster health in one of two ways:

- By logging into your Nexus Dashboard GUI and verifying system status in the **System Overview** page.
- By logging into any one of the nodes directly as `rescue-user` and running the following command:


```
# acs health
All components are healthy
```

- Ensure that your current Cisco Nexus Dashboard Orchestrator is running properly.

You can check the status of your Nexus Dashboard Orchestrator service by navigating to **Settings** > **System Status**:

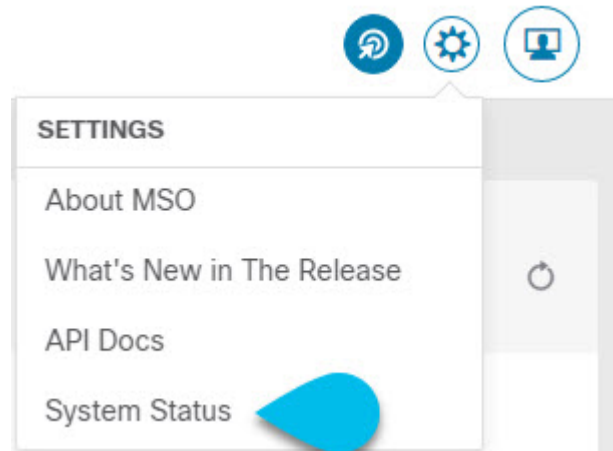

Then ensure that the status of all nodes and services is healthy:

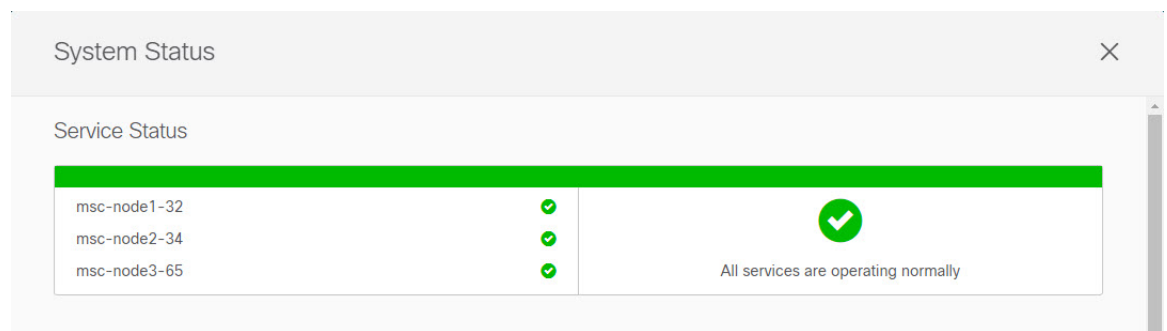

- Back up your existing Orchestrator configurations.

Configuration backups are described in the "Backup and Restore" chapter of the [Nexus Dashboard Orchestrator Configuration Guide](#) for your release.

- Back up your existing fabrics' configurations.

We recommend running configuration drift reconciliation after you upgrade your Nexus Dashboard Orchestrator, which may require you to redeploy configurations to your fabrics. As such, we recommend creating configuration backups of all fabrics managed by your Nexus Dashboard Orchestrator.

For more information on creating Cisco APIC configuration backups, see the "Management" chapter of the [Cisco APIC Basic Configuration Guide](#) for your release.

For more information on creating Cisco Cloud Network Controller configuration backups, see the "Configuring Cisco Cloud Network Controller Components" chapter of the [Cisco Cloud Network Controller for AWS User Guide](#) for your release.

For more information on creating Cisco Nexus Dashboard Fabric Controller configuration backups, see the "Backup and Restore" chapter of the [Cisco NDFC Fabric Controller Configuration Guide](#) for your release.

- You can upgrade the NDO service in one of two ways:



- Using the Nexus Dashboard's App Store, as described in [Upgrading NDO Service Using Cisco App Store, on page 67](#).

In this case, the Cisco DC App Center must be reachable from the Nexus Dashboard via the Management Network directly or using a proxy configuration. Nexus Dashboard proxy configuration is described in the *Nexus Dashboard User Guide*.



---

**Note** The App Store allows you to upgrade to the latest available version of the service only. In other words, if release 4.0(2) is available, you cannot use the App Store to upgrade to any release prior to that. If you want to upgrade to a different release, you must use the manual upgrade process as described below.

---

- By manually uploading the new app image, as described in [Upgrading NDO Service Manually, on page 69](#).

You can use this approach if you are unable to establish the connection to the DC App Center or if you want to upgrade to a version of the application that is not the latest available release.

- If you plan to add and manage new Cloud Network Controller sites after you upgrade your Nexus Dashboard Orchestrator to this release, ensure that they are running Cloud Network Controller release 5.2(1) or later.

On-boarding and managing Cloud Network Controller sites running earlier releases is not supported.

- Downgrading from this release is not supported.

We recommend creating a full backup of the configuration before upgrading, so that if you ever want to downgrade, you can deploy a brand-new cluster using the earlier version and then restore your configuration in it.

## Upgrading NDO Service Using Cisco App Store

This section describes how to upgrade Cisco Nexus Dashboard Orchestrator.

### Before you begin

- Ensure that you have completed the prerequisites described in [Prerequisites and Guidelines, on page 65](#).
- Ensure that Cisco DC App Center is reachable from the Nexus Dashboard via the Management Network directly or using a proxy configuration.

Nexus Dashboard proxy configuration is described in the *Nexus Dashboard User Guide*


- 
- Step 1** Log in to your Nexus Dashboard..
- Step 2** From the left navigation menu, select **Service Catalog**.
- Step 3** Upgrade the application using the App Store.
- a) In the **Service Catalog** screen, select the **App Store** tab.

- b) In the **Nexus Dashboard Orchestrator** tile, click **Upgrade**.
- c) In the License Agreement window that opens, click **Agree and Download**.

**Step 4** Wait for the new image to initialize.

It may take up to 20 minutes for the new application image to become available.

**Step 5** Activate the new image.

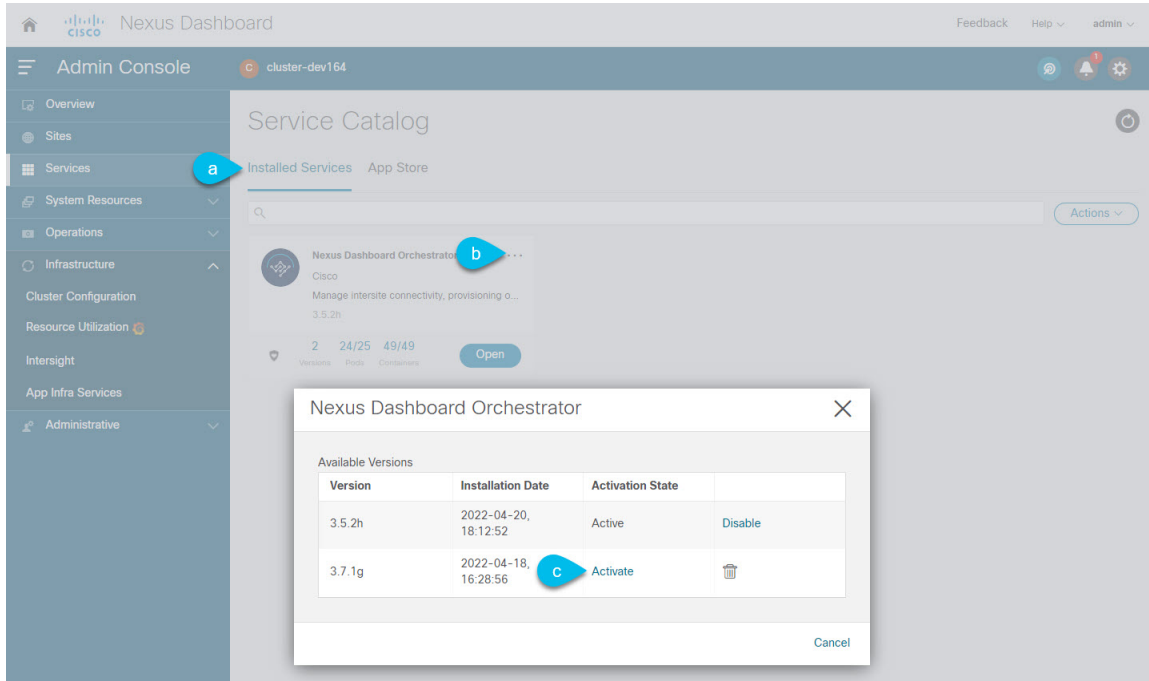

- a) In the **Service Catalog** screen, select the **Installed Services** tab.
- b) In the top right of the Nexus Dashboard Orchestrator tile, click the menu (...) and choose **Available Versions**.
- c) In the available versions window, click **Activate** next to the new image.

**Note** Do not **Disable** the currently running image before activating the new image. The image activation process will recognize the currently running image and perform the upgrade workflows necessary for the currently running version.

It may take up to 20 additional minutes for all the application services to start and the GUI to become available. The page will automatically reload when the process is completed.

**Step 6** (Optional) Delete the old application image.

You can choose to retain the old application version in case you ever want to downgrade. Or you can delete it as described in this step.

- a) In the **Service Catalog** screen, select the **Installed Services** tab.
- b) In the top right of the Nexus Dashboard Orchestrator tile, click the menu (...) and choose **Available Versions**.
- c) In the available versions window, click the delete icon next to the image you want to delete.

**Step 7** Launch the app.

To launch the app, simply click **Open** on the application tile in the Nexus Dashboard's **Service Catalog** page.

The single sign-on (SSO) feature allows you to log in to the application using the same credentials as you used for the Nexus Dashboard.

---

### What to do next

After you have upgraded the NDO service, you must resolve any configuration drifts and redeploy the templates as described in [Resolve Configuration Drifts, on page 71](#).

## Upgrading NDO Service Manually

This section describes how to upgrade Cisco Nexus Dashboard Orchestrator.

### Before you begin

- Ensure that you have completed the prerequisites described in [Prerequisites and Guidelines, on page 65](#).

---

#### Step 1

Download the target release image.

- a) Browse to the Nexus Dashboard Orchestrator page on DC App Center:  
<https://dcappcenter.cisco.com/nexus-dashboard-orchestrator.html>
- b) From the **Version** dropdown, choose the version you want to install and click **Download**.
- c) Click **Agree and download** to accept the license agreement and download the image.

#### Step 2

Log in to your Nexus Dashboard.

#### Step 3

Upload the image to your Nexus Dashboard.

- a) From the left navigation menu, select **Service Catalog**.
- b) In the Nexus Dashboard's **Service Catalog** screen, select the **Installed Services** tab.
- c) From the **Actions** menu in the top right of main pane, select **Upload App**.
- d) In the **Upload App** window, choose the location of the image

If you downloaded the application image to your system, choose **Local**.

If you are hosting the image on a server, choose **Remote**.

- e) Choose the file.

If you chose **Local** in the previous substep, click **Select File** and select the app image you downloaded.

If you chose **Remote**, provide the full URL to the image file, for example

```
http://<ip-address>:<port>/<full-path>/cisco-mso-<version>.nap.
```


- f) Click **Upload** to add the app to the cluster.

A new tile will appear with the upload progress bar. Once the image upload is completed, the Nexus Dashboard will recognize the new image as an existing application and add it as a new version.

#### Step 4

Wait for the new image to initialize.

It may take up to 20 minutes for the new application image to become available.

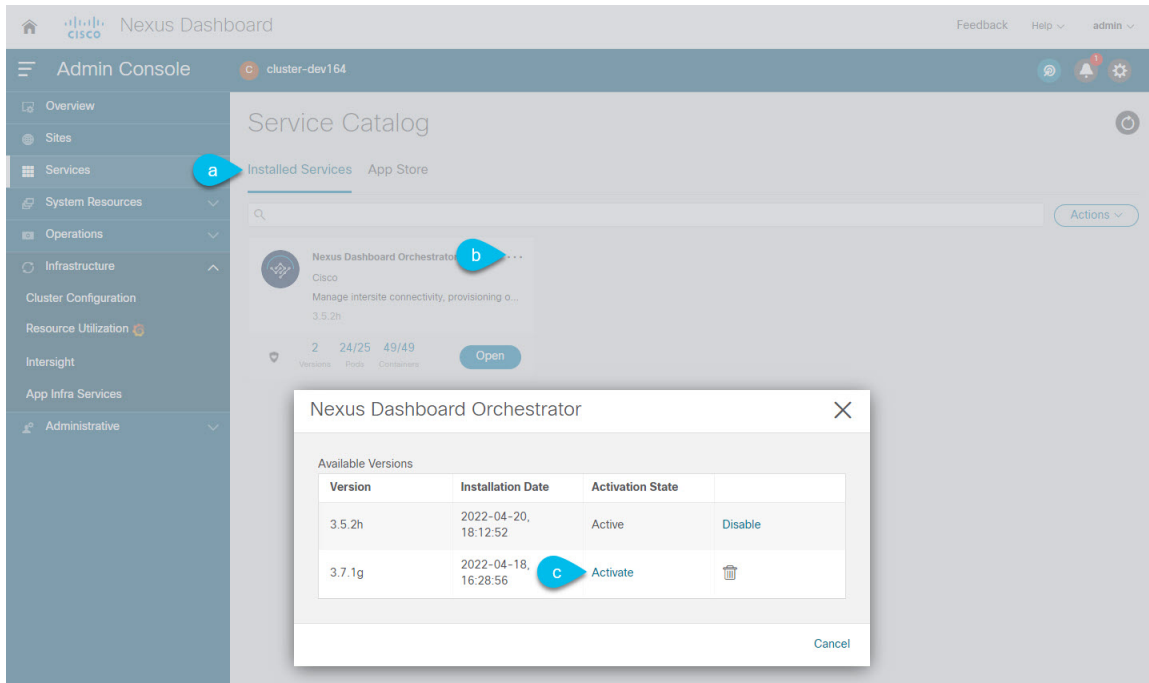**Step 5** Activate the new image.

- In the **Service Catalog** screen, select the **Installed Services** tab.
- In the top right of the Nexus Dashboard Orchestrator tile, click the menu (...) and choose **Available Versions**.
- In the available versions window, click **Activate** next to the new image.

**Note** Do not **Disable** the currently running image before activating the new image. The image activation process will recognize the currently running image and perform the upgrade workflows necessary for the currently running version.

It may take up to 20 additional minutes for all the application services to start and the GUI to become available. The page will automatically reload when the process is completed.

**Step 6** (Optional) Delete the old application image.

You can choose to retain the old application version in case you ever want to downgrade. Or you can delete it as described in this step.

- In the **Service Catalog** screen, select the **Installed Services** tab.
- In the top right of the Nexus Dashboard Orchestrator tile, click the menu (...) and choose **Available Versions**.
- In the available versions window, click the delete icon next to the image you want to delete.

**Step 7** Launch the app.

To launch the app, simply click **Open** on the application tile in the Nexus Dashboard's **Service Catalog** page.


The single sign-on (SSO) feature allows you to log in to the application using the same credentials as you used for the Nexus Dashboard.

**What to do next**

After you have upgraded the NDO service, you must resolve any configuration drifts and redeploy the templates as described in [Resolve Configuration Drifts, on page 71](#).

## Resolve Configuration Drifts

In some cases you may run into a situation where the configuration actually deployed in the site's controller is different from the configuration defined in the Nexus Dashboard Orchestrator. These configuration discrepancies are referred to as **Configuration Drifts** and are indicated by an `Out of Sync` warning next to the site name in the template view page as shown in the following figure:

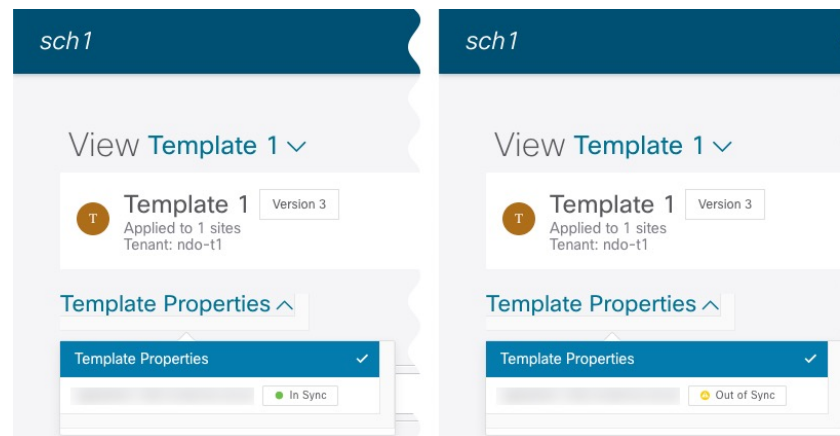

After upgrading your Nexus Dashboard Orchestrator and restoring the previous configuration backup, we recommend that you check for and resolve any configuration drifts as described in this section.



**Note** Deploying any templates before resolving configuration drifts would push the configuration defined in the Orchestrator and overwrite the values defined in the fabrics' controllers.

**Step 1** In your Nexus Dashboard Orchestrator, navigate to **Application Management > Schemas**.

**Step 2** Select the first schema and check its templates for configuration drifts.

You will repeat the following steps for every schema and template in your deployment

You can check for configuration drifts in one of the following two ways:

- Check the template deployment status icon for each site to which the template is assigned.
- Select the template and click **Deploy to sites** to bring up the configuration comparison screen to check which objects contain configuration drifts.

**Step 3** If the template contains a configuration drift, resolve the conflicts.

For more information about configuration drifts, check the "Configuration Drifts" chapter in the [Cisco Nexus Dashboard Orchestrator Configuration Guide for ACI Fabrics](#).


- a) Close the template deployment dialog to return to the Schema view.

Deploying any templates at this point would push the values in the Orchestrator database and overwrite any existing settings in the fabrics.

- b) From the template's **Actions** menu, select **Reconcile Drift**.


The **Drift Reconciliation** wizard opens.

- c) In the **Drift Reconciliation** screen, compare the template-level configurations for each site and choose the one you want.

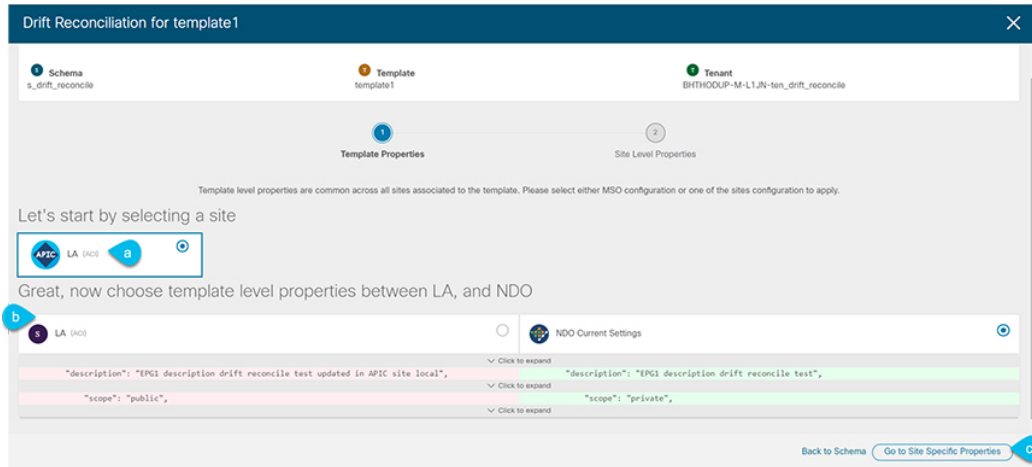

Template-level properties are common across all sites associated to the template. You can compare the template level properties defined on Nexus Dashboard Orchestrator with the configuration rendered in each site and decide what should become the new configuration in the Nexus Dashboard Orchestrator template. Selecting the site configuration will modify those properties in the existing Nexus Dashboard Orchestrator template, whereas selecting the Nexus Dashboard Orchestrator configuration will keep the existing Nexus Dashboard Orchestrator template settings as is

- d) Click **Go to Site Specific Properties** to switch to site-level configuration.

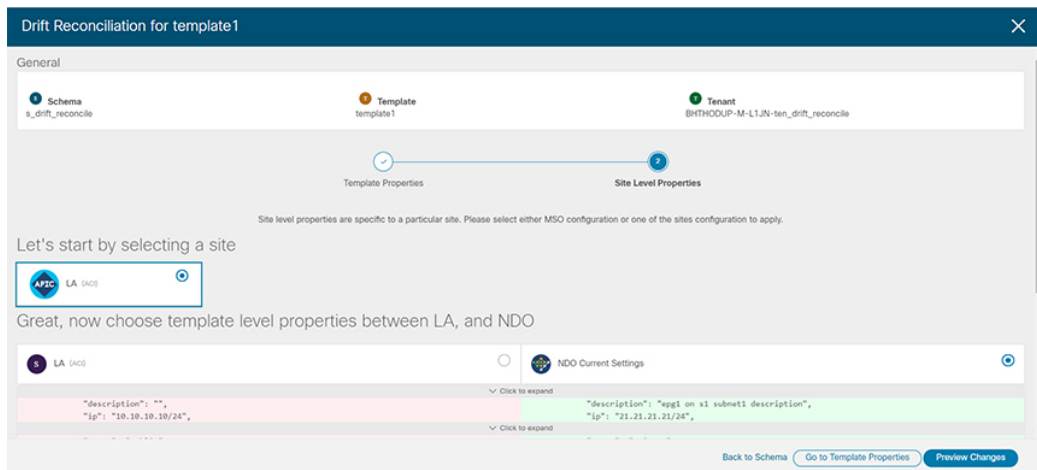

You can choose a site to compare that specific site's configuration. Unlike template-level configurations, you can choose either the Nexus Dashboard Orchestrator-defined or actual existing configurations for each site individually to be retained as the template's site-local properties for that site.

Even though in most scenarios you will make the same choice for both template-level and site-level configuration, the drift reconciliation wizard allows you to choose the configuration defined in the site's controller at the "Template Properties" level and the configuration defined in Nexus Dashboard Orchestrator at the "Site Local Properties" level or vice versa.

- e) Click **Preview Changes** to verify your choices.

The preview will display full template configuration adjusted based on the choices picked in the **Drift Reconciliation** wizard. You can then click **Deploy to sites** to deploy the configuration and reconcile the drift for that template.

**Step 4** Repeat the above steps for every schema and template in your Nexus Dashboard Orchestrator.

**Step 5** Check audit logs to verify that all templates have been re-deployed.

You can view the audit logs in the **Operations** tab.

**Audit Logs** page and confirm that all templates show as `Redeployed` to ensure that full re-deployment successfully completed.

---







## CHAPTER 12

# Upgrading from 3.7(x) or Earlier Releases

- [Overview, on page 75](#)
- [Prerequisites and Guidelines, on page 77](#)
- [Validate Existing Configuration and Create Backup, on page 79](#)
- [Uninstall Existing Nexus Dashboard Orchestrator, on page 83](#)
- [Upgrade Nexus Dashboard Cluster, on page 84](#)
- [Install Nexus Dashboard Orchestrator Release 4.0\(x\), on page 88](#)
- [Restore Configuration, on page 89](#)
- [Resolve Configuration Drifts, on page 93](#)

## Overview

The following sections describe how to upgrade Cisco Nexus Dashboard Orchestrator that is deployed in Cisco Nexus Dashboard from release 3.2(x) or later to release 4.0(1) or later.



**Note** If you are already running 4.0(1) or later release, skip this section and follow the instructions described in [Upgrading from Existing 4.0\(x\) Release, on page 65](#) instead.

Beginning with Release 4.0(1), Nexus Dashboard Orchestrator will validate and enforce a number of best practices when it comes to template design and deployment:

- All policy objects must be **deployed** in order according to their dependencies.

For example, when creating a bridge domain (BD), you must associate it with a VRF. In this case, the BD has a VRF dependency so the VRF must be deployed to the fabric before or together with the BD. If these two objects are defined in the same template, then the Orchestrator will ensure that during deployment, the VRF is created first and associate it with the bridge domain.

However, if you define these two objects in separate templates and attempt to deploy the template with the BD first, the Orchestrator will return a validation error as the associated VRF is not yet deployed. In this case you must deploy the VRF template first, followed by the BD template.

- All policy objects must be **undeployed** in order according to their dependencies, or in other words in the opposite order in which they were deployed.

As a corollary to the point above, when you undeploy templates, you must not undeploy objects on which other objects depend. For example, you cannot undeploy a VRF before undeploying the BD with which the VRF is associated.

- No cyclical dependencies are allowed across multiple templates.

Consider a case of a VRF (`vrf1`) associated with a bridge domain (`bd1`), which is in turn associated with an EPG (`epg1`). If you create `vrf1` in `template1` and deploy that template, then create `bd1` in `template2` and deploy that template, there will be no validation errors since the objects are deployed in correct order. However, if you then attempt to create `epg1` in `template1`, it would create a circular dependency between the two template, so the Orchestrator will not allow you to save `template1` addition of the EPG.

Due to these additional rules and requirements, an upgrade to release 4.0(1) or later from an earlier release requires an analysis of all existing templates and conversion of any template that does not satisfy the new requirements. This is done automatically during the migration process described in the following sections and you will receive a detailed report of all the changes that had to be applied to your existing templates to make them compliant with the new best practices.




---

**Note** You must ensure that you complete all the requirements described in the following "Prerequisites and Guidelines" section before you back up your existing configuration to be migrated to release 4.0(1). Failure to do so may result in template conversion to fail for one or more templates and require you to manually resolve the issues or restart the migration process.

---

### Upgrade Workflow

The following list provides a high level overview of the migration process and the order of tasks you will need to perform.

1. Review the upgrade guidelines and complete all prerequisites.
2. Back up existing Nexus Dashboard Orchestrator configuration and download the backup to your local machine.
3. Disable and completely uninstall the Nexus Dashboard Orchestrator service from your Nexus Dashboard cluster.

This is mandatory for physical Nexus Dashboard clusters because you will deploy release 4.0(1) on the same cluster.

However, if your Nexus Dashboard cluster is virtual, you can choose to deploy a brand new cluster and install Nexus Dashboard Orchestrator release 4.0(x) in it. After the new cluster is up and running, you can disconnect the old cluster's VMs and complete the migration process on the new cluster. This allows you to preserve your existing cluster and easily bring it back in service in case of any issue with the migration procedure.

4. If necessary, upgrade the Nexus Dashboard cluster.  
Similarly to the previous step, if your cluster is virtual, you can choose to preserve it and deploy a new virtual cluster to complete the migration.
5. Install the target 4.0(x) release of Nexus Dashboard Orchestrator.
6. Add a remote location for backups to the fresh Nexus Dashboard Orchestrator instance, upload the backup you took on your previous release, and restore the configuration backup in the new NDO service.

# Prerequisites and Guidelines

Before you upgrade your Cisco Nexus Dashboard Orchestrator cluster:

- Ensure that you are running Nexus Dashboard Orchestrator release 3.2(1) or later.



**Note** If you are already running a 4.0(x) or later release, skip this section and follow the instructions described in [Upgrading from 3.7\(x\) or Earlier Releases, on page 75](#) instead.

If you are running a release prior to Release 3.2(1), you must migrate your Nexus Dashboard Orchestrator to Nexus Dashboard before upgrading to this release. We recommend that you migrate to Release 3.7(1), as described in [Migrating Existing Cluster to Nexus Dashboard](#), then come back to this document to upgrade to release 4.0(x).

- Ensure that your current Nexus Dashboard cluster is healthy.


You can check the Nexus Dashboard cluster health in one of two ways:

- By logging into your Nexus Dashboard GUI and verifying system status in the **System Overview** page.
- By logging into any one of the nodes directly as `rescue-user` and running the following command:


```
# acs health
All components are healthy
```

- Ensure that your current Cisco Nexus Dashboard Orchestrator is healthy.

You can check the status of you Nexus Dashboard Orchestrator service by navigating to **Settings > System Status**:

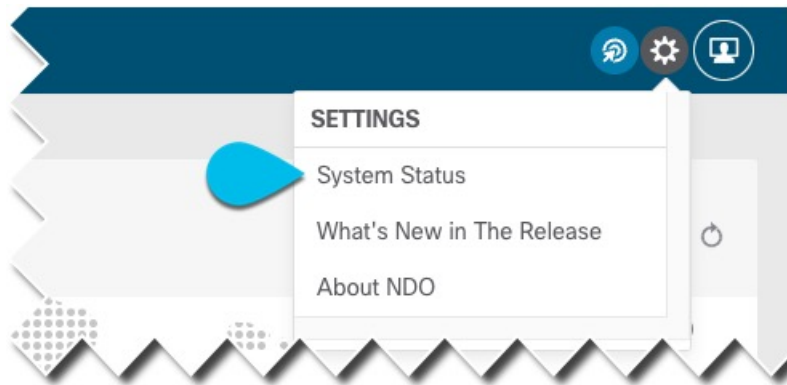

Then ensure that the status of all nodes and services is healthy:

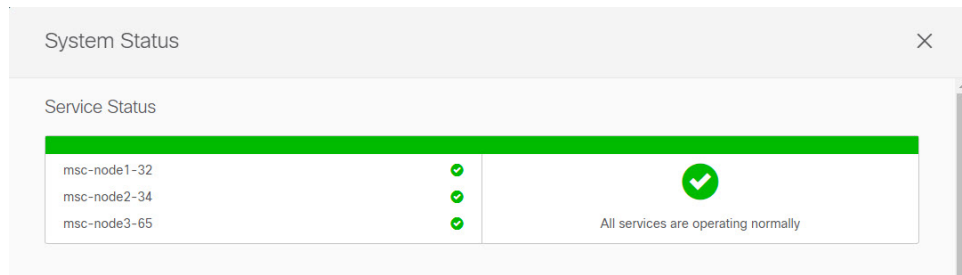

- Ensure that there are no configuration drifts before you back up your existing configuration.

Resolving configuration drifts is described in the "Configuration Drifts" section of the [Nexus Dashboard Orchestrator Configuration Guide](#).

- Back up your existing fabrics' configurations.

We recommend running configuration drift reconciliation after you upgrade your Nexus Dashboard Orchestrator, which may require you to redeploy configurations to your fabrics. As such, we recommend creating configuration backups of all fabrics managed by your Nexus Dashboard Orchestrator.

For more information on creating Cisco APIC configuration backups, see the "Management" chapter of the [Cisco APIC Basic Configuration Guide](#) for your release.

For more information on creating Cisco Cloud Network Controller configuration backups, see the "Configuring Cisco Cloud Network Controller Components" chapter of the [Cisco Cloud Network Controller for AWS User Guide](#) for your release.

For more information on creating Cisco Nexus Dashboard Fabric Controller configuration backups, see the "Backup and Restore" chapter of the [Cisco NDFC Fabric Controller Configuration Guide](#) for your release.

- Ensure that you have an existing remote location configured for backups in your existing Orchestrator.
 

The upgrade process requires configuration backup and restore, so you must have a remote location where you can save the backup already set up in your existing cluster.

Note that the remote locations where you store configuration backups are not preserved during the upgrade process, so you will need to re-add the same remote location after you deploy this release in order to restore the configuration.
- Ensure that all templates are in a supported state before creating the configuration backup of the existing cluster:
  - Templates that are **undeployed** or were **never deployed** after they were created require no additional attention and will be migrated during the upgrade.
  - All **deployed** templates must have no pending configuration changes.
 

If you have one or more templates that have been modified since they were last deployed, you must either deploy the latest version of the template or undo the changes to the template since it was deployed by reverting to the last-deployed version and re-deploying it.



---

**Note** Attempting to restore a backup that contains invalid templates will fail and you would need to revert to your existing release, restore your backup, resolve any existing issues, and then restart the migration process. So we strongly recommend that you validate your backup locally using the provided Python script before proceeding with the upgrade, as described in the [Validate Existing Configuration and Create Backup, on page 79](#) section below. If for any reason you are unable to run the script, we recommend contacting Cisco support to have them validate your configuration backup before proceeding with the upgrade.

---

- Only the latest versions of the templates are preserved during the upgrade.

All other existing versions of templates, including older versions that are tagged `Golden`, will not be transferred.

- If you plan to add and manage new Cloud Network Controller sites after you upgrade your Nexus Dashboard Orchestrator to this release, ensure that they are running Cloud Network Controller release 5.2(1) or later.

On-boarding and managing Cloud Network Controller sites running earlier releases is not supported.

- SR-MPLS and SDA integration configurations are not transferred during the upgrade.

If you have either of these integrations in your deployment, it will not affect the migration, but you will receive a notification and will need to reconfigure them after you complete the upgrade.

- Depending on your Nexus Dashboard cluster's form factor, choose the appropriate upgrade approach:
  - For physical Nexus Dashboard clusters, you will need to back up your configuration, remove the existing Orchestrator instance, deploy this release of the service, and then restore the configuration backup from your existing cluster.
  - For virtual Nexus Dashboard clusters, you can choose to follow the same workflow as the physical clusters. You also have the option to disconnect your existing cluster and preserve its VMs until the upgrade is complete while deploying a brand new virtual cluster with Orchestrator 4.0(1) and restoring configuration there.

In either case, you can follow the instructions in the following sections which will call out any differences based on the chosen approach.

- Downgrading from this release is not supported.

You will create a full backup of the configuration before upgrading to Release 4.0(1), so that if you ever want to downgrade, you can deploy a brand-new cluster using the earlier version and then restore your configuration in it.

## Validate Existing Configuration and Create Backup

This section describes how to create a backup of the existing configuration, which you will then restore after you upgrade the Nexus Dashboard Orchestrator service.

### Before you begin

You must have the following completed:

- Familiarized yourself with the migration workflow described in the [Overview, on page 65](#)
- Reviewed and completed the prerequisites described in [Prerequisites and Guidelines, on page 65](#).
- Set up a remote location for configuration backups.

#### Step 1

Log in to your Nexus Dashboard and open the Nexus Dashboard Orchestrator service.

#### Step 2

Validate your existing configuration before you create the backup.

You can verify that your configuration backup will be compatible with release 4.0(1) upgrade by running a local Python validation script. If for any reason you are unable to run the script, we recommend contacting Cisco support to have them validate your configuration backup before proceeding with the upgrade.

- a) Ensure that you have Python installed on your local machine.

The script requires Python 3 to run. You can check if Python is installed on your machine using the following command:

```
% python3 --version
Python 3.9.6
```

- b) Download and extract the validation script.


You can download the script tarball from [https://software.cisco.com/download/home/285968390/type/286317465/release/4.0\(1h\)](https://software.cisco.com/download/home/285968390/type/286317465/release/4.0(1h)) and then extract it using any tool of your choice, for example:

```
% unzip <name>.zip
```

- c) Download the tech support logs from your existing Orchestrator.

While for the migration you will create and download the configuration backup using the standard procedure, the validation is done on the tech support information. Note that it is normal for the tech support archive to be significantly larger than your typical configuration backup.

You can generate the tech support logs by navigating to **Operations > Tech Support** page in the Orchestrator UI. Then click the **Edit** icon in the **System Logs** tile, and finally click the **Download** button:

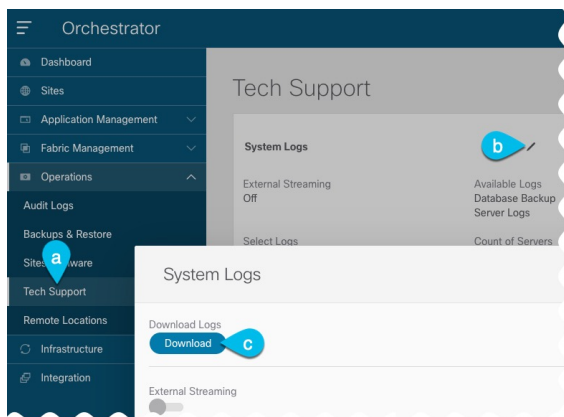

This downloads the `msc_report_<date>.zip` archive to your machine.

- d) Extract the tech support archive you downloaded.

The tech support archive comes in a standard `.zip` format, so you can use any tool of your choice to extract the contents, for example:

```
% unzip msc_report_<date>.zip
```

After you extract the archive, copy the `msc-db-json-<date>_temp.tar.gz` file inside into the directory where you extracted the validation script.

e) Run the validation script.

The script requires a number of dependencies, which are all defined in the `requirements.txt` file that comes with the script, so we recommend creating a Python virtual environment before installing the dependencies and running the script:

```
% python -m venv ndo-upgrade
% source ndo-upgrade/bin/activate
% pip install -r requirements.txt
```

After the virtual environment is set up and the required modules are installed, run the script using the tech support file you downloaded and extracted in a previous step, for example:

- `-f` allows you to provide the file on which to run the validation.
- `-N` specifies that no configuration will be deployed to any live system.
- `-C` generates the JSON-formatted output at the end of the script.

```
(ndo-upgrade)ndoCmd % ./ndoCopy.py -f
msc_report_20220617_181529/msc-db-json-20220617181553_temp.tar.gz -N -C
11:49:56 Loading collection site2...4
11:49:56 Loading collection tenant...12
[...]
11:49:56 Checking template versions
11:49:56 Checking policy deployment dependencies
11:49:56 Fixing template policy flow loops
11:49:56 Fixing template dependency loops
11:49:56 Fixing policies for upgrade
11:49:56 Determine template ordering
11:49:56 Analysis completed
{
  "summaryStats": {
    "appTemplatePoliciesConverted": 139,
    "appTemplateSiteAssocMods": 7,
    "appTemplatePolicyEvictions": 2,
    "appTemplateSchemasConverted": 11,
    "appTemplatesConverted": 38,
    "appTemplatesCreated": 1,
    "tenantMods": 1
  },
  [...]
}
```

After the output is generated:

- If there are no `errors` or `warnings` blocks at the end of the generated JSON, then your configuration is compliant with the migration requirements and you can proceed to the "Back up existing deployment configuration" step.
- If there is only a number of warnings but no errors, it means the migration will complete successfully, but there's a number of things that you may want to resolve before or after the upgrade. We recommend reviewing any warnings before continuing with the next step.

```
"warnings": [
  "dropped DHCP Relay policy dhcp-tn-epgOnRL-policy: invalid provider ip address:
```

```

141.1.141.2/24",
  "dropped Route Map policy sameContract: fromPrefixLen and toPrefixLen must be larger than
  prefix",
  "dropped Multicast Route Map policy mCastRt.map: invalid RP ip: 12.13.14.15/23",
  "dropped DHCP Option policy dhcpBdMso-option: duplicate option id: 1; duplicate option
  id: 1",
  "removed dhcpLabels.0 from bd[tn-epgOnRL::Template 1::bdDhcpClient] for unresolved policy
  ref key[dhcpRelayPolicies::tn-epgOnRL::dhcp-tn-epgOnRL-policy]",
  "removed dhcpLabels.0 from bd[dhcp-msite-mso::bd::bd-client-l3out] for unresolved policy
  ref key[dhcpRelayPolicies::dhcp-msite-mso::dhcp-msite-mso-relay-policy-epg-cleint-l3out]"
  ],

```

- If there is 1 or more errors listed in the JSON, the migration would fail if you continue with the current configuration.

**Note** You must resolve any existing errors before creating the backup and proceeding with the upgrade. We recommend re-running the validation script after you resolve any existing errors to ensure that the backup will be ready for the migration.

For example, the following sample shows 2 possible errors that can come up during validation:

```

"errors": [
  "template appTemplate[<template>] version 6 is in state EDIT_CONFIG",
  "deployed policy bd[<bd>] requires vrf[<vrf>] which is not deployed",
]

```

- As mentioned in the [Prerequisites and Guidelines, on page 65](#) section, any deployed templates must not have undeployed changes. You must either deploy the latest version of that template or revert to the deployed version (so it is the latest version) and re-deploy the template.
- Objects must be deployed in order of their dependencies. In other words, you must not have a deployed bridge domain if the required VRF is not deployed.

f) Resolve any shown errors and repeat this step to re-validate the configuration.

**Step 3** Back up existing deployment configuration.

- From the left navigation pane, select **Operations > Backups & Restore**.
- In the main window, click **New Backup**.


A **New Backup** window opens.

- In the **Name** field, provide the name for the backup file.

The name can contain up to 10 alphanumeric characters, but no spaces or underscores ( ).

- From the **Remote Location** dropdown, choose the remote location you have configured previously.
- In the **Remote Path** field, provide the path on the remote server where to store the backup.
- Click **Save** to create the backup.

**Step 4** Download the backup file.

In the main window, click the actions (  ) icon next to the backup and select **Download**. This will download the backup file to your system.



# Uninstall Existing Nexus Dashboard Orchestrator

This section describes how to completely remove the existing Nexus Dashboard Orchestrator service from your Nexus Dashboard cluster, which is required as part of the Orchestrator upgrade to release 4.0(1) or later.



**Note** As mentioned in the [Overview, on page 65](#), if your Nexus Dashboard cluster is virtual, you can choose to preserve the existing VMs and deploy a brand new cluster and restore configuration there. If you choose that approach, you can skip this section and simply disconnect the existing cluster's VMs.

## Before you begin

You must have the following completed:

- Backed up and downloaded the existing configuration as described in [Validate Existing Configuration and Create Backup, on page 79](#).

- Step 1** Navigate to your Nexus Dashboard's **Admin Console**.
- Step 2** From the main navigation menu, select **Services**.
- Step 3** Disable the existing Orchestrator service.

The screenshot shows the Nexus Dashboard Admin Console interface. The top navigation bar includes a home icon, the Cisco logo, and the text 'Nexus Dashboard'. Below this is a dark blue sidebar with a menu containing 'Overview', 'Sites', 'Services', 'System Resources', 'Operations', 'Infrastructure', and 'Administrative'. The 'Services' menu item is highlighted with a blue callout 'a'. The main content area is titled 'Service Catalog' and shows 'Installed Services' and 'App Store' tabs. A search bar is present. The 'Nexus Dashboard Orchestrator' service tile is visible, showing 'Cisco' as the provider and 'Manage intersite connectivity' as the description. A blue callout 'b' points to the 'Disable' option in the service's actions menu. At the bottom of the tile, there are statistics for '1 Version', '27/27 Pods', and '59/59 Containers', along with an 'Open' button.

- a) From the main navigation menu, select **Services**.
- b) From the Nexus Dashboard Orchestrator tile's **Actions (...)** menu, choose `Disable`.

Wait until the service is disabled.

**Step 4** From the Nexus Dashboard Orchestrator tile's **Actions (...)** menu, choose `Delete`.

## Upgrade Nexus Dashboard Cluster

Before you upgrade to release 4.0(x) of Nexus Dashboard Orchestrator, you must upgrade the Nexus Dashboard cluster to release 2.1(2d) or later as described in this section.



**Note** We recommend upgrading the cluster to Release 2.2(1h) or later.

### Before you begin

If you are already running Nexus Dashboard, Release 2.1(2d) or later, you can skip this section. Otherwise before proceeding with instructions in this section, ensure that you have:

- Backed up and downloaded the existing Orchestrator configuration as described in [Validate Existing Configuration and Create Backup, on page 79](#).
- Uninstalled the existing Orchestrator service as described in [Uninstall Existing Nexus Dashboard Orchestrator, on page 83](#).

Before upgrading the Nexus Dashboard cluster:

- Ensure that you have read the target release's [Release Notes](#) for any changes in behavior, guidelines, and issues that may affect your upgrade.

The upgrade process is the same for all Nexus Dashboard form factors. Regardless of whether you deployed your cluster using physical servers, VMware ESX, Linux KVM, Azure, or AWS, you will use the target release's ISO image to upgrade.

- Ensure that you have read the [Release Notes](#) for any services you run in the existing cluster and plan to run on the target release for service-specific changes in behavior, guidelines, and issues that may affect your upgrade.
- You must be running Cisco Nexus Dashboard release 2.0(1d) or later to upgrade to release 2.1(2d) or later.

If you are running Cisco Application Services Engine, you must upgrade to Nexus Dashboard as described in [Cisco Nexus Dashboard Deployment Guide, Release 2.0\(x\)](#) before upgrading to release 2.0(1d) or later. In this case, we recommend upgrading your Application Services Engine cluster to Nexus Dashboard release 2.0(2h) and then to release 2.2(1h) or later.

- You must have valid DNS and NTP servers configured and reachable by all cluster nodes.
- Ensure that your current Nexus Dashboard cluster is healthy.

You can check the system status on the **System Overview** page of the Nexus Dashboard GUI or by logging in to one of the nodes as `rescue-user` and ensuring that the `acs health` command returns `All components are healthy`.

- We recommend that you create a backup of the existing cluster configuration prior to the upgrade.
- Ensure that no configuration changes are made to the cluster, such as adding worker or standby nodes, while the upgrade is in progress.
- If you are upgrading Nexus Dashboard from release 2.1(1) or earlier, you may need to clear your browser cache after the upgrade is completed for the new event monitoring page to properly show in the UI.

**Step 1**

Download the Nexus Dashboard image.

- Browse to the Software Download page.

<https://software.cisco.com/download/home/286327743/type/286328258>

- Choose the Nexus Dashboard version you want to download.
- Download the Cisco Nexus Dashboard image (`nd-dk9.<version>.iso`).

**Note** You must download the `.iso` image for all upgrades, even if you used the VMware ESX `.ova` image or a cloud provider's marketplace for initial cluster deployment.

- (Optional) Host the image on a web server in your environment.


When you upload the image to your Nexus Dashboard cluster, you will have an option to provide a direct URL to the image.

**Step 2**

Log in to your current Nexus Dashboard GUI as an Administrator user.

**Step 3**

Upload the new image to the cluster.

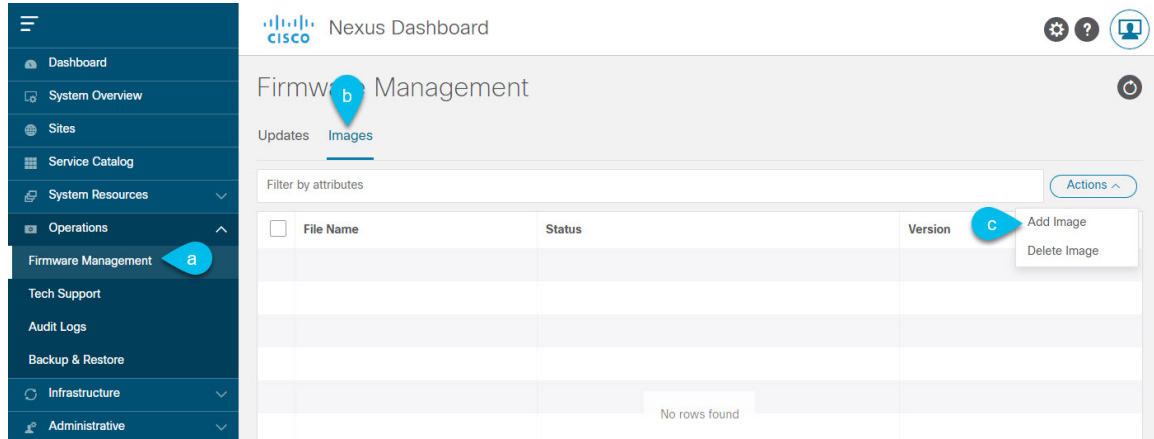

- Navigate to **Operations > Firmware Management**.
- Select the **Images** tab.
- From the **Actions** menu, select **Add Image**.

**Step 4**

Select the new image.

- In the **Add Firmware Image** window, select **Local**.

Alternatively, if you hosted the image on a web server, choose **Remote** instead.

- Click **Select file** and select the ISO image you downloaded in the first step.

If you chose to upload a remote image, provide the file path for the image on the remote server.


- c) Click **Upload** to add the image.

The image will be uploaded to the Nexus Dashboard cluster, unpacked, processed, and made available for the upgrade. The whole process may take several minutes and you will be able to see the status of the process in the **Images** tab.

**Step 5** Wait for the image status to change to `Downloaded`.

You can check the status of the image download progress in the **Images**.

**Step 6** Set up the update.

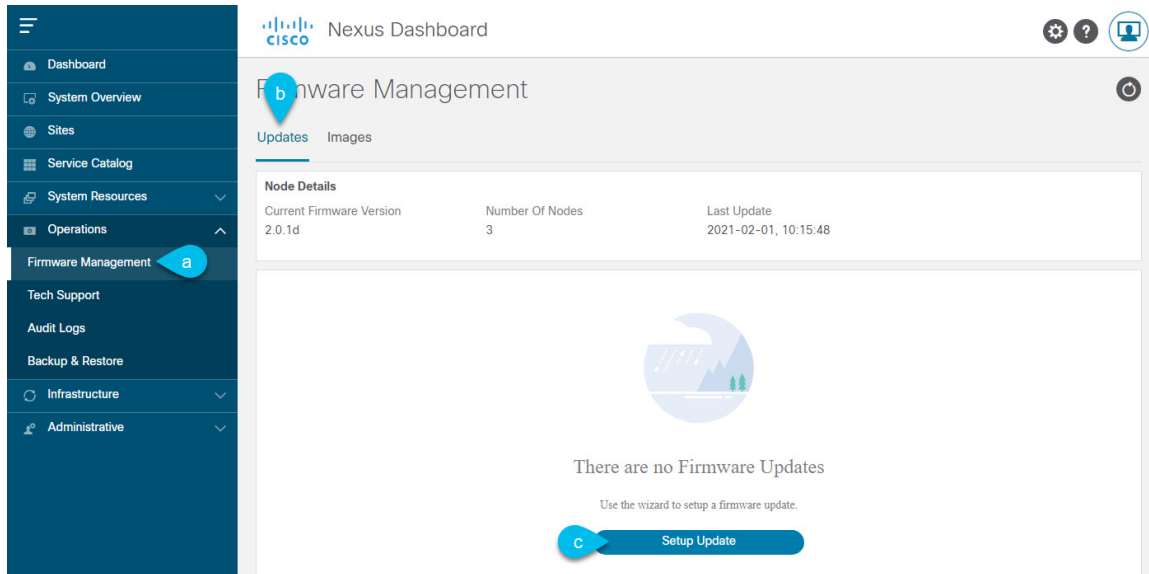

- a) Navigate to **Operations** > **Firmware Management**.  
 b) Select the **Updates** tab.  
 c) Click **Setup Update**.

The **Firmware Update** screen opens.

**Step 7** Choose the upgrade image.

- a) In the **Firmware Update** > **Version selection** screen, select the firmware version you uploaded and click **Next**.  
 b) In the **Firmware Update** > **Confirmation** screen, verify the details and click **Begin Install**.

The installation progress window is displayed. You can navigate away from this screen while the update is in progress. To check on the update status at a later time, navigate to the **Firmware Management** screen and click **View Details** in the **Last Update Status** tile.

This will set up the required Kubernetes images and services but will not switch the cluster to the new version. The cluster will continue to run the existing version until you activate the new image in the next step. The entire process may take up to 20 minutes.

**Step 8** Activate the new image.

- a) Navigate back to the **Operations** > **Firmware Management** screen  
 b) In the **Last Update Status** tile, click **View Details**.  
 c) Click **Activate**.  
 d) In the **Activation Confirmation** window, click **Continue**.

It may take up to 20 additional minutes for all the cluster services to start and the GUI to become available. The page will automatically reload when the process is completed.

**Step 9** If you upgraded a virtual cluster deployed in VMware ESX, convert the nodes to the new profile.

**Note** If you upgraded a physical cluster, skip this step.

Starting with Release 2.1(1), Nexus Dashboard supports two different node profiles for virtual nodes deployed in VMware ESX. After the upgrade, you must convert all the nodes of the existing cluster to one of the new profiles:

- **Data node**—node profile designed for data-intensive applications, such as Nexus Dashboard Insights
- **App node**—node profile designed for non-data-intensive applications, such as Nexus Dashboard Orchestrator

The profile you choose depends on your use case scenario:

- If you plan to run only the Nexus Dashboard Orchestrator service, convert all nodes to the `App` node profile.
- If you plan to run Nexus Dashboard Insights or co-host applications, you must convert the nodes to the `Data` profile.

You convert the nodes to the new profile by deploying brand new nodes using that profile and replacing existing nodes with them one at a time.

a) Bring down one of the nodes.

You must replace one node at a time.

b) Deploy a new node in VMware ESX using the `App` or `Data` profile OVA.

When deploying the new node, you must use the same exact network configuration parameters as the node you are replacing.

c) Log in to the existing Nexus Dashboard GUI.

You can use the management IP address of one of the remaining healthy master nodes.

d) From the left navigation pane, select **System Resources > Nodes**.

The node you are replacing will be listed as `Inactive`.

e) Click the (...) menu next to the inactive master node you want to replace and select **Replace**.

The **Replace** window will open.

f) Provide the **Management IP Address** and **Password** for the node, then click **Verify**.

The cluster will connect to the new node's management IP address to verify connectivity.

g) Click **Replace**.

It may take up to 20 minutes for the node to be configured and join the cluster.

h) Wait for the cluster to become healthy, then repeat this step for the other two nodes.

**Step 10** If you are hosting multiple applications in the same cluster, configure deployment profiles for the App Infra Services.

If you are hosting only a single application in your Nexus Dashboard cluster, skip this step.

If you are co-hosting multiple applications in the same cluster, you must configure the App Infra Services with deployment profiles appropriate for your combination of applications and fabric sizes.

After the cluster upgrade is completed, follow the instructions described in the "App Infra Services" section of the *Cisco Nexus Dashboard User Guide*, which is also available in the products GUI.

## Install Nexus Dashboard Orchestrator Release 4.0(x)

This section describes how to install this release of Nexus Dashboard Orchestrator.

### Before you begin

You must have the following completed:

- Backed up and downloaded the existing configuration as described in [Validate Existing Configuration and Create Backup, on page 79](#).
- Upgraded your Nexus Dashboard cluster to release 2.1(2d) or later as described in [Upgrade Nexus Dashboard Cluster, on page 84](#)

**Step 1** Navigate to your Nexus Dashboard's **Admin Console**.

**Step 2** From the left navigation menu, select **Services**.

**Step 3** Install Nexus Dashboard Orchestrator.

If you are installing the service using the App Store:

- In the **Services** screen, select the **App Store** tab.
- In the **Nexus Dashboard Orchestrator** tile, click **Upgrade**.
- In the License Agreement window that opens, click **Agree and Download**.

If you are installing the service manually:

- Browse to the Nexus Dashboard Orchestrator page on DC App Center:  
<https://dcappcenter.cisco.com/nexus-dashboard-orchestrator.html>
- From the **Version** dropdown, choose the version you want to install and click **Download**.
- Click **Agree and download** to accept the license agreement and download the image.
- From the left navigation menu in Nexus Dashboard, select **Services**.
- In the Nexus Dashboard's **Services** screen, select the **Installed Services** tab.
- From the **Actions** menu in the top right of the main pane, select **Upload Service**.
- In the **Upload Service** window, choose the location of the image

If you downloaded the application image to your system, choose **Local**.

If you are hosting the image on a server, choose **Remote**.

- Choose the file.

If you chose **Local** in the previous substep, click **Select File** and select the app image you downloaded.

If you chose **Remote**, provide the full URL to the image file, for example

```
http://<ip-address>:<port>/<full-path>/cisco-mso-<version>.nap.
```

- Click **Upload** to add the app to the cluster.

It may take a few minutes for the image to be uploaded to the cluster and initialized.

**Step 4** Wait for the new image to initialize.

**Step 5** In the Nexus Dashboard Orchestrator tile, click **Enable**.

It may take a few minutes for all the application services to start and the GUI to become available.

**Step 6** Launch the Orchestrator service.

Simply click **Open** on the service tile.

The single sign-on (SSO) feature allows you to log in to the application using the same credentials as you used for the Nexus Dashboard.

---

## Restore Configuration

This section describes how to deploy and configure the new Nexus Dashboard cluster and the NDO service, which you will use to restore your previous configuration.

### Before you begin

You must have the following completed:

- Backed up and downloaded the configuration from your old Orchestrator instance as described in [Validate Existing Configuration and Create Backup, on page 79](#).
- Upgraded your Nexus Dashboard cluster to release 2.1(2d) or later as described in [Upgrade Nexus Dashboard Cluster, on page 84](#).
- Installed the target Orchestrator release as described in [Install Nexus Dashboard Orchestrator Release 4.0\(x\), on page 88](#).

---

**Step 1** Ensure that the new Nexus dashboard cluster is up and running and the NDO service is installed.

The NDO service must be a fresh install with no configuration changes to the sites or policies.

**Step 2** Open your new Nexus Dashboard Orchestrator service.

**Step 3** Add remote location for configuration backups.

This release of Nexus Dashboard Orchestrator does not support configuration backups stored on the cluster's local disk. So before you can import the backup you saved before the migration, you need to configure a remote location in Nexus Dashboard Orchestrator to which you can then import your configuration backups.

- a) From the left navigation pane, select **Operations > Remote Locations**.
- b) In the top right of the main window, click **Add Remote Location**.

An **Add New Remote Location** screen appears.

- c) Provide the name for the remote location and an optional description.

Two protocols are currently supported for remote export of configuration backups:

- SCP

- SFTP

**Note** SCP is supported for non-Windows servers only. If your remote location is a Windows server, you must use the SFTP protocol

- d) Specify the host name or IP address of the remote server.

Based on your **Protocol** selection, the server you specify must allow SCP or SFTP connections.

- e) Provide the full path to a directory on the remote server where you will save the backups.

The path must start with a slash (/) characters and must not contain periods (.) or backslashes (\). For example, */backups/ndo*.

**Note** The directory must already exist on the remote server.

- f) Specify the port used to connect to the remote server.

By default, port is set to 22.

- g) Specify the authentication type used when connecting to the remote server.

You can configure one of the following two authentication methods:

- **Password**—provide the username and password used to log in to the remote server.
- **SSH Private Files**—provide the username and the SSH Key/Passphrase pair used to log in to the remote server.

- h) Click **Save** to add the remote server.

**Step 4** Import the backup file to your new Nexus Dashboard Orchestrator cluster.

- From the left navigation pane, select **Operations > Backups & Restore**.
- In the main pane, click **Upload**.
- In the **Upload from file** window that opens, click **Select File** and choose the backup file you want to import.
- From the **Remote Location** dropdown menu, select the remote location.
- (Optional) Update the remote location path.

The target directory on the remote server, which you configured when creating the remote backup location, will be displayed in the **Remote Path** field.

You can choose to append additional subdirectories to the path. However, the directories must be under the default configured path and must have been already created on the remote server.


- f) Click **Upload** to import the file.

Importing a backup will add it to the list of the backups displayed the **Backups** page. Note that even though the backups are shown on the NDO UI, the files are stored only on the remote server and not directly on the cluster nodes.


**Step 5** Restore the configuration.

- In the main window, click the actions (...) icon next to the backup you want to restore and select **Rollback to this backup**.



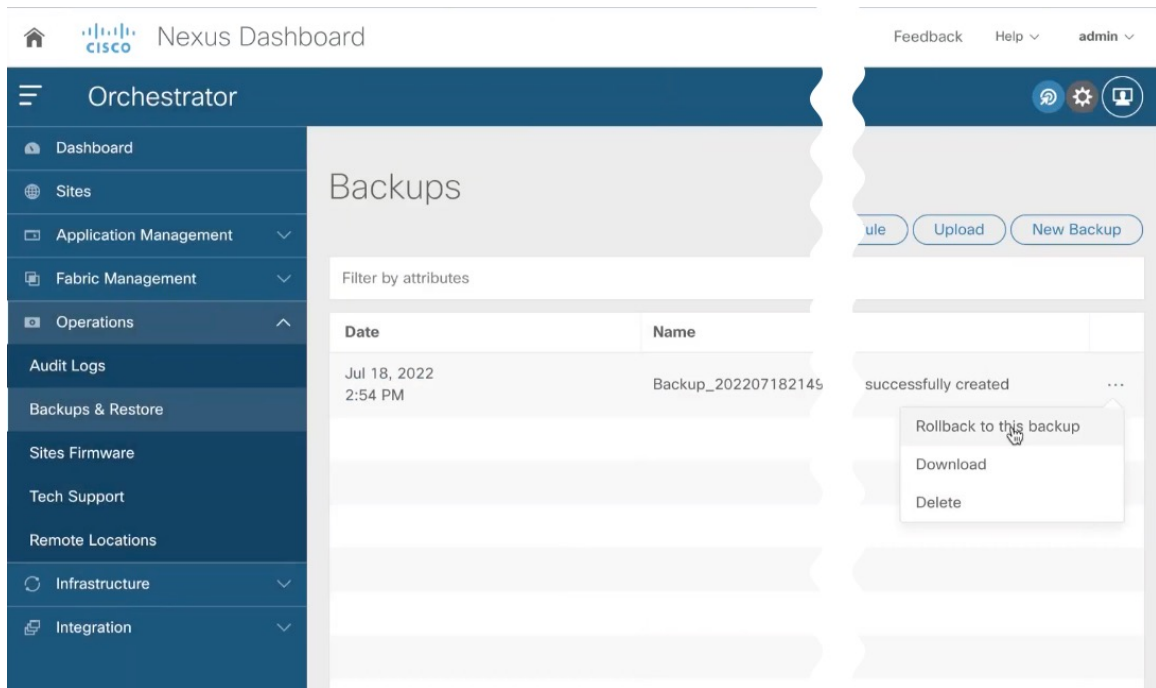

- b) In the **Restore from this backup** window, click **Restore** to confirm that you want to restore the backup you selected. This may take a few minutes to complete. After the initial backup import, you will be prompted for additional validation, which is required for database upgrades to release 4.0(1).
- c) In the **Restore from this backup** window, click **Restore Validation Required** to proceed. Before the configuration database is updated for this release, the upgrade process will perform a number of validations. A validation report is compiled and presented for you to review. Note that at this stage, all the tenants have been imported from the backup and created in NDO, but the schemas and templates will be created in the next step.

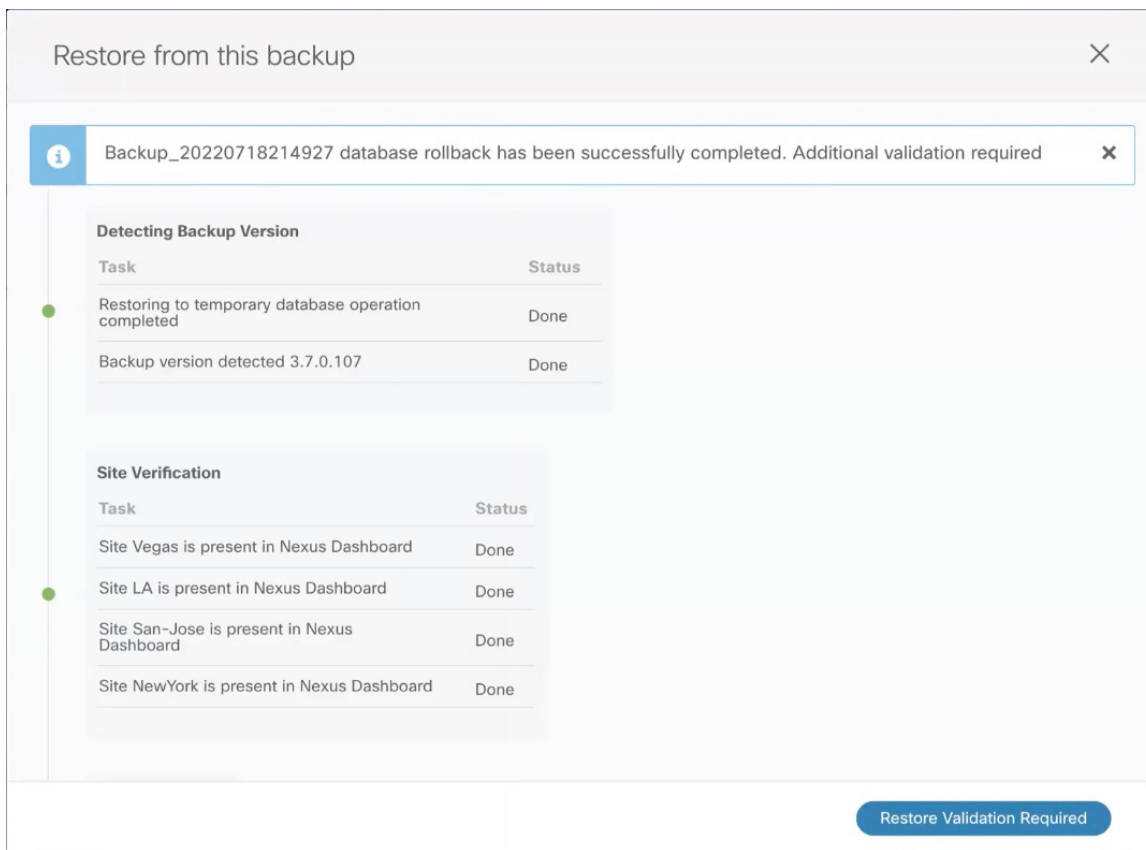

- d) In the **Restore Validation Report** window, click **Restore and Continue** to proceed.

Note that if validation finds any errors, the **Restore and Continue** button will be disabled and you will need to resolve any issues with your existing configuration as described in [Validate Existing Configuration and Create Backup, on page 79](#) section and then restart the restore workflow.

The validation report generated in the previous step provides a summary of template and policy changes that will be performed during the final upgrade stage and includes the following:

- Implicit template stretching – if one or more objects are implicitly stretched, the upgrade process will create new explicitly-stretched templates and move the objects into those templates.

For example, if you have a template ( $t_1$ ) that contains `vrf1` and is associated to `site1` and another template ( $t_2$ ) that contains a BD that references `vrf1` but is associated to two sites (`site1` and `site2`), then `vrf1` will be implicitly stretched between the two sites.

This is no longer allowed starting with release 4.0(1) and the VRF must be explicitly stretched to both sites. In such cases during the upgrade, the VRF will be either moved to a different template which will be explicitly stretched between both sites or the original template will be associated with both sites, depending on whether the other policies in that template require stretching as well.

Any templates that are created in this case will be named `UpgradeTemplate%d`, where `%d` is an incrementing number starting with 1 to ensure that all newly added templates are unique.

- Global policy migration – all global tenant policies (such as DHCP relay or route maps) and fabric policies (such as QoS) will be moved into the new tenant and fabric policy templates that have been added in release 4.0(1).

This is the stage of the upgrade where the schemas and the templates present in the backup are imported and recreated in your NDO configuration database according to the 4.0(1) best practices. These schemas and templates are then posted to the local NDO database as if it were a greenfield schema/template creation. Then the newly saved templates are deployed in the correct order that conforms to the 4.0(1) deployment requirements.

**Note** The template deployment in this step uses a “local deploy” option to calculate the deployment plan and update the database, but does not send any configuration payload to the sites' controllers. After all templates are saved, you will need to verify that all objects were imported and re-created successfully and then check for any configuration drifts between the newly created configuration and what is actually deployed in the fabrics as described in the next section.

**Step 6** Verify that backup was restored successfully and all objects and configurations are present.

- a) In the **Sites** page, verify that all sites are listed as *Managed*.
- b) In the **Tenants** and **Schemas** pages, confirm that all tenants and schemas from your previous Nexus Dashboard Orchestrator cluster are present.
- c) Navigate to **Infrastructure > Site Connectivity** and confirm that intersite connectivity is intact.

In the main pane, click **Show Connectivity Status** next to each site and verify that the existing tunnels are up and connectivity was not interrupted.

- d) In the main pane, click **Configure** to open **Fabric Connectivity Infra** screen and verify **External Subnet Pool** addresses.


You can view the external subnet pools by selecting **General Settings > IPsec Tunnel Subnet Pools** tab of the **Fabric Connectivity Infra** screen and verify that the External Subnet Pools previously configured in Cloud Network Controller have been imported from the cloud sites.

These subnets are used to address the IPsec tunnel interfaces and loopbacks of the Cloud Routers used for on-premises connectivity and had to be configured directly in the Cloud Network Controller in earlier Nexus Dashboard Orchestrator releases.

---

## Resolve Configuration Drifts

In some cases you may run into a situation where the configuration actually deployed in the site's controller is different from the configuration defined in the Nexus Dashboard Orchestrator. These configuration discrepancies are referred to as **Configuration Drifts** and are indicated by an *Out of Sync* warning next to the site name in the template view page as shown in the following figure:

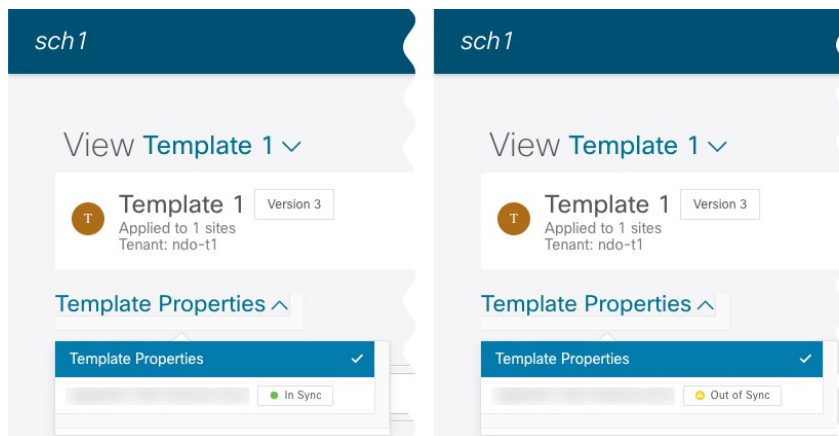

After upgrading your Nexus Dashboard Orchestrator and restoring the previous configuration backup, we recommend that you check for and resolve any configuration drifts as described in this section.



**Note** Deploying any templates before resolving configuration drifts would push the configuration defined in the Orchestrator and overwrite the values defined in the fabrics' controllers.

**Step 1** In your Nexus Dashboard Orchestrator, navigate to **Application Management > Schemas**.

**Step 2** Select the first schema and check its templates for configuration drifts.

You will repeat the following steps for every schema and template in your deployment

You can check for configuration drifts in one of the following two ways:

- Check the template deployment status icon for each site to which the template is assigned.
- Select the template and click **Deploy to sites** to bring up the configuration comparison screen to check which objects contain configuration drifts.

**Step 3** If the template contains a configuration drift, resolve the conflicts.

For more information about configuration drifts, check the "Configuration Drifts" chapter in the [Cisco Nexus Dashboard Orchestrator Configuration Guide for ACI Fabrics](#).


a) Close the template deployment dialog to return to the Schema view.

Deploying any templates at this point would push the values in the Orchestrator database and overwrite any existing settings in the fabrics.

b) From the template's **Actions** menu, select **Reconcile Drift**.


The **Drift Reconciliation** wizard opens.

c) In the **Drift Reconciliation** screen, compare the template-level configurations for each site and choose the one you want.

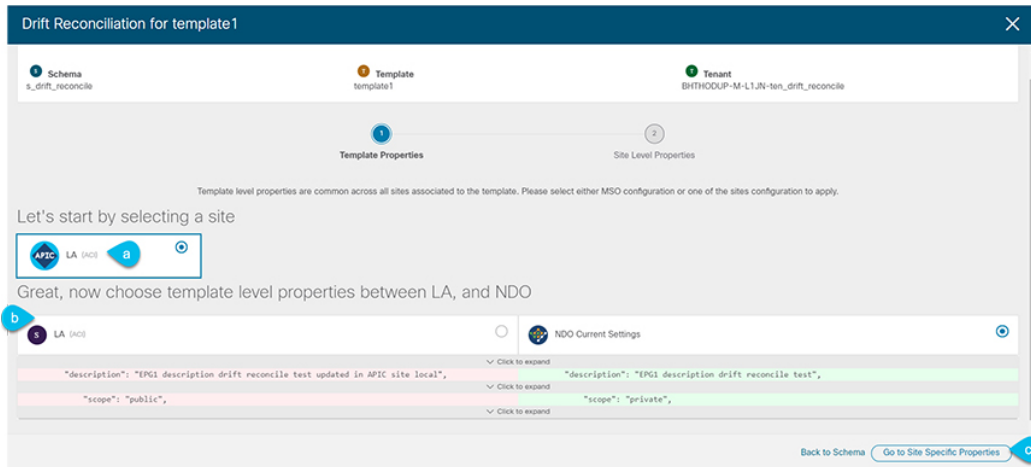

Template-level properties are common across all sites associated to the template. You can compare the template level properties defined on Nexus Dashboard Orchestrator with the configuration rendered in each site and decide what should become the new configuration in the Nexus Dashboard Orchestrator template. Selecting the site configuration will modify those properties in the existing Nexus Dashboard Orchestrator template, whereas selecting the Nexus Dashboard Orchestrator configuration will keep the existing Nexus Dashboard Orchestrator template settings as is

- d) Click **Go to Site Specific Properties** to switch to site-level configuration.

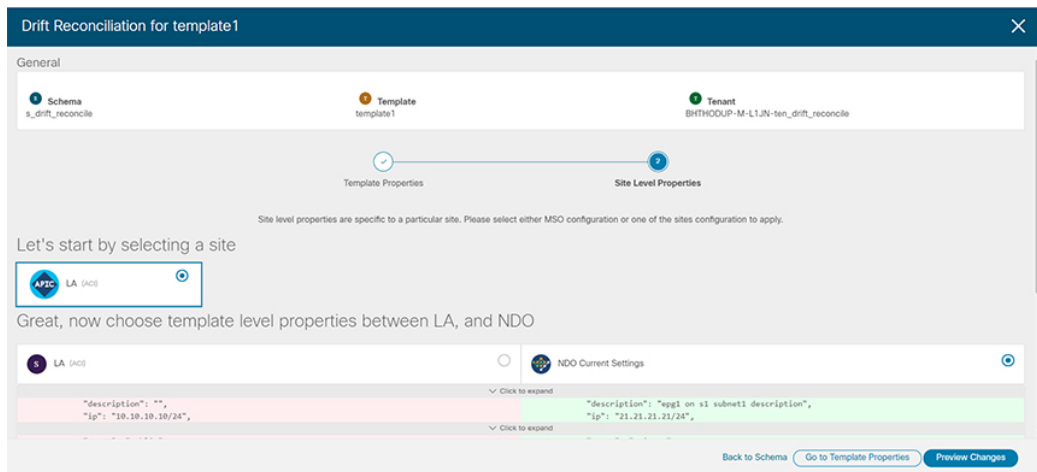

You can choose a site to compare that specific site's configuration. Unlike template-level configurations, you can choose either the Nexus Dashboard Orchestrator-defined or actual existing configurations for each site individually to be retained as the template's site-local properties for that site.

Even though in most scenarios you will make the same choice for both template-level and site-level configuration, the drift reconciliation wizard allows you to choose the configuration defined in the site's controller at the "Template Properties" level and the configuration defined in Nexus Dashboard Orchestrator at the "Site Local Properties" level or vice versa.

- e) Click **Preview Changes** to verify your choices.

The preview will display full template configuration adjusted based on the choices picked in the **Drift Reconciliation** wizard. You can then click **Deploy to sites** to deploy the configuration and reconcile the drift for that template.

**Step 4** Repeat the above steps for every schema and template in your Nexus Dashboard Orchestrator.

**Step 5** Check audit logs to verify that all templates have been re-deployed.

You can view the audit logs in the **Operations** tab.

**Audit Logs** page and confirm that all templates show as `Redeployed` to ensure that full re-deployment successfully completed.

---