



## Configuring IP ACLs

---

This chapter describes how to configure IP access control lists (ACLs) on Cisco NX-OS devices.

Unless otherwise specified, the term IP ACL refers to IPv4 ACLs.

This chapter includes the following sections:

- [About ACLs, on page 1](#)
- [Prerequisites for IP ACLs, on page 4](#)
- [Guidelines and Limitations for IP ACLs, on page 5](#)
- [Default Settings for IP ACLs, on page 6](#)
- [Configuring IP ACLs, on page 6](#)
- [Verifying the IP ACL Configuration, on page 11](#)
- [Configuration Examples for IP ACLs, on page 12](#)
- [Verifying the Object-Group Configuration, on page 12](#)
- [Verifying the Time-Range Configuration, on page 13](#)

## About ACLs

An ACL is an ordered set of rules that you can use to filter traffic. Each rule specifies a set of conditions that a packet must satisfy to match the rule. When the device determines that an ACL applies to a packet, it tests the packet against the conditions of all rules. The first matching rule determines whether the packet is permitted or denied. If there is no match, the device applies the applicable implicit rule. The device continues processing packets that are permitted and drops packets that are denied.

You can use ACLs to protect networks and specific hosts from unnecessary or unwanted traffic. For example, you could use ACLs to disallow HTTP traffic from a high-security network to the Internet. You could also use ACLs to allow HTTP traffic but only to specific sites, using the IP address of the site to identify it in an IP ACL.

## ACL Types and Applications

The device supports the following types of ACLs for security traffic filtering:

### IPv4 ACLs

The Cisco Nexus® 3550-T device applies IPv4 ACLs only to IPv4 traffic.

IP has the following types of applications:

**Router ACL**

Filters Layer 3 traffic

**VTY ACL**

Filters virtual teletype (VTY) traffic



**Note** Only the ingress policy can be configured in Cisco Nexus® 3550-T switches to filter the ingress traffic based on conditions specified in the ACL on the following interfaces:

- Physical Layer 3 interfaces
- Layer 3 Ethernet port-channel interfaces
- Switch Virtual Interfaces (SVI)

This table summarizes the applications for security ACLs.

**Table 1: Security ACL Applications**

Application	Supported Interfaces	Types of ACLs Supported
Router ACL	<ul style="list-style-type: none"> <li>• VLAN interfaces</li> <li>• Physical Layer 3 interfaces</li> <li>• Layer 3 Ethernet port-channel interfaces</li> <li>• Management interfaces</li> </ul>	<ul style="list-style-type: none"> <li>• IPv4 ACLs</li> </ul>

## Order of ACL Application

When the device processes a packet, it determines the forwarding path of the packet. The path determines which ACLs that the device applies to the traffic. The device only applies the Ingress router ACL.

If the packet is bridged within the ingress VLAN, the device does not apply router ACLs.

## About Rules

Rules are what you create, modify, and remove when you configure how an ACL filters network traffic. Rules appear in the running configuration. When you apply an ACL to an interface or change a rule within an ACL that is already applied to an interface, the supervisor module creates ACL entries from the rules in the running configuration and sends those ACL entries to the applicable I/O module. Depending upon how you configure the ACL, there may be more ACL entries than rules, especially if you implement policy-based ACLs by using object groups when you configure rules.

You can create rules in access-list configuration mode by using the **permit** or **deny** command. The device allows traffic that matches the criteria in a permit rule and blocks traffic that matches the criteria in a deny rule. You have many options for configuring the criteria that traffic must meet in order to match the rule.

This section describes some of the options that you can use when you configure a rule.

## Protocols for IP ACLs

IPv4 allows you to identify traffic by protocol. For your convenience, you can specify some protocols by name. For example, in an IPv4, you can specify ICMP by name.

You can specify any protocol by number.

In IPv4, you can specify protocols by the integer that represents the Internet protocol number.

## Source and Destination

In each rule, you specify the source and the destination of the traffic that matches the rule. You can specify both the source and destination as a specific host, a network or group of hosts, or any host.

## Implicit Rules for IP ACL

IP ACLs have implicit rules, which means that although these rules do not appear in the running configuration, the device applies them to traffic when no other rules in an ACL match.

All IPv4 ACLs include the following implicit rule:

```
deny ip any any
```

This implicit rule ensures that the device denies unmatched IP traffic.

This implicit rule ensures that the device denies the unmatched traffic, regardless of the protocol specified in the Layer 2 header of the traffic.

## Additional Filtering Options

You can identify traffic by using additional options. These options differ by ACL type. The following list includes most but not all additional filtering options:

- IPv4 ACLs support the following additional filtering options:
  - Layer 4 protocol
  - TCP and UDP ports
  - ICMP types and codes
  - IGMP types

## Sequence Numbers

The device supports sequence numbers for rules. Every rule that you enter receives a sequence number, either assigned by you or assigned automatically by the device. Sequence numbers simplify the following ACL tasks:

### Adding new rules between existing rules

By specifying the sequence number, you specify where in the ACL a new rule should be positioned. For example, if you need to insert a rule between rules numbered 100 and 110, you could assign a sequence number of 105 to the new rule.

### Removing a rule

Without using a sequence number, removing a rule requires that you enter the whole rule, as follows:

```
switch(config-acl)# no permit tcp 10.0.0.0/8 any
```

However, if the same rule had a sequence number of 101, removing the rule requires only the following command:

```
switch(config-acl)# no 101
```

### Moving a rule

With sequence numbers, if you need to move a rule to a different position within an ACL, you can add a second instance of the rule using the sequence number that positions it correctly, and then you can remove the original instance of the rule. This action allows you to move the rule without disrupting traffic.

If you enter a rule without a sequence number, the device adds the rule to the end of the ACL and assigns a sequence number that is 10 greater than the sequence number of the preceding rule to the rule. For example, if the last rule in an ACL has a sequence number of 225 and you add a rule without a sequence number, the device assigns the sequence number 235 to the new rule.

In addition, Cisco NX-OS allows you to reassign sequence numbers to rules in an ACL. Resequencing is useful when an ACL has rules numbered contiguously, such as 100 and 101, and you need to insert one or more rules between those rules.

## Logical Operators and Logical Operation Units

IP ACL rules for TCP and UDP traffic can use logical operators to filter traffic based on port numbers. Cisco NX-OS supports logical operators in only the ingress direction.

The device stores operator-operand couples in registers called logical operator units (LOUs). The LOU usage for each type of operator is as follows:

<b>eq</b>	Is never stored in an LOU
<b>gt</b>	Uses 1 LOU
<b>lt</b>	Uses 1 LOU
<b>range</b>	Uses 1 LOU

## Session Manager Support for IP ACLs

Session Manager supports the configuration of IP ACLs. This feature allows you to verify ACL configuration and confirm that the resources required by the configuration are available prior to committing them to the running configuration.

## Prerequisites for IP ACLs

IP ACLs have the following prerequisites:

- You must be familiar with IP addressing and protocols to configure IP ACLs.
- You must be familiar with the interface types that you want to configure with ACLs.

## Guidelines and Limitations for IP ACLs

IP ACLs have the following configuration guidelines and limitations:

- We recommend that you perform ACL configuration using the Session Manager. This feature allows you to verify ACL configuration and confirm that the resources that are required by the configuration are available before committing them to the running configuration. This recommendation is especially useful for ACLs that include more than 1000 rules.
- Duplicate ACL entries with different sequence numbers are allowed in the configuration. However, these duplicate entries are not programmed in the hardware access-list.
- Only 62 unique ACLs can be configured. Each ACL takes one label. If the same ACL is configured on multiple interfaces, the same label is shared. If each ACL has unique entries, the ACL labels are not shared, and the label limit is 62.
- Usually, ACL processing for IP packets occurs on the I/O modules, which use hardware that accelerates ACL processing. In some circumstances, processing occurs on the supervisor module, which can result in slower ACL processing, especially during processing that involves an ACL with many rules. Management interface traffic is always processed on the supervisor module. If IP packets in any of the following categories are exiting a Layer 3 interface, they are sent to the supervisor module for processing:
  - IPv4 packets that have IP options (other IP packet header fields following the destination address field).

Rate limiters prevent redirected packets from overwhelming the supervisor module.

- The VTY ACL feature restricts all traffic for all VTY lines. You cannot specify different traffic restrictions for different VTY lines. Any router ACL can be configured as a VTY ACL.
- An egress VTY ACL (an IP ACL applied to the VTY line in the outbound direction) prevents the switch from copying files using a file transfer protocol (TFTP, FTP, SCP, SFTP, etc.) unless the file transfer protocol is explicitly permitted within the egress VTY ACL.
- When you apply an undefined ACL to an interface, the system treats the ACL as empty and permits all traffic.
- ACL logging is not supported.
- The total number of IPv4 ACL flows is limited to a user-defined maximum value to prevent DoS attacks. If this limit is reached, no new logs are created until an existing flow finishes.
- A router ACL applied on a Layer 3 physical or logical interface does not match multicast traffic. If multicast traffic must be blocked, use a PACL instead.
- Only ingress RACLs are supported on Layer 3 physical interfaces and SVIs.

## Default Settings for IP ACLs

This table lists the default settings for IP ACL parameters.

**Table 2: Default IP ACL Parameters**

Parameters	Default
IP ACLs	No IP ACLs exist by default
IP ACL entries	1024
ACL rules	Implicit rules apply to all ACLs

## Configuring IP ACLs

### Creating an IP ACL

You can create an IPv4 ACL on the device and add rules to it.

#### Before you begin

We recommend that you perform the ACL configuration using the Session Manager. This feature allows you to verify the ACL configuration and confirm that the resources that are required by the configuration are available before committing them to the running configuration. This feature is especially useful for ACLs that include more than about 1000 rules.

#### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.  <b>Note</b> When ACL is enabled only TCP and UDP packets are handled in the Cisco Nexus® 3550-T hardware.
<b>Step 2</b>	Enter the following commands: <b>ip access-list</b> <i>name</i>  <b>Example:</b> <pre>switch(config)# ip access-list acl-01 switch(config-acl)#</pre>	Creates the IP ACL and enters IP ACL configuration mode. The <i>name</i> argument can be up to 64 characters.
<b>Step 3</b>	<pre>[sequence-number] {permit   deny} protocol {source-ip-prefix   source-ip-mask} {destination-ip-prefix   destination-ip-mask}</pre>	Creates a rule in the IP ACL. You can create many rules. The <i>sequence-number</i> argument

	Command or Action	Purpose
		<p>can be a whole number between 1 and 4294967295.</p> <p>The <b>permit</b> and <b>deny</b> commands support many ways of identifying traffic.</p> <p>For IPv4 access lists, you can specify a source and destination IPv4 prefix, which matches only on the first contiguous bits, or you can specify a source and destination IPv4 wildcard mask, which matches on any bit in the address.</p>
<b>Step 4</b>	<p>(Optional) Enter the following commands:</p> <p><b>show ip access-lists</b> <i>name</i></p> <p><b>Example:</b></p> <pre>switch(config-acl)# show ip access-lists acl-01</pre>	Displays the IP ACL configuration.
<b>Step 5</b>	<p>(Optional) <b>copy running-config startup-config</b></p> <p><b>Example:</b></p> <pre>switch(config-acl)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Changing an IP ACL

You can add and remove rules in an existing IPv4 ACL, but you cannot change existing rules. Instead, to change a rule, you can remove it and recreate it with the desired changes.

If you need to add more rules between existing rules than the current sequence numbering allows, you can use the **resequence** command to reassign sequence numbers.

### Before you begin

We recommend that you perform ACL configuration using the Session Manager. This feature allows you to verify ACL configuration and confirm that the resources required by the configuration are available prior to committing them to the running configuration. This feature is especially useful for ACLs that include more than about 1000 rules.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<p><b>configure terminal</b></p> <p><b>Example:</b></p> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	Enter the following commands: <b>ip access-list</b> <i>name</i>  <b>Example:</b> <pre>switch(config)# ip access-list acl-01 switch(config-acl)#</pre>	Enters IP ACL configuration mode for the ACL that you specify by name.
<b>Step 3</b>	(Optional) [ <i>sequence-number</i> ] <b>{permit   deny}</b> <i>protocol source destination</i>  <b>Example:</b> <pre>switch(config-acl)# 100 permit ip 192.168.2.0/24 any</pre>	Creates a rule in the IP ACL. Using a sequence number allows you to specify a position for the rule in the ACL. Without a sequence number, the rule is added to the end of the rules. The <i>sequence-number</i> argument can be a whole number between 1 and 4294967295.  The <b>permit</b> and <b>deny</b> commands support many ways of identifying traffic.
<b>Step 4</b>	(Optional) <b>no</b> [ <i>sequence-number</i>   <b>{permit   deny}</b> ] <i>protocol source destination</i>  <b>Example:</b> <pre>switch(config-acl)# no 80</pre>	Removes the rule that you specified from the IP ACL.  The <b>permit</b> and <b>deny</b> commands support many ways of identifying traffic.
<b>Step 5</b>	(Optional) Enter the following commands: <b>show ip access-lists</b> <i>name</i>  <b>Example:</b> <pre>switch(config-acl)# show ip access-lists acl-01</pre>	Displays the IP ACL configuration.
<b>Step 6</b>	(Optional) <b>copy running-config</b> <b>startup-config</b>  <b>Example:</b> <pre>switch(config-acl)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Changing Sequence Numbers in an IP ACL

You can change all the sequence numbers assigned to the rules in an IP ACL.

### Before you begin

We recommend that you perform ACL configuration using the Session Manager. This feature allows you to verify ACL configuration and confirm that the resources required by the configuration are available prior to committing them to the running configuration. This feature is especially useful for ACLs that include more than about 1000 rules.

**Procedure**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>resequence {ip   ipv4} access-list name starting-sequence-number increment</b>  <b>Example:</b> <pre>switch(config)# resequence access-list ip acl-01 100 10</pre>	Assigns sequence numbers to the rules contained in the ACL, where the first rule receives the starting sequence number that you specify. Each subsequent rule receives a number larger than the preceding rule. The difference in numbers is determined by the increment that you specify. The <i>starting-sequence-number</i> argument and the <i>increment</i> argument can be a whole number between 1 and 4294967295.
<b>Step 3</b>	(Optional) <b>show ip access-lists name</b>  <b>Example:</b> <pre>switch(config)# show ip access-lists acl-01</pre>	Displays the IP ACL configuration.
<b>Step 4</b>	(Optional) <b>copy running-config startup-config</b>  <b>Example:</b> <pre>switch(config)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Removing an IP ACL

You can remove an IP ACL from the device.

**Before you begin**

Ensure that you know whether the ACL is applied to an interface. The device allows you to remove ACLs that are currently applied. Removing an ACL does not affect the configuration of interfaces where you have applied the ACL. Instead, the device considers the removed ACL to be empty. Use the **show ip access-lists** command with the summary keyword to find the interfaces that an IP ACL is configured on.

**Procedure**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b>	Enters global configuration mode.

	Command or Action	Purpose
	switch# configure terminal switch(config)#	
<b>Step 2</b>	Enter the following commands: <b>no ip access-list name</b>  <b>Example:</b> switch(config)# no ip access-list acl-01	Removes the IP ACL that you specified by name from the running configuration.
<b>Step 3</b>	(Optional) Enter the following commands: <b>show ip access-lists name summary</b>  <b>Example:</b> switch(config)# show ip access-lists acl-01 summary	Displays the IP ACL configuration. If the ACL remains applied to an interface, the command lists the interfaces.
<b>Step 4</b>	(Optional) <b>copy running-config startup-config</b>  <b>Example:</b> switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration.

## Applying an IP ACL as a Router ACL

You can apply an IPv4 ACL to any of the following types of interfaces:

- Physical Layer 3 interfaces and subinterfaces
- Layer 3 Ethernet port-channel interfaces
- VLAN interfaces
- Management interfaces

ACLs applied to these interface types are considered router ACLs.

### Before you begin

Ensure that the ACL you want to apply exists and that it is configured to filter traffic in the manner that you need for this application.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	Enter one of the following commands: <ul style="list-style-type: none"> <li>• <b>interface ethernet</b> <i>slot/port</i> [. <i>number</i>]</li> <li>• <b>interface port-channel</b> <i>channel-number</i></li> <li>• <b>interface vlan</b> <i>vlan-id</i></li> <li>• <b>interface mgmt</b> <i>port</i></li> </ul> <b>Example:</b> <pre>switch(config)# interface ethernet 2/3 switch(config-if)#</pre>	Enters configuration mode for the interface type that you specified.
<b>Step 3</b>	Enter the following commands: <b>ip access-group</b> <i>access-list</i> { <b>in</b>   <b>out</b> } <b>Example:</b> <pre>switch(config-if)# ip access-group acl1 in</pre>	Applies an IPv4 ACL to the Layer 3 interface for traffic flowing in the direction specified. You can apply one router ACL per direction.
<b>Step 4</b>	(Optional) <b>show running-config aclmgr</b> <b>Example:</b> <pre>switch(config-if)# show running-config aclmgr</pre>	Displays the ACL configuration.
<b>Step 5</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-if)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Verifying the IP ACL Configuration

To display IP ACL configuration information, perform one of the following tasks.

Command	Purpose
<b>show ip access-lists</b>	Displays the IPv4 ACL configuration.

Command	Purpose
<code>show running-config aclmgr [all]</code>	<p>Displays the ACL running configuration, including the IP ACL configuration and the interfaces to which IP ACLs are applied.</p> <p><b>Note</b> This command displays the user-configured ACLs in the running configuration. The <b>all</b> option displays both the default (CoPP-configured) and user-configured ACLs in the running configuration.</p>
<code>show startup-config aclmgr [all]</code>	<p>Displays the ACL startup configuration.</p> <p><b>Note</b> This command displays the user-configured ACLs in the startup configuration. The <b>all</b> option displays both the default and user-configured ACLs in the startup configuration.</p>

## Configuration Examples for IP ACLs

The following example shows how to create an IPv4 ACL named `acl-01` and apply it as a port ACL to Ethernet interface 2/1, which is a Layer 2 interface:

```
ip access-list acl-01
  permit ip 192.168.2.0/24 any
interface ethernet 2/1
  ip port access-group acl-01 in
```

The following example shows how to create a VTY ACL named `single-source` and apply it on input IP traffic over the VTY line. This ACL allows all TCP traffic through and drops all other IP traffic:

```
ip access-list single-source
  permit tcp 192.168.7.5/24 any
  exit
line vty
  ip access-class single-source in
show ip access-lists
```

## Verifying the Object-Group Configuration

To display object-group configuration information, enter one of the following commands:

Command	Purpose
<b>show object-group</b>	Displays the object-group configuration.
<b>show {ip } access-lists <i>name</i> [expanded]</b>	Displays expanded statistics for the ACL configuration.
<b>show running-config aclmgr</b>	Displays the ACL configuration, including object groups.

## Verifying the Time-Range Configuration

To display time-range configuration information, perform one of the following tasks.

Command	Purpose
<b>show time-range</b>	Displays the time-range configuration.
<b>show running-config aclmgr</b>	Displays ACL configuration, including all time ranges.

