

Upgrading the Cisco NX-OS Software

This section contains the following details:

• Upgrading to Cisco NX-OS Release 10.6(x), on page 1

Upgrading to Cisco NX-OS Release 10.6(x)

You can upgrade the Cisco Nexus 3550-T switch to Cisco NX-OS Release 10.6(x) from:

Exablaze ExaOS



Note

If you are on ExaOS, refer to Cisco Nexus 3550-T NX-OS Software Installation and Upgrade Guide, Release 10.2(x) for instructions on upgrading to 10.2.3v from ExaOS, and then follow the instructions in the Upgrading from Cisco NX-OS Release 10.2(3v) to Cisco NX-OS Release 10.6(x), on page 1 section to upgrade to 10.6(x).

• Cisco NX-OS Release 10.2(3v)

Upgrading from Cisco NX-OS Release 10.2(3v) to Cisco NX-OS Release 10.6(x)

Use this procedure to upgrade the Cisco 3550-T from NX-OS release 10.2(3v) to NX-OS release 10.6(x).

Before you begin

You need to be running the NX-OS release 10.2(3v).

Procedure

Run the **boot nxos** command, as shown below.

Example

for 10.6(1)F

```
\label{lem:switch} $$ switch(config) $\#$ boot nxos bootflash:nxos64-msll.10.6.1.F.bin switch(config) $\#$ copy $r$ s switch(config) $\#$ reload
```

You can get the NX-OS release 10.6(x) image from the Software Downloads tab on Cisco.com.

Note

Ensure to set the NX-OS boot variable to the correct image, and save the configuration before reloading.