



F Commands

- [fabric-binding activate vsan, on page 7](#)
- [fabric-binding database copy vsan, on page 8](#)
- [fabric-binding database diff active vsan, on page 9](#)
- [fabric-binding database diff config vsan, on page 10](#)
- [fabric-binding database vsan, on page 11](#)
- [fabric-binding fip enable, on page 12](#)
- [fabric-binding restart, on page 13](#)
- [fabric-soo, on page 14](#)
- [fabric database auto-pull dci node-id, on page 15](#)
- [fabric database auto-pull dci vrf node-id, on page 16](#)
- [fabric database inherit-profile-map, on page 17](#)
- [fabric database mobility-domain, on page 18](#)
- [fabric database override-profile, on page 19](#)
- [fabric database override-vrf-profile, on page 20](#)
- [fabric database profile-map, on page 21](#)
- [fabric database profile-map global, on page 22](#)
- [fabric database refresh dot1q, on page 23](#)
- [fabric database refresh vni, on page 24](#)
- [fabric database static-host, on page 25](#)
- [fabric database type bl-dci, on page 26](#)
- [fabric database type cabling, on page 27](#)
- [fabric database type host, on page 28](#)
- [fabric database type network, on page 29](#)
- [fabric database type partition, on page 30](#)
- [fabric database type profile, on page 31](#)
- [fabric forwarding admin-distance, on page 32](#)
- [fabric forwarding anycast-gateway-mac, on page 33](#)
- [fabric forwarding dup-host-ip-addr-detection, on page 34](#)
- [fabric forwarding dup-host-recovery-timer recover-count, on page 35](#)
- [fabric forwarding limit-vlan-mac, on page 36](#)
- [fabric forwarding mode anycast-gateway, on page 37](#)
- [fabric forwarding mode anycast-gateway hybrid, on page 38](#)
- [fabric forwarding selective-host-probe, on page 39](#)

- [fast-convergence](#), on page 40
- [fast-external-fallover](#), on page 41
- [fast-flood enable](#), on page 42
- [fast-flood interval](#), on page 43
- [fast-reload network-os](#), on page 44
- [fcalias clone vsan](#), on page 45
- [fcalias name vsan](#), on page 46
- [fcalias rename vsan](#), on page 47
- [fcdomain abort vsan](#), on page 48
- [fcdomain allowed vsan](#), on page 49
- [fcdomain commit vsan](#), on page 50
- [fcdomain contiguous-allocation vsan](#), on page 51
- [fcdomain distribute](#), on page 52
- [fcdomain domain](#), on page 53
- [fcdomain fabric-name vsan](#), on page 54
- [fcdomain fcid database](#), on page 55
- [fcdomain fcid persistent vsan](#), on page 56
- [fcdomain free-fcid](#), on page 57
- [fcdomain optimize](#), on page 58
- [fcdomain priority vsan](#), on page 59
- [fcdomain rcf-reject vsan](#), on page 60
- [fcdroplateny network](#), on page 61
- [fcid-allocation area company-id](#), on page 62
- [fcinterop fcid-allocation](#), on page 63
- [fcinterop loop-monitor](#), on page 64
- [fcoe](#), on page 65
- [fcoe](#), on page 66
- [fcoe enable-fex](#), on page 67
- [fcoe fcf-priority](#), on page 68
- [fcoe fcmmap](#), on page 69
- [fcoe fka-adv-period](#), on page 70
- [fcoe veloopback](#), on page 71
- [fcoe vsan](#), on page 72
- [fcping](#), on page 73
- [fcs plat-check-global vsan](#), on page 75
- [fcs register](#), on page 76
- [fcs virtual-device-add](#), on page 77
- [fctimer D_S_TOV](#), on page 78
- [fctimer E_D_TOV](#), on page 79
- [fctimer R_A_TOV](#), on page 80
- [fctimer abort](#), on page 81
- [fctimer commit](#), on page 82
- [fctimer distribute](#), on page 83
- [fctrace](#), on page 84
- [fctrace module](#), on page 85
- [fdmi suppress-updates vsan](#), on page 86

- [feature-set](#), on page 87
- [feature-set](#), on page 88
- [feature](#), on page 89
- [feature analytics](#), on page 90
- [feature bash-shell](#), on page 91
- [feature bfd](#), on page 92
- [feature bgp](#), on page 93
- [feature container-tracker](#), on page 94
- [feature dhcp](#), on page 95
- [feature dot1x](#), on page 96
- [feature eigrp](#), on page 97
- [feature ebr](#), on page 98
- [feature evb](#), on page 99
- [feature evmed](#), on page 100
- [feature fabric forwarding](#), on page 101
- [feature flexlink](#), on page 102
- [feature fport-channel-trunk](#), on page 103
- [feature frequency-synchronization](#), on page 104
- [feature grpc](#), on page 105
- [feature hardware-telemetry](#), on page 106
- [feature hsrp](#), on page 107
- [feature imp](#), on page 108
- [feature interface-vlan](#), on page 109
- [feature isis](#), on page 110
- [feature itd](#), on page 111
- [feature lacp](#), on page 112
- [feature ldap](#), on page 113
- [feature lldp](#), on page 114
- [feature macsec](#), on page 115
- [feature mpls evpn](#), on page 116
- [feature mpls l3vpn](#), on page 117
- [feature mpls oam](#), on page 118
- [feature mpls segment-routing](#), on page 119
- [feature mpls segment-routing traffic-engineering](#), on page 120
- [feature mpls static](#), on page 121
- [feature msdp](#), on page 122
- [feature mvpn](#), on page 123
- [feature nat](#), on page 124
- [feature nbm](#), on page 125
- [feature netconf](#), on page 126
- [feature netflow](#), on page 127
- [feature ngmvpn](#), on page 128
- [feature ngoam](#), on page 129
- [feature ngoam](#), on page 130
- [feature npiv](#), on page 131
- [feature npiv](#), on page 132

- [feature ntp](#), on page 133
- [feature nv overlay](#), on page 134
- [feature nxapi](#), on page 135
- [feature nxsdk](#), on page 136
- [feature ofm](#), on page 137
- [feature openflow](#), on page 138
- [feature ospf](#), on page 139
- [feature ospfv3](#), on page 140
- [feature password encryption aes](#), on page 141
- [feature pbr](#), on page 142
- [feature pim](#), on page 143
- [feature pim6](#), on page 144
- [feature pnp](#), on page 145
- [feature poap](#), on page 146
- [feature poe](#), on page 147
- [feature pong](#), on page 148
- [feature port-security](#), on page 149
- [feature private-vlan](#), on page 150
- [feature ptp](#), on page 151
- [feature restconf](#), on page 152
- [feature rip](#), on page 153
- [feature scheduler](#), on page 154
- [feature scp-server](#), on page 155
- [feature sflow](#), on page 156
- [feature sftp-server](#), on page 157
- [feature signature-verification](#), on page 158
- [feature sla responder](#), on page 159
- [feature sla sender](#), on page 160
- [feature sla twamp-server](#), on page 161
- [feature srv6](#), on page 162
- [feature ssh](#), on page 163
- [feature tacacs](#), on page 164
- [feature tap-aggregation](#), on page 165
- [feature telemetry](#), on page 166
- [feature telnet](#), on page 167
- [feature tunnel-encryption](#), on page 168
- [feature tunnel](#), on page 169
- [feature udd](#), on page 170
- [feature vmtracker](#), on page 171
- [feature vn-segment-vlan-based](#), on page 172
- [feature vpc](#), on page 173
- [feature vrrp](#), on page 174
- [feature vrrpv3](#), on page 175
- [feature vtp](#), on page 176
- [fec](#), on page 177
- [fhrp delay minimum](#), on page 178

- fhrp delay reload, on page 179
- filter, on page 180
- filter, on page 181
- filter access-group, on page 182
- filter ip, on page 183
- filter ip access-list, on page 184
- filter ip access-list, on page 185
- filter ip access-list, on page 186
- filter ipv6 access-group, on page 187
- filter ipv6 access-list, on page 188
- filter ipv6 access-list, on page 189
- filter ipv6 access-list, on page 190
- filter out, on page 191
- filter tx control-packets, on page 192
- filter vlan, on page 193
- filter vlan include-untagged, on page 194
- find, on page 195
- fips mode enable, on page 196
- flow-count, on page 197
- flow-count, on page 198
- flow collect tunnel-header, on page 199
- flow collect tunnel-header, on page 200
- flow event, on page 201
- flow exporter, on page 202
- flow exporter, on page 203
- flow filter, on page 204
- flow filter, on page 205
- flow filter, on page 206
- flow filter, on page 207
- flow monitor, on page 208
- flow monitor, on page 209
- flow policy, on page 210
- flow profile, on page 211
- flow record, on page 212
- flow record, on page 213
- flow rtp history, on page 214
- flow rtp timeout, on page 215
- flow system config, on page 216
- flow terminate interface, on page 217
- flow timeout, on page 218
- flow timeout, on page 219
- flowcontrol hardware, on page 220
- flowcontrol receive, on page 221
- flush-routes, on page 222
- flush-routes, on page 223
- flush-routes, on page 224

- flush-routes, on page 225
- flush-routes, on page 226
- flush-routes, on page 227
- follow, on page 228
- format, on page 229
- format bootflash, on page 230
- format bootflash check-filesystem, on page 231
- format usb1, on page 232
- forward, on page 233
- fragments, on page 234
- frequency, on page 235
- frequency milliseconds, on page 236
- frequency synchronization, on page 237
- frequency synchronization, on page 238
- frequency synchronization, on page 239
- from to, on page 240
- from to, on page 241
- fspf, on page 242
- fspf config vsan, on page 243
- fspf enable vsan, on page 244
- fsync clock-identity, on page 245
- fsync esmc peer receive timeout, on page 246
- fsync quality itu-t option, on page 247
- fsync transmit dnu lag-members, on page 248
- fte event, on page 249
- fte exporter, on page 250
- fte monitor, on page 251
- fte record, on page 252
- fte system monitor, on page 253
- ftrace, on page 254

fabric-binding activate vsan

[no] fabric-binding activate vsan <i0> [[force] [no-auto-learn]]

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric-binding	Fabric Binding configuration
activate	Activate Configured Fabric Bindings
vsan	VSAN id for fabric bindings
<i>i0</i>	VSAN range
force	(Optional) Activate even if it is an erroneous activation
no-auto-learn	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED

Command Mode

- /exec/configure

fabric-binding database copy vsan

fabric-binding database copy vsan <i0>

Syntax Description

fabric-binding	Fabric binding
database	Fabric binding database
copy	Copy active to config database
vsan	VSAN Id
<i>i0</i>	VSAN range

Command Mode

- /exec

fabric-binding database diff active vsan

fabric-binding database diff active vsan <i0>

Syntax Description

fabric-binding	Fabric binding
database	Fabric binding database
diff	Difference in fabric-binding database
active	Active database wrt Configured database
vsan	VSAN Id
<i>i0</i>	VSAN number

Command Mode

- /exec

fabric-binding database diff config vsan

fabric-binding database diff config vsan <i0>

Syntax Description

fabric-binding	Fabric binding
database	Fabric binding database
diff	Difference in fabric-binding database
config	Configured database wrt Active database
vsan	VSAN Id
<i>i0</i>	VSAN number

Command Mode

- /exec

fabric-binding database vsan

[no] fabric-binding database vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric-binding	Fabric Binding configuration
database	Fabric Binding Config database
vsan	VSAN id for fabric bindings
<i>i0</i>	VSAN number

Command Mode

- /exec/configure

fabric-binding fip enable

[no] fabric-binding fip enable <fip_id> <fip_action_id>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric-binding	Fabric Binding configuration
fip	Fault Injection Point enabling or disabling
enable	Enabling FIP
<i>fip_id</i>	FIP Id
<i>fip_action_id</i>	FIP action ID

Command Mode

- /exec/configure

fabric-binding restart

fabric-binding restart

Syntax Description

fabric-binding	Fabric Binding configuration
restart	Restart PSM Process using FIP

Command Mode

- /exec

fabric-soo

```
[no] fabric-soo { <ext-comm-soo-aa2nn4> | <ext-comm-soo-aa4nn2> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric-soo	Fabric Site of Origin
<i>ext-comm-soo-aa4nn2</i>	VPN extcommunity in aa4:fabric_id format
<i>ext-comm-soo-aa2nn4</i>	VPN extcommunity in aa:fabric_id format

Command Mode

- /exec/configure/router-bgp

fabric database auto-pull dci node-id

fabric database auto-pull dci node-id <mgmt-ip-address>

Syntax Description

fabric	Fabric
database	Fabric Database
auto-pull	Pull configuration
dci	DCI profile
node-id	management ip address of this node
<i>mgmt-ip-address</i>	IP address in CIDR format

Command Mode

- /exec

fabric database auto-pull dci vrf node-id

```
fabric database auto-pull dci vrf <vrf-name> node-id <mgmt-ip-address> [ peer-id <peer-ip-address> ]
```

Syntax Description

<code>fabric</code>	Fabric
<code>database</code>	Fabric Database
<code>auto-pull</code>	Pull configuration
<code>dci</code>	DCI profile
<code>vrf</code>	Display per-VRF information
<i>vrf-name</i>	VRF name
<code>node-id</code>	management ip address of this node
<i>mgmt-ip-address</i>	IP address in CIDR format
<code>peer-id</code>	(Optional) management ip address of peer
<i>peer-ip-address</i>	(Optional) IP address in CIDR format

Command Mode

- /exec

fabric database inherit-profile-map

{ fabric database inherit-profile-map <id> } | { no fabric database inherit-profile-map }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
inherit-profile-map	Inherit a profile map. All non-global mappings will be inherited.
<i>id</i>	Profile Map ID

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-port-channel

fabric database mobility-domain

[no] fabric database mobility-domain <name>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
mobility-domain	Tag to identify mobility domain name
<i>name</i>	Mobility Domain Name

Command Mode

- /exec/configure

fabric database override-profile

[no] fabric database override-profile <profilename>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
override-profile	Override the network profile name
<i>profilename</i>	Enter the profile name to override network profile

Command Mode

- /exec/configure

fabric database override-vrf-profile

[no] fabric database override-vrf-profile <profilename>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
override-vrf-profile	Override the VRF (partition) profile name
<i>profilename</i>	Enter the profile name to override VRF profile

Command Mode

- /exec/configure

fabric database profile-map

[no] fabric database profile-map <id>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
profile-map	Configure a profile map
<i>id</i>	Profile Map ID

Command Mode

- /exec/configure

fabric database profile-map global

[no] fabric database profile-map global

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
profile-map	Configure a profile map
global	Global profile (apply to all interfaces)

Command Mode

- /exec/configure

fabric database refresh dot1q

fabric database refresh dot1q <vlan-id> [{ mobility-domain <name> | interface <interface-id> }]

Syntax Description

fabric	Fabric
database	Fabric Database
refresh	Refresh profile configuration
dot1q	Dot1Q Encapsulation
<i>vlan-id</i>	
interface	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>interface-id</i>	(Optional) Name of interface
mobility-domain	THIS KEYWORD OR VARIABLE IS NOT SUPPORTED
<i>name</i>	(Optional) Mobility Domain Name

Command Mode

- /exec

fabric database refresh vni

```
fabric database refresh { vni <vni-id> | include-vrf { <vrf-name> } }
```

Syntax Description

fabric	Fabric
database	Fabric Database
refresh	Refresh profile configuration
vni	Virtual Network Identifier
<i>vni-id</i>	
include-vrf	Include VRF name
<i>vrf-name</i>	VRF name

Command Mode

- /exec

fabric database static-host

[no] fabric database static-host

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Fabric Database
static-host	Configure a static host

Command Mode

- /exec/configure

fabric database type bl-dci

[no] fabric database type bl-dci

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
bl-dci	Border Leaf - DCI

Command Mode

- /exec/configure

fabric database type cabling

[no] fabric database type cabling

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
cabling	Cable Management Database

Command Mode

- /exec/configure

fabric database type host

[no] fabric database type host

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
host	Host Database

Command Mode

- /exec/configure

fabric database type network

[no] fabric database type network

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
network	Network Database

Command Mode

- /exec/configure

fabric database type partition

[no] fabric database type partition

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
partition	Partition Database

Command Mode

- /exec/configure

fabric database type profile

[no] fabric database type profile

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
database	Configure Fabric Database
type	Configure database type
profile	Port or Switch Profile Database

Command Mode

- /exec/configure

fabric forwarding admin-distance

{ fabric forwarding admin-distance <distance> } | { no fabric forwarding admin-distance }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
admin-distance	Administrative distance for HMM host routes
<i>distance</i>	Set the administrative distance for HMM (default is 190)

Command Mode

- /exec/configure

fabric forwarding anycast-gateway-mac

```
{ fabric forwarding anycast-gateway-mac <mac-addr> } | { no fabric forwarding anycast-gateway-mac }
```

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
anycast-gateway-mac	Anycast Gateway MAC of the Switch
<i>mac-addr</i>	MAC address

Command Mode

- /exec/configure

fabric forwarding dup-host-ip-addr-detection

```
{ fabric forwarding dup-host-ip-addr-detection <mmoves> <nsecs> | no fabric forwarding
dup-host-ip-addr-detection }
```

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
dup-host-ip-addr-detection	To detect duplicate host address in n secs
<i>mmoves</i>	Set Number of host moves to be allowed in n secs. Default is 5
<i>nsecs</i>	Set the duplicate detection timeout in secs for host moves. Default is 180

Command Mode

- /exec/configure

fabric forwarding dup-host-recovery-timer recover-count

{ fabric forwarding dup-host-recovery-timer <timeout> recover-count <count> | no fabric forwarding dup-host-recovery-timer }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
dup-host-recovery-timer	Refresh the frozen duplicate host
<i>timeout</i>	Set the timeout in secs to refresh the duplicate host. Default is 30 secs
recover-count	Maximum number of refreshes
<i>count</i>	Set the maximum number of host refresh. Default is 5.

Command Mode

- /exec/configure

fabric forwarding limit-vlan-mac

[no] fabric forwarding limit-vlan-mac <max-limit>

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
limit-vlan-mac	Maximum number of end-hosts allowed to have the same (vlan, MAC) mapping in a given vrf (Default is 2048)
<i>max-limit</i>	Set max-limit

Command Mode

- /exec/configure

fabric forwarding mode anycast-gateway

{ fabric forwarding mode anycast-gateway } | { no fabric forwarding mode }

Syntax Description

no	Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
mode	Forwarding Modes
anycast-gateway	Anycast Gateway Forwarding Mode

Command Mode

- /exec/configure/if-vlan /exec/configure/if-vlan-range

fabric forwarding mode anycast-gateway hybrid

[no] fabric forwarding mode anycast-gateway hybrid

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
mode	Forwarding Modes
anycast-gateway	Anycast Gateway Forwarding Mode
hybrid	Hybrid Mode

Command Mode

- /exec/configure/if-vlan /exec/configure/if-vlan-range

fabric forwarding selective-host-probe

[no] fabric forwarding selective-host-probe

Syntax Description

no	(Optional) Negate a command or set its defaults
fabric	Fabric
forwarding	Fabric Forwarding Protocol: Host Mobility Manager (HMM)
selective-host-probe	Trigger unconditional host probe

Command Mode

- /exec/configure

fast-convergence

fast-convergence | no fast-convergence

Syntax Description

no	Negate a command or set its defaults
fast-convergence	Enable vPC fast-convergence

Command Mode

- /exec/configure/vpc-domain

fast-external-fallover

[no] fast-external-fallover

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-external-fallover	Immediately reset the session if the link to a directly connected BGP peer goes down

Command Mode

- /exec/configure/router-bgp

fast-flood enable

[no] fast-flood enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
enable	Turn on fast-flooding

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

fast-flood interval

[no] fast-flood interval <interval>

Syntax Description

no	(Optional) Negate a command or set its defaults
fast-flood	Fast flood the LSP's
interval	Duration/interval of the fast-flood timer.
<i>interval</i>	Specify the value (ms)

Command Mode

- /exec/configure/otv-isis/otv-isis-vrf-common

fast-reload network-os

fast-reload network-os <uri>

Syntax Description

fast-reload	fast-reload software
network-os	non-cisco OS
<i>uri</i>	Enter image uri

Command Mode

- /exec

fcalias clone vsan

fcalias clone <s0> <s1> vsan <i0>

Syntax Description

fcalias	Fcalias configuration commands
clone	Fcalias clone command
<i>s0</i>	Current fcalias name
<i>s1</i>	New fcalias name
vsan	clone fcalias name on a vsan
<i>i0</i>	VSAN id

Command Mode

- /exec/configure

fcalias name vsan

[no] fcalias name <s0> vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcalias	Fcalias configuration commands
name	Configure an fcalias
s0	Enter the name of fcalias
vsan	Configure an fcalias on a VSAN
i0	VSAN id

Command Mode

- /exec/configure

fcalias rename vsan

```
fcalias rename <s0> <s1> vsan <i0>
```

Syntax Description

fcalias	Fcalias configuration commands
rename	Fcalias rename command
<i>s0</i>	Current fcalias name
<i>s1</i>	New fcalias name
vsan	rename fcalias name on a vsan
<i>i0</i>	VSAN id

Command Mode

- /exec/configure

fcdomain abort vsan

[no] fcdomain abort vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
abort	Flush cached data without committing and release lock
vsan	Specify the vsan id
<i>i0</i>	VSAN id

Command Mode

- /exec/configure

fcdomain allowed vsan

[no] fcdomain allowed <i0> vsan <i1>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
allowed	Configure allowed domain IDs
<i>i0</i>	Specify the allowed domain IDs
vsan	Specify the vsan id
<i>i1</i>	VSAN id

Command Mode

- /exec/configure

fcdomain commit vsan

[no] fcdomain commit vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
commit	Commit cached data and release lock
vsan	Specify the vsan id
<i>i0</i>	VSAN id

Command Mode

- /exec/configure

fcdomain contiguous-allocation vsan

[no] fcdomain contiguous-allocation vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
contiguous-allocation	Configure the contiguous allocation option
vsan	Specify the vsan range
<i>i0</i>	VSAN id range

Command Mode

- /exec/configure

fcdomain distribute

[no] fcdomain distribute

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
distribute	Enable fabric distribution using CFS

Command Mode

- /exec/configure

fcdomain domain

```
[no] fcdomain domain { <i0> { preferred vsan <i1> | static vsan1 <i2> } | <i3> { preferred vsan2 <i4> | static vsan3 <i5> } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
domain	Configure the domain id and its type
<i>i0</i>	Configure the domain id in decimal, 0 not allowed for static dom
preferred	Configure the domain id as preferred
vsan	Specify the vsan range
<i>i1</i>	VSAN id range
static	Configure the domain id as static
vsan1	Specify the vsan range
<i>i2</i>	VSAN id range
<i>i3</i>	Configure the domain id in hexadecimal
preferred	Configure the domain id as preferred
vsan2	Specify the vsan range
<i>i4</i>	VSAN id range
static	Configure the domain id as static
vsan3	Specify the vsan range
<i>i5</i>	VSAN id range

Command Mode

- /exec/configure

fcdomain fabric-name vsan

[no] fcdomain fabric-name <wwn0> vsan <i1>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
fabric-name	Configure the fabric name
<i>wwn0</i>	Configure the fabric name value
vsan	Specify the vsan id
<i>i1</i>	VSAN id

Command Mode

- /exec/configure

fcdomain fcid database

[no] fcdomain fcid database

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
fcid	Configure fcdomain persistent FCIDs
database	Enter persistent FCIDs submode

Command Mode

- /exec/configure

fcdomain fcid persistent vsan

[no] fcdomain fcid persistent vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
fcid	Configure fcdomain persistent FCIDs
persistent	Enable/disable fcdomain persistent FCIDs
vsan	Specify the vsan id
<i>i0</i>	VSAN id

Command Mode

- /exec/configure

fcdomain optimize

[no] fcdomain optimize { fast-restart vsan <i0> | selective-restart vsan1 <i1> | scale-restart vsan2 <i2> | all vsan3 <i3> }

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
optimize	Enable optimized fcdomain behavior
fast-restart	Fast fabric reconfiguration (Fast BF)
vsan	Specify a list of vsan ranges
<i>i0</i>	VSAN id range
selective-restart	Selective fabric reconfiguration (Selective BF/RCF)
vsan1	Specify a list of vsan ranges
<i>i1</i>	VSAN id range
scale-restart	Scale restart (Consolidated EFP)
vsan2	Specify a list of vsan ranges
<i>i2</i>	VSAN id range
all	Enable all optimizations
vsan3	Specify a list of vsan ranges
<i>i3</i>	VSAN id range

Command Mode

- /exec/configure

fcdomain priority vsan

[no] fcdomain priority <i0> vsan <i1>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Enter the fcdomain configuration mode
priority	Configure the priority
<i>i0</i>	Specify the priority value
vsan	Specify the vsan range
<i>i1</i>	VSAN id range

Command Mode

- /exec/configure

fcdomain rcf-reject vsan

[no] fcdomain rcf-reject vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdomain	Configure fcdomain parameters
rcf-reject	Configure the rcf-reject flag
vsan	Specify the vsan range
<i>i0</i>	VSAN id range

Command Mode

- /exec/configure/if-fc /exec/configure/if-san-port-channel /exec/configure/if-fcip /exec/configure/if-tunnel /exec/configure/if-bay /exec/configure/if-ext /exec/configure/if-vfc

fcdroplateny network

```
[no] fcdroplateny { network <i0> [ vsan <i1> ] | switch <i2> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
fcdroplateny	configure switch or network latency
network	network latency in milliseconds
<i>i0</i>	network latency in milliseconds
vsan	(Optional) VSAN id range
<i>i1</i>	(Optional)
switch	switch latency in milliseconds
<i>i2</i>	switch latency in milliseconds

Command Mode

- /exec/configure

fcid-allocation area company-id

[no] fcid-allocation area company-id <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
fcid-allocation	Add/remove company id(or OUIs) from auto area list
area	Add/remove company ids(or OUIs) to auto area list
company-id	Company id (or OUI)
i0	Enter company id(or OUI) (0xhhhhh)

Command Mode

- /exec/configure

fcinterop fcid-allocation

[no] fcinterop fcid-allocation { auto | flat | none }

Syntax Description

no	(Optional) Negate a command or set its defaults
fcinterop	Interop commands
fcid-allocation	Configure fcid interop mode
auto	Assign single fcid to compatible HBA's
flat	Assign single fcid
none	Assign fcid range

Command Mode

- /exec/configure

fcinterop loop-monitor

[no] fcinterop loop-monitor

Syntax Description

no	(Optional) Negate a command or set its defaults
fcinterop	Interop commands
loop-monitor	Configure monitoring of NL ports in loop

Command Mode

- /exec/configure

fcoe

[no] fcoe

Syntax Description

no	(Optional) Negate a command or set its default
fcoe	FCOE Congiguration

Command Mode

- /exec/configure/vlan

fcoe

[no] fcoe

Syntax Description

no	(Optional) Negate a command or set its defaults
fcoe	create fcoe associate between fex and switch

Command Mode

- /exec/configure/fex

fcoe enable-fex

[no] fcoe enable-fex

Syntax Description

no	(Optional) Negate a command or set its defaults
fcoe	FCOE command
enable-fex	Enables FCoE over FEX HIF interfaces

Command Mode

- /exec/configure

fcoe fcf-priority

fcoe fcf-priority <i0> | no fcoe fcf-priority

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
fcf-priority	FCF priority specification
<i>i0</i>	Enter FCF priority

Command Mode

- /exec/configure

fcoe fcmmap

fcoe fcmmap <i0> | no fcoe fcmmap

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
fcmmap	FC MAP specification
<i>i0</i>	Enter FCMAP

Command Mode

- /exec/configure

fcoe fka-adv-period

fcoe fka-adv-period <i0> | no fcoe fka-adv-period

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
fka-adv-period	FKA Advertisement Period
<i>i0</i>	FKA Advertisement Period (in sec)

Command Mode

- /exec/configure

fcoe vloopback

fcoe vloopback | no fcoe vloopback

Syntax Description

no	Negate a command or set its defaults
fcoe	FCOE command
vloopback	VFID check for VE ports

Command Mode

- /exec/configure

fcoe vsan

fcoe vsan <tran-id> | no fcoe vsan

Syntax Description

no	Negate a command or set its default
fcoe	FCOE Congiguration
vsan	Translated VSAN Status
<i>tran-id</i>	Enter VSAN-ID being associated with VLAN-ID

Command Mode

- /exec/configure/vlan

fcping

```
fcping { device-alias <s0> vsan <i0> [ [ count <i1> ] [ [ timeout <i2> ] [ usr-priority <i3> ] ] ] | fcid <i4>
vsan1 <i5> [ [ count1 <i6> ] [ [ timeout1 <i7> ] [ usr-priority1 <i8> ] ] ] | pwwn <wwn9> vsan2 <i10> [ [
count2 <i11> ] [ [ timeout2 <i12> ] [ usr-priority2 <i13> ] ] ] }
```

Syntax Description

fcping	Ping an N-Port
device-alias	Device-alias of the destination N-Port
<i>s0</i>	Enter device-alias name
vsan	vsan id of the destination N Port.
<i>i0</i>	The VSAN Number.
count	(Optional) Number of frames to send. A value of 0 sends forever.
<i>i1</i>	(Optional) Frame count
timeout	(Optional) The timeout value.
<i>i2</i>	(Optional) Timeout in seconds
usr-priority	(Optional) The priority the frame receives in the switch fabric
<i>i3</i>	(Optional) User priority
fcid	FC-id of the destination N-Port
<i>i4</i>	The FC-id
vsan1	vsan id of the destination N Port.
<i>i5</i>	The VSAN number.
count1	(Optional) Number of frames to send. A value of 0 sends forever.
<i>i6</i>	(Optional) Frame count
timeout1	(Optional) The timeout value.
<i>i7</i>	(Optional) Timeout in seconds
usr-priority1	(Optional) The priority the frame receives in the switch fabric
<i>i8</i>	(Optional) User priority
pwwn	PWWN of the destination N-Port
<i>wwn9</i>	The Port WWN
vsan2	vsan id of the destination N Port.

<i>i10</i>	The VSAN Number.
count2	(Optional) Number of frames to send. A value of 0 sends forever.
<i>i11</i>	(Optional) Frame count
timeout2	(Optional) The timeout value.
<i>i12</i>	(Optional) Timeout in seconds
usr-priority2	(Optional) The priority the frame receives in the switch fabric
<i>i13</i>	(Optional) User priority

Command Mode

- /exec

fcs plat-check-global vsan

[no] fcs plat-check-global vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
plat-check-global	Platform Name/Node Name checking to be done fabric-wide
vsan	VSAN id for plat checking
<i>i0</i>	VSAN number

Command Mode

- /exec/configure

fcs register

[no] fcs register

Syntax Description

no	(Optional) Negate a command or set its defaults
register	Register FCS attributes

Command Mode

- /exec/configure

fcs virtual-device-add

[no] fcs virtual-device-add [vsan-ranges <i0>]

Syntax Description

no	(Optional) Negate a command or set its defaults
virtual-device-add	Include Virtual devices in response
vsan-ranges	(Optional) VSAN Id
<i>i0</i>	(Optional) Enter upto 32 ranges of VSAN identifiers

Command Mode

- /exec/configure

fctimer D_S_TOV

[no] fctimer D_S_TOV <i0> [vsan <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
D_S_TOV	D_S_TOV in milliseconds(5000-10000)
<i>i0</i>	D_S_TOV in milliseconds(5000-10000)
vsan	(Optional) Specify VSAN id
<i>i1</i>	(Optional) VSAN id

Command Mode

- /exec/configure

fctimer E_D_TOV

[no] fctimer E_D_TOV <i0> [vsan <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
E_D_TOV	E_D_TOV in milliseconds(1000-4000)
<i>i0</i>	E_D_TOV in milliseconds(1000-4000)
vsan	(Optional) Specify VSAN id
<i>i1</i>	(Optional) VSAN id

Command Mode

- /exec/configure

fctimer R_A_TOV

[no] fctimer R_A_TOV <i0> [vsan <i1>]

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
R_A_TOV	R_A_TOV in milliseconds(5000-10000)
<i>i0</i>	R_A_TOV in milliseconds(5000-10000)
vsan	(Optional) Specify VSAN id
<i>i1</i>	(Optional) VSAN id

Command Mode

- /exec/configure

fctimer abort

[no] fctimer abort

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
abort	abort the fctimer configuration commands

Command Mode

- /exec/configure

fctimer commit

[no] fctimer commit

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
commit	commit the fctimer configuration commands

Command Mode

- /exec/configure

fctimer distribute

[no] fctimer distribute

Syntax Description

no	(Optional) Negate a command or set its defaults
fctimer	configure fibre channel timers
distribute	Enable distribution of fctimer configuration using CFS

Command Mode

- /exec/configure

fctrace

```
fctrace { device-alias <s0> vsan <i0> [ timeout <i1> ] | fcid <fcid2> vsan1 <i3> [ timeout1 <i4> ] | pwwn
<wwn5> vsan2 <i6> [ timeout2 <i7> ] }
```

Syntax Description

fctrace	Trace the route for an N-Port.
device-alias	Device-alias of the destination N-Port
<i>s0</i>	Enter device-alias name
vsan	vsan id of the destination N Port.
<i>i0</i>	The VSAN Number.
timeout	(Optional) The timeout value.
<i>i1</i>	(Optional) Timeout in seconds
fcid	FC-id of the destination N-Port
<i>fcid2</i>	The FC-id
vsan1	vsan id of the destination N Port.
<i>i3</i>	The VSAN Number.
timeout1	(Optional) The timeout value.
<i>i4</i>	(Optional) Timeout in seconds
pwwn	PWWN of the destination N-Port
<i>wwn5</i>	The Port WWN
vsan2	vsan id of the destination N Port.
<i>i6</i>	The VSAN Number.
timeout2	(Optional) The timeout value.
<i>i7</i>	(Optional) Timeout in seconds

Command Mode

- /exec

fctrace module

[no] fctrace module { all | <i0> }

Syntax Description

no	Negate a command or set its defaults
fctrace	Trace the route for an N-Port.
module	Disable FCTrace on a specific module.
all	Disable FCTrace on all Gen-3 modules.
<i>i0</i>	Module Number on which FCTrace should be disabled.

Command Mode

- /exec/configure

fdmi suppress-updates vsan

[no] fdmi suppress-updates vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
suppress-updates	suppress FDMIs updates
vsan	VSAN id
<i>i0</i>	VSAN id range

Command Mode

- /exec/configure

feature-set

[no] feature-set <fs>

Syntax Description

no	Negate a command or set its defaults
feature-set	Enable feature-set
<i>fs</i>	allow feature-set

Command Mode

- /exec/configure

feature-set

feature-set <fs>

Syntax Description

feature-set	Enable feature-set
<i>fs</i>	allow feature-set

Command Mode

- /exec/configure

feature

[no] feature <arg1>

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Feature name
<i>arg1</i>	Enter feature name

Command Mode

- /exec/configure/rolefeaturegrp

feature analytics

[no] feature analytics

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
analytics	Enable/Disable Analytics!!!

Command Mode

- /exec/configure

feature bash-shell

[no] feature bash-shell

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
bash-shell	Enable/Disable bash-shell

Command Mode

- /exec/configure

feature bfd

[no] feature bfd

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
bfd	bfd

Command Mode

- /exec/configure

feature bgp

[no] feature bgp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
bgp	Enable/Disable Border Gateway Protocol (BGP)

Command Mode

- /exec/configure

feature container-tracker

[no] feature container-tracker

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
container-tracker	Enable/Disable NXOS Container Tracker

Command Mode

- /exec/configure

feature dhcp

[no] feature dhcp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
dhcp	Enable/Disable DHCP Manager

Command Mode

- /exec/configure

feature dot1x

[no] feature dot1x

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
dot1x	Enable/Disable dot1x

Command Mode

- /exec/configure

feature eigrp

[no] feature eigrp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
eigrp	Enable/Disable Enhanced Interior Gateway Routing Protocol (EIGRP)

Command Mode

- /exec/configure

feature epbr

[no] feature epbr

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
epbr	Enable/Disable Enhanced Policy Based Routing (EPBR)

Command Mode

- /exec/configure

feature evb

[no] feature evb

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
evb	Enable/Disable Edge Virtual Bridge (EVB)

Command Mode

- /exec/configure

feature evmed

[no] feature evmed

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
evmed	Enable/Disable Generic event detectors

Command Mode

- /exec/configure

feature fabric forwarding

[no] feature fabric forwarding

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
fabric	Enable/Disable Fabric Services
forwarding	Enable/Disable Fabric Forwarding Protocol: Host Mobility Manager (HMM)

Command Mode

- /exec/configure

feature flexlink

[no] feature flexlink

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
flexlink	Enable/Disable Flexlink

Command Mode

- /exec/configure

feature fport-channel-trunk

[no] feature fport-channel-trunk

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
fport-channel-trunk	Enable/Disable Trunking F Ports and channels

Command Mode

- /exec/configure

feature frequency-synchronization

[no] feature frequency-synchronization

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
frequency-synchronization	Enable/Disable fsync

Command Mode

- /exec/configure

feature grpc

[no] feature grpc

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
grpc	Enable/Disable grpc Services

Command Mode

- /exec/configure

feature hardware-telemetry

[no] feature hardware-telemetry

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
hardware-telemetry	Enable/Disable Hardware Telemetry

Command Mode

- /exec/configure

feature hsrp

[no] feature hsrp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
hsrp	Enable/Disable Hot Standby Router Protocol (HSRP)

Command Mode

- /exec/configure

feature imp

[no] feature imp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
imp	Enable/Disable IMP

Command Mode

- /exec/configure

feature interface-vlan

[no] feature interface-vlan

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
interface-vlan	Enable/Disable interface vlan

Command Mode

- /exec/configure

feature isis

[no] feature isis

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
isis	Enable/Disable IS-IS Unicast Routing Protocol (IS-IS)

Command Mode

- /exec/configure

feature itd

[no] feature itd

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
itd	Enable/Disable ITD

Command Mode

- /exec/configure

feature lacp

[no] feature lacp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
lacp	Enable/Disable LACP

Command Mode

- /exec/configure

feature ldap

[no] feature ldap

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ldap	Enable/Disable ldap

Command Mode

- /exec/configure

feature lldp

[no] feature lldp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
lldp	Enable/Disable LLDP

Command Mode

- /exec/configure

feature macsec

[no] feature macsec

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
macsec	Enable/Disable CTS

Command Mode

- /exec/configure

feature mpls evpn

[no] feature mpls evpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
evpn	Enable MPLS EVPN

Command Mode

- /exec/configure

feature mpls l3vpn

[no] feature mpls l3vpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
l3vpn	Enable/Disable Layer 3 Virtual Private Networks

Command Mode

- /exec/configure

feature mpls oam

[no] feature mpls oam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
oam	Enable MPLS OAM

Command Mode

- /exec/configure

feature mpls segment-routing

[no] feature mpls segment-routing

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
segment-routing	Enable Segment-routing

Command Mode

- /exec/configure

feature mpls segment-routing traffic-engineering

[no] feature mpls segment-routing traffic-engineering

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
segment-routing	Enable Segment-routing
traffic-engineering	Enable/Disable segment-routing traffic-engineering

Command Mode

- /exec/configure

feature mpls static

[no] feature mpls static

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mpls	Enable/Disable MPLS Services
static	Enable/Disable Static Labeled Paths

Command Mode

- /exec/configure

feature msdp

[no] feature msdp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
msdp	Enable/Disable Multicast Source Discovery Protocol (MSDP)

Command Mode

- /exec/configure

feature mvpn

[no] feature mvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
mvpn	Multicast Virtual Private Networks.

Command Mode

- /exec/configure

feature nat

[no] feature nat

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nat	Enable/Disable NAT

Command Mode

- /exec/configure

feature nbm

[no] feature nbm

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable a feature
nbm	Enable/Disable Non Blocking Multicast (NBM) feature

Command Mode

- /exec/configure

feature netconf

[no] feature netconf

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
netconf	Enable/Disable netconf Services

Command Mode

- /exec/configure

feature netflow

[no] feature netflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
netflow	Enable/Disable NetFlow

Command Mode

- /exec/configure

feature ngmvpn

[no] feature ngmvpn

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ngmvpn	Enable/Disable EVPN/MVPN features

Command Mode

- /exec/configure

feature ngoam

[no] feature ngoam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ngoam	Enable/Disable ngoam

Command Mode

- /exec/configure

feature ngoam

[no] feature ngoam

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ngoam	Enable/Disable ngoam

Command Mode

- /exec/configure

feature npiv

[no] feature npiv

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
npiv	Enable/Disable Nx port Id Virtualization (NPIV)

Command Mode

- /exec/configure

feature npiv

[no] feature npiv

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features

Command Mode

- /exec/configure

feature ntp

[no] feature ntp

Syntax Description

no	(Optional) Negate a command or set its default
feature	Command to enable/disable features
ntp	Enable/Disable NTP

Command Mode

- /exec/configure

feature nv overlay

[no] feature nv overlay

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nv	Enable/Disable VxLAN
overlay	Enable/Disable VxLAN

Command Mode

- /exec/configure

feature nxapi

[no] feature nxapi

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nxapi	Enable/Disable nxapi

Command Mode

- /exec/configure

feature nxsdk

[no] feature nxsdk

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
nxsdk	Enable/Disable nxsdk Services

Command Mode

- /exec/configure

feature ofm

[no] feature ofm

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ofm	Enable/Disable OFM

Command Mode

- /exec/configure

feature openflow

[no] feature openflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
openflow	Enable/Disable OpenFlow agent

Command Mode

- /exec/configure

feature ospf

[no] feature ospf

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ospf	Enable/Disable Open Shortest Path First Protocol (OSPF)

Command Mode

- /exec/configure

feature ospfv3

[no] feature ospfv3

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ospfv3	Enable/Disable Open Shortest Path First Version 3 Protocol (OSPFv3)

Command Mode

- /exec/configure

feature password encryption aes

[no] feature password encryption aes

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Enable the feature
password	Credential(s) for the user(s)/device(s)
encryption	Strong encryption for credential(s)
aes	Encrypt using AES encryption standard

Command Mode

- /exec/configure

feature pbr

[no] feature pbr

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pbr	Enable/Disable Policy Based Routing(PBR)

Command Mode

- /exec/configure

feature pim

[no] feature pim

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pim	Enable/Disable Protocol Independent Multicast (PIM)

Command Mode

- /exec/configure

feature pim6

[no] feature pim6

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pim6	Enable/Disable Protocol Independent Multicast (PIM) for IPv6

Command Mode

- /exec/configure

feature pnp

[no] feature pnp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pnp	Enable/Disable PNP

Command Mode

- /exec/configure

feature poap

[no] feature poap

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
poap	Enable/Disable POAP

Command Mode

- /exec/configure

feature poe

[no] feature poe

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable a feature
poe	Enable/Disable Power over Ethernet(PoE) feature

Command Mode

- /exec/configure

feature pong

[no] feature pong

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
pong	Enable/Disable Pong

Command Mode

- /exec/configure

feature port-security

[no] feature port-security

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable eth port security features
port-security	Enable/Disable port-security

Command Mode

- /exec/configure

feature private-vlan

[no] feature private-vlan

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
private-vlan	Enable/Disable private-vlan

Command Mode

- /exec/configure

feature ptp

[no] feature ptp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ptp	Enable/Disable PTP

Command Mode

- /exec/configure

feature restconf

[no] feature restconf

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
restconf	Enable/Disable restconf Services

Command Mode

- /exec/configure

feature rip

[no] feature rip

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
rip	Enable/Disable Routing Information Protocol (RIP)

Command Mode

- /exec/configure

feature scheduler

[no] feature scheduler

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
scheduler	Enable/Disable scheduler

Command Mode

- /exec/configure

feature scp-server

[no] feature scp-server

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
scp-server	Enable/Disable SCP server

Command Mode

- /exec/configure

feature sflow

[no] feature sflow

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sflow	Enable/Disable sFlow agent

Command Mode

- /exec/configure

feature sftp-server

[no] feature sftp-server

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sftp-server	Enable/Disable SFTP server

Command Mode

- /exec/configure

feature signature-verification

[no] feature signature-verification

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
signature-verification	Enable image signature verification

Command Mode

- /exec/configure

feature sla responder

[no] feature sla responder

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sla	Enable/Disable SLA
responder	Enable/Disable responder part of SLA

Command Mode

- /exec/configure

feature sla sender

[no] feature sla sender

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sla	Enable/Disable SLA
sender	Enable/Disable sender part of SLA

Command Mode

- /exec/configure

feature sla twamp-server

[no] feature sla twamp-server

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
sla	Enable/Disable SLA
twamp-server	Enable/Disable twamp-server part of SLA

Command Mode

- /exec/configure

feature srv6

[no] feature srv6

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
srv6	Enable/Disable SRv6

Command Mode

- /exec/configure

feature ssh

[no] feature ssh

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
ssh	Enable/Disable ssh

Command Mode

- /exec/configure

feature tacacs

[no] feature tacacs +

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features

Command Mode

- /exec/configure

feature tap-aggregation

[no] feature tap-aggregation

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable a feature
tap-aggregation	Enable/Disable feature tap-aggregation

Command Mode

- /exec/configure

feature telemetry

[no] feature telemetry

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
telemetry	Enable/Disable Telemetry

Command Mode

- /exec/configure

feature telnet

[no] feature telnet

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
telnet	Enable/Disable telnet

Command Mode

- /exec/configure

feature tunnel-encryption

[no] feature tunnel-encryption

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
tunnel-encryption	Enable/Disable Tunnel Encryptiontunnel-encryption

Command Mode

- /exec/configure

feature tunnel

[no] feature tunnel

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
tunnel	Enable/Disable Tunnel Manager

Command Mode

- /exec/configure

feature udd

[no] feature udd

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
udd	Enable/Disable UDLD

Command Mode

- /exec/configure

feature vmtracker

[no] feature vmtracker

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vmtracker	Enable/Disable VM Tracker feature

Command Mode

- /exec/configure

feature vn-segment-vlan-based

[no] feature vn-segment-vlan-based

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vn-segment-vlan-based	Enable/Disable VLAN based VN segment

Command Mode

- /exec/configure

feature vpc

[no] feature vpc

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vpc	Enable/Disable VPC (Virtual Port Channel)

Command Mode

- /exec/configure

feature vrrp

[no] feature vrrp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vrrp	Enable/Disable Virtual Router Redundancy Protocol (VRRP)

Command Mode

- /exec/configure

feature vrrpv3

[no] feature vrrpv3

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vrrpv3	Enable/Disable Virtual Router Redundancy Protocol (VRRP) version 3

Command Mode

- /exec/configure

feature vtp

[no] feature vtp

Syntax Description

no	(Optional) Negate a command or set its defaults
feature	Command to enable/disable features
vtp	Enable/Disable VTP

Command Mode

- /exec/configure

fec

fec <fec_val> | no fec [<fec_val>]

Syntax Description

no	Negate a command or set its defaults
fec	Forwarding error correction
<i>fec_val</i>	Interface FEC options

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-base

fhrp delay minimum

[no] fhrp delay minimum | fhrp delay minimum <delay>

Syntax Description

no	Negate a command or set its defaults
fhrp	FHRP interface configuration commands
delay	Configure FHRP delay
minimum	minimum delay
<i>delay</i>	Seconds to delay

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-vlan

fhrp delay reload

[no] fhrp delay reload | fhrp delay reload <delay>

Syntax Description

no	Negate a command or set its defaults
fhrp	FHRP interface configuration commands
delay	Configure FHRP delay
reload	reload delay
<i>delay</i>	Seconds to delay

Command Mode

- /exec/configure/if-eth-any /exec/configure/if-vlan

filter

[no] filter [subject-name <s0> | altname-email <s1> | altname-upn <s2>]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Configure mapping filter
subject-name	(Optional) Subject name of the certificate
<i>s0</i>	(Optional) Subject name
altname-email	(Optional) Email id as an alternate name
<i>s1</i>	(Optional) Email id
altname-upn	(Optional) User principal name as an alternate name
<i>s2</i>	(Optional) User principal name

Command Mode

- /exec/configure/certmap-filter

filter

[no] filter <filtername>

Syntax Description

filter	Specify the filter to be applied
<i>filtername</i>	filter name to be applied

Command Mode

- /exec/configure/nfm-system

filter access-group

[no] filter access-group <acl-name> [allow-sharing]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
access-group	access control group
<i>acl-name</i>	access control list name
allow-sharing	(Optional) allow up to 4 access control groups on same source interface

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter ip

[no] filter ip <src_ip> <src_mask> <dst_ip> <dst_mask>

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Set SPAN filter options
ip	Set SPAN IP filtering options
<i>src_ip</i>	Set source IP address
<i>src_mask</i>	Set source IP mask
<i>dst_ip</i>	Set destination IP address
<i>dst_mask</i>	Set destination IP mask

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter ip access-list

[no] filter ip access-list <aclname>

Syntax Description

filter	Filter configuration
ip	IPv4 Filter
access-list	access-list
<i>aclname</i>	access control list name

Command Mode

- /exec/configure/config-buffer-drop-monitor

filter ip access-list

[no] filter ip access-list <aclname>

Syntax Description

filter	Filter configuration
ip	IPv4 Filter
access-list	access-list
<i>aclname</i>	access control list name

Command Mode

- /exec/configure/config-buffer-latency-monitor

filter ip access-list

[no] filter ip access-list <aclname>

Syntax Description

filter	Filter configuration
ip	IPv4 Filter
access-list	access-list
<i>aclname</i>	access control list name

Command Mode

- /exec/configure/config-int-clone-md-source-monitor

filter ipv6 access-group

[no] filter ipv6 access-group <acl-name> [allow-sharing]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
ipv6	ipv6 access group
access-group	access control group
<i>acl-name</i>	access control list name
allow-sharing	(Optional) allow up to 4 access control groups on same source interface

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter ipv6 access-list

[no] filter ipv6 access-list <aclname>

Syntax Description

filter	Filter configuration
ipv6	IPv6 Filter
access-list	access-list
<i>aclname</i>	IPv6 access control list name

Command Mode

- /exec/configure/config-buffer-latency-monitor

filter ipv6 access-list

[no] filter ipv6 access-list <aclname>

Syntax Description

filter	Filter configuration
ipv6	IPv6 Filter
access-list	access-list
<i>aclname</i>	IPv6 access control list name

Command Mode

- /exec/configure/config-int-clone-md-source-monitor

filter ipv6 access-list

[no] filter ipv6 access-list <aclname>

Syntax Description

filter	Filter configuration
ipv6	IPv6 Filter
access-list	access-list
<i>aclname</i>	IPv6 access control list name

Command Mode

- /exec/configure/config-buffer-drop-monitor

filter out

[no | default] { filter-list <fltrlist-name> } { out | in }

Syntax Description

no	(Optional) Negate a command or set its defaults
default	(Optional) Inherit values from a peer template
filter-list	Apply AS-PATH filter-list
<i>fltrlist-name</i>	Name of filter-list
out	Apply policy to outgoing routes
in	Apply policy to incoming routes

Command Mode

- /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-vpn4
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mdt
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-vpls
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-mvpn
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-mvpn
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-l2vpn-evpn
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv4-label
 /exec/configure/router-bgp/router-bgp-neighbor/router-bgp-neighbor-af-ipv6-label

filter tx control-packets

[no] filter tx control-packets

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Set SPAN filter options
tx	Set SPAN tx filtering options
control-packets	Filter out CPU generated packets and SPAN only data packets

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter vlan

[no] filter vlan <vlan_mrange> [include-untagged]

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
vlan	Vlan type
<i>vlan_mrange</i>	
include-untagged	(Optional) Include untagged frames on port with Layer 3 subinterfaces

Command Mode

- /exec/configure/monitor-local-src /exec/configure/config-monitor
/exec/configure/config-monitor-erspan-src

filter vlan include-untagged

[no] filter vlan include-untagged

Syntax Description

no	(Optional) Negate a command or set its defaults
filter	Filter configuration
vlan	Vlan type
include-untagged	Include untagged frames on port with Layer 3 subinterfaces

Command Mode

- /exec/configure/config-monitor

find

find <s0>

Syntax Description

find	Find a file below the current directory
<i>s0</i>	Enter the filename prefix to search

Command Mode

- /exec

fips mode enable

[no] fips mode enable

Syntax Description

no	(Optional) Negate a command or set its defaults
fips	Enable/Disable FIPS mode
mode	FIPS mode
enable	Enable/Disable FIPS mode

Command Mode

- /exec/configure

flow-count

[no] flow-count <count>

Syntax Description

flow-count	Flow count throttle for drop events
<i>count</i>	<1-32767>

Command Mode

- /exec/configure/config-fte-event/group-drop-events

flow-count

[no] flow-count <count>

Syntax Description

flow-count	Flow count throttle for drop events
<i>count</i>	<1-32767>

Command Mode

- /exec/configure/config-fte-event/group-latency-events

flow collect tunnel-header

[no] flow collect tunnel-header

Syntax Description

flow	Netflow
collect	Enable collection
tunnel-header	Collect header data for tunneled packets

Command Mode

- /exec/configure

flow collect tunnel-header

[no] flow collect tunnel-header

Syntax Description

flow	Analytics
collect	Enable collection
tunnel-header	Collect header data for tunneled packets

Command Mode

- /exec/configure

flow event

[no] flow event <eventname>

Syntax Description

flow	Enable/Disable Analytics configuration
event	Define a event
<i>eventname</i>	Event name

Command Mode

- /exec/configure

flow exporter

[no] flow exporter <exportername>

Syntax Description

flow	Enable/Disable NetFlow configuration
exporter	Define a Flow Exporter
<i>exportername</i>	Name of Flow Exporter

Command Mode

- /exec/configure

flow exporter

[no] flow exporter <exportername>

Syntax Description

flow	Enable/Disable NetFlow configuration
exporter	Define a Flow Exporter
<i>exportername</i>	Name of Flow Exporter

Command Mode

- /exec/configure

flow filter

[no] flow filter <filtername>

Syntax Description

flow	Enable/Disable NetFlow configuration
filter	Define a Flow filter
<i>filtername</i>	Filter name

Command Mode

- /exec/configure

flow filter

[no] flow filter <filtername>

Syntax Description

flow	NetFlow related commands
filter	Apply a Flow Filter to this VRF
<i>filtername</i>	Name of Flow Filter

Command Mode

- /exec/configure/vrf

flow filter

[no] flow filter <filtername>

Syntax Description

flow	Analytics related commands
filter	Apply a Analytics Filter to this interface
<i>filtername</i>	Name of Flow Filter

Command Mode

- /exec/configure/if-vlan /exec/configure/if-eth-port-channel /exec/configure/if-igp

flow filter

[no] flow filter <filtername>

Syntax Description

flow	Analytics related commands
filter	Apply a Analytics Filter to this interface
<i>filtername</i>	Name of Flow Filter

Command Mode

- /exec/configure/vlan-config

flow monitor

[no] flow monitor <monitorname>

Syntax Description

flow	Enable/Disable NetFlow configuration
monitor	Define a Flow Monitor
<i>monitorname</i>	Name of Flow Monitor

Command Mode

- /exec/configure

flow monitor

[no] flow monitor <monitorname>

Syntax Description

flow	Enable/Disable analytics configuration
monitor	Define a Flow Monitor
<i>monitorname</i>	Name of Flow Monitor

Command Mode

- /exec/configure

flow policy

```
[no] flow { policy <policy-name> } [ { vlan <vlans> } { match [ ipv4-acl <ipv4-acl-name> ] [ ipv6-acl <ipv6-acl-name> ] [ mac-acl <mac-acl-name> ] [ direction <direction> ] [ next-hop-vrf { <nh-vrf-name> | default } ] } { redirect vtep-ip <next-hop> } ]
```

Syntax Description

no	(Optional) Negate a command or set its defaults
flow	Flow management
policy	specify policy name
<i>policy-name</i>	Flow Policy name
vlan	(Optional) apply to vlan
<i>vlans</i>	(Optional) List of VLANs
match	(Optional) match criteria
ipv4-acl	(Optional) specify ipv4-acl
<i>ipv4-acl-name</i>	(Optional) IPv4-ACL name
ipv6-acl	(Optional) specify ipv6-acl
<i>ipv6-acl-name</i>	(Optional) IPv6-ACL name
mac-acl	(Optional) specify mac-acl
<i>mac-acl-name</i>	(Optional) mac-ACL name
direction	(Optional) specify policy direction
<i>direction</i>	(Optional) direction of access or core
next-hop-vrf	(Optional) specify nexthop vrf
default	(Optional) Default next hop VRF
<i>nh-vrf-name</i>	(Optional) VRF name
redirect	(Optional) specify redirect
vtep-ip	(Optional) specify vtep-ip
<i>next-hop</i>	(Optional) IP next-hop address in format i.i.i.i

Command Mode

- /exec/configure/tunnel-profile

flow profile

[no] flow profile <profilename>

Syntax Description

flow	Enable/Disable NetFlow configuration
profile	Define a Flow Profile
<i>profilename</i>	Profile name

Command Mode

- /exec/configure

flow record

[no] flow record <recordname>

Syntax Description

flow	Enable/Disable NetFlow configuration
record	Define a Flow Record
<i>recordname</i>	Record name

Command Mode

- /exec/configure

flow record

[no] flow record <recordname>

Syntax Description

flow	Enable/Disable analytics configuration
record	Define a Flow Record
<i>recordname</i>	Record name

Command Mode

- /exec/configure

flow rtp history

{ [no] flow rtp history <size> | no flow rtp history }

Syntax Description

flow	Enable/Disable NetFlow configuration
rtp	Real-time Transport Protocol
history	Define RTP Flow Error history size
<i>size</i>	# of records to retain in history. 0 to discard to not maintain any history.

Command Mode

- /exec/configure

flow rtp timeout

{ [no] flow rtp timeout <time> | no flow rtp timeout }

Syntax Description

flow	Enable/Disable NetFlow configuration
rtp	Real-time Transport Protocol
timeout	Define RTP Flow Error Monitoring Duration
<i>time</i>	Time in Minutes. Enter 0 to keep the flows even if they are idle

Command Mode

- /exec/configure

flow system config

[no] flow system config

Syntax Description

flow	Enable/Disable NetFlow configuration
system	Define a Flow system
config	Define a Flow system config

Command Mode

- /exec/configure

flow terminate interface

```
flow terminate interface { <interface-list> | add <add-interface-list> | remove <remove-interface-list> } | no  
flow terminate interface
```

Syntax Description

no	Negate a command or set its defaults
flow	Flow management
interface	list of interfaces
<i>interface-list</i>	range of interfaces for flow information
add	list of new interfaces to append to old list
<i>add-interface-list</i>	range of interfaces to be added for flow information
remove	list of interfaces to be removed from the existing list
<i>remove-interface-list</i>	range of interfaces to be removed for flow information
terminate	terminate the tunnel on the interfaces

Command Mode

- /exec/configure/tunnel-profile

flow timeout

{ [no] flow timeout <time> | no flow timeout }

Syntax Description

flow	Enable/Disable analytics configuration
timeout	Define a Flow Timeout
<i>time</i>	Time in seconds (flush-cache-Only)

Command Mode

- /exec/configure

flow timeout

{ [no] flow timeout <time> | no flow timeout }

Syntax Description

flow	Enable/Disable NetFlow configuration
timeout	Define a Flow Timeout
<i>time</i>	Time in seconds (flush-cache-Only)

Command Mode

- /exec/configure

flowcontrol hardware

[no] flowcontrol hardware

Syntax Description

no	(Optional) Negate a command or set its defaults
flowcontrol	Set flow control
hardware	Set hardware flowcontrol

Command Mode

- /exec/configure/com1

flowcontrol receive

```
flowcontrol { receive { <rx_flowctrl> } | send { <tx_flowctrl> } } | no flowcontrol { receive [ { <rx_flowctrl> } ] | send [ { <tx_flowctrl> } ] }
```

Syntax Description

no	Negate a command or set its defaults
flowcontrol	Configure interface flowcontrol
receive	Receive pause frames
<i>rx_flowctrl</i>	Receive flow control
send	Send pause frames
<i>tx_flowctrl</i>	Send flow control

Command Mode

- /exec/configure/if-ethernet-all /exec/configure/if-eth-non-member /exec/configure/if-port-channel

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes in RIB during restart

Command Mode

- /exec/configure/router-rip

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes on non-graceful controlled restart

Command Mode

- /exec/configure/router-isis

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes on a non-graceful controlled restart

Command Mode

- /exec/configure/router-ospf3

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes in RIB during restart

Command Mode

- /exec/configure/router-eigrp

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes on a non-graceful controlled restart

Command Mode

- /exec/configure/router-ospf

flush-routes

[no] flush-routes

Syntax Description

no	(Optional) Negate a command or set its defaults
flush-routes	Flush routes in RIB upon controlled restart

Command Mode

- /exec/configure/router-bgp

follow

follow <name> | no follow

Syntax Description

no	Negate a command or set its defaults
follow	Group to be followed
<i>name</i>	master name string to follow

Command Mode

- /exec/configure/if-eth-any/hsrp_ipv4 /exec/configure/if-eth-any/hsrp_ipv6

format

format <uri1>

Syntax Description

format	Format disks
<i>uri1</i>	destination filesystem path

Command Mode

- /exec

format bootflash

format bootflash:

Syntax Description

format	Format disks
bootflash:	Format bootflash:

Command Mode

- /exec

format bootflash check-filesystem

format bootflash: check-filesystem

Syntax Description

format	Format disks
bootflash:	Format bootflash:
check-filesystem	Format bootflash: and fix any errors in file system

Command Mode

- /exec

format usb1

format usb1:

Syntax Description

format	Format disks
usb1:	Format usb1:

Command Mode

- /exec

forward

[no] forward

Syntax Description

no	(Optional) Negate a command or set its defaults
forward	Configure paths

Command Mode

- /exec/configure/mpls_static/ipv4/lsp/inlabel

fragments

[no] fragments <opt_type>

Syntax Description

no	(Optional) Negate a command or set its defaults
<i>opt_type</i>	frag_op_type

Command Mode

- /exec/configure/ipacl /exec/configure/ipv6acl

frequency

{ { no | default } frequency | frequency <seconds> }

Syntax Description

no	
default	Set a command to its defaults
frequency	Frequency of an operation
<i>seconds</i>	Frequency in seconds

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/jitter /exec/configure/ip-sla/tcp
/exec/configure/ip-sla/icmpEcho /exec/configure/ip-sla/dns /exec/configure/ip-sla/fabricPathEcho
/exec/configure/ip-sla/http

frequency milliseconds

frequency milliseconds <milliseconds>

Syntax Description

frequency	Frequency of an operation
milliseconds	Frequency will be taken as milliseconds
<i>milliseconds</i>	Frequency in milliseconds

Command Mode

- /exec/configure/ip-sla/udp /exec/configure/ip-sla/tcp /exec/configure/ip-sla/icmpEcho

frequency synchronization

[no] frequency synchronization

Syntax Description

no	(Optional) Negate a command or set its defaults
frequency	Frequency Synchronization Manager
synchronization	Frequency Synchronization Manager

Command Mode

- /exec/configure/gnss-if

frequency synchronization

[no] frequency synchronization

Syntax Description

no	(Optional) Negate a command or set its defaults
frequency	Frequency Synchronization Manager
synchronization	Frequency Synchronization Manager

Command Mode

- /exec/configure/if-eth-base /exec/configure/if-ethernet-all

frequency synchronization

[no] frequency synchronization

Syntax Description

no	(Optional) Negate a command or set its defaults
frequency	Frequency Synchronization Manager
synchronization	Frequency Synchronization Manager

Command Mode

- /exec/configure/clock-if

from to

```
{ [ no ] { { from <frm-list> to <to-val> } | { default <value> } } } | default copy
```

Syntax Description

no	(Optional) Negate a command or set its defaults
from	Map values from this
<i>frm-list</i>	Original list of values which are to be mapped
to	Map values to this
<i>to-val</i>	New mapped value
default	map default values
<i>value</i>	default value to be set
copy	Do a default copy

Command Mode

- /exec/configure/def-tmap

from to

```
[no] { { from <frm-list> to <to-val> } | { default { <value> | copy | ignore } } }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
from	Map values from this
<i>frm-list</i>	Original list of values which are to be mapped
to	Map values to this
<i>to-val</i>	New mapped value
default	map default values
<i>value</i>	default value to be set
copy	Do a default copy
ignore	Ignore any unspecified values

Command Mode

- /exec/configure/table-map

fspf

```
[no] fspf { cost <i0> vsan <i1> | dead-interval <i2> vsan1 <i3> | hello-interval <i4> vsan2 <i5> | passive
vsan3 <i6> | retransmit-interval <i7> vsan4 <i8> }
```

Syntax Description

no	(Optional) Negate a command or set its defaults
cost	Configure FSPF link cost
<i>i0</i>	FSPF link cost
vsan	Enter VSAN
<i>i1</i>	VSAN id range
dead-interval	Configure FSPF dead interval
<i>i2</i>	dead interval (in sec)
vsan1	Enter VSAN
<i>i3</i>	VSAN id range
hello-interval	Configure FSPF hello-interval
<i>i4</i>	hello interval (in sec)
vsan2	Enter VSAN
<i>i5</i>	VSAN id range
passive	Enable/disable FSPF on the interface
vsan3	Enter VSAN
<i>i6</i>	VSAN id range
retransmit-interval	Configure FSPF retransmit interval
<i>i7</i>	retransmit interval (in sec)
vsan4	Enter VSAN
<i>i8</i>	VSAN id range

Command Mode

- /exec/configure/if-fc /exec/configure/if-san-port-channel /exec/configure/if-fcipc /exec/configure/if-bay /exec/configure/if-ext /exec/configure/if-vfc

fspf config vsan

[no] fspf config vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
config	Enter the FSPF config mode
vsan	Enter VSAN
<i>i0</i>	VSAN id range

Command Mode

- /exec/configure

fspf enable vsan

[no] fspf enable vsan <i0>

Syntax Description

no	(Optional) Negate a command or set its defaults
enable	Enable/disable FSPF
vsan	Enter VSAN
<i>i0</i>	VSAN id range

Command Mode

- /exec/configure

fsync clock-identity

fsync clock-identity <mac-address> | no fsync clock-identity

Syntax Description

fsync	Frequency Synchronization Manager
clock-identity	clock-identity
<i>mac-address</i>	Mac Address

Command Mode

- /exec/configure

fsync esmc peer receive timeout

fsync esmc peer receive timeout { 0 | <value> } | no fsync esmc peer receive timeout [[0 | <value>]]

Syntax Description

no	Negate a command or set its defaults
fsync	Frequency Synchronization Manager
esmc	Ethernet Synchronization Messaging Channel
peer	peer ESMC
receive	receive timer to be configured during upgrade
timeout	ESMC rcv timeout value in secs
0	0 disables modify peer esmc rcv timer
<i>value</i>	ESMC rcv timeout in secs. Enter a value between 120 and 600

Command Mode

- /exec/configure

fsync quality itu-t option

[no] fsync quality itu-t option { 1 | 2 generation { 1 | 2 } }

Syntax Description

no	(Optional) Negate a command or set its defaults
fsync	Frequency Synchronization Manager
quality	ITU-T QL options
itu-t	ITU-T QL options
option	ITU-T QL options
1	ITU-T QL option 1 (default)
2	ITU-T QL option 2
generation	ITU-T QL option 2 generation
1	ITU-T QL option 2 generation 1
2	ITU-T QL option 2 generation 2

Command Mode

- /exec/configure

fsync transmit dnu lag-members

[no] fsync transmit dnu lag-members

Syntax Description

no	(Optional) Negate a command or set its defaults
fsync	Frequency Synchronization Manager
transmit	transmit
dnu	DNU QL type
lag-members	members of link aggregation or PO

Command Mode

- /exec/configure

fte event

[no] fte event <eventname>

Syntax Description

fte	Enable/Disable FTE configuration
event	Define a FTE event
<i>eventname</i>	Event name

Command Mode

- /exec/configure/config-fte

fte exporter

[no] fte exporter <exportername>

Syntax Description

fte	Enable/Disable Flow Table Events configuration
exporter	Define a events Exporter
<i>exportername</i>	Name of event Exporter

Command Mode

- /exec/configure/config-fte

fte monitor

[no] fte monitor <monitorname>

Syntax Description

fte	Enable/Disable FTE configuration
monitor	Define a FTE Monitor
<i>monitorname</i>	Name of FTE Monitor

Command Mode

- /exec/configure/config-fte

fte record

[no] fte record <recordname>

Syntax Description

fte	Enable/Disable FTE configuration
record	Define a FTE Record
<i>recordname</i>	Record name

Command Mode

- /exec/configure/config-fte

fte system monitor

[no] fte system monitor <monitorname>

Syntax Description

fte	change fte global settings
system	global config
monitor	fte Monitor to be applied
<i>monitorname</i>	fte Monitor to be applied

Command Mode

- /exec/configure/config-fte

ftrace

```
ftrace [ { set-opt { option <n0> <v0> | filter <f0> <v0> } { proc <p0> | buf_size <b0> } [ <s0> ] } | { reset { all | filter <f0> | trace | <s0> } } | { enable { inband | kernel | lnd <i0> | process <i0> | trace } } | { list { filters <f0> | curr_tracer | all } } | { debug { on | off } } | { dump { all | traces } } ]
```

Syntax Description

ftrace	Run ftrace tool to enable/disable kernel/process tracing
set-opt	(Optional) Set ftrace tracing options available
reset	(Optional) Reset ftrace options to defaults, disable tracing
enable	(Optional) Enable ftrace tracing with given options
list	(Optional) List ftrace available options/filters/events
debug	(Optional) Ftrace based debug trace enable/disable
dump	(Optional) Dump traces collected in ftrace circular buffer
all	(Optional) Act on all available datasets
lnd	(Optional) Trace proc/pid specific lnd inband driver calls
inband	(Optional) Trace inband driver + netstack functions
kernel	(Optional) Trace kernel function of sched, net, inband
process	(Optional) Trace proc/pid specific kernel function calls
trace	(Optional) Enable tracing_on in ftrace settings
option	(Optional) Name of ftrace option to be set
filter	(Optional) Set ftrace filter to be applied
proc	(Optional) Set ftrace process to be traced
buf_size	(Optional) Set ftrace buffer size limits
filters	(Optional) list available ftrace filters
curr_tracer	(Optional) Print ftrace current tracer
traces	(Optional) Dump ftrace trace buffer contents
on	(Optional) Enable ftrace based debug tracing
off	(Optional) Dump ftrace trace buffer contents
<i>i0</i>	(Optional) pid of process to trace
<i>f0</i>	(Optional) name of ftrace filter to list/set

<i>n0</i>	(Optional) name of ftrace option to be set
<i>v0</i>	(Optional) value of ftrace option/filter to be set
<i>p0</i>	(Optional) pid of ftrace proc to be set
<i>b0</i>	(Optional) value of ftrace buffer size limit to set
<i>s0</i>	(Optional) name of ftrace option to be set/reset

Command Mode

- /exec

