



# Configuring Keychain Management

This chapter describes how to configure keychain management on a Cisco NX-OS device.

This chapter includes the following sections:

- [About Keychain Management, on page 1](#)
- [Prerequisites for Keychain Management, on page 2](#)
- [Guidelines and Limitations for Keychain Management, on page 2](#)
- [Default Settings for Keychain Management, on page 2](#)
- [Configuring Keychain Management, on page 3](#)
- [Determining Active Key Lifetimes, on page 10](#)
- [Verifying the Keychain Management Configuration, on page 10](#)
- [Configuration Example for Keychain Management, on page 10](#)
- [Where to Go Next, on page 11](#)
- [Additional References for Keychain Management, on page 11](#)

## About Keychain Management

Keychain management allows you to create and maintain keychains, which are sequences of keys (sometimes called shared secrets). You can use keychains with features that secure communications with other devices by using key-based authentication. The device allows you to configure multiple keychains.

Some routing protocols that support key-based authentication can use a keychain to implement a hitless key rollover for authentication. For more information, see the *Cisco Nexus 9000 Series NX-OS Unicast Routing Configuration Guide*.

### Lifetime of a Key

To maintain stable communications, each device that uses a protocol that is secured by key-based authentication must be able to store and use more than one key for a feature at the same time. Based on the send and accept lifetimes of a key, keychain management provides a secure mechanism to handle key rollover. The device uses the lifetimes of keys to determine which keys in a keychain are active.

Each key in a keychain has two lifetimes, as follows:

#### Accept lifetime

The time interval within which the device accepts the key during a key exchange with another device.

**Send lifetime**

The time interval within which the device sends the key during a key exchange with another device. You define the send and accept lifetimes of a key using the following parameters:

**Start-time**

The absolute time that the lifetime begins.

**End-time**

The end time can be defined in one of the following ways:

- The absolute time that the lifetime ends
- The number of seconds after the start time that the lifetime ends
- Infinite lifetime (no end-time)

During a key send lifetime, the device sends routing update packets with the key. The device does not accept communication from other devices when the key sent is not within the accept lifetime of the key on the device.

We recommend that you configure key lifetimes that overlap within every keychain. This practice avoids failure of neighbor authentication due to the absence of active keys.

## Prerequisites for Keychain Management

Keychain management has no prerequisites.

## Guidelines and Limitations for Keychain Management

Keychain management has the following configuration guidelines and limitations:

- Changing the system clock impacts when the keys are active.

## Default Settings for Keychain Management

This table lists the default settings for Cisco NX-OS keychain management parameters.

*Table 1: Default Keychain Management Parameters*

Parameters	Default
Key chains	No keychain exists by default.
Keys	No keys are created by default when you create a new keychain.
Accept lifetime	Always valid.
Send lifetime	Always valid.
Key-string entry encryption	Unencrypted.

# Configuring Keychain Management

## Creating a Keychain

You can create a keychain on the device. A new keychain contains no keys.

### Procedure

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 2</b>	<b>key chain <i>name</i></b>  <b>Example:</b> switch(config)# key chain bgp-keys switch(config-keychain)#	Creates the keychain and enters keychain configuration mode.
<b>Step 3</b>	(Optional) <b>show key chain <i>name</i></b>  <b>Example:</b> switch(config-keychain)# show key chain bgp-keys	Displays the keychain configuration.
<b>Step 4</b>	(Optional) <b>copy running-config startup-config</b>  <b>Example:</b> switch(config-keychain)# copy running-config startup-config	Copies the running configuration to the startup configuration.

## Removing a Keychain

You can remove a keychain on the device.




---

**Note** Removing a keychain removes any keys within the keychain.

---

### Before you begin

If you are removing a keychain, ensure that no feature uses it. If a feature is configured to use a keychain that you remove, that feature is likely to fail to communicate with other devices.

**Procedure**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>no key chain <i>name</i></b> <b>Example:</b> <pre>switch(config)# no key chain bgp-keys</pre>	Removes the keychain and any keys that the keychain contains.
<b>Step 3</b>	(Optional) <b>show key chain <i>name</i></b> <b>Example:</b> <pre>switch(config-keychain)# show key chain bgp-keys</pre>	Confirms that the keychain no longer exists in running configuration.
<b>Step 4</b>	(Optional) <b>copy running-config startup-config</b> <b>Example:</b> <pre>switch(config-keychain)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Configuring a Primary Key and Enabling the AES Password Encryption Feature

You can configure a primary key for Type-6 encryption and enable the Advanced Encryption Standard (AES) password encryption feature.

**Procedure**

	<b>Command or Action</b>	<b>Purpose</b>
<b>Step 1</b>	<b>[no] key config-key ascii [ &lt;new_key&gt; old &lt;old_master_key&gt; ]</b> <b>Example:</b> <pre>switch# key config-key ascii New Master Key: Retype Master Key:</pre>	Configures a primary key ( <i>Master Key</i> ) to be used with the AES password encryption feature. The primary key can contain between 16 and 32 alphanumeric characters. You can use the <b>no</b> form of this command to delete the primary key at any time.  If you enable the AES password encryption feature before configuring a primary key, a message appears stating that password encryption will not take place unless a primary key is configured. If a primary key is already configured, you are prompted to enter the current primary key before entering a new primary key.

	Command or Action	Purpose
		<b>Note</b> Starting with Cisco NX-OS Release 10.3(2)F, you can configure primary key using DME payload and non-interactive mode.
<b>Step 2</b>	<b>configure terminal</b> <b>Example:</b> switch# configure terminal switch(config)#	Enters global configuration mode.
<b>Step 3</b>	<b>[no] feature password encryption aes tam</b> <b>Example:</b> switch(config)# feature password encryption aes tam	Enables or disables the AES password encryption feature.
<b>Step 4</b>	<b>encryption re-encrypt obfuscated</b> <b>Example:</b> switch(config)# encryption re-encrypt obfuscated	Converts existing plain or weakly encrypted passwords to Type-6 encrypted passwords.
<b>Step 5</b>	(Optional) <b>show encryption service stat</b> <b>Example:</b> switch(config)# show encryption service stat	Displays the configuration status of the AES password encryption feature and the primary key.
<b>Step 6</b>	<b>copy running-config startup-config</b> <b>Example:</b> switch(config)# copy running-config startup-config	Copies the running configuration to the startup configuration. <b>Note</b> This command is necessary to synchronize the primary key in the running configuration and the startup configuration.

**Related Topics**

[About AES Password Encryption and Primary Encryption Keys](#)

[About AES Password Encryption and Primary Encryption Keys](#)

[Configuring Text for a Key](#), on page 5

[Configuring Accept and Send Lifetimes for a Key](#), on page 7

## Configuring Text for a Key

You can configure the text for a key. The text is the shared secret. The device stores the text in a secure format.

By default, accept and send lifetimes for a key are infinite, which means that the key is always valid. After you configure the text for a key, configure the accept and send lifetimes for the key.

**Before you begin**

Determine the text for the key. You can enter the text as unencrypted text or in the encrypted form that Cisco NX-OS uses to display key text when you use the **show key chain** command. Using the encrypted form is particularly helpful if you are creating key text to match a key as shown in the **show key chain** command output from another device.

**Procedure**

	Command or Action	Purpose						
<b>Step 1</b>	<b>configure terminal</b> <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.						
<b>Step 2</b>	<b>key chain <i>name</i></b> <b>Example:</b> <pre>switch(config)# key chain bgp-keys switch(config-keychain)#</pre>	Enters keychain configuration mode for the keychain that you specified.						
<b>Step 3</b>	<b>key <i>key-ID</i></b> <b>Example:</b> <pre>switch(config-keychain)# key 13 switch(config-keychain-key)#</pre>	Enters key configuration mode for the key that you specified. The <i>key-ID</i> argument must be a whole number between 0 and 65535.						
<b>Step 4</b>	<b>key-string [<i>encryption-type</i>] <i>text-string</i></b> <b>Example:</b> <pre>switch(config-keychain-key)# key-string 0 AS3cureString</pre>	<p>Configures the text string for the key. The <i>text-string</i> argument is alphanumeric, case-sensitive, and supports special characters.</p> <p>The <i>encryption-type</i> argument can be one of the following values:</p> <ul style="list-style-type: none"> <li>• 0—The <i>text-string</i> argument that you enter is unencrypted text. This is the default.</li> <li>• 7—The <i>text-string</i> argument that you enter is encrypted. The encryption method is a Cisco proprietary method. This option is useful when you are entering a text string based on the encrypted output of a <b>show key chain</b> command that you ran on another Cisco NX-OS device.</li> </ul> <p>The <b>key-string</b> command has limitations on using the following special characters in the <i>text-string</i>:</p> <table border="1"> <thead> <tr> <th>Special Character</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td> </td> <td>Vertical bar</td> </tr> <tr> <td>&gt;</td> <td>Greater-than sign</td> </tr> </tbody> </table>	Special Character	Description		Vertical bar	>	Greater-than sign
Special Character	Description							
	Vertical bar							
>	Greater-than sign							

	Command or Action	Purpose												
		<table border="1"> <thead> <tr> <th>Special Character</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>\</td> <td>Backslash</td> </tr> <tr> <td>(</td> <td>Left parenthesis</td> </tr> <tr> <td>'</td> <td>Single quote</td> </tr> <tr> <td>"</td> <td>Double quote</td> </tr> <tr> <td>?</td> <td>Question mark</td> </tr> </tbody> </table> <p>For more information on the special characters usage in commands, see <a href="#">Understanding the Command-Line Interface</a> section.</p>	Special Character	Description	\	Backslash	(	Left parenthesis	'	Single quote	"	Double quote	?	Question mark
Special Character	Description													
\	Backslash													
(	Left parenthesis													
'	Single quote													
"	Double quote													
?	Question mark													
<b>Step 5</b>	(Optional) <b>show key chain</b> <i>name</i> [ <b>mode decrypt</b> ]  <b>Example:</b> <pre>switch(config-keychain-key)# show key chain bgp-keys</pre>	Shows the keychain configuration, including the key text configuration. The mode decrypt option, which can be used by a device administrator only, displays the keys in cleartext.												
<b>Step 6</b>	(Optional) <b>copy running-config startup-config</b>  <b>Example:</b> <pre>switch(config-keychain-key)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.												

**Related Topics**

[Configuring a Primary Key and Enabling the AES Password Encryption Feature](#)

## Configuring Accept and Send Lifetimes for a Key

You can configure the accept lifetime and send lifetime for a key. By default, accept and send lifetimes for a key are infinite, which means that the key is always valid.



**Note** We recommend that you configure the keys in a keychain to have overlapping lifetimes. This practice prevents loss of key-secured communication due to moments where no key is active.

**Procedure**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.

	Command or Action	Purpose
<b>Step 2</b>	<b>key chain</b> <i>name</i> <b>Example:</b> <pre>switch(config)# key chain bgp-keys switch(config-keychain)#</pre>	Enters keychain configuration mode for the keychain that you specified.
<b>Step 3</b>	<b>key</b> <i>key-ID</i> <b>Example:</b> <pre>switch(config-keychain)# key 13 switch(config-keychain-key)#</pre>	Enters key configuration mode for the key that you specified.
<b>Step 4</b>	<b>accept-lifetime</b> [ <b>local</b> ] <i>start-time</i> [ <b>duration</b> <i>duration-value</i>   <b>infinite</b>   <i>end-time</i> ] <b>Example:</b> <pre>switch(config-keychain-key)# accept-lifetime 00:00:00 Jun 13 2013 23:59:59 Sep 12 2013</pre>	<p>Configures an accept lifetime for the key. By default, the device treats the <i>start-time</i> and <i>end-time</i> arguments as UTC. If you specify the <b>local</b> keyword, the device treats these times as local times.</p> <p>The <i>start-time</i> argument is the time of day and date that the key becomes active.</p> <p>Specify the end of the lifetime with one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>duration</b> <i>duration-value</i> —The length of the lifetime in seconds. The maximum length is 2147483646 seconds (approximately 68 years).</li> <li>• <b>infinite</b>—The accept lifetime of the key never expires.</li> <li>• <i>end-time</i> —The <i>end-time</i> argument is the time of day and date that the key becomes inactive.</li> </ul>
<b>Step 5</b>	<b>send-lifetime</b> [ <b>local</b> ] <i>start-time</i> [ <b>duration</b> <i>duration-value</i>   <b>infinite</b>   <i>end-time</i> ] <b>Example:</b> <pre>switch(config-keychain-key)# send-lifetime 00:00:00 Jun 13 2013 23:59:59 Aug 12 2013</pre>	<p>Configures a send lifetime for the key. By default, the device treats the <i>start-time</i> and <i>end-time</i> arguments as UTC. If you specify the <b>local</b> keyword, the device treats these times as local times.</p> <p>The <i>start-time</i> argument is the time of day and date that the key becomes active.</p> <p>You can specify the end of the send lifetime with one of the following options:</p> <ul style="list-style-type: none"> <li>• <b>duration</b> <i>duration-value</i> —The length of the lifetime in seconds. The maximum length is 2147483646 seconds (approximately 68 years).</li> <li>• <b>infinite</b>—The send lifetime of the key never expires.</li> </ul>

	Command or Action	Purpose
		<ul style="list-style-type: none"> <li><i>end-time</i> —The <i>end-time</i> argument is the time of day and date that the key becomes inactive.</li> </ul>
<b>Step 6</b>	(Optional) <b>show key chain</b> <i>name</i> [ <b>mode decrypt</b> ]  <b>Example:</b> <pre>switch(config-keychain-key)# show key chain bgp-keys</pre>	Shows the keychain configuration, including the key text configuration. The mode decrypt option, which can be used by a device administrator only, displays the keys in cleartext.
<b>Step 7</b>	(Optional) <b>copy running-config startup-config</b>  <b>Example:</b> <pre>switch(config-keychain-key)# copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

**Related Topics**

[Configuring a Primary Key and Enabling the AES Password Encryption Feature](#)

## Configuring a Key for OSPFv2 Cryptographic Authentication

You can configure message digest 5 (MD5) or hash-based message authentication code secure hash algorithm (HMAC-SHA) authentication for OSPFv2.

**Procedure**

	Command or Action	Purpose
<b>Step 1</b>	<b>configure terminal</b>  <b>Example:</b> <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
<b>Step 2</b>	<b>key chain</b> <i>name</i>  <b>Example:</b> <pre>switch(config)# key chain bgp-keys switch(config-keychain)#</pre>	Enters keychain configuration mode for the keychain that you specified.
<b>Step 3</b>	<b>key</b> <i>key-ID</i>  <b>Example:</b> <pre>switch(config-keychain)# key 13 switch(config-keychain-key)#</pre>	Enters key configuration mode for the key that you specified. The <i>key-ID</i> argument must be a whole number between 0 and 65535.  <b>Note</b> For OSPFv2, the key identifier in the key key-id command supports values from 0 to 255 only.

	Command or Action	Purpose
<b>Step 4</b>	<p>[no] <b>cryptographic-algorithm</b>  {HMAC-SHA-1   HMAC-SHA-256    HMAC-SHA-384   HMAC-SHA-512   MD5}</p> <p><b>Example:</b></p> <pre>switch(config-keychain-key) # cryptographic-algorithm HMAC-SHA-1</pre>	Configures the OSPFv2 cryptographic algorithm to be used for the specified key. You can configure only one cryptographic algorithm per key.
<b>Step 5</b>	<p>(Optional) <b>show key chain</b> <i>name</i></p> <p><b>Example:</b></p> <pre>switch(config-keychain-key) # show key chain bgp-keys</pre>	Shows the keychain configuration.
<b>Step 6</b>	<p>(Optional) <b>copy running-config startup-config</b></p> <p><b>Example:</b></p> <pre>switch(config-keychain-key) # copy running-config startup-config</pre>	Copies the running configuration to the startup configuration.

## Determining Active Key Lifetimes

To determine which keys within a key chain have active accept or send lifetimes, use the command in this table.

Command	Purpose
<b>show key chain</b>	Displays the key chains configured on the device.

## Verifying the Keychain Management Configuration

To display keychain management configuration information, perform the following task:

Command	Purpose
<b>show key chain</b> <i>name</i>	Displays the keychains configured on the device.

## Configuration Example for Keychain Management

This example shows how to configure a keychain named `bgp keys`. Each key text string is encrypted. Each key has longer accept lifetimes than send lifetimes, to help prevent lost communications by accidentally configuring a time in which there are no active keys.

```
key chain bgp-keys
key 0
  key-string 7 zqdest
  accept-lifetime 00:00:00 Jun 01 2013 23:59:59 Sep 12 2013
  send-lifetime 00:00:00 Jun 01 2013 23:59:59 Aug 12 2013
```

```

key 1
  key-string 7 uaeqdyito
  accept-lifetime 00:00:00 Aug 12 2013 23:59:59 May 12 2013
  send-lifetime 00:00:00 Sep 12 2013 23:59:59 Aug 12 2013
key 2
  key-string 7 eekgsdyd
  accept-lifetime 00:00:00 Nov 12 2013 23:59:59 Mar 12 2013
  send-lifetime 00:00:00 Dec 12 2013 23:59:59 Feb 12 2013

```

## Where to Go Next

For information about routing features that use keychains, see the *Cisco Nexus 9000 Series NX-OS Unicast Routing Configuration Guide*.

## Additional References for Keychain Management

### Related Documents

Related Topic	Document Title
Border Gateway Protocol	<i>Cisco Nexus 9000 Series NX-OS Unicast Routing Configuration Guide</i>
OSPFv2	<i>Cisco Nexus 9000 Series NX-OS Unicast Routing Configuration Guide</i>

### Standards

Standards	Title
No new or modified standards are supported by this feature, and support for existing standards has not been modified by this feature.	—

