

Basic Device Management

This chapter contains the following sections:

- About Basic Device Management, on page 1
- Default Settings for Basic Device Parameters, on page 2
- Changing the Device Hostname, on page 2
- Configuring the MOTD Banner, on page 3
- Configuring the Time Zone, on page 4
- Configuring Summer Time (Daylight Saving Time), on page 5
- Manually Setting the Device Clock, on page 6
- Setting the Clock Manager, on page 7
- Managing Users, on page 8
- Verifying the Device Configuration, on page 9

About Basic Device Management

This section provides information about basic device management.

Device Hostname

You can change the device hostname displayed in the command prompt from the default (switch) to another character string. When you give the device a unique hostname, you can easily identify the device from the command-line interface (CLI) prompt.

Message-of-the-Day Banner

The message-of-the-day (MOTD) banner displays before the user login prompt on the device. This message can contain any information that you want to display for users of the device.

Device Clock

If you do not synchronize your device with a valid outside timing mechanism, such as an NTP clock source, you can manually set the clock time when your device boots.

Clock Manager

The Cisco NX-OS device might contain clocks of different types that might need to be synchronized. These clocks are a part of various components (such as the supervisor, line card processors, or line cards), and each might be using a different protocol.

The clock manager provides a way to synchronize these different clocks.

Time Zone and Summer Time (Daylight Saving Time)

You can configure the time zone and summer time (daylight saving time) setting for your device. These values offset the clock time from Coordinated Universal Time (UTC). UTC is International Atomic Time (TAI) with leap seconds added periodically to compensate for the Earth's slowing rotation. UTC was formerly called Greenwich Mean Time (GMT).

User Sessions

You can display the active user session on your device. You can also send messages to the user sessions. For more information about managing user sessions and accounts, see the *Cisco Nexus 9000 Series NX-OS Security Configuration Guide*.

Default Settings for Basic Device Parameters

This table lists the default settings for basic device parameters.

Table 1: Default Basic Device Parameters

Parameters	Default
MOTD banner text	User Access Verification
Clock time zone	UTC

Changing the Device Hostname

You can change the device hostname displayed in the command prompt from the default (switch) to another character string.

- 1. configure terminal
- **2.** {**hostname** | **switchname**} *name*
- 3. exit
- 4. (Optional) copy running-config startup-config

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	<pre>switch# configure terminal switch(config)#</pre>	
Step 2	{hostname switchname} name	Changes the device hostname. The <i>name</i> argument is
	Example:	alphanumeric and case sensitive. The default is switch.
	Using the hostname command:	Note The switchname command performs the same function as the bostname command
switch(co Engineer:	<pre>switch(config)# hostname Engineering1 Engineering1(config)#</pre>	Beginning with Cisco NX-OS Release 7.0(3)I7(3), a maximum length of 63
	Using the switchname command:	characters for the switchhame is supported.
	Engineering1(config)# switchname Engineering2 Engineering2(config)#	
Step 3	exit	Exits global configuration mode.
	Example:	
	Engineering2(config)# exit Engineering2#	
Step 4	(Optional) copy running-config startup-config	Copies the running configuration to the startup
	Example:	configuration.
	Engineering2# copy running-config startup-config	

Configuring the MOTD Banner

You can configure the MOTD to display before the login prompt on the terminal when a user logs in. The MOTD banner has the following characteristics:

- Maximum of 80 characters per line
- Maximum of 40 lines

- 1. configure terminal
- 2. banner motd delimiting-character message delimiting-character
- 3. exit
- 4. (Optional) show banner motd
- 5. (Optional) copy running-config startup-config

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	<pre>switch# configure terminal switch(config)#</pre>	
Step 2	banner motd <i>delimiting-character message delimiting-character</i>	Configures the MOTD banner. Do not use the <i>delimiting-character</i> in the <i>message</i> text.
	Example: switch(config) # banner motd #Welcome to the Switch switch(config) #	 Note Beginning from Cisco NX-OS Release 10.1(x), the following special characters (", %, >, <, '', (space), and ASCII characters < 0x15) are invalid as delimiting characters. If an existing MOTD banner with these delimiting characters is edited or a fresh banner is added with these delimiting characters, the banner is not configured to the running configuration. When you upgrade from an earlier release i.e, before 10.x releases to an existing 10.x releases, there is no impact on the configuration in the CLI and the configuration.
Step 3	<pre>exit Example: switch(config)# exit switch#</pre>	Exits global configuration mode.
Step 4	(Optional) show banner motd	Displays the configured MOTD banner.
	Example: switch# show banner motd	
Step 5	(Optional) copy running-config startup-config Example: switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

Configuring the Time Zone

You can configure the time zone to offset the device clock time from UTC.

- 1. configure terminal
- 2. clock timezone zone-name offset-hours offset-minutes

- 3. exit
- **4.** (Optional) **show clock**
- 5. (Optional) copy running-config startup-config

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	Example:	
	<pre>switch# configure terminal switch(config)#</pre>	
Step 2	clock timezone zone-name offset-hours offset-minutes	Configures the time zone. The <i>zone-name</i> argument is a
	Example:	3-character string for the time zone acronym (for example, PST or EST) The <i>offset-hours</i> argument is the offset from
	switch(config)# clock timezone EST -5 0	the UTC and the range is from -23 to 23 hours. The range for the <i>offset-minutes</i> argument is from 0 to 59 minutes.
Step 3	exit	Exits global configuration mode.
	Example:	
	switch(config)# exit switch#	
Step 4	(Optional) show clock	Displays the time and time zone.
	Example:	
	switch# show clock	
Step 5	(Optional) copy running-config startup-config	Copies the running configuration to the startup
	Example:	configuration.
	switch# copy running-config startup-config	

Configuring Summer Time (Daylight Saving Time)

You can configure when summer time, or daylight saving time, is in effect for the device and the offset in minutes.

- 1. configure terminal
- **2.** clock summer-time zone-name start-week start-day start-month start-time end-week end-day end-month end-time offset-minutes
- 3. exit
- 4. (Optional) show clock detail
- 5. (Optional) copy running-config startup-config

DETAILED STEPS

	Command or Action	Purpose
Step 1	configure terminal	Enters global configuration mode.
	<pre>Example: switch# configure terminal switch(config)#</pre>	
Step 2	<pre>clock summer-time zone-name start-week start-day start-month start-time end-week end-day end-month end-time offset-minutes Example: switch(config) # clock summer-time PDT 1 Sunday March 02:00 1 Sunday November 02:00 60</pre>	Configures summer time or daylight saving time. The <i>zone-name</i> argument is a three character string for the time zone acronym (for example, PST and EST). The values for the <i>start-day</i> and <i>end-day</i> arguments are Monday , Tuesday , Wednesday , Thursday , Friday , Saturday , and Sunday . The values for the <i>start-month</i> and <i>end-month</i> arguments are January , February , March , April , May , June , July , August , September , October , November , and December . The value for the <i>start-time</i> and <i>end-time</i> arguments are in the format <i>hh:mm</i> . The range for the <i>offset-minutes</i> argument is from 0 to 1440 minutes.
Step 3	exit	Exits global configuration mode.
	Example: switch(config)# exit switch#	
Step 4	(Optional) show clock detail	Displays the configured MOTD banner.
	<pre>Example: switch(config)# show clock detail</pre>	
Step 5	(Optional) copy running-config startup-config Example: switch# copy running-config startup-config	Copies the running configuration to the startup configuration.

Manually Setting the Device Clock

You can set the clock manually if your device cannot access a remote time source.

Before you begin

Configure the time zone.

SUMMARY STEPS

1. clock set time day month year

2. (Optional) **show clock**

DETAILED STEPS

	Command or Action	Purpose
Step 1	clock set time day month year	Configures the device clock.
	Example:	The format for the <i>time</i> argument is <i>hh:mm:ss</i> .
	switch# clock set 15:00:00 30 May 2013 Fri May 30 15:14:00 PDT 2013	The range for the <i>day</i> argument is from 1 to 31.
		The values for the <i>month</i> argument are January , February , March , April , May , June , July , August , September , October , November , and December .
		The range for the <i>year</i> argument is from 2000 to 2030.
Step 2	(Optional) show clock	Displays the current clock value.
	Example:	
	switch(config)# show clock	

Setting the Clock Manager

You can configure the clock manager to synchronize all the clocks of the components in the Cisco Nexus device.

SUMMARY STEPS

- **1.** clock protocol protocol
- 2. (Optional) show run clock_manager

DETAILED STEPS

	Command or Action	Purpose
Step 1	clock protocol protocol	Configures the clock manager.
	Example: switch# clock protocol ntp	The values for the <i>protocol</i> argument are ntp , ptp , and none .
		The following describes the values:
		• ntp —Synchronizes clocks with Network Time Protocol (NTP).
		• ptp —Synchronizes clocks with Precision Time Protocol (PTP) as described by IEEE 1588.
		• none —Uses clock set <i>HH:MM:SS</i> to set the supervisor clock.
		Note When none is used, the clock must be configured.

	Command or Action	Purpose
		Note Once the protocol is configured, the clock must use that protocol.
Step 2	(Optional) show run clock_manager	Displays the configuration of the clock manager.
	Example:	
	switch# show run clock_manager	

Managing Users

You can display information about users logged into the device and send messages to those users.

Displaying Information about the User Sessions

You can display information about the user session on the device.

SUMMARY STEPS

1. show users

DETAILED STEPS

	Command or Action	Purpose
Step 1	show users	Displays the user sessions.
	Example:	
	switch# show users	

Sending a Message to Users

You can send a message to active users currently using the device CLI.

SUMMARY STEPS

- **1.** (Optional) **show users**
- 2. send [session line] message-text

DETAILED STEPS

	Command or Action	Purpose
Step 1	(Optional) show users	Displays the active user sessions.
	Example:	
	switch# show users	

	Command or Action	Purpose
Step 2	send [session line] message-text Example:	Sends a message to all active users or to a specific user. The message can be up to 80 alphanumeric characters and is case sensitive
	switch# send Reloading the device is 10 minutes!	

Verifying the Device Configuration

To verify the configuration, use one of the following commands:

Command	Purpose
show running-config	Displays the running configuration.
show startup-config	Displays the startup configuration.
show time-stamp running-config last-changed	Displays the timestamp when the running configuration was last changed.

This option masks the sensitive words in running configuration output with <removed> keyword.

I