



Monitoring QoS Statistics

- [About QoS Statistics, on page 1](#)
- [Prerequisites for Monitoring QoS Statistics, on page 1](#)
- [Guidelines and Limitations for Monitoring QoS Statistics, on page 1](#)
- [Enabling Statistics, on page 4](#)
- [Monitoring the Statistics, on page 5](#)
- [Clearing Statistics, on page 5](#)
- [Configuration Examples For Monitoring QoS Statistics, on page 6](#)

About QoS Statistics

You can display various QoS statistics for the device. By default, statistics are enabled, but you can disable this feature. For more information, see the Configuration Examples For Monitoring QoS Statistics section.

Prerequisites for Monitoring QoS Statistics

Monitoring QoS statistics has the following prerequisites:

- You must be familiar with using modular QoS CLI.
- You are logged on to the device.

Guidelines and Limitations for Monitoring QoS Statistics

Monitoring QoS statistics has the following guidelines and limitations:

- **show** commands with the **internal** keyword are not supported.
- In 64 bit architecture:
 - The queuing tabular output will retain same value of 15 seconds.
 - The tabular output after **clear statistics**, will hold zero statistics for maximum of 15 seconds.
- The **show queuing interface** command can display information about internal interfaces.

The command format for this information is specified as **ii x/y/z**. Where x is the module number, y is the value 1, and z is the internal interface number within the module.



Note The number of internal interfaces within a module varies based on the type of the line card.



Note Alternatively, you can display information about internal interfaces by providing the module number in the **show queuing** command. By including the module number, queuing information for both front-panel and internal interfaces of the module are displayed together.

Example:

```
switch# show queuing interface ii 4/1/2
```

```
slot 4
=====
```

```
Egress Queuing for ii4/1/2 [System]
```

QoS-Group#	Bandwidth%	PrioLevel	Min	Shape Max	Units
3	-	1	-	-	-
2	0	-	-	-	-
1	0	-	-	-	-
0	100	-	-	-	-
+-----+-----+-----+-----+-----+-----+					
QOS GROUP 0					
+-----+-----+-----+-----+-----+-----+					
Unicast OOBFC Unicast Multicast					
+-----+-----+-----+-----+-----+-----+					
Tx Pkts 0 0 235775					
Tx Byts 0 0 22634400					
Dropped Pkts 0 0 0					
Dropped Byts 0 0 0					
Q Depth Byts 0 0 0					
+-----+-----+-----+-----+-----+-----+					
QOS GROUP 1					
+-----+-----+-----+-----+-----+-----+					
Unicast OOBFC Unicast Multicast					
+-----+-----+-----+-----+-----+-----+					
Tx Pkts 0 0 0					
Tx Byts 0 0 0					
Dropped Pkts 0 0 0					
Dropped Byts 0 0 0					
Q Depth Byts 0 0 0					
+-----+-----+-----+-----+-----+-----+					
QOS GROUP 2					
+-----+-----+-----+-----+-----+-----+					
Unicast OOBFC Unicast Multicast					
+-----+-----+-----+-----+-----+-----+					
Tx Pkts 0 0 0					
Tx Byts 0 0 0					

	Dropped Pkts		0		0		0	
	Dropped Byts		0		0		0	
	Q Depth Byts		0		0		0	
+-----+								
	QOS GROUP 3							
+-----+								
			Unicast		OOBFC Unicast		Multicast	
+-----+								
	Tx Pkts		0		0		0	
	Tx Byts		0		0		0	
	Dropped Pkts		0		0		0	
	Dropped Byts		0		0		0	
	Q Depth Byts		0		0		0	
+-----+								
	CONTROL QOS GROUP							
+-----+								
			Unicast		OOBFC Unicast		Multicast	
+-----+								
	Tx Pkts		0		0		0	
	Tx Byts		0		0		0	
	Dropped Pkts		0		0		0	
	Dropped Byts		0		0		0	
	Q Depth Byts		0		0		0	
+-----+								
	SPAN QOS GROUP							
+-----+								
			Unicast		OOBFC Unicast		Multicast	
+-----+								
	Tx Pkts		0		0		0	
	Tx Byts		0		0		0	
	Dropped Pkts		0		0		0	
	Dropped Byts		0		0		0	
	Q Depth Byts		0		0		0	
+-----+								

Cannot get ingress statistics for if_index: 0x4a180001 Error 0xe

Port Egress Statistics

WRED Drop Pkts 0

PFC Statistics

TxPPP:		0, RxPPP:		0		
COS	QOS Group	PG	TxPause	TxCount	RxPause	RxCount
0	-	-	Inactive	0	Inactive	0
1	-	-	Inactive	0	Inactive	0
2	-	-	Inactive	0	Inactive	0
3	-	-	Inactive	0	Inactive	0
4	-	-	Inactive	0	Inactive	0
5	-	-	Inactive	0	Inactive	0
6	-	-	Inactive	0	Inactive	0
7	-	-	Inactive	0	Inactive	0

- On the Cisco Nexus N9364E-SG2-Q switches, per-interface statistics are not available when the same QoS policy is applied to multiple interfaces. The label is shared, even with the stats option enabled. Statistics are aggregated across interfaces with the same policy. This change improves scalability. However, note that individual interface statistics are no longer provided.
- Beginning with Cisco NX-OS Release 10.5(3)F, the Cisco N9364E-SG2-Q switch provides support for Queuing Statistics.

Enabling Statistics

You can enable or disable QoS statistics for all interfaces on the device. By default, QoS statistics are enabled.

SUMMARY STEPS

1. **configure terminal**
2. Enable or disable QoS statistics:
 - Enable QoS statistics:
qos statistics
 - Disable QoS statistics:
no qos statistics
3. **show policy-map interface**
4. (Optional) **show policy-map interface brief**
5. **copy running-config startup-config**

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	configure terminal Example: <pre>switch# configure terminal switch(config)#</pre>	Enters global configuration mode.
Step 2	Enable or disable QoS statistics: • Enable QoS statistics: qos statistics • Disable QoS statistics: no qos statistics Example: • Enable QoS statistics: <pre>switch(config)# qos statistics</pre> • Disable QoS statistics: <pre>switch(config)# no qos statistics</pre>	• Enable QoS statistics: Enables QoS statistics on all interfaces. • Disable QoS statistics: Disables QoS statistics on all interfaces.
Step 3	show policy-map interface Example:	(Optional) Displays the statistics status and the configured policy maps on all interfaces.

	Command or Action	Purpose
	<code>switch(config)# show policy-map interface</code>	
Step 4	(Optional) show policy-map interface brief Example: <code>switch(config)# show policy-map interface brief</code>	Displays brief output of all policies and policy-name only in brief output displays maximum of 25 character length for easy understandability.
Step 5	copy running-config startup-config Example: <code>switch(config)# copy running-config startup-config</code>	(Optional) Saves the running configuration to the startup configuration.

Monitoring the Statistics

You can display QoS statistics for all interfaces or a selected interface, data direction, or a QoS type.

SUMMARY STEPS

1. **show policy-map** [*policy-map-name*] [**interface** [**input** | **output**]] [**type** {**control-plane** | **network-qos** | **qos** | **queuing**}]

DETAILED STEPS

Procedure

	Command or Action	Purpose
Step 1	show policy-map [<i>policy-map-name</i>] [interface [input output]] [type { control-plane network-qos qos queuing }] Example: <code>switch# show policy-map interface ethernet 2/1</code>	Displays statistics and the configured policy maps on all interfaces, the specified interface, or on a specified data direction or QoS type. Note Starting with Cisco NX-OS Release 10.6(1)F , the <code>show queuing</code> command on the N9336C-SE1 platform works independently of the <code>qos statistics</code> configuration. Previously, the <code>show queuing</code> output was only available if <code>qos statistics</code> was enabled. For the N9364E-SG2-Q and N9364E-SG2-O platforms, this behavior was introduced in Cisco NX-OS Release 10.5(3)F.

Clearing Statistics

You can clear QoS statistics for all interfaces or a selected interface, data direction, or QoS type.

QOS GROUP 1			
Tx Pkts	0	Dropped Pkts	0
QOS GROUP 2			
Tx Pkts	0	Dropped Pkts	0
QOS GROUP 3			
Tx Pkts	0	Dropped Pkts	0
CONTROL QOS GROUP 4			
Tx Pkts	58	Dropped Pkts	0
SPAN QOS GROUP 5			
Tx Pkts	0	Dropped Pkts	948

