



Expand Cisco HyperFlex System Clusters

- [Cluster Expansion Guidelines, on page 1](#)

Cluster Expansion Guidelines

Please review these guidelines before expanding your cluster.

- Edge Cluster Expansion is supported in Cisco HyperFlex Data Platform Release 4.0(2e) and later. You can expand ESXi based 10/25 GbE HyperFlex Edge clusters with 3 nodes via Intersight.
- HyperFlex Edge Cluster expansion is supported only on clusters deployed using Intersight. Edge Cluster expansion using Intersight is not supported for clusters deployed through the HyperFlex OVA Installer.



Note Cluster expansion is not supported on HyperFlex 2-Node Edge clusters with this feature.

Expansion of Edge Clusters on HyperFlex version 4.0(2d) and earlier is not supported.

- Please refer to the Intersight documentation for all requirements: [Expand Cisco HyperFlex Clusters in Cisco Intersight](#).

