



HyperFlex Cluster Profile Operations

- [Cloning HyperFlex Cluster Profiles, on page 1](#)
- [Unassigning HyperFlex Cluster Profiles, on page 1](#)

Cloning HyperFlex Cluster Profiles

You can clone a successfully deployed HyperFlex Cluster Profile, and then use that copy as the basis to create new clusters. To clone a HyperFlex Cluster Profile, do the following:

-
- Step 1** Navigate to **CONFIGURE > Profiles > HyperFlex Cluster Profiles**. Click on the Ellipsis icon (...) and select **Clone**.
- Step 2** In the **Clone HyperFlex Cluster Profile** dialog box, enter the name for the cloned cluster, select the **Organization**, and choose the number of clones. Click **Clone**.
- Note** For multiple clones of a profile, a consecutive index is appended to the given clone name.
- Step 3** The **HyperFlex Cluster Profiles** page now contains a copy of the cloned cluster. Before deploying the cloned cluster you can review the configuration, and make any necessary changes to the policies.
-

Unassigning HyperFlex Cluster Profiles

Unassigning removes all assigned servers from the cluster profile. This action is specific to Intersight and will not result in a factory reset or affect the operation of the running cluster. To fully clean up this cluster from Intersight, please unclaim the HyperFlex cluster and associated servers.

-
- Step 1** Navigate to **CONFIGURE > Profiles > HyperFlex Cluster Profiles** page and identify the cluster to unassign.
- Step 2** Click on the Ellipsis icon (...) and select **Unassign**.
- Step 3** Confirm the Unassign operation.
-

