



Post Upgrade Tasks

- [Confirm That Upgrade Is Complete, on page 1](#)
- [Check Firmware Versions in UCSM, on page 2](#)
- [Verify If Cleaner Is Running, on page 2](#)

Confirm That Upgrade Is Complete

- Step 1** Log in to Cisco UCS Manager to ensure that the HX nodes have no pending server activities.
From **Servers tab > Servers > Pending Activities** tab check for all server activities.
- Step 2** Confirm that the HX nodes match the expected firmware version.
In Cisco UCS Manager, from **Equipment > Firmware Management > Installed Firmware** tab, verify for the correct firmware version.
- Step 3** Log in to any controller VM through SSH.

```
# ssh root@controller_vm_ip
```
- Step 4** Confirm the HyperFlex Data Platform version.

```
# stcli cluster version
```



```
Cluster version: 2.5(1c)
Node HX02 version: 2.5(1c)
Node HX05 version: 2.5(1c)
Node HX01 version: 2.5(1c)
Node HX03 version: 2.5(1c)
Node HX04 version: 2.5(1c)
```
- Step 5** Verify that the HX storage cluster is online and healthy.

```
# stcli cluster info|grep -i health
```


Sample output:
healthstate : healthy
state: healthy
storage cluster is healthy
- Step 6** Verify that the datastores are up and are mounted properly on the ESXi host.

From the HX controller VMs:

```
# stcli datastore list
```

From the ESXi host:

```
# esxcfg-nas -l
```

Step 7 Verify that the upgrade is complete and is successful.

```
stcli cluster upgrade-status
```

Nodes up to date:

```
[HX-Cluster, HX-Node-1(1.1.1.1), HX-Node-2(1.1.1.2), HX-Node-3(1.1.1.3)]
```

```
Cluster upgrade succeeded.
```

Step 8 For each browser interface you use, empty the cache and reload the browser page to refresh the HX Connect content.

Check Firmware Versions in UCSM

In Cisco UCS Manager, from **Equipment > Firmware Management > Installed Firmware** tab, verify for the correct firmware version.

For a complete list of hardware and software inter-dependencies, refer to respective UCSM release version using the [UCS Hardware and Software Compatibility tool](#).

Verify If Cleaner Is Running

If Upgrade Fails

If upgrade fails, run cleaner. This is required even if you do not want to continue with an upgrade.

To run cleaner manually, restart the storage cluster cleaner using the following command.

```
stcli cleaner start [-h] [--id ID | --ip NAME]
```

Syntax Description	Option	Required or Optional	Description
	--id ID	Optional.	ID of storage cluster node. The ID is listed in the <code>stcli cluster info</code> command.
	--ip NAME	Optional.	IP address of storage cluster node. The IP is listed in the <code>stcli cluster info</code> command.

If Upgrade Completes

If upgrade completes, verify if cleaner is running. To obtain information about the storage cluster cleaner for the specified node, use the following command.

```
stcli cleaner info [-h] [--id ID | --ip NAME]
```

Syntax Description	Option	Required or Optional	Description
	--id ID	Optional.	ID of storage cluster node. The ID is listed in the <code>stcli cluster info</code> command.
	--ip NAME	Optional.	IP address of storage cluster node. The IP is listed in the <code>stcli cluster info</code> command.

