



Symbols

* (asterisk), in Administration Console windows [1-10](#), [1-13](#)

A

- About, in Administration Console [1-15](#)
- accessing
- Activity Log Management window [2-81](#)
 - Activity Log Options window [2-84](#)
 - Administration Console [1-12](#)
 - Alerts window [2-106](#)
 - Channels window [2-3](#)
 - Cross-Mute Groups window [2-117](#)
 - Descriptors window [9-46](#)
 - Dial Engine drawer [7-1](#)
 - Dispatch Console Installer window [2-120](#)
 - Dispatch Console Regions window [2-122](#)
 - Download Dispatch Console window [5-2](#)
 - Incidents window [2-65](#)
 - Key Sets window [2-54](#)
 - Keys window [2-57](#)
 - License Management window [2-71](#)
 - Location Server window [2-155](#)
 - Locations window [2-37](#)
 - Multicast Pool window [2-40](#)
 - My Profile window [5-1](#)
 - Notifiers window [2-146](#)
 - online help [1-15](#)
 - Ops View window [6-2](#)
 - Options window [2-85](#)
 - Policy Management drawer [8-1](#)
 - Quick Launch Applications window [2-164](#)
 - Radio Control Services window [2-150](#)
 - Radios window [9-7](#)
 - Reporting window [2-138](#)
 - Spark Server window [2-159](#)
 - Trust Management window [2-132](#)
 - UMS window [2-46](#)
 - User Groups window [3-33](#)
 - Users window [3-2](#)
 - Versions window [2-125](#)
 - Virtual Talk Groups window [4-1](#)
- action
- activate VTG [8-6](#)
 - definition [8-1](#)
 - deleting [8-13](#)
 - dial-out [8-6](#), [8-11](#)
 - in multi-purpose type policy [8-9](#)
 - invite to VTG [8-6](#), [8-9](#)
 - managing [8-6](#)
 - notification [8-6](#)
 - overview [8-6](#)
 - reactivating [8-20](#)
 - VTG add participants [8-6](#), [8-11](#)
- activating
- policy [8-17](#)
 - VTG [4-14](#), [8-9](#)
- active
- channel state in Channel window, described [2-9](#)
 - incident [2-64](#)
 - multicast address [2-41](#), [2-44](#)
 - VTG, managing [4-2](#), [4-13](#)
- active users
- fields, described [2-77](#)

- viewing information for [2-77](#)
- activity log
 - choosing activities to log [2-83](#)
 - described [2-80](#)
 - downloading [2-81](#)
 - downloading, archived [2-82](#)
 - managing [2-80](#)
 - options [2-83](#)
 - types [2-83](#)
 - understanding the Activity Log Management window [2-80](#)
 - viewing [2-81](#)
- activity log retention period, setting described [2-86](#)
- adding
 - alert [2-107](#)
 - alert tone set [2-114](#)
 - channel [2-6](#)
 - channel group [2-29](#)
 - Cisco Spark server [2-161](#)
 - cross-mute group [2-117](#)
 - key [2-59](#)
 - keyset [2-55](#)
 - locations [2-38](#)
 - location server [2-157](#)
 - multicast address to multicast pool [2-42](#)
 - notifier [2-148](#)
 - quick launch app [2-164](#)
 - radio [9-8](#)
 - radio and tone descriptors [9-48](#)
 - RCS [2-153](#)
 - regions [2-122](#)
 - report collector [2-143](#)
 - sequence of multicast addresses to multicast pool [2-42](#)
 - UMS [2-51](#)
 - user [3-4](#)
 - user group [3-35](#)
 - VTG [4-7](#)
- address
 - e-mail, of user [3-8](#)
 - information for user [3-8](#)
 - multicast address [2-41](#)
 - of user, in user profile [5-4](#)
 - street, of user in Users window [3-8](#)
- Address tab [3-8](#)
- Administration Console
 - accessing [1-12](#)
 - Authentication window [1-12](#)
 - client system requirements [1-12](#)
 - displaying current data [1-11](#)
 - exiting [1-13](#)
 - logging in [1-12](#)
 - logging out [1-13](#)
 - obtaining information about [1-15](#)
 - online help [1-15](#)
 - overview [1-9](#)
 - refreshing [1-11](#)
 - session timeout period setting [2-86](#)
 - timeout [1-15](#)
- advanced Dispatch Console permissions [3-12](#)
- Advanced Dispatch Console Permissions, in user profile [5-6](#)
- alert
 - adding [2-107](#)
 - associating
 - with user [2-111](#)
 - deleting
 - from system [2-113](#)
 - description [2-105](#)
 - editing information [2-109](#)
 - removing
 - from system [2-113](#)
 - viewing associations [2-112](#)
 - viewing information [2-109](#)
- alerting tones
 - See* alert tones
- alert notification [8-8](#)

Alerts window [2-106](#)

alert tones

- adding [2-114](#)
- associating ops views [2-115](#)
- deleting [2-116](#)
- managing [2-113](#)
- viewing or editing alert tone sets [2-115](#)

allow complex key setting

- end devices for users [3-12](#)
- user profile [5-6](#)

allow latch

- channel [2-14](#)
- in Permission tab [3-12](#)
- radio [9-15](#)

Allow Latch, in user profile [5-6](#)

allow secure channel patch

- end device for users [3-12](#)
- user profile [5-6](#)

all role, described [1-8, 3-9](#)

archived incident

- archive file name [2-88](#)
- configuring [2-88](#)
- maximum file size [2-88](#)
- run archive at [2-89](#)

associating

- alert tones to ops views [2-115](#)
- channel with user [3-19](#)
- ops views with user group [3-37](#)
- ops view with user [3-24](#)
- policy with user [3-20, 8-16](#)
- radio with user [3-21](#)
- user with policy [3-20, 8-16](#)

Associations tab [3-13](#)

audio, disable [3-12](#)

audio client [1-7](#)

Authentication window [1-12](#)

B

backup and restore operations

- overview [10-1](#)
- performing [10-1](#)

browser

- guidelines for using [1-11](#)
- memory issues [1-12](#)
- pop-up windows, disabling blocking [1-11](#)
- refreshing windows [1-11](#)

C

caveats [9-6](#)

certificates

- installing [2-135](#)
- obtaining [2-135](#)
- signed [2-135](#)
- third party [2-135](#)

changing status of VTG [4-14](#)

channel

- active state [2-16](#)
- active status [2-9](#)
- adding
 - new [2-6](#)
 - to VTG template [4-5](#)
 - with CSV file [2-23](#)
- allow association to users, field described [2-8](#)
- allow latch, described [2-14](#)
- allow use in VTGs field, described [2-8](#)
- associated [3-23](#)
- associated ops view, field described [2-12](#)
- associating
 - radio signals with user [2-21](#)
 - to ops views [2-18](#)
 - user with [3-19](#)
 - with user [2-19](#)
- available [3-23, 3-37](#)
- changing status [2-16](#)

- channel color, field described [2-14](#)
 - channel region, field described [2-14](#)
 - channel selector, field described [2-12](#)
 - deleting
 - from a channel group [2-32](#)
 - from system [2-23](#)
 - with CSV file [2-27](#)
 - described [2-2](#)
 - disabled status [2-9](#)
 - disabling [2-16](#)
 - editing information [2-6](#)
 - enabled status [2-9](#)
 - enable latch, field described [2-14, 9-15](#)
 - enable VAD, field described [2-14](#)
 - enabling [2-16](#)
 - importing [2-23](#)
 - in inactive VTG [4-5](#)
 - listen only, field described [2-14](#)
 - location [2-10](#)
 - location, field described [2-10](#)
 - mixing secure and non-secure in VTG [4-5](#)
 - multicast address, field described [2-11](#)
 - multicast address port, field described [2-11](#)
 - name, field described [2-7](#)
 - radio, field described [2-11](#)
 - region field described [2-14](#)
 - removing
 - from channel group [2-32](#)
 - from system [2-23](#)
 - removing with CSV file [2-23](#)
 - RX mute during PTT, field described [2-13](#)
 - search for in VTG window [4-25](#)
 - secure, field described [2-8](#)
 - status [2-9](#)
 - type, field described [2-10](#)
 - unavailable for VTG [4-23](#)
 - viewing
 - associations [2-22](#)
 - information [2-6](#)
- Channel dashboard
 - elements [11-3](#)
 - overview [11-3](#)
 - channel group
 - adding
 - new [2-29](#)
 - to VTG template [4-5](#)
 - associated ops view, field described [2-31](#)
 - associated VTG [2-32](#)
 - associated VTG status [2-32](#)
 - associating ops views to [2-33](#)
 - channels in [2-2](#)
 - deleting [2-34](#)
 - deleting a channel from [2-32](#)
 - described [2-2](#)
 - editing information [2-30](#)
 - name [2-31](#)
 - removing
 - channel from [2-32](#)
 - from system [2-34](#)
 - viewing
 - associations [2-32](#)
 - information [2-30](#)
 - Channel Selector Permissions [3-22](#)
 - channel selectors
 - associated channel field, described [9-5](#)
 - enabled status check box [9-5](#)
 - key [9-5](#)
 - label [9-5](#)
 - strapping [9-5](#)
 - Cisco Instant Connect
 - Administration Console [1-9](#)
 - database
 - backing up [10-5](#)
 - logs [10-9](#)
 - restoring [10-6](#)
 - deployment options [1-3](#)
 - getting started [1-1](#)
 - hardware components [1-3](#)

- initial configuration [1-1](#)
- logging in to [5-1](#)
- Login window [5-1](#)
- overview [1-1, 1-3](#)
- Restrict Operator Role assignments [2-87](#)
- role [1-7, 1-8](#)
- server [1-4](#)
- setting up [1-1](#)
- software components [1-3](#)
- Cisco Instant Connect server
 - Administration Console [1-9](#)
 - described [1-4](#)
 - SSL certificate on [B-1](#)
 - usage guidelines [1-10](#)
- Cisco Instant Connect session timeout [2-87](#)
- Cisco IPICS service
 - about [A-1](#)
 - configuring
 - for Cisco Unified Communications Manager [A-1](#)
 - for Cisco Unified Communications Manager Express [A-3](#)
 - disabling log in [A-2](#)
 - subscribing to [A-3](#)
 - using [A-4](#)
- Cisco Spark
 - enable integration [2-88](#)
 - integration with [2-158](#)
 - server
 - adding [2-161](#)
 - deleting
 - Cisco Spark server [2-162](#)
 - editing information [2-160](#)
 - viewing information [2-160](#)
- Cisco Unified Communications Manager
 - configuring Cisco IPICS service for [A-1](#)
 - function in a Cisco Instant Connect deployment [1-7](#)
- Cisco Unified Communications Manager Express
 - configuring Cisco IPICS service for [A-3](#)
- Cisco Unified Contact Center Express
 - function in a Cisco Instant Connect deployment [1-7](#)
- Cisco Unified IP Phone
 - accessing Cisco IPICS service from [A-4](#)
 - allow latch [3-12](#)
 - audio [3-12](#)
 - dial login for [3-9](#)
 - digit ID [3-10, 5-5](#)
 - digit password [3-10](#)
 - disable [3-11](#)
 - latching [3-13](#)
 - listen only [3-12, 3-13](#)
 - managing for user [3-10](#)
 - mute [3-11](#)
 - subscribing to Cisco IPICS service [A-3](#)
 - timeout period setting [2-88](#)
 - unmute [3-11](#)
 - user in VTG [4-15](#)
 - using as a PTT device [A-1](#)
- client
 - log out, setting described [2-95](#)
 - maximum video size, setting described [2-95](#)
 - update poll, setting described [2-94](#)
- client device
 - UMS available [2-102](#)
- Client tab [3-10](#)
- Cluster Status dashboard
 - elements [11-7](#)
 - overview [11-7](#)
- codec
 - field described [2-11](#)
 - for policy engine [7-24](#)
 - radio [9-10](#)
- communications preferences
 - configuring [3-14](#)
 - described [3-14](#)
 - managing [3-14](#)
- complex key setting
 - end devices for users [3-12](#)

- connection type, multicast address [2-41, 2-44](#)
 - control function permissions [3-22](#)
 - control functions [3-23](#)
 - copying a user [3-4](#)
 - cross-mute group
 - adding [2-117](#)
 - deleting [2-119](#)
 - described [2-116](#)
 - removing [2-119](#)
 - updating information for [2-118](#)
 - viewing users in [2-119](#)
 - Cross-Mute Groups window
 - accessing [2-117](#)
 - described [2-117](#)
 - CSV file
 - adding
 - channels with [2-23](#)
 - users with [3-28](#)
 - adding channels with [2-23](#)
 - adding users with [3-28](#)
 - removing
 - channels with [2-23](#)
 - users with [3-28](#)
 - removing channels with [2-27](#)
 - removing users with [3-32](#)
 - customized script prompts
 - codec [7-8](#)
 - deleting [7-9](#)
 - described [7-7](#)
 - downloading [7-8](#)
 - renaming [7-9](#)
 - uploading [7-8](#)
 - viewing list of [7-7](#)
 - Customized Script Prompts window [7-7](#)
-
- D**
- Dashboard window, overview [11-1](#)
 - database
 - backing up [10-5](#)
 - manually starting database server [10-14](#)
 - options
 - changing [10-3](#)
 - default [10-3](#)
 - restoring [10-6](#)
 - troubleshooting
 - backup procedure [10-10](#)
 - restore procedure [10-10](#)
 - Database Management window
 - overview [10-2](#)
 - tabs inside of [10-2](#)
 - deactivated VTG [4-14](#)
 - deactive, incident [2-64](#)
 - DEBUG-level error messages [11-9](#)
 - default language folder [7-3](#)
 - Default Talk Priority [3-12, 5-6](#)
 - default tone sequences, configuring [9-6](#)
 - deleting
 - action from policy [8-13](#)
 - alert [2-113](#)
 - alert tones [2-116](#)
 - channel
 - from channel group [2-32](#)
 - from system [2-23](#)
 - channel group [2-34](#)
 - cross-mute group [2-119](#)
 - descriptors [9-49](#)
 - Dispatch Console
 - regions [2-123](#)
 - versions [2-127](#)
 - incident [2-70](#)
 - key from system [2-64](#)
 - keyset [2-57](#)
 - languages [7-5](#)
 - license [2-75](#)
 - locations [2-39](#)
 - multicast address [2-44](#)

- notifier [2-149](#)
- policy [8-17](#)
- quick launch app [2-165](#)
- radio [9-22](#)
- radio and tone descriptors [9-49](#)
- RCS [2-153](#)
- report collector [2-144](#)
- spoken names prompts [7-15](#)
- trigger from policy [8-15](#)
- UMS [2-52](#)
- user [3-28](#)
- user group [3-39](#)
- VTG [4-12](#)
- deployment, of Cisco Instant Connect [1-3](#)
- descriptors
 - deleting [9-49](#)
 - managing radio and tone [9-22](#)
 - updating [9-49](#)
- DFSIG
 - associating
 - keys [2-62](#)
 - keys with, from Radios window [9-20](#)
- DFSIG, defined [1-7](#)
- diagnostic information
 - downloading [11-8](#)
 - viewing [11-7](#)
- Diagnostics window
 - diagnostic summary pane, described [11-8](#)
 - overview [11-1, 11-7](#)
- dial engine
 - codec [7-24](#)
 - described [7-1](#)
 - parameters [7-23](#)
 - services
 - obtaining information about [7-2](#)
 - status [7-2](#)
- Dial Engine drawer, accessing [7-1](#)
- dial engine script
 - See* scripts [7-16](#)
- Dial Engine Script notification [8-8](#)
- dial-in
 - assigning to ops view [6-12](#)
 - floor [8-23](#)
 - phone
 - disable [3-11](#)
 - listen only [3-12](#)
 - managing for user [3-10](#)
 - mute [3-11](#)
 - unmute [3-11](#)
- dialing out to participants in an active VTG [4-20](#)
- dial-in phone
 - listen only [3-13](#)
- dial login
 - configuring [3-9](#)
 - described [3-9](#)
- Dial notification [8-7](#)
- dial-out
 - action [8-6, 8-11](#)
- dial preferences
 - configuring [3-14](#)
 - described [3-14, 5-7](#)
 - order of [3-18](#)
- digit ID [3-10, 5-5](#)
- digit password (PIN) [3-10, 5-5](#)
- disable
 - Cisco Unified IP Phone [3-11](#)
 - Dispatch Console attributes in an active VTG [4-20](#)
 - latch in User Details window [4-19](#)
 - RCS [2-152](#)
 - report collector [2-141](#)
 - UMS [2-50](#)
 - user [3-26](#)
- disable audio, in user profile [5-6](#)
- disabled channel [2-9](#)
- disable Dispatch Console activity log upload, setting
 - described [2-95](#)
- disabled user [3-26](#)

disabling

- audio [3-12](#)
- dial-in phone [3-11](#)
- Dispatch Console [3-11](#)
- end device [3-11](#)
- listen only [3-13](#)
- radio [9-21](#)
- voice activation detection (VAD) [3-13](#)

Dispatch Console

- adding alert tone sets [2-114](#)
- advanced permissions [3-12](#)
- alert tones, *See* alert tones
- allow latch [3-12](#)
- audio [3-12](#)
- changing the state of versions for updates [2-126](#)
- client log out, setting described [2-95](#)
- deleting versions [2-127](#)
- described [1-3, 1-5](#)
- dialer preference [5-7](#)
- Dialer Settings [3-15](#)
- dialer settings [3-14](#)
- disable [3-11](#)
- downloading current version [5-16](#)
- installer, generating [2-120](#)
- Installer window [2-120](#)
- latching [3-13](#)
- listen only [3-12, 3-13](#)
- log files [3-11](#)
- logout, forced [2-77](#)
- managing
 - configuration [2-120](#)
 - for user [3-10](#)
- maximum video size, setting described [2-95](#)
- mute [3-11](#)
- operation caveats when configuring tone sequences [9-45](#)
- recommended update [2-126](#)
- regions
 - adding [2-122](#)

managing [2-121](#)

maximum [2-121](#)

See also regions

unmute [3-11](#)

update poll, setting described [2-94](#)

user in VTG [4-15](#)

versions

changing state [2-126](#)

managing [2-124](#)

uploading [2-126](#)

voice activation detection (VAD) [3-13](#)

Dispatch Console alert tones

See alert tones

dispatcher role

described [1-8, 3-9](#)

responsibilities [4-1](#)

downloading

activity logs [2-81](#)

archived activity logs [2-82](#)

Dispatch Console [5-2](#)

E

e-mail

address of user [3-8](#)

notification

action [8-7](#)

preference [3-14, 3-15, 5-7](#)

enable

Dispatch Console attributes in an active VTG [4-20](#)

latch in User Details window [4-19](#)

radio [9-21](#)

RCS [2-152](#)

report collector [2-141](#)

UMS [2-50](#)

user [3-26](#)

enabled

channel [2-9](#)

user [3-26](#)

enable voice activity detection (VAD), field described [2-14](#)

enabling

 Cisco Unified IP Phone [3-11](#)

 dial-in phone [3-11](#)

 Dispatch Console [3-11](#)

 end device [3-11](#)

 listen only [3-13](#)

 RCS [2-152](#)

 report collector [2-141](#)

 UMS [2-50](#)

 voice activation detection (VAD) [3-13](#)

end device

 audio [3-12](#)

 described [3-10](#)

 disable [3-11](#)

 listen only [3-12, 3-13](#)

 managing for user [3-10](#)

 mute [3-11](#)

 unmute [3-11](#)

ERROR-level error messages [11-9](#)

event, also called active VTG [4-2](#)

executed policy, information about [8-17](#)

executing policy, information about [8-17](#)

expiration date, of password [3-7](#)

Expressway/VCS setting [2-88](#)

F

file size

 of archived incident [2-88](#)

 of report log [2-89](#)

Fixed Connections window [2-162](#)

floor, for dial-in [8-23](#)

G

G.711 [2-11](#)

G.729 [2-11](#)

gateway [1-5](#)

General tab [3-7, 3-9](#)

guidelines

 for using IP multicast addresses with Cisco Instant Connect [2-41](#)

 managing active VTGs [4-13](#)

 managing inactive VTGs [4-5](#)

 multicast address [2-41](#)

 server usage [1-10](#)

H

hangover time [9-11](#)

hardware components, of Cisco Instant Connect [1-3](#)

help, in Administration Console [1-15](#)

I

icons, in users window [3-36](#)

icons in Users window [3-3](#)

ID, of user [3-5](#)

idcsetup.exe [2-120](#)

idle status, for multicast address [2-41, 2-44](#)

image, user [3-7, 5-3](#)

Import Channels using CSV [2-23](#)

Import Users using CSV [3-28](#)

IN_SERVICE [7-2](#)

inactive

 incident. retention period [2-88](#)

 VTGs [4-4](#)

 VTGs, guidelines [4-5](#)

incident

 Activated, field described [2-68](#)

 activating [2-69](#)

 active [2-64](#)

 changing status [2-69](#)

 configuring archive [2-88](#)

 Created, field described [2-68](#)

 Created By, field described [2-68](#)

- Deactivated, field described [2-68](#)
- deactivating [2-69](#)
- deactive [2-64](#)
- definition [2-64](#)
- deleting [2-70](#)
- description, field described [2-68](#)
- editing information [2-68](#)
- ID, field described [2-68](#)
- Incident VTG, field described [2-68](#)
- management [2-65](#)
- name, field described [2-68](#)
- Ops View, field described [2-68](#)
- overview [2-64](#)
- removing [2-70](#)
- state, field described [2-68](#)
- VTG [2-64](#)
- Incident dashboard
 - elements [11-4](#)
 - overview [11-4](#)
- Incidents window
 - accessing [2-65](#)
 - understanding [2-65](#)
- incident VTG
 - activating [2-69](#)
 - changing status [2-69](#)
 - deactivating [2-69](#)
- INFO-level error messages [11-9](#)
- Informix database, manually starting [10-14](#)
- invitation policy type
 - actions in [8-6](#)
 - adding [8-12](#)
 - described [8-4](#)
 - updating [8-12](#)
- invite to VTG action [8-6](#)
- ipics.log
 - downloading [11-11](#)
 - error types [11-9](#)
- IP multicast address, guidelines for using with Cisco Instant Connect [2-41](#)

- IP Phone Text notification [8-7](#)
- IPv6
 - connectivity to Cisco Instant Connect Server [2-45](#)
 - for multicast pool [2-41](#)
 - for UMS [2-49](#)
 - window [2-45](#)
- ISSIG
 - associating
 - keys [2-62](#)
 - keys with, from Radios window [9-20](#)
 - defined [1-6](#)

K

- key
 - adding [2-59](#)
 - associating
 - DFSI gateway [2-62](#)
 - ISSI gateway [2-62](#)
 - with user [2-61](#)
 - deleting, from system [2-64](#)
 - editing information [2-59](#)
 - Name, field described [2-59](#)
 - removing, from system [2-64](#)
 - viewing
 - associations [2-63](#)
 - information [2-59](#)
- keyset
 - active [2-56](#)
 - adding [2-55](#)
 - changing status [2-56](#)
 - deleting, from system [2-57](#)
 - Description, field described [2-56](#)
 - editing information [2-56](#)
 - Id, field described [2-56](#)
 - inactive [2-56](#)
 - Name, field described [2-56](#)
 - removing, from system [2-57](#)
 - Status, field described [2-56](#)

viewing information [2-56](#)

L

languages

- adding [7-4](#)
- default language folder [7-3](#)
- deleting [7-5](#)
- for prompts [7-3](#)
- for scripts [7-3](#)
- naming requirement [7-4](#)
- of TUI prompts [8-22](#)
- renaming [7-4](#)
- viewing list of [7-4](#)

Languages window [7-4](#)

latch

- allow [3-12](#)
- disable [3-13](#)
- enable [3-13](#)

LDAP

- configuring [2-131](#)
- general settings [2-131](#)

license

- deleting [2-75](#)
- described [2-71](#)
- for policy engine [8-1](#)
- installed files [2-75](#)
- managing for Cisco Instant Connect [2-71](#)
- summary [2-71](#)
- time-bound, described [2-75](#)
- usage per ops view [2-74](#)

License dashboard

- elements [11-5](#)
- overview [11-5](#)

license file, uploading [2-76](#)

Linux user roles [1-9](#)

listen only

- in channel [2-14](#)
- in Permission tab [3-12](#)

- in radio [9-15](#)

- in user profile [5-6](#)

LMR gateway [1-5](#)

load balancing [1-4](#)

location

- adding [2-38](#)
- associations [2-35](#)
- deleting [2-39](#)
- described [2-34](#)
- multicast address [2-41, 2-44](#)
- of report collector [2-141](#)
- predefined [2-35](#)
- radio [9-9](#)
- report collector [2-143](#)
- summary of access types and connections [2-37](#)
- UMS [2-49, 2-52](#)
- UMS allocation strategy [2-102](#)
- user [5-5](#)
- viewing or editing [2-38](#)

location, overview [2-155](#)

location server

- adding [2-157](#)
- deleting
 - location server [2-158](#)
- editing information [2-156](#)
- overview [2-155](#)
- viewing information [2-156](#)

Location Server window

- accessing [2-155](#)

locking, user account [3-26](#)

log files

- Dispatch Console [3-11](#)
- downloading [11-11](#)
- in System Logs window [11-8](#)
- managing activity [2-80](#)

log in, disabling for Cisco IPCS service [A-2](#)

log out

- forced
 - from Dispatch Console [2-77](#)

- from mobile client [2-77](#)
- from Administration Console [1-13](#)
- offline client expiration [2-95](#)

logs, managing activity [2-80](#)

M

managing

- activity log options per ops view [2-83](#)
- inactive VTGs [4-4](#)
- radio and tone descriptors [9-22](#)

maximum activity logs, setting described [2-86](#)

member, adding to user group [3-36](#)

mobile client, logout, forced [2-77](#)

multicast address

- adding address to multicast pool [2-42](#)
- adding a sequence of addresses to multicast pool [2-42](#)
- address [2-43](#)
- address and port [2-41](#)
- assignment [2-42](#)
- channel [2-11](#)
- connection type [2-41, 2-44](#)
- conventions [2-11, 2-41, 2-43](#)
- deleting [2-44](#)
- editing information [2-43](#)
- guidelines [2-41](#)
- in multicast pool [2-39](#)
- location [2-41, 2-44](#)
- port [2-43](#)
- recommended range [2-41](#)
- status [2-41, 2-44](#)
- used by [2-41, 2-44](#)
- viewing information [2-43](#)

multicast communications guidelines [2-41](#)

multicast domain [2-34](#)

multicast pool

- adding multicast address to [2-42](#)
- deleting multicast address from [2-44](#)
- described [2-39](#)

multi-purpose type policy

- actions in [8-6, 8-9](#)
- activating [8-17](#)
- adding [8-8](#)
- described [8-4](#)
- trigger [8-13](#)
- updating [8-8](#)

mute

- Cisco Unified IP Phone [3-11](#)
- dial-in phone [3-11](#)
- Dispatch Console [3-11](#)
 - client [3-11](#)
 - user in VTG [4-16](#)
- end device [3-11](#)

My Profile window, described [1-12](#)

N

name

- of user [3-5, 3-7](#)
- of user group [3-38](#)

New Users window [3-4](#)

notification

- action [8-6](#)
- alert [8-8](#)
- configuring [8-9](#)
- Dial [8-7](#)
- Dial Engine Script [8-8](#)
- e-mail action [8-7](#)
- IP Phone Text [8-7](#)
- overview [8-6](#)
- Talk Group [8-7](#)

notification preferences

- configuring [3-14](#)
- described [3-14, 5-7](#)

notification server

- IP Address [2-156](#)
- name [2-156](#)

notifier

- adding [2-148](#)
- deleting
 - notifier
 - removing [2-149](#)
- described [1-6](#)
- editing information [2-147](#)
- IP Address [2-147](#)
- name [2-147](#)
- viewing information [2-147](#)

Notifiers window [2-146](#)

notifying participants in an active VTG [4-20](#)

O

old digit password, changing [5-5](#)

online help, accessing [1-15](#)

Operational Views

- See* ops views

operator role

- described [1-8, 3-9](#)
- responsibilities [3-1](#)
- restricting assignments [2-87](#)

ops view administrator role, described [1-8, 3-9](#)

ops views

- accessible to [6-6](#)
- affecting VTGs [6-10](#)
- allocating dial ports, described [6-17](#)
- assigning a dial number (DN) [6-12](#)
- assigning to user [6-19](#)
- associated [3-24](#)
- associating
 - channel groups with [2-33, 6-19](#)
 - channels with [6-19](#)
 - to channels [2-18](#)
 - user group with [3-37](#)
 - user with [3-24](#)
- available [3-24](#)
- belongs to [6-5](#)

- benefits [6-5](#)
- caveats [6-8](#)
- channels [6-19](#)
- creating [6-4](#)
- determining dial port allocation [6-18](#)
- dial-in numbers [6-12](#)
- dial port pools [6-17](#)
- overview [6-1](#)
- resources [6-4](#)
- system [6-1](#)
- to which user belongs [3-24](#)
- to which user group belongs [3-37](#)
- understanding VTGs [6-9](#)
- user roles [6-6](#)
- viewing
 - details [6-15](#)
 - resources [6-14](#)

Ops View to User Association window [3-24](#)

Options window [2-85](#)

order, of dial preferences [3-18](#)

OUT_OF_SERVICE [7-2](#)

P

P25 Fixed Station

- controlling [9-3](#)
- keys for [2-53](#)

pager, notification preference [3-14, 3-15, 5-7](#)

PARTIAL_SERVICE [7-2](#)

participant

- adding to VTG [4-15](#)
- in VTG [4-15](#)
- removing from VTG [4-15](#)

password

- Apply User Account Lockout setting [2-93](#)
- Apply User Password Expiration setting [2-92](#)
- changing [5-3](#)
- expiration date [3-7](#)

- Failed Password Attempt Expiration Hours setting [2-94](#)
- Maximum Invalid Login Attempts Allowed setting [2-94](#)
- Minimum Digit Password Length setting [2-90](#)
- Minimum Lower Case Letter Count setting [2-90](#)
- Minimum Numeric Character Count setting [2-91](#)
- Minimum Password Length setting [2-90](#)
- Minimum Special Character Count setting [2-91](#)
- Minimum Upper Case Letter Count setting [2-91](#)
- Password Expiration Notification setting [2-93](#)
- Password Expiration setting [2-92](#)
- Password History Count setting [2-92](#)
- user [3-5, 3-7](#)
- patch secure channels
 - end device for users [3-12](#)
 - user profile [5-6](#)
- Permission tab [3-12](#)
- phone service [A-1](#)
- PIN, digit password
 - defined [3-10](#)
 - in user profile [5-5](#)
- Policies window
 - described [8-3](#)
 - displaying [8-3](#)
- policy
 - action, *See* action
 - activating [8-17](#)
 - adding [8-4](#)
 - associated [3-21](#)
 - associating user with [3-20, 8-16](#)
 - available [3-20](#)
 - definition [8-1](#)
 - deleting [8-17](#)
 - deleting action from [8-13](#)
 - deleting trigger from [8-15](#)
 - executed [8-17](#)
 - executing [8-17](#)
 - invitation type
 - actions in [8-6](#)
 - adding [8-12](#)
 - described [8-4](#)
 - updating [8-12](#)
 - multi-purpose type
 - actions in [8-6](#)
 - adding [8-8](#)
 - described [8-4](#)
 - updating [8-8](#)
 - ops view guidelines [8-4](#)
 - reactivating [8-20](#)
 - scheduled [8-19](#)
 - system resources for [8-4](#)
 - trigger [8-13](#)
 - type [8-6](#)
 - viewing information about [8-17, 8-19](#)
- Policy Associations window [3-20](#)
- policy engine
 - license requirement [8-1](#)
 - Policies window [8-3](#)
 - policy, *See* policy [8-1](#)
 - roles that can access [7-1](#)
- Policy Management drawer, accessing [8-1](#)
- pop-up windows [1-11](#)
- port
 - channel [2-11](#)
 - conventions [2-11, 2-43](#)
 - multicast address [2-43](#)
- preferences, system, setting in Options window [2-85](#)
- prompts
 - customized script, *See* customized script prompts
 - described [7-1](#)
 - languages
 - See also* language
 - languages, about [7-3](#)
 - managing [7-3](#)
 - repository [7-3](#)

spoken name
 See spoken name prompts
 standard script, *See* standard script prompts

PTT channel

See channel

PTT channel group

See channel group

Q

quick connect

channel number [2-7](#)
 user number [3-5](#)

quick launch app

adding [2-164](#)
 deleting [2-165](#)
 overview [2-163](#)
 viewing or editing [2-165](#)

R

radio

adding

to system [9-8](#)
 to VTG template [4-5](#)

Allow association to users, check box described [9-11](#)

allow latch, described [9-15](#)

Allow use in VTGs, check box described [9-11](#)

associating

signals with channels [2-21](#)
 user with [3-21](#)
 with user from Radios window [9-18](#)

channel [9-2](#)

codec field described [9-10](#)

control functions [3-23](#)

default tone sequences [9-6](#)

deleting [9-22](#)

description, field described [9-9](#)

descriptor file, described [9-24](#)

designating permissions for [3-22](#)

Dispatch Console caveats when configuring tone sequences [9-45](#)

editing information [9-16](#)

enabling or disabling [9-21](#)

frequency channels, described [9-4](#)

hangover time, field described [9-11](#)

listen only, field described [9-15](#)

location, field described [9-9](#)

managing

descriptors [9-22](#)
 overview [9-2](#)

multicast address, field described [9-10](#)

multicast port, field described [9-10](#)

name, field described [9-9](#)

overview [9-1](#)

radio color, field described [9-15](#)

region, field described [9-15](#)

removing [9-22](#)

RX mute during PTT, field described [9-15](#)

search for in VTG window [4-25](#)

secure radio, field described [9-10](#)

tone and signaling sequences, described [9-23](#)

tone descriptors, described [9-22](#)

type, field described [9-9](#)

viewing information [9-16](#)

voice delay, field described [9-10](#)

radio channel

managing [9-2](#)

See also radio

radio color, field described [9-15](#)

Radio Control Service

See RCS

Radio Control Services window [2-150](#)

radio descriptors [9-24](#)

deleting [9-49](#)

described [9-24](#)

Dispatch Console operation caveats [9-45](#)

- format example [9-25](#)
- managing [9-22](#)
- updating [9-49](#)
- radio preferences [3-14, 5-7](#)
- radios
 - rebalancing among RCSs [2-154](#)
- RCS
 - adding [2-153](#)
 - defined [1-6](#)
 - deleting [2-153](#)
 - disabled status [2-152](#)
 - disabling [2-152](#)
 - editing information [2-151](#)
 - Enabled status [2-152](#)
 - enabling [2-152](#)
 - name [2-151](#)
 - overview [2-149](#)
 - rebalancing radios among [2-154](#)
 - removing [2-153](#)
 - viewing information [2-151](#)
- reactivate
 - action [8-20](#)
 - policy [8-20](#)
 - VTG [4-23](#)
- rebalancing, radios among RCSs [2-154](#)
- recommended update, for Dispatch Console [2-126](#)
- recording, spoken names prompts [7-13](#)
- recovering, system administrator [3-27](#)
- recurrence, of trigger [8-15](#)
- refreshing, Administration Console [1-11](#)
- regions
 - adding [2-122](#)
 - deleting [2-123](#)
 - viewing or editing [2-123](#)
- Remove Channels using CSV [2-27](#)
- Remove Users using CSV [3-32](#)
- removing
 - alert [2-113](#)
 - channel [2-23](#)
 - channel from channel group [2-32](#)
 - channel group [2-34](#)
 - Cisco Spark server [2-162](#)
 - cross-mute group [2-119](#)
 - incident [2-70](#)
 - key [2-64](#)
 - keyset [2-57](#)
 - location server [2-158](#)
 - radio [9-22](#)
 - RCS [2-153](#)
 - report collector [2-144, 2-149](#)
 - UMS [2-52](#)
 - user [3-28](#)
 - user group [3-39](#)
 - VTG [4-12](#)
- report collector
 - adding [2-143](#)
 - deleting [2-144](#)
 - description [2-138](#)
 - disabled status [2-141](#)
 - disabling [2-141](#)
 - editing information [2-140](#)
 - Enabled status [2-141](#)
 - enabling [2-141](#)
 - IP Address [2-141](#)
 - location [2-141](#)
 - name [2-141](#)
 - removing [2-144](#)
 - viewing information [2-140](#)
- report engine
 - description [2-138](#)
 - designating report collector as [2-139](#)
 - IP address [2-139](#)
- Reporter
 - configuring storage options [2-89](#)
- reporter
 - described [1-6](#)
 - generating reports [2-144](#)
 - overview [2-138, 2-146](#)

report file, retention period [2-89](#)

reporting, overview [2-137](#), [2-146](#)

Reporting window [2-138](#)

report log

- maximum file size [2-89](#)
- retention period [2-89](#)

reports

- generating from reporter [2-144](#)
- types [2-145](#)

repository [7-3](#), [7-16](#)

required information, in Cisco Instant Connect windows [1-10](#), [1-13](#)

rerecording, spoken names prompts [7-13](#)

restoring a backed-up database [10-6](#)

Restrict Operator Role assignments, setting described [2-87](#)

retention period

- for CVS report file [2-89](#)
- for inactive incident [2-88](#)
- for report log [2-89](#)

role

- all [1-8](#), [3-9](#)
- assigning [3-9](#)
- changing [3-9](#)
- Cisco Instant Connect [1-7](#)
- described [3-9](#)
- dispatcher [1-8](#), [3-9](#), [4-1](#)
- Linux user [1-9](#)
- operator [1-8](#), [3-1](#), [3-9](#)
- ops view administrator [1-8](#), [3-9](#)
- system administrator [1-8](#), [2-1](#), [3-9](#)
- user [1-8](#), [5-1](#)

roles, field described [5-4](#)

RX mute during PTT

- on channel [2-13](#)
- on radio [9-15](#)

S

scheduled policy, information about [8-19](#)

scripts

- adding [7-17](#)
- changing information about [7-18](#)
- deleting [7-18](#)
- described [7-1](#)
- dial engine [7-16](#)
- IppeDialin [7-16](#)
- IppeDialout [7-16](#)
- IppeRecording [7-16](#)
- languages [7-3](#)
- managing [7-16](#)
- repository [7-16](#)
- system [7-16](#)
- viewing information about [7-18](#)
- viewing list of [7-16](#)

searching in Virtual Talk Groups window [4-24](#)

secure channel patch

- end device for users [3-12](#)
- user profile [5-6](#)

secure radio [9-10](#)

server, Cisco Instant Connect [1-4](#)

server logs, viewing [11-8](#)

server usage guidelines [1-10](#)

Serviceability drawer, overview [11-1](#)

services, obtaining information about [7-2](#)

setting up Cisco Instant Connect [1-1](#)

short message service (SMS), notification preference [3-14](#), [3-15](#), [5-7](#)

short name for channel, field described [2-7](#)

SIP, configuring for Policy Engine [7-19](#)

SNMP, MIB [2-85](#)

software components, of Cisco Instant Connect [1-3](#)

Spark Server window

- accessing [2-159](#)

specifying order [3-18](#), [5-10](#), [5-12](#)

splash screen, configuring [2-127](#)

- spoken names prompts
 - changing information about [7-15](#)
 - deleting [7-15](#)
 - described [7-10](#)
 - downloading [7-12](#)
 - for user [3-25](#)
 - recording [7-13](#)
 - replacing .wav file [7-13](#)
 - rerecording [7-13](#)
 - uploading [7-11](#)
 - viewing list of [7-10](#)
 - Spoken Names window [7-10](#)
 - SSL certificate, creating on Cisco Instant Connect server [B-1](#)
 - standard script prompts
 - described [7-5](#)
 - uploading [7-6](#)
 - viewing list of [7-6](#)
 - Standard Script Prompts window [7-6](#)
 - status
 - channel [2-9](#)
 - multicast address [2-41, 2-44](#)
 - Status Details window [7-2](#)
 - system administrator role
 - described [1-8, 2-1, 3-9](#)
 - responsibilities [2-1](#)
 - System dashboard, overview [11-2](#)
 - system event email notifications
 - configuring [11-12](#)
 - description [11-12](#)
 - disabling [11-13](#)
 - enabling [11-12](#)
 - event trigger values [11-13](#)
 - System Event Notify window, described [11-1](#)
 - system logs
 - downloading [11-11](#)
 - entry types [11-9](#)
 - overview [11-9](#)
 - viewing [11-8](#)
 - System Logs window
 - described [11-1, 11-8](#)
 - log entry types [11-9](#)
 - system preferences, setting in Options window [2-85](#)
 - system status, monitoring [11-8](#)
-
- ## T
- tab
 - Address [3-8](#)
 - Associations [3-13](#)
 - Dial Login [3-10](#)
 - General [3-7, 3-9](#)
 - Permission [3-12](#)
 - Talk Group notification [8-7](#)
 - telephony user interface
 - See* TUI
 - text to speech
 - See* TTS [7-22](#)
 - time out, period for Administration Console [1-15](#)
 - tone broadcast wave files
 - See* alert tones
 - tone descriptor files, for radios [9-22](#)
 - tone descriptors
 - adding [9-48](#)
 - deleting [9-49](#)
 - described [9-22](#)
 - Dispatch Console operation caveats [9-45](#)
 - updating [9-49](#)
 - tone sequences
 - description field, described [9-6](#)
 - enabled state check box [9-6](#)
 - label [9-6](#)
 - momentary control [9-6](#)
 - stateful control [9-6](#)
 - tone sequences, described [9-23](#)
 - TRACE-level error messages [11-9](#)
 - trigger
 - adding [8-13](#)

- definition [8-1](#)
 - deleting [8-15](#)
 - overview [8-13](#)
 - recurrence [8-15](#)
 - updating [8-13](#)
 - viewing [8-13](#)
- Trust Management window
- description [2-132](#)
 - General tab [2-132](#)
 - SSH tab [2-134](#)
 - TLS tab [2-134](#)
- TTS
- configuring [7-23](#)
 - overview [7-22](#)
- TUI (telephony user interface)
- accessing [8-21](#)
 - activities [8-21](#)
 - described [8-21](#)
 - dial-in floor [8-23](#)
 - dial login for [3-9](#)
 - digit ID [3-10](#)
 - guidelines
 - general [8-22](#)
 - menu [8-23](#)
 - logging in [8-21](#)
 - PIN [3-10](#)
 - speaking [8-23](#)
- type, channel connection [2-10](#)
-
- U**
- UMS
- adding [2-51](#)
 - allocation strategy [2-102](#)
 - deleting [2-52](#)
 - described [1-5](#)
 - disabled status [2-50](#)
 - disabling [2-50](#)
 - editing information [2-48](#)
 - Enabled status [2-50](#)
 - enabling [2-50](#)
 - IP Address [2-49](#)
 - IPv6 Address [2-49](#)
 - location [2-49](#)
 - location allocation to [2-102](#)
 - managing, overview [2-45](#)
 - name [2-49](#)
 - removing [2-52](#)
 - status of [2-46](#)
 - Status page [2-51](#)
 - viewing information [2-48](#)
- UMS dashboard
- elements [11-7](#)
 - overview [11-7](#)
- understanding [6-17](#)
- Activity Log Management window [2-80](#)
 - Alerts window [2-105](#)
 - Channels window [2-3](#)
 - Descriptors window [9-46](#)
 - Dispatch Console Regions window [2-122](#)
 - Incidents window [2-65](#)
 - Keysets window [2-54](#)
 - Keys window [2-57](#)
 - Location Server window [2-155](#)
 - Notifiers window [2-146](#)
 - Ops View window [6-2](#)
 - Radio Control Services window [2-150](#)
 - Radios window [9-7](#)
 - Reporting window [2-138](#)
 - Spark Server window [2-159](#)
 - UMS window [2-46](#)
 - Virtual Talk Groups window [4-2](#)
- unified media service
- See* UMS
- unlocking a user account [3-26](#)
- unmute
- Cisco Unified IP Phone [3-11](#)
 - dial-in phone [3-11](#)

- Dispatch Console [3-11](#)
- end device [3-11](#)
- unmuting Dispatch Console user in a VTG [4-16](#)
- updating
 - descriptors [9-49](#)
 - radio and tone descriptors [9-49](#)
- uploading
 - Dispatch Console versions [2-126](#)
 - license file [2-76](#)
 - standard script prompts [7-6](#)
- used by field, for multicast address [2-41](#)
- user
 - adding
 - Dialer Settings in user profile [5-10](#)
 - dial preferences in user profile [5-11](#)
 - notification preferences in user profile [5-8](#)
 - radio preferences in user profile [5-9](#)
 - to system [3-4](#)
 - to VTG template [4-6](#)
 - with CSV file [3-28](#)
 - address
 - information [3-8](#)
 - street [3-8](#)
 - associating
 - alert [2-111](#)
 - ops views with [3-24](#)
 - policy with [3-20, 8-16](#)
 - PTT channels with [3-19](#)
 - radios with [3-21](#)
 - to key [2-61](#)
 - to PTT channels [2-19](#)
 - associating radios with, from Radios window [9-18](#)
 - changing information in user profile [5-2](#)
 - channel association [5-13](#)
 - copying [3-4](#)
 - default location [3-10](#)
 - deleting
 - dial preferences in user profile [5-11](#)
 - from system [3-28](#)
 - notification preferences in user profile [5-8](#)
 - radio preferences in user profile [5-9](#)
 - with CSV file [3-32](#)
 - described [3-1](#)
 - dial preferences [5-12](#)
 - digit ID [3-10](#)
 - digit password (PIN) field [3-10, 5-5](#)
 - disabled [3-26](#)
 - downloading Dispatch Console [5-16](#)
 - editing
 - Dialer Settings in user profile [5-10](#)
 - dial preferences in user profile [5-11](#)
 - notification preferences in user profile [5-8](#)
 - radio preferences in user profile [5-9](#)
 - enabled [3-26](#)
 - general information [3-7](#)
 - image [3-7, 5-3](#)
 - importing [3-28](#)
 - in inactive VTG [4-5](#)
 - list of VTGs in which is a participant [3-25](#)
 - locking account [3-26](#)
 - managing
 - associations [5-12](#)
 - communications preferences [5-7](#)
 - profile [5-2](#)
 - name [3-5, 3-7](#)
 - ops view for [3-24](#)
 - order
 - of dial preferences [5-12](#)
 - of radio preferences [3-18, 5-10](#)
 - password [3-7](#)
 - PIN [3-10](#)
 - radio preferences [3-18, 5-10](#)
 - recovering deleted system administrator [3-27](#)
 - removing [3-28](#)
 - removing with CSV file [3-28](#)
 - search for in VTG window [4-25](#)
 - status [3-26](#)
 - unlocking account [3-26](#)

- updating Dialer Settings in user profile [5-10](#)
 - viewing
 - associations [5-15](#)
 - Dialer Settings [5-10](#)
 - dial preferences [5-11](#)
 - notification preferences [5-8](#)
 - radio preferences [5-9](#)
 - user associations
 - Channels tab, described [5-13](#)
 - Incidents tab, described [5-14](#)
 - Keys tab, described [5-15](#)
 - Phones tab, described [5-14](#)
 - Policies tab, described [5-15](#)
 - Radios tab, described [5-13](#)
 - Virtual Talk Groups tab, described [5-14](#)
 - User dashboard
 - elements [11-4](#)
 - overview [11-4](#)
 - User Details window
 - activities [1-12](#)
 - enabling or disabling latch for Dispatch Console user [4-19](#)
 - user group
 - adding
 - members to [3-36](#)
 - new [3-35](#)
 - to VTG template [4-6](#)
 - associating ops views with [3-37](#)
 - changing name of [3-38](#)
 - deleting [3-39](#)
 - described [3-1](#), [3-33](#)
 - list of VTGs in which is a participant [3-38](#)
 - naming recommendation [3-35](#)
 - ops view for [3-37](#)
 - removing [3-39](#)
 - User Groups window
 - accessing [3-33](#)
 - described [3-33](#)
 - User Management drawer, accessing [3-1](#)
 - user profile
 - account status field, described [5-4](#)
 - address field, described [5-4](#)
 - belongs to field, described [5-4](#)
 - confirm password field, described [5-3](#)
 - default location [5-5](#)
 - described [5-2](#)
 - dial preferences field, described [5-7](#)
 - digit ID field, described [5-5](#)
 - first name field, described [5-3](#)
 - Instant Connect status field, described [5-4](#)
 - last name field, described [5-3](#)
 - new password field, described [5-3](#)
 - notification preferences field, described [5-6](#)
 - old digit password field, described [5-5](#)
 - old password field, described [5-3](#)
 - password expiration date field, described [5-4](#)
 - roles field, described [5-4](#)
 - user image, described [3-7](#), [5-3](#)
 - user name field, described [5-3](#)
 - User Radio Permissions window [3-23](#)
 - user role
 - described [1-8](#)
 - responsibilities [5-1](#)
 - users
 - key associations [5-15](#)
 - phone associations [5-14](#)
 - policy associations [5-15](#)
 - radio associations [5-13](#)
 - VTG associations [5-14](#)
 - Users window
 - accessing [3-2](#)
 - described [3-2](#)
-
- ## V
- video size, maximum [2-95](#)
 - viewing
 - activity logs [2-81](#)

- alert associations [2-112](#)
- and downloading archived activity logs [2-82](#)
- and editing user associations, My Associations window [5-2](#)
- channel associations [2-22](#)
- Dispatch Console
 - alert tone sets [2-115](#)
 - regions [2-123](#)
- key associations [2-63](#)
- ops view resources [6-14](#)
- or editing locations [2-38](#)
- user associations [5-15](#)
- viewing or editing quick launch app [2-165](#)
- virtual talk group
 - See* VTG
- Virtual Talk Group dashboard
 - elements [11-4](#)
 - overview [11-4](#)
- voice activity detection
 - enable field [2-14](#)
 - enabling on client [4-10](#)
 - enabling on Dispatch Console [4-7, 4-10](#)
- voice delay [9-10](#)
- VPN
 - configuring [2-166](#)
 - using with mobile device [2-166](#)
- VTG
 - activating [4-14](#)
 - active [4-2, 4-13](#)
 - adding
 - channel [4-5](#)
 - channel group [4-5](#)
 - new [4-7](#)
 - participants [4-15](#)
 - radio [4-5](#)
 - to VTG template [4-6](#)
 - user [4-6](#)
 - user group [4-6](#)
 - VTG [4-6](#)
 - best practices [4-26](#)
 - changing the status of [4-14](#)
 - channel in inactive [4-5](#)
 - Cisco Unified IP Phone user in [4-15](#)
 - deactivating [4-14](#)
 - deleting [4-12](#)
 - dialing out to participants in active [4-20](#)
 - disabling
 - Dispatch Console attributes in active [4-20](#)
 - latch in User Details window [4-19](#)
 - Dispatch Console user in [4-15](#)
 - empty [4-5](#)
 - enabling
 - Dispatch Console attributes in active [4-20](#)
 - latch in User Details window [4-19](#)
 - guidelines for managing
 - active [4-13](#)
 - inactive [4-5](#)
 - inactive [4-2](#)
 - incident [2-64](#)
 - in which user group is participating [3-38](#)
 - list in which user is participating [3-25](#)
 - managing [4-2](#)
 - active [4-13](#)
 - inactive [4-4](#)
 - modifying [4-9](#)
 - multicast address used by [2-39](#)
 - muting a Dispatch Console user [4-16](#)
 - non-secure channel in [4-5](#)
 - notifying participants in active [4-20](#)
 - participant in itself [4-5](#)
 - participants [4-15](#)
 - reactivating [4-23](#)
 - removing
 - from system [4-12](#)
 - participants [4-15](#)
 - search for in VTG window [4-25](#)
 - secure channel in [4-5](#)
 - seeing as user on Cisco Unified IP Phone [A-6](#)

unavailable channel [4-23](#)

unmuting an Dispatch Console user [4-16](#)

user in inactive [4-5](#)

VTG add participants action [8-6, 8-11](#)

VTG search utility, using [4-24](#)

W

WARN-level error messages [11-9](#)

X

X, in Activate VTG Details area [4-24](#)

