



INDEX

Symbols

* (asterisk), in Cisco IPICS Administration Console windows [1-9](#), [1-12](#)

A

About, in Administration Console [1-14](#)

accessing

Activity Log Management window [2-86](#)

Activity Log Options window [2-89](#)

Administration Console [1-11](#)

Channels window [2-3](#)

Descriptors window [9-42](#)

Dial Engine drawer [8-1](#)

Download IDC window [4-2](#)

IDC Installer window [2-109](#)

IDC Regions window [2-111](#)

IDC Versions window [2-103](#)

Incidents window [2-71](#)

Key Sets window [2-57](#)

Keys window [2-60](#)

License Management window [2-76](#)

Locations window [2-29](#)

Multicast Pool window [2-32](#)

My Profile window [4-1](#)

online help [1-14](#)

Ops View window [7-2](#)

Options window [2-90](#)

Policy Management drawer [6-1](#)

Radios window [9-7](#)

RMS window [2-37](#)

UMS window [2-48](#)

User Groups window [3-29](#)

Users window [3-2](#)

Virtual Talk Groups window [5-1](#)

VSOM List window [2-68](#)

action

activate VTG [6-5](#)

definition [6-1](#)

deleting [6-12](#)

dial-out [6-6](#), [6-11](#)

in multi-purpose type policy [6-8](#)

invite to VTG [6-5](#), [6-8](#)

managing [6-5](#)

notification [6-5](#)

overview [6-5](#)

reactivating [6-19](#)

- VTG add participants [6-6, 6-10](#)
- activating
 - policy [6-16](#)
 - RMS [2-42](#)
 - VTG [5-12, 6-8](#)
- active
 - channel state in Channel window, described [2-7](#)
 - incident [2-70](#)
 - multicast address [2-33, 2-36](#)
 - VTG, managing [5-2, 5-11](#)
- active users
 - fields, described [2-83](#)
 - viewing information for [2-82](#)
- activity log
 - described [2-85](#)
 - downloading [2-86](#)
 - downloading, archived [2-88](#)
 - managing [2-85](#)
 - managing activity types per ops view [2-89](#)
 - options per ops view [2-89](#)
 - types [2-89](#)
 - understanding the Activity Log Management window [2-86](#)
 - viewing [2-86](#)
- activity log retention period, setting described [2-92](#)
- adding
 - alert tone set [2-107](#)
 - channel [2-5](#)
 - channel group [2-20](#)
 - key [2-61](#)
 - keyset [2-58](#)
 - locations [2-30](#)
 - multicast address to multicast pool [2-34](#)
 - radio [9-9](#)
 - radio and tone descriptors [9-43](#)
 - regions [2-112](#)
 - RMS [2-43](#)
 - sequence of multicast addresses to multicast pool [2-34](#)
 - UMS [2-54](#)
 - user [3-4](#)
 - user group [3-31](#)
 - VSOM server [2-68](#)
 - VTG [5-6](#)
- address
 - e-mail, of user [3-8](#)
 - information for user [3-7](#)
 - multicast address [2-33](#)
 - of user, in user profile [4-4](#)
 - street, of user in Users window [3-8](#)
- Address Information tab [3-8](#)
- Administration Console
 - accessing [1-11](#)
 - Authentication window [1-11](#)
 - client system requirements [1-11](#)
 - displaying current data [1-10](#)
 - exiting [1-12](#)
 - logging in [1-11](#)

- logging out [1-12](#)
- obtaining information about [1-14](#)
- online help [1-14](#)
- overview [1-8](#)
- refreshing [1-10](#)
- timeout [1-14](#)
- advanced IDC permissions [3-12](#)
- advanced IDC permissions, field described [4-6](#)
- alerting tones
 - See* alert tones
- alert notification [6-7](#)
- alert tones
 - adding [2-107](#)
 - associating ops views [2-108](#)
 - creating alert tone sets [2-106](#)
 - deleting [2-109](#)
 - managing [2-105](#)
 - viewing or editing alert tone sets [2-107](#)
- allow complex key setting
 - end devices for users [3-12](#)
 - IPICS options [2-100](#)
 - user profile [4-6](#)
- allow latch
 - channel [2-10](#)
 - field in user profile [4-6](#)
 - in IDC tab [3-12](#)
 - radio [9-14](#)
- allow secure channel patch
 - end device for users [3-12](#)
 - IPICS options [2-100](#)
 - user profile [4-6](#)
- all role, described [1-7, 3-9](#)
- archived incident
 - archive file name [2-93](#)
 - configuring [2-92](#)
 - maximum file size [2-92](#)
 - retention period [2-92](#)
 - run archive at [2-93](#)
- associating
 - alert tones to ops views [2-108](#)
 - channel with user [3-18](#)
 - ops views with user group [3-33](#)
 - ops view with user [3-25](#)
 - phone with user [3-19](#)
 - policy with user [3-20, 6-15](#)
 - radio with user [3-22](#)
 - user with policy [3-20, 6-15](#)
- Associations tab [3-12](#)
- audio, disable [3-12](#)
- audio client [1-6](#)
- Authentication window [1-11](#)

B

- backup and restore operations
 - overview [11-1](#)
 - performing [11-1](#)

browser

- guidelines for using [1-10](#)
- memory issues [1-11](#)
- pop-up windows, disabling blocking [1-10](#)
- refreshing windows [1-10](#)

Ccalculating DSPs [A-12](#)caveats [9-6](#)changing status of VTG [5-12](#)

channel

- active state [2-12](#)
- active status [2-7](#)
- adding
 - new [2-5](#)
 - to VTG template [5-5](#)
- allow association to users, field described [2-6](#)
- allow latch, described [2-10](#)
- allow use in VTGs field, described [2-7](#)
- associated [3-23](#)
- associated ops view, field described [2-9](#)
- associating
 - radio signals with user [2-16](#)
 - to ops views [2-14](#)
 - user with [3-18](#)
 - with user [2-15](#)
- available [3-23](#), [3-33](#)
- changing status [2-12](#)
- channel color, field described [2-10](#)
- channel region, field described [2-10](#)
- channel selector, field described [2-9](#)
- deleting
 - from a channel group [2-23](#)
 - from system [2-18](#)
- described [2-2](#)
- descriptor, field described [2-9](#)
- disabled status [2-7](#)
- disabling [2-12](#)
- editing information [2-5](#)
- enabled status [2-7](#)
- enable latch, field described [2-10](#), [9-14](#)
- enable VAD, field described [2-10](#)
- enabling [2-12](#)
- IDC region field described [2-10](#)
- in inactive VTG [5-5](#)
- listen only, field described [2-10](#)
- location [2-8](#)
- location, field described [2-8](#)
- mixing secure and non-secure in VTG [5-5](#)
- multicast address, field described [2-8](#)
- multicast address port, field described [2-8](#)
- name, field described [2-6](#)
- radio, field described [2-8](#)
- removing
 - from channel group [2-23](#)
 - from system [2-18](#)
- RX mute during PTT, field described [2-10](#)

- search for in VTG window [5-24](#)
- secure, field described [2-6](#)
- status [2-7](#)
- type, field described [2-7](#)
- unavailable for VTG [5-22](#)
- viewing
 - associations [2-17](#)
 - information [2-5](#)
- Channel dashboard
 - elements [12-3](#)
 - overview [12-3](#)
- channel group
 - adding
 - new [2-20](#)
 - to VTG template [5-5](#)
 - associated ops view, field described [2-22](#)
 - associated VTG [2-23](#)
 - associated VTG status [2-23](#)
 - associating ops views to [2-24](#)
 - channels in [2-2](#)
 - deleting [2-25](#)
 - deleting a channel from [2-23](#)
 - described [2-2](#)
 - editing information [2-21](#)
 - name [2-21](#)
 - removing
 - channel from [2-23](#)
 - from system [2-25](#)
 - viewing
 - associations [2-23](#)
 - information [2-21](#)
- Channel Selector Permissions [3-23](#)
- channel selectors
 - associated channel field, described [9-5](#)
 - enabled status check box [9-5](#)
 - key [9-5](#)
 - label [9-5](#)
 - strapping [9-5](#)
- Cisco [10-3](#)
- Cisco IOS documentation [1-xxiv](#)
- Cisco IPICS
 - Administration Console [1-8](#)
 - database
 - backing up [11-3](#)
 - logs [11-14](#)
 - restoring [11-9](#)
 - deployment options [1-3](#)
 - getting started [1-1](#)
 - hardware components [1-3](#)
 - initial configuration [1-1](#)
 - IP multicast address guidelines for [2-34](#)
 - logging in to [4-1](#)
 - Login window [4-1](#)
 - overview [1-1, 1-3](#)
 - Restrict Operator Role assignments [2-93](#)
 - role [1-6, 1-7](#)
 - server [1-4](#)

- session timeout period setting [2-92](#)
 - setting up [1-1](#)
 - software components [1-3](#)
- Cisco IPICS policy engine
 - See* policy engine
- Cisco IPICS server
 - Administration Console [1-8](#)
 - described [1-4](#)
 - SSL certificate on [D-1](#)
 - usage guidelines [1-9](#)
- Cisco IPICS service
 - about [C-1](#)
 - configuring
 - for Cisco Unified Communications Manager [C-1](#)
 - for Cisco Unified Communications Manager Express [C-3](#)
 - disabling log in [C-2](#)
 - subscribing to [C-3](#)
 - using [C-4](#)
- Cisco IPICS session timeout [2-92, 2-93](#)
- Cisco IPICS session timeout period, setting described [2-92](#)
- Cisco IP Interoperability and Collaboration System
 - See* Cisco IPICS
- Cisco router
 - function in a Cisco IPICS deployment [1-6](#)
- Cisco Security Agent documentation [1-xxiv](#)
- Cisco Unified Communications Manager
 - configuring as SIP provider [8-32](#)
 - configuring Cisco IPICS service for [C-1](#) documentation [1-xxiii](#)
 - function in a Cisco IPICS deployment [1-6](#)
- Cisco Unified Communications Manager Express
 - configuring as SIP provider [8-35](#)
 - configuring Cisco IPICS service for [C-3](#) documentation [1-xxiv](#)
- Cisco Unified IP Phone
 - accessing Cisco IPICS service from [C-4](#)
 - allow latch [3-12](#)
 - audio [3-12](#)
 - dial login for [3-9](#)
 - digit ID [3-10, 4-4](#)
 - digit password [3-10](#)
 - disable [3-10](#)
 - documentation [1-xxiv](#)
 - high availability, affect on [10-8](#)
 - latching [3-12](#)
 - listen only [3-12](#)
 - managing for user [3-10](#)
 - mute [3-10](#)
 - subscribing to Cisco IPICS service [C-3](#)
 - timeout period setting [2-92](#)
 - unmute [3-10](#)
 - user in VTG [5-14](#)
 - using as a PTT device [C-1](#)
- client
 - log out, setting described [2-98](#)

- maximum video size, setting described [2-98](#)
 - update poll, setting described [2-97](#)
- cluster view daemon, trace file [8-3](#)
- codec
 - field described [2-8](#)
 - for policy engine [8-29](#)
 - radio [9-10](#)
- communications preferences
 - configuring [3-14](#)
 - described [3-13](#)
 - managing [3-13](#)
- complex key setting
 - end devices for users [3-12](#)
 - IPICS options [2-100](#)
- connection type, multicast address [2-33, 2-36](#)
- control function permissions [3-23](#)
- control functions [3-24](#)
- controllers
 - configuring T1/E1 controllers [A-4](#)
 - on RMS [2-41](#)
- copying a user [3-4](#)
- customized script prompts
 - codec [8-12](#)
 - deleting [8-14](#)
 - described [8-11](#)
 - downloading [8-13](#)
 - renaming [8-14](#)
 - uploading [8-12](#)
 - viewing list of [8-12](#)

- Customized Script Prompts window [8-12](#)

D

- Dashboard window, overview [12-1](#)
- database
 - backing up [11-3](#)
 - choosing a backup destination [11-8](#)
 - manually starting database server [11-19](#)
 - options
 - changing [11-6](#)
 - default [11-6](#)
 - restoring [11-10](#)
 - restoring [11-9](#)
 - troubleshooting
 - backup procedure [11-15](#)
 - restore procedure [11-15](#)
- database log [10-14](#)
- Database Management window
 - overview [11-2](#)
 - tabs inside of [11-2](#)
- database replication block state [10-14](#)
- database updates [10-14](#)
- DDRBLOCK [10-14](#)
- deactivated
 - RMS [2-42](#)
 - RMS status [2-41](#)
 - VTG [5-13](#)
- deactive, incident [2-70](#)

- DEBUG-level error messages [12-11, 12-14](#)
- debug trace level [8-3](#)
- default language folder [8-8](#)
- default tone sequences, configuring [9-6](#)
- deleting
 - action from policy [6-12](#)
 - alert tones [2-109](#)
 - channel
 - from channel group [2-23](#)
 - from system [2-18](#)
 - channel group [2-25](#)
 - descriptors [9-45](#)
 - IDC
 - regions [2-113](#)
 - versions [2-105](#)
 - incident [2-75](#)
 - key from system [2-67](#)
 - keyset [2-60](#)
 - languages [8-9](#)
 - locations [2-31](#)
 - multicast address [2-36](#)
 - policy [6-16](#)
 - radio [9-20](#)
 - radio and tone descriptors [9-45](#)
 - RMS [2-46](#)
 - spoken names prompts [8-20](#)
 - trigger from policy [6-15](#)
 - UMS [2-56](#)
 - user [3-28](#)
 - user group [3-35](#)
 - VSOM server [2-69](#)
 - VTG [5-11](#)
- deployment, of Cisco IPICS [1-3](#)
- descriptors
 - deleting [9-45](#)
 - managing radio and tone [9-23](#)
 - updating [9-44](#)
- DFSI gateway
 - associating
 - keys [2-65](#)
 - associating keys with, from Radios window [9-18](#)
 - associating with key from Radios window [9-18](#)
- diagnostic information
 - downloading [12-9](#)
 - viewing [12-6](#)
- Diagnostics window
 - diagnostic summary pane, described [12-9](#)
 - elements [12-7](#)
 - overview [12-1, 12-6](#)
- dial engine
 - codec [8-29](#)
 - described [8-1](#)
 - parameters [8-29](#)
 - services
 - obtaining information about [8-2](#)
 - status [8-2](#)
 - trace file [8-3](#)

- Dial Engine drawer, accessing [8-1](#)
- dial engine script
 - See* scripts [8-21](#)
- Dial Engine Script notification [6-7](#)
- dial-in
 - assigning to ops view [7-13](#)
 - configuring SIP provider for [8-32](#)
 - SIP trunk [8-34](#)
- dial-in floor [6-22](#)
- dialing out to participants in an active VTG [5-19](#)
- dial-in phone
 - disable [3-10](#)
 - high availability, affect on [10-8](#)
 - listen only [3-12](#)
 - managing for user [3-10](#)
 - mute [3-10](#)
 - unmute [3-10](#)
- dial login
 - configuring [3-9](#)
 - described [3-9](#)
- Dial Login tab [3-10](#)
- Dial notification [6-7](#)
- dial-out
 - action [6-6](#), [6-11](#)
 - configuring SIP provider for [8-32](#)
 - SIP trunk [8-34](#)
- dial preferences
 - configuring [3-14](#)
 - described [3-14](#), [4-7](#)
 - order of [3-17](#)
- dial prefix [8-30](#)
- digit ID [3-10](#), [4-4](#)
- digit password (PIN) [3-10](#), [4-4](#)
- direct dial
 - adding numbers [8-31](#)
 - deleting numbers [8-32](#)
 - described [8-30](#)
 - dial prefix [8-30](#)
 - updating numbers [8-31](#)
 - viewing information about numbers [8-31](#)
- Direct Dial Management window [8-30](#)
- direct dial numbers
 - managing [8-30](#)
 - viewing list [8-30](#)
- disable
 - Cisco Unified IP Phone [3-10](#)
 - IDC attributes in an active VTG [5-19](#)
 - latch in User Details window [5-17](#)
 - UMS [2-53](#)
 - user [3-27](#)
- disable audio, in user profile [4-6](#)
- disabled channel [2-7](#)
- disabled user [3-27](#)
- disable IDC activity log upload, setting
 - described [2-98](#)
- disable RMS comparator, setting
 - described [2-91](#)
- disabling
 - audio [3-12](#)

- dial-in phone [3-10](#)
- end device [3-10](#)
- IDC [3-10](#)
- listen only [3-12](#)
- radio [9-19](#)
- voice activation detection (VAD) [3-12](#)
- dispatcher role
 - described [1-7, 3-8](#)
 - responsibilities [5-1](#)
- documentation
 - Cisco IOS [1-xxiv](#)
 - Cisco Security Agent [1-xxiv](#)
 - Cisco Unified Communications Manager [1-xxiii](#)
 - Cisco Unified Communications Manager Express [1-xxiv](#)
 - Cisco Unified IP Phones [1-xxiv](#)
 - session initiation protocol (SIP) [1-xxiv](#)
- downloading
 - activity logs [2-86](#)
 - archived activity logs [2-88](#)
 - IDC [4-2](#)
- DS0
 - destination [2-45](#)
 - disabling [2-45](#)
 - enabling [2-45](#)
 - in loopback [2-44](#)
 - source [2-45](#)
 - status [2-45](#)
- ds0 groups, configuring [A-4](#)

- dspfarm
 - calculating DSPs [A-12](#)
 - checking configuration [A-12](#)
 - DSP resource pool [A-12](#)
 - enabling [A-12](#)
- DSPs [A-12](#)
- dump
 - memory trace [8-6](#)
 - threads trace [8-6](#)

E

- E1 timeslots [A-5](#)
- e-mail
 - address of user [3-8](#)
 - notification
 - action [6-6](#)
 - preference [3-14, 4-7](#)
 - system event [B-1](#)
- enable
 - IDC attributes in an active VTG [5-19](#)
 - latch in User Details window [5-17](#)
 - radio [9-19](#)
 - UMS [2-53](#)
 - user [3-27](#)
- enabled
 - channel [2-7](#)
 - user [3-27](#)
- enable voice activity detection (VAD), field described [2-10](#)

enabling

- Cisco Unified IP Phone [3-10](#)
- dial-in phone [3-10](#)
- end device [3-10](#)
- IDC [3-10](#)
- listen only [3-12](#)
- UMS [2-53](#)
- voice activation detection (VAD) [3-12](#)

end device

- audio [3-12](#)
- described [3-10](#)
- disable [3-10](#)
- listen only [3-12](#)
- managing for user [3-10](#)
- mute [3-10](#)
- unmute [3-10](#)

ERROR-level error messages [12-11, 12-14](#)

event, also called active VTG [5-2](#)

executed policy, information about [6-17](#)

executing policy, information about [6-17](#)

expiration date, of password [3-7](#)

F

failover

- affect on Cisco Unified IP Phone [10-8](#)
- affect on dial-in user [10-8](#)
- affect on IDC [10-6](#)
- affect on IDC and connected devices [10-2](#)

affect on mobile client [10-8](#)

local critical process failure [10-2](#)

lost heartbeat message failure [10-2](#)

manual [10-3, 10-9](#)

file size, of archived incident [2-92](#)

floor, for dial-in [6-22](#)

G

G.711 [2-8](#)

G.729 [2-8](#)

gateway [1-5](#)

General Information tab [3-7, 3-9](#)

guidelines

for using IP multicast addresses with Cisco IPICS [2-34](#)

managing active VTGs [5-11](#)

managing inactive VTGs [5-5](#)

multicast address [2-34](#)

server usage [1-9](#)

H

HA

See high availability (HA)

hangover time [9-11](#)

hardware components, of Cisco IPICS [1-3](#)

help, in Administration Console [1-14](#)

high availability (HA)

- active server [10-1](#)
 - affect of failover on IDC and connected devices [10-2](#)
 - Cisco Unified IP Phone, affect on [10-8](#)
 - configuring [10-3](#)
 - description [10-1](#)
 - dial-in user, affect on [10-8](#)
 - failover
 - local critical process failure [10-2](#)
 - lost heartbeat message failure [10-2](#)
 - manual [10-3](#)
 - IDC connections, affect on [10-6](#)
 - license [2-77](#)
 - manual failover [10-9](#)
 - mobile client, affect on [10-8](#)
 - overview [10-1](#)
 - redundant server location [10-2](#)
 - split brain scenario
 - definition [10-3](#)
 - resolving [10-10](#)
 - standby server [10-1](#)
 - synchronizing server time [10-8](#)
 - UMS [2-51](#)
 - unconfiguring [10-6](#)
- High Availability Window [10-4](#)
- host name, of RMS [2-41](#)
-
- icons, in users window [3-32](#)
- icons in Users window [3-3](#)
 - ID, of user [3-5](#)
 - IDC
 - activity log update, setting frequency [2-100](#)
 - adding alert tone sets [2-107](#)
 - advanced permissions [3-12](#)
 - alert tones, *See* alert tones
 - allow latch [3-12](#)
 - audio [3-12](#)
 - changing the state of versions for updates [2-104](#)
 - client log out, setting described [2-98](#)
 - creating alert tone sets [2-106](#)
 - deleting versions [2-105](#)
 - described [1-3, 1-4](#)
 - dialer preference [3-14, 4-7](#)
 - Dialer Preferences [3-15](#)
 - disable [3-10](#)
 - downloading current version [4-17](#)
 - failover, affect on [10-2](#)
 - high availability affect on [10-6](#)
 - installer, generating [2-110](#)
 - latching [3-12](#)
 - listen only [3-12](#)
 - log files [3-10, 3-11](#)
 - log in after failover [10-7](#)
 - logout, forced [2-82](#)
 - log upload frequency, setting described [2-99](#)
 - managing for user [3-10](#)

- managing the configuration [2-109](#)
 - mandatory update [2-104](#)
 - maximum video size, setting described [2-98](#)
 - mute [3-10](#)
 - operation caveats when configuring tone sequences [9-41](#)
 - recommended update [2-104](#)
 - regions [2-112](#)
 - adding [2-112](#)
 - managing [2-111](#)
 - maximum [2-111](#)
 - See also* regions
 - send logs on rollover, setting described [2-99](#)
 - tab [3-12](#)
 - unmute [3-10](#)
 - update poll, setting described [2-97](#)
 - user in VTG [5-14](#)
 - versions
 - changing state [2-104](#)
 - uploading [2-104](#)
 - versions, managing [2-102](#)
 - voice activation detection (VAD) [3-12](#)
- IDC alert tones
- See* alert tones
- IDC Installer window [2-109](#)
- idcsetup.exe [2-109](#)
- idle status, for multicast address [2-33, 2-36](#)
- IN_SERVICE [8-2](#)
- inactive
 - VTGs [5-4](#)
 - VTGs, guidelines [5-5](#)
- incident
 - Activated, field described [2-73](#)
 - activating [2-74](#)
 - active [2-70](#)
 - changing status [2-74](#)
 - configuring archive [2-92](#)
 - Created, field described [2-73](#)
 - Created By, field described [2-73](#)
 - Deactivated, field described [2-73](#)
 - deactivating [2-74](#)
 - deactive [2-70](#)
 - definition [2-70](#)
 - deleting [2-75](#)
 - description, field described [2-73](#)
 - editing information [2-72](#)
 - ID, field described [2-73](#)
 - Incident VTG, field described [2-73](#)
 - management [2-70](#)
 - name, field described [2-73](#)
 - Ops View, field described [2-73](#)
 - overview [2-70](#)
 - removing [2-75](#)
 - state, field described [2-73](#)
 - VTG [2-70](#)
- Incident dashboard
 - elements [12-4](#)

- overview [12-4](#)
- Incidents window
 - accessing [2-70, 2-71](#)
 - understanding [2-71](#)
- incident VTG
 - activating [2-74](#)
 - changing status [2-74](#)
 - deactivating [2-74](#)
- INFO-level error messages [12-11, 12-14](#)
- Informix database, manually starting [11-19](#)
- invitation policy type
 - adding [6-11](#)
 - described [6-4](#)
 - updating [6-11](#)
- invitation type policy, actions in [6-5](#)
- invite to VTG action [6-5](#)
- IP address, of RMS [2-41](#)
- IP address selection guidelines [A-6](#)
- ipics.log
 - downloading [12-12](#)
 - error types [12-11, 12-14](#)
- IPICS Connect [9-22](#)
- IPICS Dispatch Console
 - See* IDC
- IP multicast address, guidelines for using with Cisco IPICS [2-34](#)
- IP Phone Text notification [6-6](#)
- ISSI gateway
 - associating
 - keys [2-65](#)

- associating keys with, from Radios window [9-18](#)
- associating with key from Radios window [9-18](#)

K

- key
 - adding
 - new [2-61](#)
 - associating
 - DFSI gateway [2-65](#)
 - ISSI gateway [2-65](#)
 - with user [2-64](#)
 - deleting
 - from system [2-67](#)
 - editing information [2-62](#)
 - Name, field described [2-62](#)
 - removing
 - from system [2-67](#)
 - viewing
 - associations [2-66](#)
 - viewing information [2-62](#)
- keyset
 - active [2-59](#)
 - adding
 - new [2-58](#)
 - changing status [2-59](#)
 - deleting
 - from system [2-60](#)

Description, field described [2-59](#)

editing information [2-59](#)

Id, field described [2-59](#)

inactive [2-59](#)

Name, field described [2-59](#)

removing

 from system [2-60](#)

Status, field described [2-59](#)

viewing

 information [2-59](#)

L

languages

 adding [8-9](#)

 default language folder [8-8](#)

 deleting [8-9](#)

 for prompts [8-8](#)

 for scripts [8-8](#)

 naming requirement [8-8](#)

 of TUI prompts [6-21](#)

 renaming [8-9](#)

 viewing list of [8-8](#)

Languages window [8-8](#)

latch

 allow [3-12](#)

 disable [3-12](#)

 enable [3-12](#)

LDAP

 configuring [2-113](#)

 general settings [2-114](#)

license

 described [2-76](#)

 for policy engine [6-1](#)

 installed files [2-81](#)

 managing a Cisco IPICS [2-76](#)

 summary [2-76](#)

 time-bound, described [2-81](#)

 usage per ops view [2-79](#)

License dashboard

 elements [12-5](#)

 overview [12-5](#)

license file, uploading [2-81](#)

Linux user roles [1-8](#)

listen only

 in channel [2-10](#)

 in IDC tab [3-12](#)

 in radio [9-14](#)

 in user profile [4-6](#)

LMR gateway [1-5](#)

location

 adding [2-30](#)

 associations [2-26](#)

 deleting [2-31](#)

 described [2-25](#)

 multicast address [2-33, 2-36](#)

 of RMS [2-40, 2-51](#)

- predefined [2-26](#)
- radio [9-10](#)
- RMS [2-43](#)
- summary of access types and connections [2-29](#)
- UMS [2-55](#)
- user [4-5](#)
- viewing or editing [2-30](#)

locking, user account [3-27](#)

log files

- downloading [12-12, 12-15](#)
- IDC [3-10](#)
- in RCS Logs window [12-13](#)
- in System Logs window [12-10](#)
- managing activity [2-85](#)
- obtaining [3-11](#)

log in, disabling for Cisco IPCS service [C-2](#)

log out

- forced
 - from IDC [2-82](#)
 - from mobile client [2-82](#)
 - from Administration Console [1-12](#)
 - offline client expiration [2-98](#)

logs, managing activity [2-85](#)

loopback

- configuring [2-44](#)
- creating [2-44](#)
- disabling DS0 in [2-45](#)
- DS0
 - destination [2-45](#)

- source [2-45](#)
- status [2-45](#)
- dynamically allocated [6-2](#)
- enabling DS0 in [2-45](#)
- number [2-44](#)
- on RMS [2-41](#)
- removing [2-46](#)
- state [2-44](#)
- viewing information about [2-44](#)

M

managing

- activity log options per ops view [2-89](#)
- inactive VTGs [5-4](#)
- radio and tone descriptors [9-23](#)

mandatory update, for IDC [2-104](#)

maximum activity logs, setting described [2-92](#)

member, adding to user group [3-32](#)

merging RMS configuration [2-47](#)

mobile client

- high availability, affect on [10-8](#)
- logout, forced [2-82](#)

multicast address

- adding address to multicast pool [2-34](#)
- adding a sequence of addresses to multicast pool [2-34](#)
- address [2-35](#)
- address and port [2-33](#)
- assignment [2-34](#)

- channel [2-8](#)
- connection type [2-33, 2-36](#)
- conventions [2-8, 2-34, 2-35](#)
- deleting [2-36](#)
- editing information [2-35](#)
- guidelines [2-34](#)
- in multicast pool [2-31](#)
- location [2-33, 2-36](#)
- port [2-36](#)
- recommended range [2-34](#)
- status [2-33, 2-36](#)
- used by [2-33, 2-36](#)
- viewing information [2-35](#)
- multicast communications guidelines [2-34](#)
- multicast domain [2-25](#)
- multicast pool
 - adding multicast address to [2-34](#)
 - deleting multicast address from [2-36](#)
 - described [2-31](#)
- multi-purpose type policy
 - actions in [6-5, 6-8](#)
 - activating [6-16](#)
 - adding [6-8](#)
 - described [6-4](#)
 - trigger [6-12](#)
 - updating [6-8](#)
- mute
 - Cisco Unified IP Phone [3-10](#)
 - dial-in phone [3-10](#)

- end device [3-10](#)
- IDC [3-10](#)
 - client [3-10](#)
 - user in VTG [5-15](#)
- My Profile window, described [1-11](#)

N

- name
 - of user [3-5, 3-7](#)
 - of user group [3-34](#)
- New Users window [3-4](#)
- notification
 - action [6-5](#)
 - alert [6-7](#)
 - configuring [6-9](#)
 - Dial [6-7](#)
 - Dial Engine Script [6-7](#)
 - e-mail
 - action [6-6](#)
 - system event [B-1](#)
 - IP Phone Text [6-6](#)
 - overview [6-6](#)
 - system event [B-1](#)
 - Talk Group [6-7](#)
- notification preferences
 - configuring [3-14](#)
 - described [3-14, 4-7](#)
- notifying participants in an active VTG [5-19](#)

O

old digit password, changing [4-4](#)

online help, accessing [1-14](#)

operational, RMS status [2-41](#)

Operational Views

See ops views

operator role

described [1-7, 3-8](#)

responsibilities [3-1](#)

restricting assignments [2-93](#)

ops view administrator role, described [1-7, 3-9](#)

ops views

accessible to [7-5](#)

affecting VTGs [7-10](#)

allocating dial ports, described [7-19](#)

assigning a dial number (DN) [7-13](#)

assigning to user [7-20](#)

associated [3-25](#)

associating

channel groups with [2-24, 7-21](#)

channels with [7-21](#)

to channels [2-14](#)

user group with [3-33](#)

user with [3-25](#)

available [3-25](#)

belongs to [7-4](#)

benefits [7-4](#)

caveats [7-7](#)

channels [7-21](#)

creating [7-3](#)

determining dial port allocation [7-20](#)

dial-in numbers [7-13](#)

dial port pools [7-19](#)

overview [7-1](#)

resources [7-4](#)

system [7-1](#)

to which user belongs [3-24](#)

to which user group belongs [3-33](#)

understanding VTGs [7-8](#)

user roles [7-6](#)

viewing

details [7-16](#)

resources [7-15](#)

Ops View to User Association window [3-25](#)

Options window [2-90](#)

order, of dial preferences [3-17](#)

OUT_OF_SERVICE [8-2](#)

P

P25 Fixed Station

controlling [9-4](#)

keys for [2-56](#)

ports [2-78](#)

pager, notification preference [3-14, 4-7](#)

PARTIAL_SERVICE [8-2](#)

participant

- adding to VTG [5-13](#)
- in VTG [5-13](#)
- removing from VTG [5-13](#)

password

- Apply User Account Lockout setting [2-96](#)
- Apply User Password Expiration setting [2-95](#)
- changing [4-3](#)
- expiration date [3-7](#)
- Failed Password Attempt Expiration Hours setting [2-97](#)
- Maximum Invalid Login Attempts Allowed setting [2-97](#)
- Minimum Digit Password Length setting [2-94](#)
- Minimum Lower Case Letter Count setting [2-94](#)
- Minimum Numeric Character Count setting [2-94](#)
- Minimum Password Length setting [2-93](#)
- Minimum Special Character Count setting [2-95](#)
- Minimum Upper Case Letter Count setting [2-94](#)
- Password Expiration Notification setting [2-96](#)
- Password Expiration setting [2-95](#)
- Password History Count setting [2-95](#)
- RMS [2-43](#)
- user [3-5, 3-7](#)

patch secure channels

- end device for users [3-12](#)
- IPICS options [2-100](#)
- user profile [4-6](#)

phone

- associated [3-20](#)
- associating user with [3-19](#)
- available [3-20](#)

Phone Associations window [3-20](#)

phone service [C-1](#)

PIN, digit password

- defined [3-10](#)
- in user profile [4-4](#)

Policies window

- described [6-3](#)
- displaying [6-3](#)

policy

- action, *See* action
- activating [6-16](#)
- adding [6-4](#)
- associated [3-21](#)
- associating user with [3-20, 6-15](#)
- available [3-21](#)
- definition [6-1](#)
- deleting [6-16](#)
- deleting action from [6-12](#)
- deleting trigger from [6-15](#)
- executed [6-17](#)
- executing [6-17](#)

- invitation type
 - actions in [6-5](#)
 - adding [6-11](#)
 - described [6-4](#)
 - updating [6-11](#)
 - multi-purpose type
 - actions in [6-5](#)
 - adding [6-8](#)
 - described [6-4](#)
 - updating [6-8](#)
 - ops view guidelines [6-4](#)
 - reactivating [6-19](#)
 - scheduled [6-19](#)
 - system resources for [6-4](#)
 - trigger [6-12](#)
 - type [6-5](#)
 - viewing information about [6-17, 6-19](#)
- Policy Associations window [3-21](#)
- policy engine
 - license requirement [6-1](#)
 - Policies window [6-3](#)
 - policy, *See* policy [6-1](#)
 - roles that can access [8-1](#)
 - SIP provider [8-32](#)
 - tracing [8-3](#)
- Policy Management drawer, accessing [6-1](#)
- pop-up windows [1-10](#)
- port
 - channel [2-8](#)
 - conventions [2-8, 2-35, 2-36](#)
 - multicast address [2-36](#)
- preferences, system, setting in Options window [2-90](#)
- primary server
 - description [10-1](#)
 - See also* high availability (HA)
- prompts
 - customized script, *See* customized script prompts
 - described [8-1](#)
 - languages
 - See also* language
 - languages, about [8-8](#)
 - managing [8-7](#)
 - repository [8-8](#)
 - spoken name, *See* spoken name prompts
 - standard script, *See* standard script prompts
- PTT channel
 - See* channel
- PTT channel group
 - See* channel group
-
- ## R
- radio
 - adding
 - to system [9-9](#)
 - to VTG template [5-5](#)

- Allow association to users, check box described [9-11](#)
- allow latch, described [9-14](#)
- Allow use in VTGs, check box described [9-12](#)
- associating
 - signals with channels [2-16](#)
 - user with [3-22](#)
 - with user from Radios window [9-16](#)
- channel [9-2](#)
- codec field described [9-10](#)
- control functions [3-24](#)
- default tone sequences [9-6](#)
- deleting [9-20](#)
- description, field described [9-9](#)
- descriptor file, described [9-24](#)
- designating permissions for [3-23](#)
- editing information [9-15](#)
- enabling or disabling [9-19](#)
- frequency channels, described [9-4](#)
- hangover time, field described [9-11](#)
- IDC caveats when configuring tone sequences [9-41](#)
- listen only, field described [9-14](#)
- location, field described [9-10](#)
- managing
 - descriptors [9-23](#)
 - overview [9-2](#)
- multicast address, field described [9-10](#)
- multicast port, field described [9-10](#)
- name, field described [9-9](#)
- overview [9-1](#)
- Pooled Resource, field described [9-10](#)
- radio color, field described [9-14](#)
- region, field described [9-14](#)
- removing [9-20](#)
- RX mute during PTT, field described [9-14](#)
- search for in VTG window [5-24](#)
- secure radio, field described [9-10](#)
- tone and signaling sequences, described [9-24](#)
- tone descriptors, described [9-23](#)
- type, field described [9-9](#)
- viewing information [9-15](#)
- voice delay, field described [9-11](#)
- radio channel
 - managing [9-2](#)
 - See also* radio
- radio color, field described [9-14](#)
- radio control service
 - See* RCS
- radio descriptors [9-24](#)
 - deleting [9-45](#)
 - described [9-24](#)
 - format example [9-25](#)
 - IDC operation caveats [9-41](#)
 - managing [9-23](#)
 - updating [9-44](#)
- radio preferences [3-14, 4-7](#)

- rcs.log
 - file [12-15](#)
- rcs.log, downloading [12-15](#)
- RCS logs
 - downloading [12-15](#)
 - entry types [12-14](#)
 - overview [12-14](#)
 - viewing [12-13](#)
- RCS Logs window
 - described [12-13](#)
 - log entry types [12-14](#)
- reactivate
 - action [6-19](#)
 - policy [6-19](#)
 - VTG [5-22](#)
- recommended update, for IDC [2-104](#)
- recording, spoken names prompts [8-18](#)
- recovering, system administrator [3-28](#)
- recurrence, of trigger [6-14](#)
- redundant server [10-2](#)
- refreshing, Administration Console [1-10](#)
- regions
 - adding [2-112](#)
 - deleting [2-113](#)
 - viewing or editing [2-113](#)
- removing
 - channel [2-18](#)
 - channel from channel group [2-23](#)
 - channel group [2-25](#)
 - incident [2-75](#)
 - key [2-67](#)
 - keyset [2-60](#)
 - radio [9-20](#)
 - RMS [2-46](#)
 - UMS [2-56](#)
 - user [3-28](#)
 - user group [3-35](#)
 - VSOM server [2-69](#)
 - VTG [5-11](#)
- repository [8-8, 8-21](#)
- required information, in Cisco IPICS windows [1-9, 1-12](#)
- rerecording, spoken names prompts [8-18](#)
- restoring a backed-up database [11-9](#)
- Restrict Operator Role assignments, setting described [2-93](#)
- retention period [2-92](#)
- RMS
 - activating [2-39, 2-42](#)
 - adding [2-43](#)
 - calculating DSPs [A-12](#)
 - configuration, merging [2-47](#)
 - configuring
 - managing [2-47](#)
 - security features [A-1](#)
 - T1/E1 controllers, interfaces, and voice parameters [A-7](#)
 - connectivity guidelines [A-4](#)
 - controllers [2-41](#)

- deactivated status [2-41, 2-42](#)
- deactivating [2-39, 2-42](#)
- deleting [2-46](#)
- described [1-5](#)
- ds0 groups [A-4](#)
- dspfarm configuration [A-12](#)
- E1 timeslots [A-5](#)
- editing information [2-39](#)
- host name [2-41](#)
- IP address [2-41](#)
- IP address selection
 - Ethernet interface [A-6](#)
 - guidelines [A-6](#)
 - Loopback0 interface [A-6](#)
 - Vif1 interface [A-6](#)
- location [2-40](#)
- loopback [2-41](#)
- managing
 - configuration [2-47](#)
 - overview [2-37](#)
- merging configuration [2-47](#)
- name [2-40](#)
- operational status [2-41](#)
- removing [2-46](#)
- security features [A-1](#)
- status [2-41](#)
- status of routers in RMS window [2-38](#)
- stopping
 - state [2-42](#)
 - status [2-41](#)
- T1 timeslots [A-4](#)
- unconfigured status [2-41](#)
- unreachable status [2-41](#)
- updating
 - configuration [2-47](#)
 - information in Cisco IPICS [2-47](#)
 - viewing information [2-40](#)
- RMS/UMS dashboard
 - overview [12-6](#)
- RMS dashboard
 - elements [12-6](#)
- RMS polling frequency, setting interval [2-91](#)
- role
 - all [1-7, 3-9](#)
 - assigning [3-8](#)
 - changing [3-8](#)
 - Cisco IPICS [1-6](#)
 - described [3-8](#)
 - dispatcher [1-7, 3-8, 5-1](#)
 - Linux user [1-8](#)
 - operator [1-7, 3-1, 3-8](#)
 - ops view administrator [1-7, 3-9](#)
 - system administrator [1-7, 2-1, 3-9](#)
 - user [1-7, 4-1](#)
- roles, field described [4-3](#)
- router
 - See* RMS

router media service

See RMS

RX mute during PTT

on channel [2-10](#)

on radio [9-14](#)

S

scheduled policy, information about [6-19](#)

scripts

adding [8-22](#)

changing information about [8-22](#)

deleting [8-23](#)

described [8-1](#)

dial engine [8-21](#)

IppeDialin [8-21](#)

IppeDialout [8-21](#)

IppeRecording [8-21](#)

languages [8-8](#)

managing [8-21](#)

repository [8-21](#)

system [8-21](#)

viewing information about [8-22](#)

viewing list of [8-21](#)

searching in Virtual Talk Groups window [5-23](#)

secondary server

description [10-1](#)

high availability license on [2-77](#)

See also high availability (HA)

secure channel patch

end device for users [3-12](#)

IPICS options [2-100](#)

user profile [4-6](#)

secure radio [9-10](#)

Serial Radio Control Interface (SRCI)

accessing [9-20](#)

channel selectors [9-22](#)

IPICS Connect [9-22](#)

overview [9-3](#)

radio display and controls [9-21](#)

radio information [9-20](#)

server, Cisco IPICS [1-4](#)

server logs, viewing [12-10, 12-13](#)

server time, synchronizing for high availability [10-8](#)

server usage guidelines [1-9](#)

Serviceability drawer, overview [12-1](#)

services, obtaining information about [8-2](#)

session initiation protocol (SIP),
documentation [1-xxiv](#)

setting up Cisco IPICS [1-1](#)

short message service (SMS), notification
preference [3-14, 4-7](#)

short name for channel, field described [2-6](#)

SHUTDOWN [8-2](#)

SIP, configuring for Policy Engine [8-24](#)

SIP provider

Cisco IOS [8-35](#)

Cisco Unified Communications
Manager [8-32](#)

- Cisco Unified Communications Manager Express **8-35**
- configuring for Cisco IPICS **8-32**
- described **8-32**
- SNMP
 - MIB **2-90**
- software components, of Cisco IPICS **1-3**
- specifying order **3-18, 4-10, 4-12**
- split brain scenario
 - definition **10-3**
 - resolving **10-10**
- spoken names prompts
 - changing information about **8-20**
 - deleting **8-20**
 - described **8-14**
 - downloading **8-17**
 - for user **3-25**
 - recording **8-18**
 - replacing .wav file **8-18**
 - rerecording **8-18**
 - uploading **8-16**
 - viewing list of **8-15**
- Spoken Names window **8-15**
- SSL certificate, creating on Cisco IPICS server **D-1**
- standard script prompts
 - described **8-10**
 - uploading **8-11**
 - viewing list of **8-10**
- Standard Script Prompts window **8-10**
- standby server
 - description **10-1**
 - See also* high availability (HA)
- status
 - channel **2-7**
 - DS0 **2-45**
 - multicast address **2-33, 2-36**
- Status Details window **8-2**
- stopping, RMS status in RMS window **2-41**
- sub-VTG **5-5**
- system administrator role
 - described **1-7, 2-1, 3-9**
 - responsibilities **2-1**
- System dashboard, overview **12-2**
- system event e-mail notifications **B-1**
- system logs
 - downloading **12-12, 12-15**
 - entry types **12-11**
 - overview **12-11**
 - viewing **12-10**
- System Logs window
 - described **12-1, 12-10**
 - log entry types **12-11**
- system preferences, setting in Options window **2-90**
- system status
 - monitoring **12-10, 12-13**

T

T1/E1 controller configuration [A-4](#)

T1 timeslots [A-4](#)

tab

Address Information [3-8](#)

Associations [3-12](#)

Dial Login [3-10](#)

General Information [3-7, 3-9](#)

IDC [3-12](#)

Talk Group notification [6-7](#)

telephony user interface

See TUI

text to speech

See TTS [8-28](#)

time out, period for Administration
Console [1-14](#)

tone broadcast wave files

See alert tones

tone descriptor files, for radios [9-23](#)

tone descriptors

adding [9-43](#)

deleting [9-45](#)

described [9-23](#)

IDC operation caveats [9-41](#)

updating [9-44](#)

tone sequences

description field, described [9-6](#)

enabled state check box [9-6](#)

label [9-6](#)

momentary control [9-6](#)

stateful control [9-6](#)

tone sequences, described [9-23](#)

trace

advanced activities [8-6](#)

cluster view daemon [8-3](#)

configuring, trace files

number [8-4](#)

size [8-4](#)

debug [8-3](#)

default levels [8-5, 8-6](#)

described [8-3](#)

dial engine [8-3](#)

dump

memory trace [8-6](#)

threads trace [8-6](#)

facilities [8-3, 8-5](#)

files [8-3](#)

interpreting trace files [8-7](#)

levels [8-3, 8-4](#)

maximum size of all trace files on
systems [8-4](#)

obtaining trace files [8-7](#)

recommendations for [8-3](#)

XDebug (extended debug) [8-3](#)

TRACE-level error messages [12-11, 12-14](#)

transaction log [10-14](#)

trigger

adding [6-13](#)

definition [6-1](#)

- deleting [6-15](#)
 - overview [6-12](#)
 - recurrence [6-14](#)
 - updating [6-13](#)
 - viewing [6-13](#)
- TTS
- configuring [8-28](#)
 - overview [8-28](#)
- TUI (telephony user interface)
- accessing [6-21](#)
 - activities [6-20](#)
 - described [6-20](#)
 - dial-in floor [6-22](#)
 - dial login for [3-9](#)
 - digit ID [3-10](#)
 - guidelines
 - general [6-21](#)
 - menu [6-22](#)
 - logging in [6-21](#)
 - PIN [3-10](#)
 - speaking [6-22](#)
- type, channel connection [2-7](#)
-
- U**
- UMS
- adding [2-54](#)
 - deleting [2-56](#)
 - described [1-5](#)
 - disabled status [2-53](#)
 - disabling [2-53](#)
 - editing information [2-50](#)
 - Enabled status [2-53](#)
 - enabling [2-53](#)
 - high availability [2-51](#)
 - IP Address [2-51](#)
 - location [2-51](#)
 - managing
 - overview [2-48](#)
 - name [2-51](#)
 - removing [2-56](#)
 - status of [2-48](#)
 - Status page [2-54](#)
 - viewing information [2-50](#)
- unconfigured, RMS status [2-41](#)
- understanding [7-19](#)
- Activity Log Management window [2-86](#)
 - Channels window [2-3](#)
 - Descriptors window [9-42](#)
 - IDC Regions window [2-111](#)
 - Incidents window [2-71](#)
 - Key Sets window [2-68](#)
 - Keysets window [2-57](#)
 - Keys window [2-60](#)
 - Ops View window [7-2](#)
 - Radios window [9-7](#)
 - RMS window [2-37](#)
 - UMS window [2-48](#)

- Virtual Talk Groups window [5-2](#)
- unified media service
 - See* UMS
- unlocking a user account [3-27](#)
- unmute
 - Cisco Unified IP Phone [3-10](#)
 - dial-in phone [3-10](#)
 - end device [3-10](#)
 - IDC [3-10](#)
- unmuting IDC user in a VTG [5-15](#)
- unreachable, RMS status [2-41](#)
- updating
 - descriptors [9-44](#)
 - radio and tone descriptors [9-44](#)
 - RMS configuration [2-47](#)
- uploading
 - IDC versions [2-104](#)
 - license file [2-81](#)
 - standard script prompts [8-11](#)
- used by field, for multicast address [2-33](#)
- user
 - adding
 - dial preferences in user profile [4-11](#)
 - IDC preference in user profile [4-10](#)
 - notification preferences in user profile [4-8](#)
 - radio preferences in user profile [4-9](#)
 - to system [3-4](#)
 - to VTG template [5-5](#)
 - address
 - information [3-7](#)
 - street [3-8](#)
 - associating
 - ops views with [3-25](#)
 - phone with [3-19](#)
 - policy with [3-20, 6-15](#)
 - PTT channels with [3-18](#)
 - radios with [3-22](#)
 - to key [2-64](#)
 - to PTT channels [2-15](#)
 - associating radios with, from Radios window [9-16](#)
 - changing information in user profile [4-2](#)
 - channel association [4-13](#)
 - copying [3-4](#)
 - default location [3-10](#)
 - deleting
 - dial preferences in user profile [4-11](#)
 - from system [3-28](#)
 - notification preferences in user profile [4-8](#)
 - radio preferences in user profile [4-9](#)
 - described [3-1](#)
 - dial preferences [4-12](#)
 - digit ID [3-10](#)
 - digit password (PIN) field [3-10, 4-4](#)
 - disabled [3-27](#)
 - downloading IDC [4-17](#)

- editing
 - dial preferences in user profile [4-11](#)
 - IDC dial preference in user profile [4-10](#)
 - notification preferences in user profile [4-8](#)
 - radio preferences in user profile [4-9](#)
- enabled [3-27](#)
- general information [3-7](#)
- in inactive VTG [5-5](#)
- list of VTGs in which is a participant [3-26](#)
- locking account [3-27](#)
- managing
 - associations [4-13](#)
 - communications preferences [4-7](#)
 - profile [4-2](#)
- name [3-5, 3-7](#)
- ops view for [3-24](#)
- order
 - of dial preferences [4-12](#)
 - of radio preferences [3-18, 4-10](#)
- password [3-7](#)
- PIN [3-10](#)
- radio preferences [3-18, 4-10](#)
- recovering deleted system administrator [3-28](#)
- removing [3-28](#)
- search for in VTG window [5-24](#)
- status [3-27](#)
- unlocking account [3-27](#)
- updating IDC dialer preferences in user profile [4-10](#)
- viewing
 - associations [4-16](#)
 - dial preferences [4-11](#)
 - IDC dialer preferences [4-10](#)
 - notification preferences [4-8](#)
 - radio preferences [4-9](#)
- user associations
 - Channels tab, described [4-13](#)
 - Incidents tab, described [4-14](#)
 - Keys tab, described [4-16](#)
 - Phones tab, described [4-15](#)
 - Policies tab, described [4-15](#)
 - Radios tab, described [4-14](#)
 - Virtual Talk Groups tab, described [4-15](#)
- User dashboard
 - elements [12-4](#)
 - overview [12-4](#)
- User Details window
 - activities [1-12](#)
 - enabling or disabling latch for IDC user [5-17](#)
- user group
 - adding
 - members to [3-32](#)
 - new [3-31](#)
 - to VTG template [5-5](#)
 - associating ops views with [3-33](#)
 - changing name of [3-34](#)

- deleting [3-35](#)
 - described [3-1, 3-29](#)
 - list of VTGs in which is a participant [3-34](#)
 - naming recommendation [3-31](#)
 - ops view for [3-33](#)
 - removing [3-35](#)
 - User Groups window
 - accessing [3-29](#)
 - described [3-29](#)
 - User Management drawer, accessing [3-1](#)
 - user name of RMS field, described [2-41](#)
 - user profile
 - account status field, described [4-3](#)
 - address field, described [4-4](#)
 - belongs to field, described [4-3](#)
 - confirm password field, described [4-3](#)
 - default location [4-5](#)
 - described [4-2](#)
 - dial preferences field, described [4-7](#)
 - digit ID field, described [4-4](#)
 - first name field, described [4-2](#)
 - IDC info field, described [4-6](#)
 - IPICS status field, described [4-3](#)
 - last name field, described [4-2](#)
 - new password field, described [4-3](#)
 - notification preferences field, described [4-6](#)
 - old digit password field, described [4-4](#)
 - old password field, described [4-3](#)
 - password expiration date field, described [4-3](#)
 - roles field, described [4-3](#)
 - user name field, described [4-2](#)
 - User Radio Permissions window [3-23, 3-24](#)
 - user role
 - described [1-7](#)
 - responsibilities [4-1](#)
 - users
 - key associations [4-16](#)
 - phone associations [4-15](#)
 - policy associations [4-15](#)
 - radio associations [4-14](#)
 - VTG associations [4-15](#)
 - Users window
 - accessing [3-2](#)
 - described [3-2](#)
-
- ## V
- video size, maximum [2-98](#)
 - viewing
 - activity logs [2-86](#)
 - and downloading archived activity logs [2-88](#)
 - and editing user associations, My Associations window [4-2](#)
 - channel associations [2-17](#)
 - IDC
 - alert tone sets [2-107](#)

- regions [2-113](#)
 - key associations [2-66](#)
 - ops view resources [7-15](#)
 - or editing locations [2-30](#)
 - user associations [4-16](#)
- virtual talk group
 - See* VTG
- Virtual Talk Group dashboard
 - elements [12-4](#)
 - overview [12-4](#)
- voice activity detection
 - enable field [2-10](#)
 - enabling on IDC [5-7, 5-9](#)
- voice delay [9-11](#)
- VSOM server
 - adding
 - new [2-68](#)
 - deleting from system [2-69](#)
 - Description, field described [2-69](#)
 - Id, field described [2-69](#)
 - Name, field described [2-69](#)
 - removing
 - from system [2-69](#)
 - viewing information [2-69](#)
- VTG
 - activating [5-12](#)
 - active [5-2, 5-11](#)
 - adding
 - channel [5-5](#)
 - channel group [5-5](#)
 - new [5-6](#)
 - participants [5-13](#)
 - radio [5-5](#)
 - to VTG template [5-5](#)
 - user [5-5](#)
 - user group [5-5](#)
 - VTG [5-5](#)
 - best practices [5-25](#)
 - changing the status of [5-12](#)
 - channel in inactive [5-5](#)
 - Cisco Unified IP Phone user in [5-14](#)
 - deactivating [5-13](#)
 - deleting [5-11](#)
 - dialing out to participants in active [5-19](#)
 - disabling
 - IDC attributes in active [5-19](#)
 - latch in User Details window [5-17](#)
 - empty [5-5](#)
 - enabling
 - IDC attributes in active [5-19](#)
 - latch in User Details window [5-17](#)
 - guidelines for managing
 - active [5-11](#)
 - inactive [5-5](#)
 - IDC user in [5-14](#)
 - inactive [5-2](#)
 - incident [2-70](#)
 - in which user group is participating [3-34](#)

list in which user is participating [3-26](#)

managing [5-2](#)

 active [5-11](#)

 inactive [5-4](#)

modifying [5-9](#)

multicast address used by [2-31](#)

muting an IDC user [5-15](#)

non-secure channel in [5-5](#)

notifying participants in active [5-19](#)

participant in itself [5-5](#)

participants [5-13](#)

reactivating [5-22](#)

removing

 from system [5-11](#)

 participants [5-13](#)

search for in VTG window [5-24](#)

secure channel in [5-5](#)

seeing as user on Cisco Unified IP
Phone [C-6](#)

sub-VTG [5-5](#)

unavailable channel [5-22](#)

unmuting an IDC user [5-15](#)

user in inactive [5-5](#)

VTG add participants action [6-6, 6-10](#)

VTG search utility, using [5-23](#)

X

X, in Activate VTG Details area [5-22](#)

Xdebug (extended debug) trace level [8-3](#)

W

WARN-level error messages [12-11, 12-14](#)