



# Unconfiguring or Uninstalling the SD-AVC Network Service

---

- [Unconfiguring the SD-AVC Network Service, page 1](#)
- [Uninstalling the SD-AVC Network Service, page 1](#)

## Unconfiguring the SD-AVC Network Service

Use the following procedure to unconfigure the SD-AVC Network Service on the router hosting the service. Unconfiguring the service is necessary before changing the SD-AVC Network Service configuration.

- 1 Deactivate the service. This step stops the service but does not erase the database of compiled application data.

**service sd-avc deactivate**

- 2 Verify that the service has been deactivated.

**service sd-avc status**

The following output confirms that the service has been deactivated:

```
Service SDAVC is installed, configured and deactivated
```

- 3 Unconfigure the service.

**service sd-avc unconfigure**

- 4 Verify that the service has been unconfigured.

**service sd-avc status**

The following output confirms that the service has been unconfigured:

```
Service SDAVC is installed, not configured and deactivated
```

## Uninstalling the SD-AVC Network Service

Use the following procedure to uninstall the SD-AVC Network Service on the router hosting the service.

- 1 Deactivate and unconfigure the SD-AVC Network Service. Follow the full procedure in: [Unconfiguring the SD-AVC Network Service, on page 1](#)
- 2 Uninstall the service. This step deletes all information from the SD-AVC database for this SD-AVC Network Service.

**service sd-avc uninstall**

- 3 Verify that the service has been uninstalled.

**service sd-avc status**

The following output confirms that the service has been uninstalled:

```
Service SDAVC is uninstalled, not configured and deactivated
```