



Unconfiguring or Uninstalling the SD-AVC Network Service

- [Unconfiguring the SD-AVC Network Service, on page 1](#)
- [Uninstalling the SD-AVC Network Service, on page 1](#)

Unconfiguring the SD-AVC Network Service

Use the following procedure to unconfigure the SD-AVC Network Service on the router hosting the service. Unconfiguring the service is necessary before changing the SD-AVC Network Service configuration.

1. Deactivate the service. This step stops the service but does not erase the database of compiled application data.

```
service sd-avc deactivate
```

2. Verify that the service has been deactivated.

```
service sd-avc status
```

The following output confirms that the service has been deactivated:

```
Service SDAVC is installed, configured and deactivated
```

3. Unconfigure the service.

```
service sd-avc unconfigure
```

4. Verify that the service has been unconfigured.

```
service sd-avc status
```

The following output confirms that the service has been unconfigured:

```
Service SDAVC is installed, not configured and deactivated
```

Uninstalling the SD-AVC Network Service

Use the following procedure to uninstall the SD-AVC Network Service on the router hosting the service.

1. Deactivate and unconfigure the SD-AVC Network Service. Follow the full procedure in: [Unconfiguring the SD-AVC Network Service, on page 1](#)
2. Uninstall the service. This step deletes all information from the SD-AVC database for this SD-AVC Network Service.

service sd-avc uninstall

3. Verify that the service has been uninstalled.

service sd-avc status

The following output confirms that the service has been uninstalled:

```
Service SDAVC is uninstalled, not configured and deactivated
```