



EEM Multiple Event Support Tcl Command Extensions

Last Updated: October 16, 2012

The following conventions are used for the syntax documented on the Tcl command extension pages:

- An optional argument is shown within square brackets, for example:

[type ?]

- A question mark ? represents a variable to be entered.
- Choices between arguments are represented by pipes, for example:

priority low|normal|high



Note

For all EEM Tcl command extensions, if there is an error, the returned Tcl result string contains the error information.



Note

Arguments for which no numeric range is specified take an integer from -2147483648 to 2147483647, inclusive.

- [attribute, page 1](#)
- [correlate, page 2](#)
- [trigger, page 3](#)

attribute

Specifies a complex event.

Syntax

```
attribute tag ? [occurs ?]
```



Americas Headquarters:
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

Arguments

tag	Specifies a tag using the <i>event-tag</i> argument that can be used with the attribute command to associate an event.
occurs	(Optional) Specifies the number of occurrences before an EEM event is triggered. If not specified, an EEM event is triggered on the first occurrence. The range is from 1 to 4294967295.

Result String

None

Set_cerrno

No

correlate

Builds a single complex event and allows boolean logic to relate events and tracked objects.

Syntax

```
correlate event ? track ? [andnot | and | or] event ? track ?
```

Arguments

event	<p>Specifies the event that can be used with the trigger command to support multiple event statements within an script.</p> <p>If the event associated with the <i>event-tag</i> argument occurs for the number of times specified by the trigger command, the result is true. If not, the result is false.</p>
track	<p>Specifies the event object number for tracking. The range is from 1 to 500.</p> <p>If the tracked object is set, the result of the evaluation is true. If the tracked object is not set or is undefined, the result of the evaluation is false. This result is regardless of the state of the object.</p>
<i>andnot</i>	(Optional) Specifies that if event 1 occurs the action is executed, and if event 2 and event 3 occur together the action is not executed.

and	(Optional) Specifies that if event 1 occurs the action is executed, and if event 2 and event 3 occur together the action is executed. Note When "and" is used to group events such as traps or syslog messages, then the default trigger occurrence window is three minutes.
or	(Optional) Specifies that if event 1 occurs the action is executed, or else if event 2 and event 3 occur together the action is executed.

Result String

None

Set_cerrno

No

trigger

Specifies the multiple event configuration ability of Embedded Event Manager (EEM) events. A multiple event is one that can involve one or more event occurrences, one or more tracked object states, and a time period for the event to occur. The events are raised based on the specified parameters.

Syntax

```
trigger [occurs ?] [period ?] [period-start ?] [delay ?]
```

Arguments

occurs	(Optional) Specifies the number of times the total correlation occurs before an EEM event is raised. When a number is not specified, an EEM event is raised on the first occurrence. The range is from 1 to 4294967295.
period	(Optional) Time interval in seconds and optional milliseconds, during which the one or more occurrences must take place. This is specified in the format ssssssss[.mmm], where ssssssss must be an integer number representing seconds between 0 and 4294967295, inclusive and mmm represents milliseconds and must be an integer number between 0 to 999.
period-start	(Optional) Specifies the start of an event correlation window. If not specified, event monitoring is enabled after the first CRON period occurs.

delay

(Optional) Specifies the number of seconds and optional milliseconds after which an event will be raised if all the conditions are true (specified in the format ssssssss[.mmm], where ssssssss must be an integer number representing seconds between 0 and 4294967295, inclusive and mmm represents milliseconds and must be an integer number between 0 to 999).

Result String

None

Set_cerrno

No

© 2012 Cisco Systems, Inc. All rights reserved.