



# IP Unnumbered Ethernet Polling Support

---

The IP Unnumbered Ethernet Polling Support feature provides IP unnumbered support for Ethernet physical interfaces. This support already exists for serial interfaces.

- [Finding Feature Information, page 1](#)
- [Information About IP Unnumbered Ethernet Polling Support, page 1](#)
- [How to Configure IP Unnumbered Ethernet Polling Support, page 2](#)
- [Configuration Examples for IP Unnumbered Ethernet Polling Support, page 6](#)
- [Additional References, page 6](#)
- [Feature Information for IP Unnumbered Ethernet Polling Support, page 7](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

## Information About IP Unnumbered Ethernet Polling Support

### IP Unnumbered Ethernet Polling Support Overview

IP unnumbered support for serial interfaces is extended to Ethernet physical interfaces. Unnumbered Ethernet physical interfaces are used in the same manner as unnumbered serial interfaces. On a device, if a loopback interface is configured and an IP address is assigned to it, using the polling option more than one Ethernet physical interface can be unnumbered to the loopback.

The polling option enables the dynamic discovery of hosts (connected though the unnumbered interfaces) based on the Address Resolution Protocol (ARP) protocol.

# How to Configure IP Unnumbered Ethernet Polling Support

## Enabling Polling on an Ethernet Interface

### SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `interface type number`
4. `ip address ip-address mask`
5. `exit`
6. `interface type number`
7. `ip unnumbered type number poll`
8. `end`

### DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><code>enable</code></p> <p><b>Example:</b></p> <pre>Device&gt; enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
Step 2	<p><code>configure terminal</code></p> <p><b>Example:</b></p> <pre>Device# configure terminal</pre>	<p>Enters global configuration mode.</p>
Step 3	<p><code>interface type number</code></p> <p><b>Example:</b></p> <pre>Device(config)# interface loopback 0</pre>	<p>Specifies an interface and enters interface configuration mode.</p>
Step 4	<p><code>ip address ip-address mask</code></p> <p><b>Example:</b></p> <pre>Device(config-if)# ip address 209.165.200.229 255.255.240.224</pre>	<p>Configures the IP address on the interface.</p>

	Command or Action	Purpose
<b>Step 5</b>	<b>exit</b>  <b>Example:</b> Device(config-if)# exit	Exits interface configuration mode and returns to global configuration mode.
<b>Step 6</b>	<b>interface</b> <i>type number</i>  <b>Example:</b> Device(config)# interface ethernet 0/0	Specifies an interface and enters interface configuration mode.
<b>Step 7</b>	<b>ip unnumbered</b> <i>type number poll</i>  <b>Example:</b> Device(config-if)# ip unnumbered loopback 0 poll	Enables IP-connected host polling on the specified interface.
<b>Step 8</b>	<b>end</b>  <b>Example:</b> Device(config-if)# end	Returns to privileged EXEC mode.

## Configuring the Queue Size and the Packet Rate for IP ARP Polling for Unnumbered Interfaces

### SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ip arp poll queue** *queue-size*
4. **ip arp poll rate** *packet-rate*
5. **end**

### DETAILED STEPS

	Command or Action	Purpose
<b>Step 1</b>	<b>enable</b>  <b>Example:</b> Device> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>

	Command or Action	Purpose
Step 2	<b>configure terminal</b>  <b>Example:</b> Device# configure terminal	Enters global configuration mode.
Step 3	<b>ip arp poll queue <i>queue-size</i></b>  <b>Example:</b> Device(config)# ip arp poll queue 1000	Configures the IP ARP polling queue size.
Step 4	<b>ip arp poll rate <i>packet-rate</i></b>  <b>Example:</b> Device(config)# ip arp poll rate 1000	Configures the IP ARP polling packet rate, in packets per second.
Step 5	<b>end</b>  <b>Example:</b> Device(config-if)# end	Returns to privileged EXEC mode.

## Verifying IP Unnumbered Ethernet Polling Support

Perform this task to verify IP unnumbered Ethernet polling support.



**Note** The **show** commands are not in any specific order.

### SUMMARY STEPS

1. **enable**
2. **show ip arp poll**
3. **show ip interface *type number* unnumbered**
4. **show ip interface *type number* unnumbered detail**

### DETAILED STEPS

**Step 1**     **enable**  
 Enables privileged EXEC mode.

**Example:**

```
Device> enable
```

**Step 2** **show ip arp poll**

Displays the IP ARP host polling status.

**Example:**

```
Device# show ip arp poll
```

```
Number of IP addresses processed for polling: 438
Number of entries in the queue: 100 (high water mark: 154, max: 1000)
Number of request dropped:
  Queue was full: 1288
  Request was throttled by incomplete ARP: 10
  Duplicate entry found in queue: 1431
```

**Step 3** **show ip interface *type number* unnumbered**

Displays the status of unnumbered interface support on interfaces configured for IP.

**Example:**

```
Device# show ip interface loopback 0 unnumbered
```

```
Number of unnumbered interfaces with polling: 10
Number of IP addresses processed for polling: 15
Number of IP addresses in queue for polling: 4
```

**Step 4** **show ip interface *type number* unnumbered detail**

Displays the detailed status of unnumbered interface support on interfaces configured for IP.

**Example:**

```
Device# show ip interface loopback 0 unnumbered detail
```

```
Number of unnumbered interfaces with polling: 10
Number of IP addresses processed for polling: 15
Last 10 IP addresses processed for polling:
  209.165.201.2
  209.165.201.3
  209.165.201.4
  209.165.201.5
  209.165.201.6
  209.165.201.7
  209.165.201.8
  209.165.201.9
  209.165.201.10
  209.165.201.11
Number of IP addresses in queue for polling: 4 (high water mark: 5)
  209.165.201.12
  209.165.201.13
  209.165.201.14
  209.165.201.15
```

# Configuration Examples for IP Unnumbered Ethernet Polling Support

## Example: Enabling Polling on an Ethernet Interface

```
Device> enable
Device# configure terminal
Device(config)# interface loopback 0
Device(config-if)# ip address 209.165.200.229 255.255.240.224
Device(config-if)# exit
Device(config)# interface ethernet 0/0
Device(config-if)# ip unnumbered loopback 0 poll
Device(config-if)# end
```

## Example: Configuring the Queue Size and the Packet Rate for IP ARP Polling for Unnumbered Interfaces

```
Device> enable
Device# configure terminal
Device(config)# ip arp poll queue 1000
Device(config)# ip arp poll rate 1000
Device(config)# end
```

## Additional References

### Related Documents

Related Topic	Document Title
Cisco IOS commands	<a href="#">Cisco IOS Master Command List, All Releases</a>
IPv4 Addressing commands	<a href="#">Cisco IOS IP Addressing Services Command Reference</a>
Conceptual information about IPv4 addresses	“Configuring IPv4 Addresses” module in the <i>IP Addressing: IPv4 Addressing Configuration Guide</i>

**Technical Assistance**

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	<a href="http://www.cisco.com/cisco/web/support/index.html">http://www.cisco.com/cisco/web/support/index.html</a>

## Feature Information for IP Unnumbered Ethernet Polling Support

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

**Table 1: Feature Information for IP Unnumbered Ethernet Polling Support**

Feature Name	Releases	Feature Information
IP Unnumbered Ethernet Polling Support	Cisco IOS XE Release 3.8S	The IP Unnumbered Ethernet Polling Support feature provides IP unnumbered support for Ethernet physical interfaces.  The following commands were introduced or modified: <b>clear ip arp poll statistics</b> , <b>clear ip interface</b> , <b>ip arp poll</b> , <b>ip unnumbered poll</b> , <b>show ip arp poll</b> , and <b>show ip interface unnumbered</b> .

