



REP Access Gateway

Resilient Ethernet Protocol (REP) is a Cisco proprietary protocol that provides an alternative to the Spanning Tree Protocol (STP). REP provides fast reconvergence and traffic recovery when a link in a ring fails. Fast reconvergence is achieved by notifying all nodes in the ring with a control message that activates the redundant path to the core network.

The REP Access Gateway Enhancements feature allows fast failure detection notifications between devices configured with REP access gateway (REP-AG), by enabling communication between Connectivity Fault Manager (CFM) and REP.

- [Finding Feature Information, page 1](#)
- [Restrictions for REP Access Gateway Enhancements, page 1](#)
- [Information About REP Access Gateway Enhancements, page 2](#)
- [How to Configure REP Access Gateway Enhancements, page 3](#)
- [Configuration Examples For REP Access Gateway Enhancements, page 5](#)
- [Additional References for REP Access Gateway, page 6](#)
- [Feature Information for REP Access Gateway Enhancement, page 7](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see [Bug Search Tool](#) and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Restrictions for REP Access Gateway Enhancements

- EFD is only supported on physical ports and services; it is not supported on VLAN sub interfaces.
- The CCM interval for CMF service on which EFD is supported is limited by the platform capabilities.


- The EFD feature is only supported on Down MEPs.
- EFD is not supported on trunk services.
- EFD is not supported for both G-8032 and REP at the same time.
- Only one MEP on a given interface or EFP may be configured for EFD. You cannot have MEPs operating at multiple CFM levels on the same interface.

Information About REP Access Gateway Enhancements

REP Access Gateway Enhancements

In a network where a REP and non-REP devices are connected and when a link failure occurs, a Non-REP device network (access gateway) directly connected to REP network sends failure notification, so that REP network can reroute the traffic to an alternate route. But, access devices supporting REP Edge No-Neighbor (REP ENN) only support one interface configured as a REP Edge No-Neighbor port, resulting in an unsupported architecture with the REP Access Gateway (REP AG) device.

Figure 1: REP Access Gateway

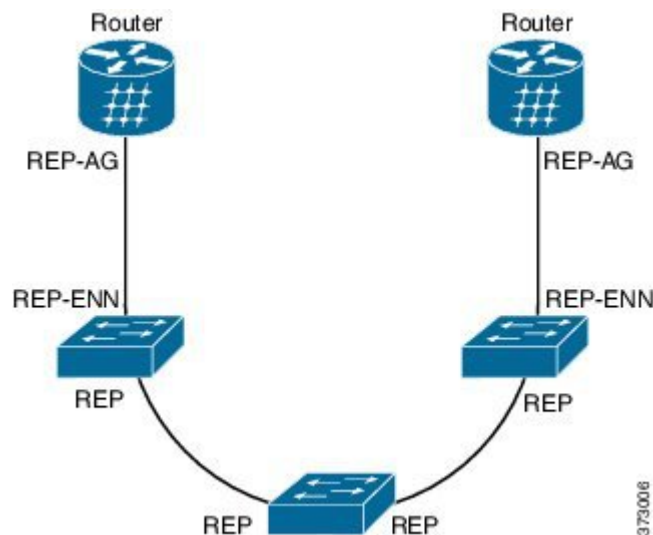

Fast failure detection in a REP-AG configured device can be achieved by enabling communication between Connectivity Fault Manager (CFM) and REP. CFM on the edge ports can notify REP if any failure is detected on the monitored links, allowing the appropriate re-convergence actions to be taken.

The mechanism for the communication is for REP to register as an Ethernet Fault Detection (EFD) client, so that any CFM defects above a configurable threshold triggers a notification to REP.

How to Configure REP Access Gateway Enhancements

Configuring REP Access Gateway Enhancements

Perform this task to configure EFD messages to REP devices.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **ethernet cfm global**
4. **link-protection enable**
5. **link-protection group management vlan *vlan-id***
6. **link-protection group *group-number* pccm vlan *vlan-id***
7. **ethernet cfm domain *domain-name* level *level-id* [direction outward]**
8. **service { *ma-name* | *ma-number* | *vlan-id* *vlan-id* | *vpn-id* *vpn-id* } [port | *vlan* *vlan-id* [direction down]**
9. **continuity-check**
10. **continuity-check [interval *time* | loss-threshold *threshold* | static rmp]**
11. **efd notify rep**
12. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Device> enable	Enables privileged EXEC mode. • Enter your password if prompted.
Step 2	configure terminal Example: Device# configure terminal	Enters global configuration mode.
Step 3	ethernet cfm global Example: Device(config)# ethernet cfm global	Enables Ethernet CFM globally.
Step 4	link-protection enable Example: Device(config)# link-protection enable	Enables link protection globally on the router.

	Command or Action	Purpose
Step 5	link-protection group management vlan <i>vlan-id</i> Example: Device(config)# link-protection group management vlan 51	Defines the management VLAN used for link protection.
Step 6	link-protection group <i>group-number</i> pccm vlan <i>vlan-id</i> Example: Device(config)# link-protection group 2 pccm vlan 16	Specifies an ODU-to-ODU continuity check message (P-CCM) VLAN.
Step 7	ethernet cfm domain <i>domain-name</i> level <i>level-id</i> [direction outward] Example: Device(config)# ethernet cfm domain REP_domain level 4	Configures the CFM domain for ODU 1 and enters Ethernet CFM configuration mode.
Step 8	service { <i>ma-name</i> <i>ma-number</i> <i>vlan-id</i> <i>vlan-id</i> <i>vpn-id</i> <i>vpn-id</i> } [<i>port</i> <i>vlan</i> <i>vlan-id</i> [<i>direction</i> <i>down</i>]] Example: Device(config-ecfm)# service rep_service evc rep-evc vlan 1001 direction down	Defines a maintenance association for ODU 1 and enters Ethernet CFM service instance configuration mode.
Step 9	continuity-check Example: Device(config-ecfm)# continuity-check	Enables CCM message transmission.
Step 10	continuity-check [interval <i>time</i> loss-threshold <i>threshold</i> static rmep] Example: Device(config)# Device(config-ecfm-srv)# continuity-check interval 3.3ms	Configures the time period between CCM message transmissions
Step 11	efd notify rep Example: Device(config-ecfm-srv)# efd notify rep	Enables EFD notifications to REP devices.
Step 12	end Example: Device(config-ecfm-srv)# end	Returns to user EXEC mode.

Verifying REP Access Gateway Enhancements

Perform this optional task to verify the status of interface monitored for EFD.

SUMMARY STEPS

1. **enable**
2. **show interface *number* rep detail**

DETAILED STEPS

Step 1

enable

Enables privileged EXEC mode. Enter your password if prompted.

Example:

```
device> enable
```

Step 2

show interface *number* rep detail

Use this command to verify that EFD is enabled for REP devices:

Example:

```
device# show interface ethernet 0/0/1 rep detail
GigabitEthernet1/7    REP enabled
Segment-id: 10 (Primary Edge No-Neighbor)
PortID: 0007001AE3DC2680
Preferred flag: Yes
EFD Status: Enabled
EFD State: Fault/Clear
Operational Link Status: NO NEIGHBOR
Current Key: 0007001AE3DC26806BD6
Port Role: Alternate
Blocked VLAN: 30-40
Admin-vlan: 500
```

Configuration Examples For REP Access Gateway Enhancements

Example Configuring REP Access Gateway Enhancements

This example shows how to configure EFD messages for REP devices.

```
Device> enable
Device# configure terminal
Device(config)# ethernet cfm global
Device(config)# link-protection enable
Device(config)# link-protection group management vlan 51
Device(config)# link-protection group 2 pccm vlan 16
Device(config)# ethernet cfm domain REP_domain level 4
Device(config-ecfm)# service rep_service evc rep-evc vlan 1001 direction down
Device(config-ecfm-srv)# continuity-check
Device(config-ecfm-srv)# continuity-check interval 3.3ms
Device(config-ecfm-srv)# efd notify rep
```

```
Device(config-ecfm-srv)# end
```

Additional References for REP Access Gateway

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Commands List, All Releases

Standards and RFCs

Standard/RFC	Title
Standard	<i>Title</i>

MIBs

MIB	MIBs Link
• CISCO-MIB	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

Technical Assistance

Description	Link
The Cisco Support website provides extensive online resources, including documentation and tools for troubleshooting and resolving technical issues with Cisco products and technologies. To receive security and technical information about your products, you can subscribe to various services, such as the Product Alert Tool (accessed from Field Notices), the Cisco Technical Services Newsletter, and Really Simple Syndication (RSS) Feeds. Access to most tools on the Cisco Support website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for REP Access Gateway Enhancement

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1: Feature Information for Resilient Ethernet Protocol

Feature Name	Releases	Feature Information
REP Access Gateway Enhancements	Cisco IOS XE Release 3.13	The REP Access Gateway Enhancements feature allows fast failure detection notifications between devices configured with REP access gateway (REP-AG), by enabling communication between Connectivity Fault Manager (CFM) and REP. The following commands were introduced by this feature: efd notify rep .

