

MPLS LDP VRF-Aware Static Labels

This document explains how to configure the MPLS LDP VRF-Aware Static Labels feature and Multiprotocol Label Switching (MPLS) static labels. Virtual Private Network routing and forwarding (VRF)-aware static labels can be used at the edge of an MPLS Virtual Private Network (VPN), whereas MPLS static labels can be used only in the MPLS VPN provider core.

- Finding Feature Information, page 1
- Information About MPLS LDP VRF-Aware Static Labels, page 1
- How to Configure MPLS LDP VRF-Aware Static Labels, page 2
- Configuration Examples for MPLS LDP VRF-Aware Static Labels, page 8
- Additional References, page 9
- Feature Information for MPLS LDP VRF-Aware Static Labels, page 10

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table at the end of this module.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Information About MPLS LDP VRF-Aware Static Labels

Overview of MPLS Static Labels and MPLS LDP VRF-Aware Static Labels

Label switch routers (LSRs) dynamically learn the labels they should use to label-switch packets by means of the following label distribution protocols:

- Label Distribution Protocol (LDP), the Internet Engineering Task Force (IETF) standard used to bind labels to network addresses
- Resource Reservation Protocol (RSVP) used to distribute labels for traffic engineering (TE)
- Border Gateway Protocol (BGP) used to distribute labels for Multiprotocol Label Switching (MPLS) virtual private networks (VPNs)

The LSR installs the dynamically learned label into its Label Forwarding Information Base (LFIB).

You can configure static labels for the following purposes:

- To bind labels to IPv4 prefixes to support MPLS hop-by-hop forwarding through neighbor devices that
 do not implement LDP label distribution. MPLS static labels allow you to configure entries in the MPLS
 forwarding table and assign label values to forwarding equivalence classes (FECs) learned by LDP. You
 can manually configure an LSP without running an LDP between the endpoints.
- To create static cross connects to support MPLS label switched path (LSP) midpoints when neighbor devices do not implement the LDP or RSVP label distribution, but do implement an MPLS forwarding path.
- To statically bind a virtual routing and forwarding (VRF)-aware label on a provider edge (PE) device to a customer network prefix (VPN IPv4 prefix). VRF-aware static labels can be used with nonglobal VRF tables, so the labels can be used at the VPN edge. For example, with the Carrier Supporting Carrier (CSC) feature, the backbone carrier can assign specific labels to FECs it advertises to the edge devices of customer carriers. Then, backbone carrier can monitor backbone traffic coming from particular customer carriers for billing or other purposes. Depending on how you configure VRF-aware static labels, they are advertised one of the following ways:
 - By LDP between PE and customer edge (CE) devices within a VRF instance
 - In VPNv4 BGP in the service provider's backbone

Labels Reserved for Static Assignment

Before you can manually assign labels, you must reserve a range of labels to be used for the manual assignment. Reserving the labels ensures that the labels are not dynamically assigned.

How to Configure MPLS LDP VRF-Aware Static Labels

Reserving Labels to Use for MPLS Static Labels and MPLS LDP VRF-Aware Static Labels

To reserve the labels that are to be statically assigned so that the labels are not dynamically assigned, perform the following task.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. mpls label range minimum-value maximum-value [static minimum-static-value maximum-static-value]
- 4 exi
- 5. show mpls label range

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	mpls label range minimum-value maximum-value [static minimum-static-value maximum-static-value]	Reserves a range of labels for static labels assignment. The default is that no labels are reserved for static assignment.
	Example:	Note You might need to reload the device for the range of labels you reserve to take effect.
	Device(config) # mpls label range 200 100000 static 16 199	
Step 4	exit	Returns to privileged EXEC mode.
	Example:	
	Device(config)# exit	
Step 5	show mpls label range	Displays information about the range of values for local labels, including those available for static assignment.
	Example:	
	Device# show mpls label range	

Configuring MPLS Static Labels in the MPLS VPN Provider Core

To configure MPLS static labels in the MPLS virtual private network (VPN) provider core, perform the following task.

MPLS static labels allow you to configure entries in the MPLS forwarding table and assign label values to forwarding equivalence classes (FECs) learned by the Label Distribution Protocol (LDP). You can manually configure a label switched path (LSP) without running a label distribution protocol between the endpoints. In MPLS VPN networks, static labels can be used only in the MPLS VPN provider core.

Before You Begin

- Globally enable Multiprotocol Label Switching (MPLS) on each label switch router (LSR).
- Enable Cisco Express Forwarding on each LSR.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- **3.** mpls static binding ipv4 prefix mask {label | input label | output nexthop {explicit-null | implicit-null | label}}
- 4. exit
- 5. show mpls static binding ipv4
- 6. show mpls forwarding-table

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	mpls static binding ipv4 prefix mask {label input label output nexthop {explicit-null implicit-null label}}	Specifies static binding of labels to IPv4 prefixes. • Specified bindings are installed automatically in
	Example:	the MPLS forwarding table as routing demands.
	Device(config)# mpls static binding ipv4 10.2.2.0 255.255.255.255 input 17	
Step 4	exit	Returns to privileged EXEC mode.
	Example:	
	Device(config)# exit	

	Command or Action	Purpose
Step 5	show mpls static binding ipv4	Displays the configured static labels.
	Example:	
	Device# show mpls static binding ipv4	
Step 6	show mpls forwarding-table	Displays the static labels used for MPLS forwarding.
	Example:	
	Device# show mpls forwarding-table	

Configuring MPLS Static Cross Connects

You can configure MPLS static cross connects to support MPLS LSP midpoints when neighbor devices do not implement either the Label Distribution Protocol (LDP) or Resource Reservation Protocol (RSVP) label distribution, but do implement an MPLS forwarding path.

Before You Begin

- Globally enable Multiprotocol Label Switching (MPLS) on each label switch router (LSR).
- Enable Cisco Express Forwarding on each LSR.



Note

- MPLS static cross-connect labels remain in the Label Forwarding Information Base (LFIB) even if the device to which the entry points goes down.
- MPLS static cross-connect mappings remain in effect even with topology changes.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. mpls static crossconnect inlabel out-interface nexthop {outlabel | explicit-null | implicit-null}
- 4 end
- 5. show mpls static crossconnect

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	mpls static crossconnect inlabel out-interface nexthop {outlabel explicit-null implicit-null}	Specifies static cross connects.
	(canaser expired num impired num)	Note The <i>nexthop</i> argument is required for multiaccess interfaces.
	Example:	
	Device(config) # mpls static crossconnect 45 pos5/0 45 explicit-null	
Step 4	end	Returns to privileged EXEC mode.
	Example:	
	Device(config)# end	
Step 5	show mpls static crossconnect	Displays the configured static cross connects.
	Example:	
	Device# show mpls static crossconnect	

Configuring MPLS LDP VRF-Aware Static Labels at the Edge of the VPN

You can statically bind a virtual routing and forwarding (VRF)-aware label on a provider edge (PE) device to a customer network prefix (VPN IPv4 prefix). VRF-aware static labels can be used with nonglobal VRF tables, so the labels can be used at the VPN edge.

Before You Begin

- Globally enable Multiprotocol Label Switching (MPLS) on each label switch router (LSR).
- Enable Cisco Express Forwarding on each LSR.
- Ensure the MPLS virtual private network (VPN) is configured.
- Ensure that the provider network has the MPLS Label Distribution Protocol (LDP) installed and running.



Note

The MPLS LDP VRF-Aware Static Labels feature is supported only with MPLS VPN Carrier Supporting Carrier networks that use MPLS LDP.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- **3.** mpls static binding ipv4 vrf vpn-name prefix mask {input label | label}
- 4. exit
- 5. show mpls static binding ipv4 vrf vpn-name

DETAILED STEPS

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
	Example:	• Enter your password if prompted.	
	Device> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Device# configure terminal		
Step 3	mpls static binding ipv4 vrf vpn-name prefix mask	Binds a prefix to a local label.	
	{input label label}	Specified bindings are installed automatically in the	
	Example:	MPLS forwarding table as routing demands.	
	Device(config)# mpls static binding ipv4 vrf vpn100 10.2.0.0 255.255.0.0 input 17	Note You must configure the MPLS VPN and VRFs before creating VRF-aware static labels.	
Step 4	exit	Returns to privileged EXEC mode.	
	Example:		
	Device(config)# exit		
Step 5	show mpls static binding ipv4 vrf vpn-name	Displays the configured MPLS static bindings.	
	Example:		
	Device(config)# show mpls static binding ipv4 vrf vpn100		

Troubleshooting Tips

To display information related to static binding events, use the **debug mpls static binding vrf** command.

Configuration Examples for MPLS LDP VRF-Aware Static Labels

Example: Reserving Labels to Use for MPLS Static Labels and MPLS LDP VRF-Aware Static Labels

In the following example, the **mpls label range** command reserves a generic range of labels from 200 to 100000 and configures a static label range of 16 to 199:

```
Device(config)# mpls label range 200 100000 static 16 199 % Label range changes take effect at the next reload.
```

In this example, the output from the **show mpls label range** command indicates that the new label ranges do not take effect until a reload occurs:

```
Device# show mpls label range

Downstream label pool: Min/Max label: 16/100000

[Configured range for next reload: Min/Max label: 200/100000]
Range for static labels: Min/Max/Number: 16/199
```

In the following output, the **show mpls label range** command, executed after a reload, indicates that the new label ranges are in effect:

```
Device# show mpls label range

Downstream label pool: Min/Max label: 200/100000
Range for static labels: Min/Max/Number: 16/199
```

Example: Configuring MPLS Static Labels in the MPLS VPN Provider Core

The following example configures input and output labels for several prefixes:

```
Device (config) # mpls static binding ipv4 10.0.0.0 255.0.0.0 55

Device (config) # mpls static binding ipv4 10.0.0.0 255.0.0.0 output 10.0.0.66 167

Device (config) # mpls static binding ipv4 10.66.0.0 255.255.0.0 input 17

Device (config) # mpls static binding ipv4 10.66.0.0 255.255.0.0 output 10.13.0.8 explicit-null
```

The **show mpls static binding ipv4** command displays the configured static labels:

```
Device# show mpls static binding ipv4
```

Example: Configuring MPLS LDP VRF-Aware Static Labels at the VPN Edge

In the following example, the **mpls static binding ipv4 vrf** command configures static label bindings. They also configure input (local) labels for various prefixes.

Device (config) # mpls static binding ipv4 vrf vpn100 10.0.0.0 10.0.0.0 55
Device (config) # mpls static binding ipv4 vrf vpn100 10.66.0.0 255.255.0.0 input 17
In the following output, the show mpls static binding ipv4 vrf command displays the configured VRF-aware static bindings:

```
Device# show mpls static binding ipv4 vrf vpn100 10.0.0.0/8: (vrf: vpn100) Incoming label: 55 Outgoing labels: None 10.66.0.0/16: (vrf: vpn100) Incoming label: 17 Outgoing labels: None
```

Additional References

Related Documents

Related Topic	Document Title
Cisco IOS commands	Cisco IOS Master Command List, All Releases
MPLS commands	Cisco IOS Multiprotocol Label Switching Command Reference
MPLS VPN CSC with LDP and IGP	"MPLS VPN Carrier Supporting Carrier Using LDP and IGP" module in the MPLS Layer 3 VPNs Inter-AS and CSC Configuration Guide

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	http://www.cisco.com/cisco/web/support/index.html

Feature Information for MPLS LDP VRF-Aware Static Labels

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to . An account on Cisco.com is not required.

Table 1: Feature Information for MPLS LDP VRF-Aware Static Labels

Feature Name	Releases	Feature Information
MPLS LDP VRF-Aware Static	12.0(23)S	
Labels	12.0(26)S	
	12.2(33)SRA	
	12.2(33)SXH	
	12.2(33)SB	
	12.3(14)T	
	Cisco IOS XE Release 2.1	
	Cisco IOS XE Release 3.5S	

Feature Name	Releases	Feature Information
		The MPLS LDP VRF-Aware Static Labels feature explains how to configure the MPLS LDP VRF-Aware Static Labels feature and MPLS static labels. VRF-aware static labels can be used at the edge of an MPLS VPN, whereas MPLS static labels can be used only in the MPLS VPN provider core.
		In 12.0(23)S, MPLS static labels were introduced, but they supported only global routing tables. The MPLS static cross connect functionality is supported in Cisco IOS Releases 12.0(23)S, 12.3(14)T, and later releases. It is not supported in Cisco IOS Release 12.4(20)T.
		In 12.0(26)S, the MPLS LDP VRF-Aware Static Labels feature was introduced, allowing MPLS static labels to be used for VRF traffic at the VPN edge.
		In 12.3(14)T, this feature was integrated.
		In 12.2(33)SRA, this feature was integrated.
		In 12.2(33)SXH, this feature was integrated.
		In 12.2(33)SB, support was added for the Cisco 10000 series router.
		In Cisco IOS XE Release 2.1, this feature was implemented on the Cisco ASR 1000 Series Aggregation Services Routers.
		In Cisco IOS XE Release 3.5S, support was added for the Cisco ASR 903 Router.
		The following commands were introduced or modified: debug mpls static binding, mpls label range, mpls static binding ipv4, mpls static binding ipv4 vrf, show mpls label range, show

Feature Name	Releases	Feature Information
		mpls static binding ipv4, show mpls static binding ipv4 vrf.

Feature Information for MPLS LDP VRF-Aware Static Labels