



Chapter S through U

- [set active-probe \(PfR\)](#), on page 3
- [set backoff \(PfR\)](#), on page 5
- [set delay \(PfR\)](#), on page 7
- [set holddown \(PfR\)](#), on page 9
- [set interface \(PfR\)](#), on page 11
- [set jitter \(PfR\)](#), on page 12
- [set link-group \(PfR\)](#), on page 14
- [set loss \(PfR\)](#), on page 16
- [set mode \(PfR\)](#), on page 18
- [set mos \(PfR\)](#), on page 22
- [set next-hop \(PfR\)](#), on page 24
- [set periodic \(PfR\)](#), on page 25
- [set probe \(PfR\)](#), on page 26
- [set resolve \(PfR\)](#), on page 28
- [set trap-enable](#), on page 31
- [set traceroute reporting \(PfR\)](#), on page 32
- [set unreachable \(PfR\)](#), on page 34
- [show pfr api provider](#), on page 36
- [show pfr border](#), on page 39
- [show pfr border active-probes](#), on page 41
- [show pfr border defined application](#), on page 43
- [show pfr border passive applications](#), on page 45
- [show pfr border passive cache learned](#), on page 47
- [show pfr border passive learn](#), on page 50
- [show pfr border passive prefixes](#), on page 52
- [show pfr border routes](#), on page 53
- [show pfr border rsvp](#), on page 57
- [show pfr master](#), on page 58
- [show pfr master active-probes](#), on page 61
- [show pfr master appl](#), on page 66
- [show pfr master bandwidth-resolution](#), on page 70
- [show pfr master border](#), on page 72
- [show pfr master cost-minimization](#), on page 77

- [show pfr master defined application](#), on page 80
- [show pfr master exits](#), on page 82
- [show pfr master export statistics](#), on page 85
- [show pfr master learn list](#), on page 87
- [show pfr master link-group](#), on page 89
- [show pfr master nbar application](#), on page 91
- [show pfr master policy](#), on page 94
- [show pfr master prefix](#), on page 98
- [show pfr master statistics](#), on page 106
- [show pfr master target-discovery](#), on page 112
- [show pfr master traffic-class](#), on page 114
- [show pfr master traffic-class application nbar](#), on page 121
- [show pfr master traffic-class performance](#), on page 124
- [show pfr proxy](#), on page 131
- [show platform hardware qfp active feature pbr](#), on page 133
- [show platform software pbr](#), on page 134
- [show platform software route-map](#), on page 136
- [shutdown \(PfR\)](#), on page 139
- [site-prefixes](#), on page 140
- [smart-probes](#), on page 141
- [snmp-server enable traps pfr](#), on page 142
- [source-interface](#), on page 143
- [target-discovery](#), on page 144
- [threshold-variance](#), on page 146
- [throughput \(PfR\)](#), on page 147
- [traceroute probe-delay \(PfR\)](#), on page 149
- [traffic-class access-list \(PfR\)](#), on page 150
- [traffic-class aggregate \(PfR\)](#), on page 152
- [traffic-class application \(PfR\)](#), on page 154
- [traffic-class application nbar \(PfR\)](#), on page 158
- [traffic-class filter \(PfR\)](#), on page 161
- [traffic-class keys \(PfR\)](#), on page 163
- [traffic-class prefix-list \(PfR\)](#), on page 165
- [trap-enable](#), on page 167
- [trigger-log-percentage](#), on page 168
- [unreachable \(PfR\)](#), on page 169
- [vrf \(domain configuration\)](#), on page 171

set active-probe (PfR)

To configure a Performance Routing (PfR) active probe with a forced target assignment within a PfR map, use the **set active-probe** command in PfR map configuration mode. To disable the active probe, use the **no** form of this command.

```
set active-probe probe-type ip-address target-port number [codec codec-name] [dscp value]
no set active-probe probe-type ip-address
```

Syntax Description	<i>probe-type</i> Type of probe. Must be one of the following: <ul style="list-style-type: none">• echo --Uses Internet Control Message Protocol (ICMP) echo (ping) messages.• jitter --Uses jitter messages.• tcp-conn --Uses TCP connection messages.• udp-echo --Uses UDP echo messages.
<i>ip-address</i>	Target IP address of a prefix to be monitored using the specified type of probe.
target-port	(Not specified for echo probes.) Specifies the destination port number for the active probe.
<i>number</i>	Port number in the range from 1 to 65535.
codec	(Optional) Only used with the jitter probe type. Specifies the codec value used for Mean Opinion Score (MOS) calculation.
<i>codec-name</i>	(Optional) Codec value. Must be one of the following: <ul style="list-style-type: none">• g711alaw --G.711 A Law 64000 bps• g711ulaw --G.711 U Law 64000 bps• g729a --G.729 8000 bps
dscp	(Optional) Sets the Differentiated Services Code Point (DSCP) value.
<i>value</i>	(Optional) DSCP value.

Command Default No active probes are configured with a forced target assignment.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3S	This command was integrated into Cisco IOS XE Release 3.3S.

set active-probe (PfR)**Usage Guidelines**

If the optional **dscp** keyword and *value* argument are not specified, active probes are created using the DSCP value of the traffic class. For example, the software creates two sets of probes for the following three traffic classes. Traffic class 2 is assigned a probe with a DSCP value of ef, and the other two traffic classes share a probe with a DSCP value of 0.

- Traffic class 1: 10.1.1.0/24, destination port 23
- Traffic class 2: 10.1.2.0/24, dscp ef
- Traffic class 3: 10.1.2.0/24, destination port 991

If the optional **dscp** keyword and *value* argument are provided, probes are created using the specified DSCP value. For example, if the DSCP value specified for the **set active-probe** command is cs1, only one probe is created for the three traffic classes.

Examples

The following example shows how to configure an ICMP reply (ping) message probe with a forced target assignment within a PfR map. The 10.1.2.10 address is the forced target assignment. A remote responder does not have to be enabled on the target device.

```
Router(config)# pfr-map MAP1 10
Router(config-pfr-map)# match ip prefix-list LIST1
Router(config-pfr-map)# set active-probe echo 10.1.2.10
```

The following example shows how to configure a TCP connection message probe with a forced target assignment within an PfR map. The 10.1.2.10 address is the forced target assignment, the target port is defined as 29, and the DSCP value is set to ef. A remote responder must be enabled on the target device.

```
Router(config)# pfr-map MAP2 10
Router(config-pfr-map)# match ip prefix-list LISTMAP2
Router(config-pfr-map)# set active-probe tcp-conn 10.1.2.10 target-port 29 dscp ef
```

Related Commands

Command	Description
active-probe (PfR)	Configures a PfR active probe for a target prefix.
ip sla monitor responder	Enables the IP SLAs Responder for general IP SLAs operations.
pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
show pfr border active-probes	Displays connection and status information about active probes on a PfR border router.
show pfr master active-probes	Displays connection and status information about active probes on a PfR master controller.

set backoff (PfR)

To configure a Performance Routing (PfR) map to set the backoff timer to adjust the time period for prefix policy decisions, use the **set backoff** command in PfR map configuration mode. To delete the set clause entry and reset the backoff timers to the default values, use the **no** form of this command.

```
set backoff min-timer max-timer [step-timer]
no set backoff
```

Syntax Description	<i>min-timer</i>	Sets the minimum value for the backoff timer, in seconds. The values are from 90 to 7200. With CSCtr26978 the default timer value changed from 300 to 90.
	<i>max-timer</i>	Sets the maximum value for the backoff timer, in seconds. The values are from 90 to 7200. With CSCtr26978 the default timer value changed from 3000 to 900.
	<i>step-timer</i>	(Optional) Sets the value of the time period for the step timer, in seconds. The step timer is used to add time to the out-of-policy waiting period each time the backoff timer expires and PfR is unable to find an in-policy exit. The values are from 90 to 7200. With CSCtr26978 the default timer value changed from 300 to 90.

Command Default PfR uses the following default values if this command is not configured or if the **no** form of this command is entered:

- *min-timer*: 300
- *max-timer*: 3000
- *step-timer*: 300

With CSCtr26978:

- *min-timer*: 90
- *max-timer*: 900
- *step-timer*: 90

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.2(3)T	This command was modified. With CSCtr26978, the default values changed for all the timers.
	15.2(2)S	This command was modified. With CSCtr26978, the default values changed for all the timers.
	Cisco IOS XE Release 3.6	This command was modified. With CSCtr26978, the default values changed for all the timers.

set backoff (PfR)**Usage Guidelines**

The **set backoff** command is entered on a master controller in PfR map configuration mode. This command is used to configure a PfR map to set the transition period for which the master controller holds an out-of-policy prefix. The master controller uses a backoff timer to schedule the prefix transition period for which PfR holds the out-of-policy prefix before moving the prefix to an in-policy state by selecting an in-policy exit. This command is configured with a minimum and maximum timer value and can be configured with an optional step timer.

- Minimum timer—The *min-timer* argument is used to set the minimum transition period in seconds. If the current prefix is in-policy when this timer expires, no change is made and the minimum timer is reset to the default or configured value. If the current prefix is out-of-policy, PfR will move the prefix to an in-policy exit and reset the minimum timer to the default or configured value.
- Maximum timer—The *max-timer* argument is used to set the maximum length of time for which PfR holds an out-of-policy prefix when there are no PfR-controlled in-policy prefixes. If all PfR-controlled prefixes are in an out-of-policy state and the value from the *max-timer* argument expires, PfR will select the best available exit and reset the minimum timer to the default or configured value.
- Step timer—The *step-timer* argument allows you to optionally configure PfR to add time each time the minimum timer expires until the maximum time limit has been reached. If the maximum timer expires and all PfR-managed exits are out-of-policy, PfR will install the best available exit and reset the minimum timer.

Configuring a new timer value will immediately replace the existing value if the new value is less than the time remaining. If the new value is greater than the time remaining, the new timer value will be used when the existing timer value expires.

Examples

The following example shows the commands used to create a PfR map named BACKOFF that sets the minimum timer to 120 seconds, the maximum timer to 2400 seconds, and the step timer to 120 seconds for traffic from the prefix list named CUSTOMER:

```
Router(config)# pfr-map BACKOFF 70
Router(config-pfr-map)# match ip address prefix-list CUSTOMER
Router(config-pfr-map)# set backoff 120 2400 120
```

Related Commands

Command	Description
pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
periodic (PfR)	Sets the backoff timer to adjust the time period for prefix policy decisions.

set delay (PfR)

To configure a Performance Routing (PfR) map to configure PfR to set the delay threshold, use the **set delay** command in PfR map configuration mode. To delete the set clause entry and reset the delay threshold values, use the **no** form of this command.

```
set delay {relative percentage|threshold maximum}
no set delay
```

Syntax Description	relative percentage	Sets a relative delay policy based on a comparison of short-term and long-term delay percentages. The range of values that can be configured for this argument is a number from 1 to 1000. Each increment represents one tenth of a percent. The default is 500 (50-percent).
	threshold maximum	Sets the absolute maximum delay time, in milliseconds. The range of values that can be configured for this argument is from 1 to 10000. The default is 5000.

Command Default PfR uses the default values if this command is not configured or if the **no** form of this command is entered.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines The **set delay** command is entered on a master controller in PfR map configuration mode. This command is configured in a PfR map to set the delay threshold as a relative percentage or as an absolute value for match criteria.

The **relative** keyword is used to configure a relative delay percentage. The relative delay percentage is based on a comparison of short-term and long-term measurements. The short-term measurement reflects the delay percentage within a 5-minute time period. The long-term measurement reflects the delay percentage within a 60-minute period. The following formula is used to calculate this value:

Relative delay measurement = ((short-term measurement - long-term measurement) / long-term measurement) * 100

The master controller measures the difference between these two values as a percentage. If the percentage exceeds the user-defined or default value, the delay percentage is determined to be out-of-policy. For example, if the long-term delay measurement is 100 milliseconds and the short-term delay measurement is 120 milliseconds, the relative delay percentage is 20-percent.

The **threshold** keyword is used to configure the absolute maximum delay period in milliseconds.

If the measured delay of the prefix is higher than the configured delay threshold, the prefix is out-of-policy. If the short-term delay of the prefix is more than the long-term delay by the percentage value configured, the prefix is out-of-policy.

set delay (PfR)**Examples**

The following example creates a PfR map named DELAY that sets the absolute maximum delay threshold to 2000 milliseconds for traffic from the prefix list named CUSTOMER:

```
Router(config)# pfr-map DELAY 80
Router(config-pfr-map)# match ip address prefix-list CUSTOMER
Router(config-pfr-map)# set delay threshold 2000
```

Related Commands

Command	Description
delay (PfR)	Configures prefix delay parameters.
pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.

set holddown (PfR)

To configure a Performance Routing (PfR) map to set the prefix route dampening timer for the minimum period of time in which a new exit must be used before an alternate exit can be selected, use the **set holddown** command in PfR map configuration mode. To delete the set clause entry and reset the hold-down timer to the default value, use the **no** form of this command.

```
set holddown timer
no set holddown
```

Syntax Description	<i>timer</i> The prefix route dampening time period, in seconds. The range is from 90 to 65535. With CSCtr26978, the default value changed from 300 to 90.
---------------------------	--

Command Default	With CSCtr26978, the default value of 300 seconds changed to 90 seconds for the prefix route dampening time period if this command is not configured or if the no form of this command is entered.
------------------------	---

Command Modes	PfR map configuration (config-pfr-map)
----------------------	--

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3S.
	15.2(3)T	This command was modified. With CSCtr26978, the default timer value changed.
	15.2(2)S	This command was modified. With CSCtr26978, the default timer value changed.
	Cisco IOS XE Release 3.6	This command was modified. With CSCtr26978, the default timer value changed.

Usage Guidelines	The set holddown command is entered on a master controller in PfR map configuration mode. This command is used to configure the prefix route dampening timer for the minimum period of time in which a new exit must be used before an alternate exit can be selected. The master controller puts a prefix in a hold-down state during an exit change to isolate the prefix during the transition period, preventing the prefix from flapping because of rapid state changes. PfR does not implement policy changes while a prefix is in the hold-down state. A prefix will remain in a hold-down state for the default or configured time period. When the hold-down timer expires, PfR will select the best exit based on performance and policy configuration. However, an immediate route change will be triggered if the current exit for a prefix becomes unreachable.
-------------------------	---

Configuring a new timer value will immediately replace the existing value if the new value is less than the time remaining. If the new value is greater than the time remaining, the new timer value will be used when the existing timer is reset.

Examples	The following example shows the commands used to create a PfR map named HOLDDOWN that sets the hold-down timer to 120 seconds for traffic from the prefix list named CUSTOMER:
-----------------	--

```
Router(config)# pfr-map HOLDDOWN 10
```

set holddown (PfR)

```
Router(config-pfr-map)# match ip address prefix-list CUSTOMER
Router(config-pfr-map)# set holddown 120
```

Related Commands

Command	Description
holddown (PfR)	Configures the prefix route dampening timer to set the minimum period of time that a new exit must be used before an alternate exit can be selected.
pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.

set interface (PfR)

To configure a Performance Routing (PfR) map to send packets that match prefixes in an access list on PfR border routers to the null interface, use the **set interface** command in PfR map configuration mode. To delete the set clause entry, use the **no** form of this command.

```
set interface null0
no set interface null0
```

Syntax Description	null0 Specifies that packets will be sent to the null interface, which means that the packets are discarded.
---------------------------	---

Command Default No packets are sent to the null interface.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines The **set interface** command is entered on a master controller in PfR map configuration mode. This command can be used for PfR black hole filtering if the border routers detect a denial-of-service (DoS) attack by directing packets to the null interface. The null interface is a virtual network interface that is similar to the loopback interface. Whereas traffic to the loopback interface is directed to the router itself, traffic sent to the null interface is discarded. This interface is always up and can never forward or receive traffic; encapsulation always fails. The null interface functions similarly to the null devices available on most operating systems. Null interfaces are used as a low-overhead method of discarding unnecessary network traffic.

Examples

The following example shows how to configure a PfR map named BLACK_HOLE_MAP to direct packets to the null interface. To use this configuration for a DoS attack, leave the access list empty until an attack is detected and add the prefix or prefixes that are determined to be the source of the attack. Subsequent packets received from the specified prefix or prefixes will be discarded.

```
Router(config)# pfr-map black-hole-map 10
Router(config-pfr-map)# match ip address access-list black-hole-list
Router(config-pfr-map)# set interface null0
```

Related Commands	Command	Description
	pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
	set next-hop (PfR)	Configures a PfR map to send packets that match prefixes in an access list on PfR border routers to the specified next hop.

set jitter (PfR)

set jitter (PfR)

To configure a Performance Routing (PfR) map to set the maximum jitter value that PfR will permit for an exit link, use the **set jitter** command in PfR map configuration mode. To delete the set clause entry, use the **no** form of this command.

```
set jitter threshold maximum
no set jitter threshold maximum
```

Syntax Description	<table border="1"> <tr> <td>threshold</td><td>Specifies a maximum absolute threshold value for jitter. Jitter is a measure of voice quality.</td></tr> <tr> <td>maximum</td><td>Number (in milliseconds) in the range from 1 to 1000, where 1 represents the highest voice quality, and 1000 represents the lowest voice quality. The default value is 30.</td></tr> </table>	threshold	Specifies a maximum absolute threshold value for jitter. Jitter is a measure of voice quality.	maximum	Number (in milliseconds) in the range from 1 to 1000, where 1 represents the highest voice quality, and 1000 represents the lowest voice quality. The default value is 30.
threshold	Specifies a maximum absolute threshold value for jitter. Jitter is a measure of voice quality.				
maximum	Number (in milliseconds) in the range from 1 to 1000, where 1 represents the highest voice quality, and 1000 represents the lowest voice quality. The default value is 30.				

Command Default No jitter values are set.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines The **set jitter** command is entered on a master controller in PfR map configuration mode. This command is used to specify the maximum tolerable jitter value permitted on an exit link. Jitter is a measure of voice quality where the lower the jitter value, the higher the voice quality. If the jitter value is greater than the user-defined or default value, PfR determines that the exit link is out-of-policy and searches for an alternate exit link.

Another measure of voice quality is the estimated Mean Opinion Score (MOS). Use the **set mos** command and the **set jitter** command in a PfR map to define voice quality.

Examples

The following example shows how to configure a PfR map named JITTER that sets the threshold jitter value. If the jitter threshold value exceeds 20 milliseconds, and more than 30 percent of the MOS samples are below the MOS threshold of 3.80 for voice quality, the master controller searches for a new exit link.

```
Router(config)# oer-map JITTER 10
Router(config-oer-map)# set jitter threshold 20
Router(config-oer-map)# set mos threshold 3.80 percent 30
```

Related Commands	Command	Description
	jitter (PfR)	Specifies the threshold jitter value that PfR will permit for an exit link.
	pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.

Command	Description
set mos (PfR)	Configures a PfR map to specify the threshold and percentage Mean Opinion Score (MOS) values that PfR will permit for an exit link.

set link-group (PfR)

set link-group (PfR)

To specify a link group for traffic classes defined in a Performance Routing (PfR) policy, use the **set link-group** command in PfR map configuration mode. To delete the set clause entry and remove the link group, use the **no** form of this command.

```
set link-group link-group-name [fallback link-group-name]
no set link-group link-group-name
```

Syntax Description	<table border="1"> <tr> <td><i>link-group-name</i></td><td>Name of a link group.</td></tr> <tr> <td>fallback</td><td>(Optional) Specifies a fallback link group to be used if the primary link group is out-of-policy (OOP).</td></tr> </table>	<i>link-group-name</i>	Name of a link group.	fallback	(Optional) Specifies a fallback link group to be used if the primary link group is out-of-policy (OOP).
<i>link-group-name</i>	Name of a link group.				
fallback	(Optional) Specifies a fallback link group to be used if the primary link group is out-of-policy (OOP).				

Command Default No link groups are specified for a traffic class.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines The **set link-group** command is entered on a master controller in PfR map configuration mode. This command is used to define a link group for the traffic class matched in a PfR map.

Introduced in Cisco IOS Release 12.4(15)T, link groups are used to define a group of exit links as a preferred set of links or a fallback set of links for PfR to use when optimizing traffic classes specified in a PfR policy. Up to three link groups can be specified for each interface. Use the **link-group** (PfR) command to define the link group for an interface and use the **set link-group** command to define the primary link group and a fallback link group for a specified traffic class in a PfR map.

Use the **show pfr master link-group** command to view information about configured PfR link groups.



Note

If you are configuring link grouping, configure the **no max-range-utilization** command because using a link utilization range is not compatible with using a preferred or fallback set of exit links configured for link grouping. With CSCtr33991, this requirement is removed and PfR can perform load balancing within a PfR link group.

Examples

The following example shows how to configure a PfR map named `link_video_map` that configures PfR to create a traffic class that matches an access list named `video_list`. The traffic class is configured to use a link group named `video` as the primary link group, and a fallback group named `voice`. The `video` link group may be a set of high bandwidth links that are preferred for video traffic.

```
Router(config)# pfr-map link_video_map 10
Router(config-pfr-map)# match ip address access-list video_list
Router(config-pfr-map)# set link-group video fallback voice
```

Related Commands	Command	Description
	link-group (PfR)	Configures a PfR border router exit interface as a member of a link group.
	pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
	show pfr master link-group	Displays information about PfR link groups.

set loss (PfR)

To configure a Performance Routing (PfR) map to set the relative or maximum packet loss limit that PfR will permit for an exit link, use the **set loss** command in PfR map configuration mode. To delete the set clause entry and reset the relative percentage of packet loss to the default value, use the **no** form of this command.

```
set loss {relative average|threshold maximum}
no set loss
```

Syntax Description	relative average	Sets a relative percentage of packet loss based on a comparison of short-term and long-term packet loss percentages. The range of values that can be configured for this argument is a number from 1 to 1000. Each increment represents one tenth of a percent.
	threshold maximum	Sets absolute packet loss based on packets per million (PPM). The range of values that can be configured for this argument is from 1 to 1000000.

Command Default PfR uses a default relative percentage of 100 (10 percent) if this command is not configured or if the no form of this command is entered.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines The **set loss** command is entered on a master controller in PfR map configuration mode. This command is used to configure a PfR map to set the relative percentage or maximum number of packets that PfR will permit to be lost during transmission on an exit link. If packet loss is greater than the user-defined or the default value, PfR determines that the exit link is out-of-policy and searches for an alternate exit link.

The **relative** keyword is used to configure the relative packet loss percentage. The relative packet loss percentage is based on a comparison of short-term and long-term packet loss. The short-term measurement reflects the percentage of packet loss within a 5-minute period. The long-term measurement reflects the percentage of packet loss within a 60-minute period. The following formula is used to calculate this value:

$$\text{Relative packet loss} = ((\text{short-term loss} - \text{long-term loss}) / \text{long-term loss}) * 100$$

The master controller measures the difference between these two values as a percentage. If the percentage exceeds the user-defined or default value, the exit link is determined to be out-of-policy. For example, if long-term packet loss is 200 PPM and short-term packet loss is 300 PPM, the relative loss percentage is 50-percent.

The **threshold** keyword is used to configure the absolute maximum packet loss. The maximum value is based on the actual number of PPM that have been lost.

Examples

The following example creates a PfR map named LOSS that sets the relative percentage of acceptable packet loss for traffic from the prefix list named CUSTOMER to a 20-percent relative percentage. If the packet loss on the current exit link exceeds 20-percent, the master controller will search for a new exit.

```
Router(config)# pfr-map LOSS 10
Router(config-pfr-map)# match ip address prefix-list CUSTOMER
Router(config-pfr-map)# set loss relative 200
```

Related Commands

Command	Description
loss (PfR)	Sets the relative or maximum packet loss limit that PfR will permit for an exit link.
pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.

set mode (PfR)

set mode (PfR)

To configure a Performance Routing (PfR) map to configure route monitoring, route control, or exit selection for matched traffic, use the **set mode** command in PfR map configuration mode. To delete the set clause entry and reset the default values, use the **no** form of this command.

```
set mode {monitor {active [throughput]|both|fast|passive}|route {control|observe}|select-exit {best|good}}
no set mode {monitor|route {control|observe}|select-exit}
```

Syntax Description	monitor Enables the configuration of PfR monitoring settings.
active	Enables active monitoring.
throughput	(Optional) Enables active monitoring with throughput data from passive monitoring.
both	Enables both active and passive monitoring.
fast	Enables continuous active monitoring and passive monitoring.
passive	Enables passive monitoring.
route	Enables the configuration of PfR route control policy settings.
control	Enables automatic route control.
observe	Configures PfR to passively monitor and report without making any changes.
select-exit	Enables the exit selection based on performance or policy. Effective with Cisco IOS Releases 15.2(1)S, 15.2(3)T, and Cisco IOS XE Release 3.5S, the select-exit keyword was removed.
best	Configures PfR to select the best available exit based on performance or policy. Effective with Cisco IOS Releases 15.2(1)S, 15.2(3)T, and Cisco IOS XE Release 3.5S, the best keyword was removed.
good	Configures PfR to select the first exit that is in-policy. Effective with Cisco IOS Releases 15.2(1)S, 15.2(3)T, and Cisco IOS XE Release 3.5S, the good keyword was removed.

Command Default PfR uses the following default settings if this command is not configured or if the **no** form of this command is entered:

- Monitoring: Both active and passive monitoring is enabled.
- Route control: Observe mode route control is enabled.
- Exit Selection: The first in-policy exit is selected.

With CSCtr26978, the default mode route was changed to control mode from observe mode. The default behavior for exit selection was changed to select-exit good.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.
	15.2(3)T	This command was modified. The select-exit , best , and good keywords have been removed. With CSCtr26978, some default values changed.
	15.2(2)S	This command was modified. The select-exit , best , and good keywords have been removed. With CSCtr26978, some default values changed.
	Cisco IOS XE Release 3.6	This command was modified. The select-exit , best , and good keywords have been removed. With CSCtr26978, some default values changed.

Usage Guidelines

The **set mode** command is entered on a master controller in PfR map configuration mode. This command is used to configure a PfR map to enable and configure observe mode and control mode settings, passive monitoring and active monitoring, and exit link selection for traffic that is configured as match criteria.

Observe Mode

Observe mode monitoring is enabled by default. In observe mode, the master controller monitors prefixes and exit links based on default and user-defined policies and then reports the status of the network and the decisions that should be made, but it does not implement any changes. This mode allows you to verify the effectiveness of this feature before it is actively deployed.

**Note**

With CSCtr26978, the default mode route was changed to control mode from observe mode.

Control Mode

In control mode, the master controller coordinates information from the border routers and makes policy decisions just as it does in observe mode. The master controller monitors prefixes and exits based on default and user-defined policies, but then it implements changes to optimize prefixes and to select the best exit. In this mode, the master controller gathers performance statistics from the border routers and then transmits commands to the border routers to alter routing as necessary in the PfR managed network.

**Note**

With CSCtr26978, the default mode route was changed to control mode from observe mode.

Passive Monitoring

The master controller passively monitors IP prefixes and TCP traffic flows. Passive monitoring is configured on the master controller. Monitoring statistics are gathered on the border routers and then reported back to the master controller. PfR uses NetFlow to collect and aggregate passive monitoring statistics on a per-prefix basis. No explicit NetFlow configuration is required. NetFlow support is enabled by default when passive monitoring is enabled. PfR uses passive monitoring to measure the following information:

- Packet loss—PfR measures packet loss by tracking TCP sequence numbers for each TCP flow. PfR estimates packet loss by tracking the highest TCP sequence number. If a subsequent packet is received with a lower sequence number, PfR increments the packet loss counter.
- Delay—PfR measures the average delay of TCP flows for a prefix. Delay is the measurement of the time between the transmission of a TCP synchronization message and receipt of the TCP acknowledgment.
- Reachability—PfR measures reachability by tracking TCP synchronization messages that have been sent repeatedly without receiving a TCP acknowledgement.
- Throughput—PfR measures outbound throughput for optimized prefixes. Throughput is measured in bits per second (b/s).



Note PfR passively monitors TCP traffic flows for IP traffic. Passive monitoring of non-TCP sessions is not supported.

Active Monitoring

PfR uses Cisco IOS IP Service Level Agreements (SLAs) to enable active monitoring. IP SLAs support is enabled by default. IP SLAs support allows PfR to be configured to send active probes to target IP addresses to measure the jitter and delay, determining if a prefix is out-of-policy and if the best exit is selected. The border router collects these performance statistics from the active probe and transmits this information to the master controller. The master controller uses this information to optimize the prefix and select the best available exit based on default and user-defined policies. The **active-probe** command is used to create an active probe.

The **throughput** keyword enables the throughput data from passive mode monitoring to be considered when UDP traffic is optimized for both performance and load-balancing. UDP traffic can be optimized only for performance (for example, delay, jitter, and loss) when active monitoring data is available. To enable load-balancing of UDP traffic, throughput data from passive monitoring is required.

Fast Failover Monitoring

Fast failover monitoring enables passive and active monitoring and sets the active probes to continuously monitor all the exits (probe-all). Fast failover monitoring can be used with all types of active probes: Internet Control Message Protocol (ICMP) echo, jitter, TCP connection, and UDP echo. When the **mode monitor fast** command is enabled, the probe frequency can be set to a lower frequency than for other monitoring modes, to allow a faster failover ability. Under fast failover monitoring with a lower probe frequency, route changes can be performed within 3 seconds of an out-of-policy situation. When an exit becomes out-of-policy (OOP) under fast failover monitoring, the select best exit is operational and the routes from the OOP exit are moved to the best in-policy exit. Fast failover monitoring is an aggressive mode that incurs substantial resources with the continuous probing. We recommend that you use fast failover monitoring only for performance-sensitive traffic.

Optimal Exit Link Selection

The master controller can be configured to select a new exit for an out-of-policy prefix based on performance or policy. You can configure the master controller to select the first in-policy exit by entering the **good** keyword, or you can configure the master controller to select the best exit with the **best** keyword. If the **good** keyword is used and there is no in-policy exit, the prefix is uncontrolled.

**Note**

Effective with Cisco IOS Releases 15.2(1)S, 15.2(3)T, and Cisco IOS XE Release 3.5S, the **set mode select-exit** command and the **best** and **good** keywords were removed. With CSCtr26978, the default behavior changed to select-exit good. No configuration option is available.

Examples

The following example shows the commands used to create a PfR map named OBSERVE that configures PfR to observe and report but not control traffic from the prefix list named CUSTOMER:

```
Router(config)# pfr-map OBSERVE 80
Router(config-pfr-map)# match ip address prefix-list CUSTOMER
Router(config-pfr-map)# set mode route observe
```

Related Commands

Command	Description
mode monitor	Configures route monitoring on a PfR master controller.
mode route	Configures route control on a PfR master controller.
mode select-exit	Configures route exit selection on a PfR master controller.
pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.

set mos (PfR)

To configure a Performance Routing (PfR) map to set the threshold and percentage Mean Opinion Score (MOS) values that PfR will permit for an exit link, use the **set mos** command in PfR map configuration mode. To reset the threshold MOS values to their default value, use the **no** form of this command.

```
set mos threshold minimum percentage percent
no set mos threshold minimum percentage percent
```

Syntax Description	threshold Specifies a threshold MOS value that represents a minimum voice quality for exit link utilization.
minimum	Number (to two decimal places) in the range from 1.00 to 5.00. The number 1.00 represents the lowest voice quality, and the number 5.00 represents the highest voice quality. The default MOS value is 3.60.
percentage	Specifies a percentage value that is compared with the percentage of MOS samples that are below the MOS threshold.
percent	Number, as a percentage.

Command Default The default MOS value is 3.60.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines The **set mos** command is entered on a master controller in PfR map configuration mode and is used to determine voice quality. The number of MOS samples over a period of time that are below the threshold MOS value are calculated. If the percentage of MOS samples below the threshold is greater than the configured percentage, PfR determines that the exit link is out-of-policy and searches for an alternate exit link.

Another measure of voice quality is the jitter value. Use the **set mos** (PfR) command and the **set jitter** (PfR) command in a PfR map to define voice quality.

Examples

The following example creates a PfR map named MOS that configures the master controller to search for a new exit link if more than 30 percent of the MOS samples are below the MOS threshold of 3.80.

```
Router(config)# pfr-map MOS 10
Router(config-pfr-map)# match ip address prefix-list LIST1
Router(config-pfr-map)# set mos threshold 3.80 percent 30
```

Related Commands	Command	Description
	mos (PfR)	Configures the maximum MOS value that PfR will permit for an exit link.
	pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
	set jitter (PfR)	Configures a PfR map to set the maximum jitter value that PfR will permit for an exit link.

set next-hop (PfR)

set next-hop (PfR)

To configure a Performance Routing (PfR) map to send packets that match prefixes in an access list on PfR border routers to the specified next hop, use the **set next-hop** command in PfR map configuration mode. To delete the set clause entry, use the **no** form of this command.

```
set next-hop ip-address
no set next-hop ip-address
```

Syntax Description	<i>ip-address</i> IP address of the next hop to which the packets will be sent.
---------------------------	---

Command Default	No packets that match prefixes in an access list on PfR border routers are sent to the next hop.
------------------------	--

Command Modes	PfR map configuration (config-pfr-map)
----------------------	--

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines	This command can be used for PfR sinkhole filtering if the border routers detect a denial-of-service (DoS) attack by directing packets to the specified next hop. The packets may be saved, analyzed, or discarded at the next hop.
-------------------------	---

Examples	The following example shows how to configure a PfR map named SINKHOLE_MAP that directs packets to the specified next hop. Use this configuration in preparation for a DoS attack, leave the access list empty until an attack is detected, and add the prefix or prefixes that are determined to be the source of the attack. Subsequent packets received from the specified prefix or prefixes will be sent to the specified next hop.
-----------------	---

```
Router(config)# pfr-map SINKHOLE_MAP 10
Router(config-pfr-map)# match ip address access-list SINKHOLE-LIST
Router(config-pfr-map)# set next-hop 10.20.24.3
```

Related Commands	Command	Description
	pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
	set interface (PfR)	Configures a PfR map to send packets that match prefixes in an access list on PfR border routers to the null interface.

set periodic (PfR)

To configure a Performance Routing (PfR) map to set the time period for the periodic timer, use the **set periodic** command in PfR map configuration mode. To delete the set clause entry and remove the periodic timer setting, use the **no** form of this command.

```
set periodic timer
no set periodic
```

Syntax Description	<i>timer</i> Length of time set for the periodic timer, in seconds. The value for the timer argument is from 180 to 7200.
---------------------------	---

Command Default The periodic timer is not set using a PfR map.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.

Usage Guidelines The **set periodic** command is entered on a master controller in PfR map configuration mode. This command is used to configure a PfR map to configure PfR to periodically select the best exit based on the periodic timer value for traffic that is configured as match criteria in a PfR map. When this timer expires, PfR will automatically select the best exit, whether the current exit is in-policy or out-of-policy. The periodic timer is reset when the new exit is selected.

Examples

The following example creates a PfR map named PERIODIC that sets the periodic timer to 300 seconds for traffic from the prefix list named CUSTOMER. When the timer expires, PfR will select the best exit.

```
Router(config)# pfr-map PERIODIC 80
Router(config-pfr-map)# match ip address prefix-list CUSTOMER
Router(config-pfr-map)# set periodic 300
```

Related Commands	Command	Description
	periodic (PfR)	Configures PfR to periodically select the best exit.
	pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.

set probe (PfR)

set probe (PfR)

To set the frequency of a Performance Routing (PfR) active probe, use the **set probe** command in PfR map configuration mode. To reset the frequency of a PfR active probe to its default values, use the **no** form of this command.

```
set probe {frequency seconds|packets packet-count}
no set probe {frequency seconds|packets packet-count}
```

Syntax Description	frequency	Sets the frequency of an active probe.
	<i>seconds</i>	Number of seconds in the range from 4 to 60. The default is 60.
	packets	Specifies the number of probe packets for a jitter probe.
	<i>packet-count</i>	Number of probe packets in the range from 2 to 255. The default is 100.

Command Default The default active probe frequency is 60 seconds. The default number of packets per probe is 100.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.
	15.2(1)T	This command was modified. The packet keyword and <i>packet-count</i> argument were replaced by the probe (PfR) command.
	15.2(1)S	This command was modified. The packet keyword and <i>packet-count</i> argument were replaced by the probe (PfR) command.
	Cisco IOS XE Release 3.5	This command was modified. The packet keyword and <i>packet-count</i> argument were replaced by the probe (PfR) command.

Usage Guidelines

The **set probe** command is entered on a master controller in PfR map configuration mode. This command is used within a PfR map configuration to set the frequency of the active probes. Unless the default frequency of 60 seconds is used, configuring the set probe command will increase the frequency of the probes. Increased probe frequency results in a lower response time of PfR. The frequency can be increased for a number of policies, but if all active probes are set to an increased frequency, an Intrusion Detection Service (IDS) may be triggered.

Fast monitoring sets the active probes to continuously monitor all the exits (probe-all), and passive monitoring is enabled too. Fast failover monitoring can be used with all types of active probes: ICMP echo, jitter, TCP connection, and UDP echo. When the **mode monitor fast** command is enabled, the probe frequency can be set to a lower frequency than for other monitoring modes, to allow a faster failover ability. The minimum number of seconds was lowered from 4 seconds to 2 seconds to support the fast failover monitoring mode.

Under fast monitoring with a lower probe frequency, route changes can be performed within 3 seconds of an out-of-policy situation.

Examples

The following example shows the commands used to set the frequency of an active probe to be 10 seconds using a PfR map named PROBE:

```
Router(config)# pfr-map PROBE 10
Router(config-pfr-map)# set probe frequency 10
```

The following example shows the commands used to set the frequency of an active probe to be 2 seconds using a PfR map named FAST after the fast failover monitoring mode is enabled:

```
Router(config)# pfr-map FAST 10
Router(config-pfr-map)# set mode monitor fast
Router(config-pfr-map)# set probe frequency 2
```

Related Commands	Command	Description
	active-probe (PfR)	Configures a PfR active probe for a target prefix.
	pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
	probe (PfR)	Sets the number of packets per probe.
	set mode (PfR)	Configures a PfR map to configure route monitoring, route control, or exit selection for matched traffic.

set resolve (PfR)

set resolve (PfR)

To configure a PfR map to set policy priority for overlapping policies, use the **set resolve** command in PfR map configuration mode. To delete the set clause entry and to restore default policy priority settings, use the **no** form of this command.

```
set resolve {{cost|range} priority value |{delay|jitter|loss|mos|utilization} priority value variance percentage |equivalent-path-round-robin}
no set resolve {cost|delay|equivalent-path-round-robin|jitter|loss|mos|range|utilization}
```

Syntax Description	cost	Specifies policy priority settings for cost optimization.
	range	Specifies policy priority settings for range. With CSCtr33991, the range keyword was removed.
	priority	Sets the priority of the policy. With CSCtr33991, the priority keyword was disabled for the cost keyword.
	<i>value</i>	A number in the range from 1 to 10. The number 1 has the highest priority, and the number 10 has the lowest priority. With CSCtr33991, the <i>value</i> argument was disabled for the cost keyword.
	delay	Specifies policy priority settings for packet delay.
	jitter	Specifies policy priority settings for jitter.
	loss	Specifies policy priority settings for packet loss.
	mos	Specifies policy priority settings for Mean Opinion Score (MOS).
	utilization	Specifies policy priority settings for exit link utilization. With CSCtr33991, the utilization keyword was removed.
	variance	Sets the allowable variance for the policy, as a percentage.
	<i>percentage</i>	A number in the range from 1 to 100.
	equivalent-path-round-robin	Specifies the use of the equivalent-path round-robin resolver.

Command Default

PfR uses the following default settings if this command is not configured or if the **no** form of this command is entered:

- An unreachable prefix: highest priority
- **delay priority**: 11
- **utilization priority**: 12
- The equivalent-path round-robin resolver is not used.

With CSCtr33991, all default resolver values were removed from the default global policy and PfR automatically performs load-balancing.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.
	Cisco IOS XE 3.4S	This command was modified. The equivalent-path-round-robin keyword was added.
	15.2(1)T	This command was modified. The equivalent-path-round-robin keyword was added.
	15.2(3)T	This command was modified. With CSCtr33991, the range and utilization keywords were removed and the priority keyword and <i>value</i> argument were disabled for the cost keyword.

Usage Guidelines

The **set resolve** command is entered on a master controller in PfR map configuration mode. This command is used to set priority when multiple policies are configured for the same prefix. When this command is configured, the policy with the highest priority will be selected to determine the policy decision.

The **priority** keyword is used to specify the priority value. The number 1 assigns the highest priority to a policy. The number 10 sets the lowest priority. Each policy must be assigned a different priority number. If you try to assign the same priority number to two different policy types, an error message will be displayed on the console. By default, delay has a priority value of 11 and utilization has a priority value of 12. These values can be overridden by specifying a value from 1 to 10.

**Note**

An unreachable prefix will always have the highest priority regardless of any other settings. This behavior is designed and cannot be overridden because an unreachable prefix indicates an interruption in a traffic flow.

The **variance** keyword is used to set an allowable variance for a user-defined policy. This keyword configures the allowable percentage by which an exit link or prefix can vary from the user-defined policy value and still be considered equivalent. For example, if an exit link delay is set to a delay value of 80 percent and a 10 percent variance is configured, exit links that have delay values from 80 to 89 percent will be considered equal.

**Note**

Variance cannot be set for cost or range policies.

The **equivalent-path-round-robin** keyword is used to specify that the equivalent-path round-robin resolver is used to choose between equivalent paths instead of the random resolver. The **no set resolve equivalent-path-round-robin** form of this command resets the software to use of the random resolver.

set resolve (PfR)

Note Effective with CSCtr33991, the **range** and **utilization** keywords were removed to simplify PfR. All default resolver values were removed from the default global policy and PfR automatically performs load-balancing. The cost resolver cannot be configured with a performance resolver. The **priority** keyword and *value* argument were disabled for the **cost** resolver.

Examples

The following example shows the commands used to create a PfR map named RESOLVE that sets the priority for delay policies to 1 for traffic learned based on highest outbound throughput. The variance is set to allow a 10-percent difference in delay statistics before a prefix is determined to be out-of-policy.

```
Router(config)# pfr-map RESOLVE 10
Router(config-pfr-map)# match pfr learn throughput
Router(config-pfr-map)# set resolve delay priority 1 variance 10
```

The following example shows the commands used to create a PfR map named ROUND_ROBIN to configure the use of the equivalent-path round-robin resolver to choose between equivalent paths:

```
Router(config)# pfr-map ROUND_ROBIN 10
Router(config-pfr-map)# set resolve equivalent-path-round-robin
```

Related Commands

Command	Description
pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
resolve	Sets the priority of a PfR policy when multiple overlapping policies are configured.

set trap-enable

To configure a Performance Routing (PfR) map to enable the generation of Performance Routing (PfR) Simple Network Management Protocol (SNMP) traps for specific PfR traffic class events, use the **set trap-enable** command in PfR map configuration mode. To delete the set clause entry, use the **no** form of this command.

```
set trap-enable
no set trap-enable
```

Syntax Description

This command has no arguments or keywords.

Command Default

No PfR SNMP traps are generated for specific PfR traffic class events.

Command Modes

PfR map configuration (config-pfr-map)

Command History

	Release	Modification
Cisco IOS XE Release 3.7S	This command was introduced.	
15.3(2)T	This command was integrated into Cisco IOS Release 15.3(2)T.	

Usage Guidelines

The **set trap-enable** command is entered on a master controller in PfR map configuration mode.

When the **set trap-enable** command is configured, a PfR SNMP trap is created under the following conditions:

- When a traffic class moves from being a primary link to a fallback link.
- When a traffic class goes into a default or out-of-policy status.

Examples

The following example shows how to configure a PfR map named TRAPMAP that sets the mode to passive monitoring, a delay threshold of 150, and a priority level for delay for all traffic classes matching the PfR learn list named LEARN-LIST. PfR SNMP traps are also enabled.

```
Device> enable
Device# configure terminal
Device(config)# snmp-server host 10.2.2.2 traps public pfr
Device(config)# snmp-server enable traps pfr
Router(config)# pfr-map TRAPMAP 10
Router(config-pfr-map)# match pfr learn list LEARN-LIST
Router(config-pfr-map)# set mode monitor passive
Router(config-pfr-map)# set delay threshold 150
Router(config-pfr-map)# set resolve delay priority 1 variance 1
Router(config-pfr-map)# set trap-enable
```

Related Commands

	Command	Description
	pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
	trap-enable	Enables the generation of PfR SNMP traps for specific PfR traffic class events.

set traceroute reporting (PfR)

set traceroute reporting (PfR)

To configure a Performance Routing (PfR) map to enable traceroute reporting, use the **set traceroute reporting** command in PfR map configuration mode. To delete the set clause entry, use the **no** form of this command.

```
set traceroute reporting [policy {delay|loss|unreachable}]
no set traceroute reporting [policy {delay|loss|unreachable}]
```

Syntax Description	(Optional) Configures policy-based traceroute reporting.
policy	(Optional) Configures traceroute reporting based on delay policies.
delay	(Optional) Configures traceroute reporting based on packet loss policies.
loss	(Optional) Configures traceroute reporting based on reachability policies.
unreachable	(Optional) Configures traceroute reporting based on reachability policies.

Command Default Traceroute reporting is not enabled using a PfR map.

Command Modes PfR map configuration (config-pfr-map)

Release	Modification
15.1(2)T	This command was introduced.
15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines The **set traceroute reporting** command is entered on a master controller in PfR map configuration mode. This command is used to enable continuous and policy-based traceroute probing. Traceroute probing allows you to monitor prefix performance on a hop-by-hop basis. Delay, loss, and reachability measurements are gathered for each hop from the probe source to the target prefix.

The following types of traceroute reporting are configured with this command:

- Continuous—A traceroute probe is triggered for each new probe cycle. Entering this command without any keywords enables continuous reporting. The probe is sourced from the current exit of the prefix.
- Policy based—A traceroute probe is triggered automatically when a prefix goes into an out-of-policy state. Entering this command with the **policy** keyword enables policy-based traceroute reporting. Policy-based traceroute probes are configured individually for delay, loss, and reachability policies. The monitored prefix is sourced from a match clause in a PfR map. Policy-based traceroute reporting stops when the prefix returns to an in-policy state.

The **show pfr master prefix** command is used to display traceroute probe results. An on-demand traceroute probe can be initiated when entering the **show pfr master prefix** command with the **current** and **now** keywords. The **set traceroute reporting** command does not have to be configured to initiate an on-demand traceroute probe.

Examples

The following example, starting in global configuration mode, enables continuous traceroute probing for prefixes that are learned based on delay:

```
Router(config)# pfr-map TRACE 10
Router(config-pfr-map)# match pfr learn delay
Router(config-pfr-map)# set traceroute reporting
```

Related Commands

Command	Description
pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
show pfr master prefix	Displays the status of monitored prefixes.
traceroute probe-delay (PfR)	Sets the time interval between traceroute probe cycles.

set unreachable (PfR)

set unreachable (PfR)

To configure a Performance Routing (PfR) map to set the maximum number of unreachable hosts, use the **set unreachable** command in PfR map configuration mode. To delete the set clause entry and reset the relative percentage of unreachable hosts to the default value of 50 (5 percent), use the **no** form of this command.

```
set unreachable {relative average|threshold maximum}
no set unreachable
```

Syntax Description	relative average Sets a relative percentage of unreachable hosts based on a comparison of short-term and long-term percentages. The range of values that can be configured for this argument is a number from 1 to a 1000. Each increment represents one tenth of a percent.
	threshold maximum Sets the absolute maximum number of unreachable hosts based on flows per million (fpm). The range of values that can be configured for this argument is from 1 to 1000000.

Command Default PfR uses a default relative percentage of 50 (5-percent) unreachable hosts if this command is not configured or if the **no** form of this command is entered.

Command Modes PfR map configuration (config-pfr-map)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines The **set unreachable** command is entered on a master controller in PfR map configuration mode. This command is used to set the relative percentage or the absolute maximum number of unreachable hosts, based on flows per million, that PfR will permit from a PfR-managed exit link. If the absolute number or relative percentage of unreachable hosts is greater than the user-defined or the default value, PfR determines that the exit link is out-of-policy and searches for an alternate exit link.

The **relative** keyword is used to configure the relative percentage of unreachable hosts. The relative unreachable host percentage is based on a comparison of short-term and long-term measurements. The short-term measurement reflects the percentage of hosts that are unreachable within a 5-minute period. The long-term measurement reflects the percentage of unreachable hosts within a 60-minute period. The following formula is used to calculate this value:

$$\text{Relative percentage of unreachable hosts} = ((\text{short-term percentage} - \text{long-term percentage}) / \text{long-term percentage}) * 100$$

The master controller measures the difference between these two values as a percentage. If the percentage exceeds the user-defined or default value, the exit link is determined to be out-of-policy. For example, if 10 hosts are unreachable during the long-term measurement and 12 hosts are unreachable during short-term measurement, the relative percentage of unreachable hosts is 20-percent.

The **threshold** keyword is used to configure the absolute maximum number of unreachable hosts. The maximum value is based on the actual number of hosts that are unreachable based on fpm.

Examples

The following example creates a PfR map named UNREACHABLE that configures the master controller to search for a new exit link when the difference between long- and short-term measurements (relative percentage) is greater than 10-percent for traffic learned based on highest delay:

```
Router(config)# pfr-map UNREACHABLE 10
Router(config-pfr-map)# match pfr learn delay
Router(config-pfr-map)# set unreachable relative 100
```

Related Commands	Command	Description
	pfr-map	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
	unreachable (PfR)	Sets the relative percentage or maximum number of unreachable hosts that PfR permits from a PfR-managed exit link.

show pfr api provider



Note Effective with Cisco IOS Releases 15.2(1)S, 15.2(3)T, and Cisco IOS XE Release 3.5S, the **show pfr api provider** command is not available in Cisco IOS software.

To display information about application programming interface providers that are registered with Performance Routing (PfR), use the **show pfr api provider** command in privileged EXEC mode.

show pfr api provider [detail]

Syntax Description	detail (Optional) Displays detailed information about application interface providers.
---------------------------	---

Command Default Detailed information about API providers is not displayed.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.2(1)S	This command was modified. This command was removed.
	Cisco IOS XE Release 3.5S	This command was modified. This command was removed.
	15.2(3)T	This command was modified. This command was removed.

Usage Guidelines The **show pfr api provider** command is entered on a master controller. This command is used to display application interface provider and host information including the ID of each configured provider, the priority of the provider and the host (if configured), and the IP addresses of each configured host device. The **detail** keyword is used to display more detailed information.

The PfR application interface defines the mode of communication and messaging between applications and the network for the purpose of optimizing the traffic associated with the applications. A provider is defined as an entity outside the network in which the router configured as a PfR master controller exists, for example, an ISP or a branch office of the same company. The provider has one or more host devices running one or more applications that use the PfR application interface to communicate with a PfR master controller. A provider must be registered with a PfR master controller before an application on a host device can interface with PfR. Use the **api provider** (PfR) command to register the provider, and use the **host-address** (PfR) command to configure a host device. After registration, a host device in the provider network can initiate a session with a PfR master controller. The PfR application interface provides an automated method for networks to be aware of applications and provides application-aware performance routing.

Examples

The following example shows information about configured application interface providers and host devices:

```
Router# show pfr api provider
```

```

API Version: Major 2, Minor 0
Provider id 1, priority 4000
Host ip 172.17.1.1, priority 4001
Host ip 10.1.2.2, priority 3001
Provider id 2, priority 20
Provider id 3, priority 10

```

Table 1: show pfr api provider Field Descriptions

Field	Description
API Version, Major, Minor	Version number of the application interface with major and minor releases.
Provider id	ID number of an application interface provider.
priority	Priority assigned to the policies of a provider or a host.
Host ip	IP address of a host device.

The following example shows detailed information about configured application interface providers and host devices:

```

Router# show pfr api provider detail

API Version: Major 2, Minor 0
Provider id 1001, priority 65535
Host ip 10.3.3.3, priority 65535
Session id 9, Version Major 2, Minor 0
Num pfx created 2, Num policies created 2
Last active connection time (sec) 00:00:01
Policy ids : 101, 102,
Host ip 10.3.3.4, priority 65535
Session id 10, Version Major 2, Minor 0
Num pfx created 1, Num policies created 1
Last active connection time (sec) 00:00:03
Policy ids : 103,
Provider id 2001, priority 65535
Host ip 172.19.198.57, priority 65535
Session id 11, Version Major 2, Minor 0
Num pfx created 0, Num policies created 0
All Prefix report enabled
All exit report enabled

```

Table 2: show pfr api provider detail Field Descriptions

Field	Description
Session id	Session ID is automatically allocated by PfR when an application interface provider initiates a session.
Num pfx created	Number of traffic classes created by the application interface provider application.
Num policies created	Number of policies dynamically created by the application interface provider application.

show pfr api provider

Field	Description
Last active connection time	Time, in seconds, since the last active connection from the application interface provider.
Policy ids	IDs assigned to each policy dynamically created by the application interface provider application.
All Prefix report enabled	Traffic class reports from the PfR master controller are enabled for the application interface provider.
All exit report enabled	Exit link reports from the PfR master controller are enabled for the application interface provider.

Related Commands

Command	Description
api provider (PfR)	Registers an application interface provider with a PfR master controller and enters PfR master controller application interface provider configuration mode.
debug pfr api provider	Displays PfR application interface debugging information.
host-address (PfR)	Configures information about a host device used by an application interface provider to communicate with a PfR master controller.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr border

To display information about a Performance Routing (PfR) border-router connection and PfR-controlled interfaces, use the **show pfr border** command in privileged EXEC mode.

show pfr border

Syntax Description	This command has no arguments or keywords.
---------------------------	--

Command Modes	Privileged EXEC (#)
----------------------	---------------------

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.
	15.2(3)T	This command was modified. The output was changed to support the PfR BR Auto Neighbors feature.
	Cisco IOS XE Release 3.8S	With CSCTy36217, the PfR BR Auto Neighbors feature was removed from all platforms.
	15.3(1)T	With CSCua59073, the PfR BR Auto Neighbors feature was removed from all platforms.

Usage Guidelines	The show pfr border command is entered on a PfR border router. The output displays information about the border router, the status of the master controller connection, and border router interfaces.
-------------------------	--

The PfR BR Auto Neighbors feature introduced dynamic tunnels between border routers and the output of this command was modified. With CSCTy36217 and CSCua59073, the PfR BR Auto Neighbors feature was removed from all platforms.

Examples

The following example shows the status of a border router:

```
Router# show pfr border

OER BR 10.1.1.3 ACTIVE, MC 10.1.1.1 UP/DOWN: UP 00:57:55,
Auth Failures: 0
Conn Status: SUCCESS, PORT: 3949
Exits
Et0/0      INTERNAL
Et1/0      EXTERNAL
```

Table 3: show pfr border Field Descriptions

Field	Description
OER BR	Displays the IP address and the status of the local border router (ACTIVE or DISABLED).

show pfr border

Field	Description
MC	Displays the IP address of the master controller, the master controller status (UP or DOWN), and the length of time, in hours, minutes, and seconds, that the connection with the master controller has been active.
Auth Failures	Displays the number of authentication failures that have occurred between the border router and the master controller.
Conn Status	Displays the connection status between the master controller and the border router ("SUCCESS" or "FAILED").
PORT	Displays the TCP port number used to communicate with the master controller.
Exits	Displays PfR-managed exit interfaces on the border router. This field displays the interface type, number, and PfR status (EXTERNAL or INTERNAL).

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr border active-probes

To display connection status and information about active probes on a Performance Routing (PfR) border router, use the **show pfr border active-probes** command in privileged EXEC mode.

show pfr border active-probes

Syntax Description

This command has no arguments or keywords.

Command Modes

Privileged EXEC (#)

Command History

Release	Modification
15.1(2)T	This command was introduced.
15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines

The **show pfr border active-probes** command is entered on a border router. This command displays the target active-probe assignment for a given prefix and the current probing status, including the border router or border routers that are executing the active probes.

Examples

The following example shows three active probes, each configured for a different prefix. The target port, source IP address, and exit interface are displayed in the output.

```
Router# show pfr border active-probes

PfR Border active-probes
Type      = Probe Type
Target    = Target IP Address
TPort     = Target Port
Source    = Send From Source IP Address
Interface = Exit interface
Att       = Number of Attempts
Comps    = Number of completions
N - Not applicable

      Type    Target          TPort  Source        Interface      Att   Comps
      udp-echo 10.4.5.1      80    10.0.0.1    Et1/0          1      0
      tcp-conn 10.4.7.1      33    10.0.0.1    Et1/0          1      0
      echo     10.4.9.1      N     10.0.0.1    Et1/0          2      2
```

Table 4: show pfr border active-probes Field Description

Field	Description
Type	The active probe type.
Target	The target IP address.
TPort	The target port.
Source	The source IP address.

show pfr border active-probes

Field	Description
Interface	The PfR-managed exit interface.
Att	The number of attempts.
Comps	The number successfully completed attempts.

Related Commands

Command	Description
active-probe (PfR)	Configures active probes to monitor PfR-controlled prefixes.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr border defined application

To display information about user-defined applications on a Performance Routing (PfR) border router, use the **show pfr border defined application** command in privileged EXEC mode.

show pfr border defined application

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
15.1(2)T	This command was introduced.	

Usage Guidelines The **show pfr border defined application** command is entered on a PfR border router. This command displays all user-defined applications that are defined on the master controller. To define a custom application to be used by PfR, use the **application define** (PfR) command on the PfR master controller.

To display the same information on the PfR master controller, use the **show pfr master defined application** command.

Examples The following partial output shows information about the user-defined application definitions configured for use with PfR:

```
Router# show pfr border defined application
```

PfR Defined Applications:						
Name	Appl_ID	Dscp	Prot	SrcPort	DstPort	SrcPrefix
telnet	1	defa	tcp	23-23	1-65535	0.0.0.0/0
telnet	1	defa	tcp	1-65535	23-23	0.0.0.0/0
ftp	2	defa	tcp	21-21	1-65535	0.0.0.0/0
ftp	2	defa	tcp	1-65535	21-21	0.0.0.0/0
cuseeme	4	defa	tcp	7648-7648	1-65535	0.0.0.0/0
cuseeme	4	defa	tcp	7649-7649	1-65535	0.0.0.0/0
dhcp	5	defa	udp	68-68	67-67	0.0.0.0/0
dns	6	defa	tcp	53-53	1-65535	0.0.0.0/0
dns	6	defa	tcp	1-65535	53-53	0.0.0.0/0
dns	6	defa	udp	53-53	1-65535	0.0.0.0/0
dns	6	defa	udp	1-65535	53-53	0.0.0.0/0
finger	7	defa	tcp	79-79	1-65535	0.0.0.0/0
finger	7	defa	tcp	1-65535	79-79	0.0.0.0/0
gopher	8	defa	tcp	70-70	1-65535	0.0.0.0/0
.						
.						
.						

Table 5: show pfr border defined application Field Descriptions

Field	Description
Name	Application name.

show pfr border defined application

Field	Description
Appl_ID	Unique ID that identifies an application traffic class.
Dscp	Differentiated Services Code Point (DSCP) value.
Prot	Application protocol number.
SrcPort	Source application port number: a single port number or a range of port numbers.
DstPort	Destination application port number: a single port number or a range of port numbers.
SrcPrefix	IP address of the traffic class source.

Related Commands

Command	Description
application define (PfR)	Defines an application to be monitored by PfR.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
show pfr master defined application	Displays information about user-defined application definitions used on the PfR master controller.

show pfr border passive applications

To display the list of application traffic classes that are monitored by Performance Routing (PfR), use the **show pfr border passive applications** command in privileged EXEC mode.

show pfr border passive applications

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **show pfr border passive applications** command is entered on a border router. This command displays a list of application traffic classes that are monitored by the border router using NetFlow passive monitoring.

Examples The following example displays an application traffic class that is monitored by a border router:

```
Router# show pfr border passive applications

OER Passive monitored Appl:
+ - monitor more specific
  Prefix      /Mask  Prot  Dscp   SrcPort        DstPort      Appl_ID
  10.1.3.0     /24    17    ef    [1, 65535]      [3000, 4000]    1
```

Table 6: show pfr border passive applications Field Descriptions

Field	Description
Prefix	IP address.
/Mask	Prefix length.
Prot	Application protocol number.
Dscp	Differentiated Services Code Point (DSCP) value.
SrcPort	Source application port number: a single port number or a range of port numbers.
DstPort	Destination application port number: a single port number or a range of port numbers.
Appl_ID	Unique ID that identifies an application traffic class.

show pfr border passive applications

Related Commands	Command	Description
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr border passive cache learned

To display passive measurement information that is collected by NetFlow for Performance Routing (PfR) monitored learned prefixes, use the **show pfr border passive cache learned** command in privileged EXEC mode.

show pfr border passive cache learned [{application|traffic-class}]

Syntax Description	<table border="1"> <tr> <td>application</td><td>(Optional) Displays measurement information about PfR-monitored learned prefixes for an application traffic class.</td></tr> <tr> <td>traffic-class</td><td>(Optional) Displays flow cache information for PfR monitored learned prefixes.</td></tr> </table>	application	(Optional) Displays measurement information about PfR-monitored learned prefixes for an application traffic class.	traffic-class	(Optional) Displays flow cache information for PfR monitored learned prefixes.
application	(Optional) Displays measurement information about PfR-monitored learned prefixes for an application traffic class.				
traffic-class	(Optional) Displays flow cache information for PfR monitored learned prefixes.				

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **show pfr border passive cache learned** command is entered on a border router. This command displays real-time prefix information that is collected from the border router through NetFlow passive monitoring.

A maximum of five host addresses and five ports are collected for each prefix. The output will also show the throughput in bytes and the delay in milliseconds. If the **application** keyword is entered, the output displays information about learned prefixes that match other application criteria such as the Differentiated Services Code Point (DSCP) value, protocol, or port number. The **traffic-class** keyword displays cache information about monitored learned prefixes for a PfR traffic class.

Examples

The following example displays passive monitoring information about learned prefixes:

```
Router# show pfr border passive cache learned

OER Learn Cache:
  State is enabled
  Measurement type: throughput, Duration: 2 min
  Aggregation type: prefix-length, Prefix length: 24
  4096 oer-flows per chunk,
  22 chunks allocated, 32 max chunks,
  1 allocated records, 90111 free records, 8913408 bytes allocated
Prefix      Mask     Pkts   B/Pk  Delay Samples    Active
Host1      Host2          Host3          Host4          Host5
dport1     dport2          dport3          dport4          dport5
10.1.5.0   /24       17K      46    300      2     45.1
10.1.5.2   10.1.5.3    0.0.0.0    0.0.0.0    0.0.0.0
1024        80           0             0             0
```

show pfr border passive cache learned

Table 7: show pfr border passive cache learned Field Descriptions

Field	Description
State is	Displays PFR prefix learning status: enabled or disabled.
Measurement type	Displays how the prefix is learned. The output displays throughput, delay, or both throughput and delay.
Duration	Displays the duration of the learning period in minutes.
Aggregation type	Displays the aggregation type: BGP, non-BGP, or prefix-length.
... oer-flows per chunk	Displays number of flow records per memory chunk.
... chunks allocated	Number of memory chunks allocated.
... allocated records	Number of records currently allocated in the learn cache.
Prefix	IP address and port of the learned prefix.
Mask	Prefix length as specified in a prefix mask.
Pkts B/Pk	Number of packets and bytes per packet.
Delay Samples	Number of delay samples that NetFlow has collected.
Active	Time for which the flow has been active.

The following example uses the **application** keyword to display measurement information about monitored application traffic classes that have been learned by PFR. In this example for voice traffic, the voice application traffic is identified by the User Datagram Protocol (UDP) protocol, a DSCP value of ef, and port numbers in the range from 3000 to 4000.

```
Router# show pfr border passive cache learned application

OER Learn Cache:
  State is enabled
  Measurement type: throughput, Duration: 2 min
  Aggregation type: prefix-length, Prefix length: 24
  4096 oer-flows per chunk,
  8 chunks allocated, 32 max chunks,
  5 allocated records, 32763 free records, 4588032 bytes allocated
  Prefix      Mask      Pkts  B/Pk  Delay Samples  Active
  Prot  Dscp  SrcPort          DstPort
  Host1    Host2          Host3        Host4        Host5
  dport1   dport2          dport3        dport4        dport5
  10.1.3.0 /24       873     28      0       0       13.3
  17      ef [1, 65535]  [3000, 4000]
  10.1.3.1 0.0.0.0      0.0.0.0      0.0.0.0      0.0.0.0
  3500      0            0            0            0            0
  10.1.1.0 /24       7674     28      0       0       13.4
  17      ef [1, 65535]  [3000, 4000]
  10.1.1.1 0.0.0.0      0.0.0.0      0.0.0.0      0.0.0.0
  3600      0            0            0            0            0
```

Related Commands	Command	Description
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr border passive learn

show pfr border passive learn

To display the configured, learned parameters to be used with passive measurement information collected by NetFlow for Performance Routing (PfR) learned traffic flows, use the **show pfr border passive learn** command in privileged EXEC mode.

show pfr border passive learn

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **show pfr border passive learn** command is entered on a border router. This command displays configured parameters including filter and aggregate application information that is collected from the border router through NetFlow passive monitoring.

Examples The following example displays passive monitoring information about learned traffic flows:

```
Router# show pfr border passive learn

OER Border Learn Configuration :
  State is enabled
  Measurement type: throughput, Duration: 2 min
  Aggregation type: prefix-length, Prefix length: 24
  No port protocol config
Traffic Class Filter List:
  List: SrcPrefix      SrcMask DstPrefix      DstMask
        Prot  DSCP    sport_opr sport_range   dport_opr dport_range   Grant
        1: 0.0.0.0      0          10.1.0.0      16
        17    ef     0          [1, 65535]      0          [1, 65535]      Permit
Traffic Class Aggregate List:
  List: Prot  DSCP    sport_opr sport_range   dport_opr dport_range   Grant
        1: 17    ef     0          [1, 65535]      7          [3000, 4000]      Permit
Keys: protocol dscp DstPort
```

Table 8: show pfr border passive learn Field Descriptions

Field	Description
State is	Displays PfR prefix learning status: enabled or disabled.
Measurement type	Displays how the prefix is learned: throughput or delay.
Duration	Displays the duration of the learning period in minutes.

Field	Description
Aggregation type	Displays the aggregation type: BGP, non-BGP, or prefix-length.
No port protocol config	Indicates that no port protocol has been configured.
Traffic Class Filter List	Section showing the traffic-class filter parameters.
Traffic Class Aggregate List	Section showing the traffic-class aggregation parameters.
Keys	Parameters contained in the key list.

Related Commands	Command	Description
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr border passive prefixes

show pfr border passive prefixes

To display information about passive monitored prefixes, use the **show pfr border passive prefixes** command in privileged EXEC mode.

show pfr border passive prefixes

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History

Release	Modification
15.1(2)T	This command was introduced.
15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines

The **show pfr border passive prefixes** command is entered on a border router. The output of this command displays prefixes that are monitored by NetFlow on the border router. The prefixes displayed in the output are monitored by the master controller.

Examples

The following example shows a prefix that is passively monitored by NetFlow:

```
Router# show pfr border passive prefixes
OER Passive monitored prefixes:
Prefix      Mask     Match Type
10.1.5.0    /24     exact
```

Table 9: show pfr border passive prefixes Field Descriptions

Field	Description
Prefix	IP address of the learned prefix.
Mask	The prefix length as specified in a prefix mask.
Match Type	Type of prefix being monitored: exact or nonexact.

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr border routes

To display information about routes that are controlled by Performance Routing (PfR), use the **show pfr border routes** command in privileged EXEC mode.

```
show pfr border routes {bgp|cce|eigrp [parent]|rsvp-cache|rwatch|static}
```

Syntax Description	bgp	Displays information for PfR routes controlled by Border Gateway Protocol (BGP).
	cce	Displays information for PfR routes controlled by Common Classification Engine (CCE).
	eigrp	Displays information for PfR routes controlled by Enhanced Interior Gateway Routing Protocol (EIGRP).
	parent	(Optional) Displays information for EIGRP parent routes.
	rsvp-cache	Displays information about all the Resource Reservation Protocol (RSVP) paths that PfR knows.
	rwatch	Displays information for PfR routes that are being watched in the Routing Information Base (RIB).
	static	Displays information for PfR routes controlled by static routes.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.
	Cisco IOS XE Release 3.4S	This command was modified. The rsvp-cache keyword was added.
	15.2(1)T	This command was modified. The rsvp-cache keyword was added.
	Cisco IOS XE Release 3.7S	This command was modified. Support for NBAR was added to the Cisco ASR 1000 Series Aggregation Services Routers.

Usage Guidelines The **show pfr border routes** command is entered on a border router. This command is used to display information about PfR-controlled routes on a border router. You can display information about BGP or static routes.

The **show pfr border routes cce** command displays information about PfR-controlled traffic classes that are identified using network-based application recognition (NBAR).

Examples The following example displays BGP-learned routes on a border router:

show pfr border routes

```
Router# show pfr border routes bgp

OER BR 10.1.1.2 ACTIVE, MC 10.1.1.3 UP/DOWN: UP 00:10:08,
Auth Failures: 0
Conn Status: SUCCESS, PORT: 3949
BGP table version is 12, local router ID is 10.10.10.2
Status codes: s suppressed, d damped, h history, * valid, > best, I - internal,
               r RIB-failure, S Stale
Origin codes: I - IGP, e - EGP, ? - incomplete
OER Flags: C - Controlled, X - Excluded, E - Exact, N - Non-exact, I - Injected
Network      Next Hop      OER      LocPrf Weight Path
*> 10.1.0.0/16    10.40.40.2    CE           0 400 600 I
```

Table 10: show pfr border routes bgp Field Descriptions

Field	Description
C - Controlled	Indicates that the monitored prefix is currently under PfR control.
X - Excluded	Indicates that the monitored prefix is controlled by a different border router.
E - Exact	Indicates that an exact prefix is controlled, but more-specific routes are not.
N - Non-exact	Indicates that the prefix and all more-specific routes are under PfR control.
I - Injected	Indicates that the prefix is injected into the BGP routing table. If a less-specific prefix exists in the BGP table and PfR has a more-specific prefix configured, then BGP will inject the new prefix and PfR will flag it as I-Injected.
XN	Indicates that the prefix and all more-specific prefixes are under the control of another border router, and, therefore, that this prefix is excluded. (Not shown in the example output.)
CNI	Indicates that the prefix is injected and that this prefix and all more-specific prefixes are under PfR control.
CEI	Indicates that the specific prefix is injected and under PfR control.
CN	Indicates that the prefix and all more-specific prefixes are under PfR control.
CE	Indicates that the specific prefix is under PfR control.
Network	The IP address and prefix mask.
Next Hop	The next hop of the prefix.
OER	Type of PfR control.
LocPrf	The BGP local preference value.
Weight	The weight of the route.
Path	The BGP path type.

The following example displays PfR-controlled routes that are identified using NBAR:

```
Router# show pfr border routes cce
```

```

Class-map oer-class-acl-oer_cce#2-stile-telnet, permit, sequence 0, mask 24
  Match clauses:
    ip address (access-list): oer_cce#2
      stile: telnet
  Set clauses:
    ip next-hop 10.1.3.2
    interface Ethernet2/3
  Statistic:
    Packet-matched: 60

```

Table 11: show pfr border routes cce Field Descriptions

Field	Description
Class-map	Indicates the name of the PfR map used to control the PfR traffic classes.
Match clauses	Indicates the match criteria being applied to the traffic classes.
ip address (access-list)	Name of the access list used to match the destination prefixes of the controlled traffic classes identified using NBAR.
stile	Protocol being controlled.
Set clauses	Indicates the set criteria being applied to the matched traffic classes.
ip next-hop	IP address of the next hop to which the controlled traffic is sent. The next hop should be to a noncontrolling router.
interface	Interface name and number through which the controlled traffic is sent. If this is an ingress interface, the border router is not controlling the traffic classes. If this is an egress interface of the border router, the route is being controlled.
Statistic	Displays statistics such as number of packets matched.

The following example displays EIGRP-controlled routes on a border router with information about the parent route that exists in the EIGRP routing table. In this example, the output shows that prefix 10.1.2.0/24 is being controlled by PfR. This command is used to show parent route lookup and route changes to existing parent routes when the parent route is identified from the EIGRP routing table.

```

Router# show pfr border routes eigrp

Flags: C - Controlled by oer, X - Path is excluded from control,
       E - The control is exact, N - The control is non-exact
Flags Network          Parent          Tag
CE    10.1.2.0/24      10.0.0.0/8     5000

```

In this example, the **parent** keyword is used and more details are shown about the parent route lookup:

```

Router# show pfr border routes eigrp parent

Network          Gateway          Intf        Flags
10.0.0.0/8      10.40.40.2     Ethernet4   1
Child Networks
Network          Flag

```

In this example, the **rsvp-cache** keyword is used to show all the RSVP paths that PfR knows:

show pfr border routes

```
Router# show pfr border routes rsvp-cache
```

SrcIP	DstIP	Protocol	Src_port	Dst_port	Nexthop	Egress I/F	PfR/RIB
10.1.25.19	10.1.35.5	UDP	1027	1027	10.1.248.5	Gi1/0	RIB*
10.1.0.12	10.1.24.10	UDP	48	48	10.1.248.24	Gi1/0	PfR*
10.1.0.12	10.1.42.19	UDP	23	23	10.1.248.24	Gi1/0	PfR*
10.1.0.12	10.1.18.10	UDP	12	12	172.16.43.2	Fa1/1	PfR*

Table 12: show pfr border routes rsvp-cache Field Descriptions

Field	Description
SrcIP	Source IP address.
DstIP	Destination IP address.
Protocol	Name of protocol.
Src_port	Source port number.
Dst_port	Destination port number.
Nexthop	IP address of the next hop to which the RSVP traffic is sent.
Egress I/F	Egress interface name and number through which the controlled RSVP traffic is sent.
PfR/RIB	The * besides RIB or PfR indicates whether there is client monitoring this entry.

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr border rsvp

To display current values for the Resource Reservation Protocol (RSVP) post dial timeout timer and signaling retries on a Performance Routing (PfR) border router, use the **show pfr border rsvp** command in privileged EXEC mode.

show pfr border rsvp

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.2(1)T	This command was introduced.
	Cisco IOS XE Release 3.4S	This command was integrated into Cisco IOS XE Release 3.4S.

Usage Guidelines The **show pfr border rsvp** command is entered on a border router. The command displays the current value for the RSVP post dial delay timer that runs on the border routers. The post dial delay timer is updated on the border routers at the start of every PfR learn cycle, and the timer determines the delay, in milliseconds, before the default routing path is returned to RSVP.

This command also displays the number of alternate paths that PfR provides for an RSVP reservation when a reservation error condition is detected. If an alternate path is provided, RSVP can resend the reservation signal.

Examples

The following example shows information about the current values for the RSVP post dial timeout timer and signaling retries on a PfR border router:

```
Router# show pfr border rsvp

PfR BR RSVP parameters:
    RSVP Signaling retries:          1
    Post-dial-timeout (msec):        0
```

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
rsvp	Configures PfR to learn traffic classes based on RSVP flows.

show pfr master

show pfr master

To display information about a Performance Routing (PfR) master controller, use the **show pfr master** command in privileged EXEC mode.

show pfr master

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3S.
	15.2(3)T	This command was modified. The output was changed to support the PfR BR Auto Neighbors feature.
	Cisco IOS XE Release 3.8S	With CSCty36217, the PfR BR Auto Neighbors feature was removed from all platforms.
	15.3(1)T	With CSCua59073, the PfR BR Auto Neighbors feature was removed from all platforms.

Usage Guidelines The **show pfr master** command is entered on a master controller. The output of this command displays information about the status of the PfR-managed network; the output includes information about the master controller, the border routers, PfR-managed interfaces, and default and user-defined policy settings.

The PfR BR Auto Neighbors feature introduced dynamic tunnels between border routers and modified the command output. With CSCty36217 and CSCua59073, the PfR BR Auto Neighbors feature was removed from all platforms.

Examples

The following example displays the status of a PfR-managed network on a master controller:

```
Router# show pfr master

OER state: ENABLED and ACTIVE
Conn Status: SUCCESS, PORT: 3949
Number of Border routers: 2
Number of Exits: 2
Number of monitored prefixes: 10 (max 5000)
Border          Status    UP/DOWN      AuthFail
10.4.9.7        ACTIVE     UP          02:54:40      0
10.4.9.6        ACTIVE     UP          02:54:40      0
Global Settings:
  max-range-utilization percent 20
  mode route metric bgp local-pref 5000
  mode route metric static tag 5000
  trace probe delay 1000
```

```

logging
Default Policy Settings:
  backoff 300 3000 300
  delay relative 50
  holddown 300
  periodic 0
  mode route control
  mode monitor both
  mode select-exit best
  loss relative 10
  unreachable relative 50
  resolve delay priority 11 variance 20
  resolve utilization priority 12 variance 20
Learn Settings:
  current state : SLEEP
  time remaining in current state : 4567 seconds
  throughput
  delay
  no protocol
  monitor-period 10
  periodic-interval 20
  aggregation-type bgp
  prefixes 100
  expire after time 720

```

Table 13: show pfr master Field Descriptions

Field	Description
OER state	Indicates the status of the master controller. The state will be either "ENABLED" or "DISABLED" and "ACTIVE" or "INACTIVE."
Conn Status	Indicates the state of the connection between the master controller and the border router. The state is displayed as "SUCCESS" to indicate a successful connection. The state is displayed as "CLOSED" if there is no connection.
PORT:	Displays the port number that is used for communication between the master controller and the border router.
Number of Border routers	Displays the number of border routers that peer with the master controller.
Number of Exits	Displays the number of exit interfaces under Pfr control.
Number of monitored prefixes	Displays the number of prefixes that are actively or passively monitored.
Border	Displays the IP address of the border router.
Status	Indicates the status of the border router. This field displays either "ACTIVE" or "INACTIVE."
UP/DOWN	Displays the connection status. The output displays "DOWN" or "UP." "UP" is followed by the length of time, in hours, minutes, and seconds that the connection has been in this state.
AuthFail	Displays the number of authentication failures between the master controller and the border router.
Global Settings	Displays the configuration of global Pfr master controller settings.

show pfr master

Field	Description
Default Policy Settings	Displays default PfR master controller policy settings.
Learn Settings	Display PfR learning settings.

The following partial output shows the default behavior introduced with CSCtr26978; the backoff timer values are 90, 900, and 90 seconds, hold-down is set to 90 seconds, mode route control is enabled, and mode select-exit best is removed. With CSCtr33991, default resolvers were removed from the default global policy. These changes in the default behavior are to simplify PfR configuration.

```
.
.
.
Default Policy Settings:
  backoff 90 900 90
  delay relative 50
  holddown 90
  periodic 0
  probe frequency 56
  number of jitter probe packets 100
  mode route control
  mode monitor both
  loss relative 10
  jitter threshold 20
  mos threshold 3.60 percent 30
  unreachable relative 50
  trigger-log percentage 30
.
.
.
```

The following partial output shows the new default behavior introduced with CSCtr26978; learn mode is enabled, the monitor period is set to 1 minute, and the periodic interval is set to 0 minutes. These changes in the default behavior are to simplify PfR configuration.

```
.
.
.
Learn Settings:
  current state : ENABLED
  time remaining in current state : 0 seconds
  throughput
  no delay
  no inside bgp
  monitor-period 1
  periodic-interval 0
  aggregation-type prefix-length 24
  prefixes 100 apls 100
  expire after time 720
```

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr master active-probes

To display connection and status information about active probes on a Performance Routing (PfR) master controller, use the **show pfr master active-probes** command in privileged EXEC mode.

show pfr master active-probes [{appl|forced|target-discovery}]

Additional Filter Keywords

show pfr master active-probes [{assignment|running}] [{forced [policy-seq-number]}|longest-match]

Syntax Description	appl	(Optional) Filters the output to display active probes generated for application traffic configured with the PfR Application-Aware Routing: PBR feature.
	forced	(Optional) Filters the output to display active probes configured with a forced target assignment.
	target-discovery	(Optional) Filters the output to display active probes learned using target-discovery.
	assignment	(Optional) Filters the output to display assignment information about active probes.
	running	(Optional) Filters the output to display only information about all active probes that are currently running.
	<i>policy-seq-number</i>	(Optional) Specifies the policy sequence number.
	longest-match	(Optional) Filters the output to display only the longest-match probes.

Command Modes	Privileged EXEC (#)
---------------	---------------------

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	Cisco IOS XE Release 3.3S	This command was modified. The assignment , running , and longest-match keywords and the <i>policy-seq-number</i> argument were added.
	15.2(1)T	This command was modified. The assignment , running , and longest-match keywords and the <i>policy-seq-number</i> argument were added.
	Cisco IOS XE Release 3.5S	This command was modified. The target-discovery keyword was added.
	15.2(3)T	This command was modified. The target-discovery keyword was added.

Usage Guidelines	The show pfr master active-probes command is entered on a master controller. This command is used to display the status of active probes. The output from this command displays the active probe type and destination, the border router that is the source of the active probe, the target prefixes that are used for active probing, and whether the probe was learned or configured.
------------------	--

Examples	The following example shows the status of configured and running active probes:
----------	---

show pfr master active-probes

```

Router# show pfr master active-probes

          OER Master Controller active-probes
Border   = Border Router running this Probe
State    = Un/Assigned to a Prefix
Prefix   = Probe is assigned to this Prefix
Type     = Probe Type
Target   = Target Address
TPort    = Target Port
How      = Was the probe Learned or Configured
N - Not applicable

      State   Prefix       Type     Target      TPort How
Assigned 10.1.1.1/32 echo    10.1.1.1      N Lrnd
Assigned 10.1.4.0/24 echo    10.1.4.1      N Lrnd
Assigned 10.1.2.0/24 echo    10.1.2.1      N Lrnd
Assigned 10.1.4.0/24 udp-echo 10.1.4.1      65534 Cfgd
Assigned 10.1.3.0/24 echo    10.1.3.1      N Cfgd
Assigned 10.1.2.0/24 tcp-conn 10.1.2.1      23 Cfgd

The following Probes are running:
      Border      State   Prefix       Type     Target      TPort
192.168.2.3   ACTIVE   10.1.4.0/24  udp-echo 10.1.4.1      65534
172.16.1.1    ACTIVE   10.1.2.0/24  tcp-conn 10.1.2.1      23

```

Table 14: show pfr master active-probes Field Descriptions

Field	Description
The following Probes exist:	Displays the status of configured active probes.
State	Displays the status of the active probe: "Assigned" or "Unassigned."
Prefix	Displays the prefix and prefix mask of the target active probe.
Type	Displays the type of active probe: "echo," "jitter," "tcp-conn," or "udp-echo."
Target	Displays the target IP address for the active probe.
TPort	Displays the target port for the active probe.
How	Displays how the active probe was created. The output will indicate whether the probe is configured or learned.
The following Probes are running:	Displays the status of active probes that are running.
Border	Displays the IP address of the border router.

The following example shows the status of configured and running active probes when a jitter probe has been configured:

```

Router# show pfr master active-probes

          OER Master Controller active-probes
Border   = Border Router running this Probe
State    = Un/Assigned to a Prefix
Prefix   = Probe is assigned to this Prefix
Type     = Probe Type
Target   = Target Address

```

TPort = Target Port
 How = Was the probe Learned or Configured
 N - Not applicable
 The following Probes exist:
 State Prefix Type Target TPort How codec
 Assigned 10.1.1.0/24 jitter 10.1.1.10 2000 Cfgd g711ulaw
 Assigned 10.1.1.0/24 echo 10.1.1.2 N Lrnd N
 The following Probes are running:
 Border State Prefix Type Target TPort
 10.1.1.2 ACTIVE 10.1.1.0/24 jitter 10.1.1.10 2000
 10.1.1.2 ACTIVE 10.1.1.0/24 echo 10.1.1.6 N
 10.2.2.3 ACTIVE 10.1.1.0/24 jitter 10.1.1.10 2000
 10.2.2.3 ACTIVE 10.1.1.0/24 echo 10.1.1.6 N
 10.1.1.1 ACTIVE 10.1.1.0/24 jitter 10.1.1.10 2000
 10.1.1.1 ACTIVE 10.1.1.0/24 echo 10.1.1.6 N

Table 15: show pfr master active-probes (Jitter and MOS) Field Descriptions

Field	Description
codec	Displays the codec value configured for MOS calculation. Codec values can be one of the following: g711alaw, g711ulaw, or g729a.

The following example shows the status of longest-match assigned probes:

```
Router# show pfr master active-probes assignment longest-match
```

PfR Master Controller Probe Assignment
 State = Un/Assigned to a Prefix
 Prefix = Probe is assigned to this Prefix
 Type = Probe Type
 Target = Target Address
 TPort = Target Port
 How = Was the probe Learned or Configured
 Codec = Codec used in jitter probe
 N - Not applicable

The following longest-match Probes exist:

State	Prefix	Type	Target	TPort	How	Codec
Assigned	10.1.0.0/16	echo	10.1.1.1	N	Cfgd	N
Assigned	10.1.0.0/16	tcp-conn	10.1.2.1	23	Cfgd	N
Assigned	10.1.0.0/16	udp-echo	10.1.3.1	100	Cfgd	N
Assigned	10.1.0.0/16	echo	10.1.4.1	N	Cfgd	N
Assigned	10.1.0.0/16	tcp-conn	10.1.5.1	23	Cfgd	N
Assigned	10.1.0.0/16	udp-echo	10.1.6.1	101	Cfgd	N
Assigned	10.1.0.0/16	jitter	10.1.6.1	2000	Cfgd	g729a
Unassigned		jitter	10.2.6.1	2000	Cfgd	g711alaw

The following example shows the status of forced assigned probes:

```
Router# show pfr master active-probes assignment forced
```

PfR Master Controller Probe Assignment
 State = Un/Assigned to a Prefix
 Prefix = Probe is assigned to this Prefix
 Type = Probe Type
 Target = Target Address
 TPort = Target Port
 How = Was the probe Learned or Configured

show pfr master active-probes

Codec = Codec used in jitter probe
N - Not applicable

The following Forced-assign Probes exist:

State	Policy	Type	Target	TPort	How	Codec
Assigned	20	echo	10.1.1.1	N	Cfgd	N
Assigned	30	tcp-conn	10.1.2.1	23	Cfgd	N
Assigned	40	udp-echo	10.1.3.1	100	Cfgd	N
Assigned	50	echo	10.1.4.1	N	Cfgd	N
Assigned	60	tcp-conn	10.1.5.1	23	Cfgd	N
Assigned	70	udp-echo	10.1.6.1	101	Cfgd	N
Assigned	80	jitter	10.1.6.1	2000	Cfgd	g729a

The following example shows the status of all created and in-progress probes:

```
Router# show pfr master active-probes running
```

PfR Master Controller running probes:

Border	Interface	Type	Target	TPort	Codec	Freq	Forced	Pkts	DSCP
						(Pol	(Pol		
						Seq)	Seq)		
10.100.100.200	Ethernet1/0	tcp-conn	10.100.200.100	65535	g711alaw	10	20	100	ef
10.2.2.3	Ethernet1/0	tcp-conn	10.1.5.1	23	N	56	10	1	defa
10.1.1.1	Ethernet1/0	tcp-conn	10.1.5.1	23	N	30	N	1	defa
10.1.1.2	Ethernet1/0	tcp-conn	10.1.2.1	23	N	56	N	1	defa
10.2.2.3	Ethernet1/0	tcp-conn	10.1.2.1	23	N	56	N	1	defa
10.1.1.1	Ethernet1/0	tcp-conn	10.1.2.1	23	N	56	N	1	defa

Table 16: show pfr master active-probes running Field Descriptions

Field	Description
Interface	Displays the interface used as the egress interface on the border router.
Freq	Displays the frequency, in seconds, with which probes are sent from this border router interface.
Forced (Pol Seq)	Displays the policy sequence number if the probe is configured with a forced target assignment.
Pkts	Displays the number of packets sent from this border router.
DSCP	Displays the configured DSCP value.

The following example shows the status of all active probes and the probe targets learned using target-discovery. In this example, the command is entered at the hub (head-office) master controller and displays information about two MC peers, listing the type of probe and the target IP addresses.

```
Router# show pfr master active-probes target-discovery
```

PfR Master Controller active-probes (TD)
Border = Border Router running this probe
MC-Peer = Remote MC associated with this target
Type = Probe Type
Target = Target Address
TPort = Target Port

N - Not applicable

Destination Site Peer Addresses:

MC-Peer	Targets
10.16.1.1	10.111.1.2, 10.111.1.1
10.18.1.1	10.121.1.1

The following Probes are running:

Border	Idx	State	MC-Peer	Type	Target	TPort
10.16.1.3	27	TD-Actv	10.16.1.1	jitter	10.111.1.2	5000
10.16.1.2	14	TD-Actv	10.16.1.1	jitter	10.111.1.2	5000
10.16.1.3	27	TD-Actv	10.16.1.1	jitter	10.111.1.1	5000
10.16.1.2	14	TD-Actv	10.16.1.1	jitter	10.111.1.1	5000
10.18.1.1	14	TD-Actv	10.18.1.1	jitter	10.121.1.1	5000
10.18.1.1	27	TD-Actv	10.18.1.1	jitter	10.121.1.1	5000

Table 17: show pfr master active-probes target-discovery Field Descriptions

Field	Description
Idx	Displays an index number assigned by the master controller.
State	Displays the status of the active probe learned via target-discovery: “TD-Actv” or “TD-InActv.”
MC-Peer	Displays the IP address of the remote master controller associated with the target probe.

Related Commands

Command	Description
active-probe (PfR)	Configures active probes to monitor a PfR-controlled prefixes.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr master appl

show pfr master appl

To display information about application traffic classes that are monitored and controlled by a Performance Routing (PfR) master controller, use the **show pfr master appl** command in privileged EXEC mode.

```
show pfr master appl [{[access-list name] [detail] [learned [{delay|throughput}]]|[{tcp|udp}] [protocol-number] [min-port max-port] [{dst|src}] [{detail|policy}]}]
```

Syntax Description	access-list name	(Optional) Filters the output based on the specified named extended access list.
	detail	(Optional) Displays detailed information.
	learned	(Optional) Displays information about learned application traffic classes.
	delay	(Optional) Displays information about applications learned using delay as the learning criterion.
	throughput	(Optional) Displays information about applications learned using throughput as the learning criterion.
	tcp	(Optional) Filters the output based on TCP traffic.
	udp	(Optional) Filters the output based on UDP traffic.
	protocol-number	(Optional) Filters the output based on the specified protocol number.
	min-port max-port	(Optional) Filters the output based on the specified port number or range of port numbers.
	dst	(Optional) Filters the output based on the destination port number.
	src	(Optional) Filters the output based on the source port number.
	policy	(Optional) Displays the policy for the application or port number.

Command Modes	Privileged EXEC (#)
---------------	---------------------

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines	The show pfr master appl command is entered on a PfR master controller. This command is used to display information about application traffic classes that are configured for monitoring and optimization.
------------------	---

Examples	The following example shows TCP application traffic filtered based on port 80 (HTTP):
----------	---

```
Router# show pfr master appl tcp 80 80 dst policy
```

Prefix	Appl Prot	Port	Port Type	Policy
10.1.0.0/16	tcp	[80, 80]	dst	20
10.1.1.0/24	tcp	[80, 80]	dst	10

Table 18: show pfr master appl Field Descriptions

Field	Description
Prefix	IP address of the monitored prefix that carries the application traffic.
Appl Prot	Application protocol.
Port	Application port number.
Port Type	Source or destination application port number.
Policy	Application policy number.

The following example shows information about learned application traffic classes:

```
Router# show pfr master appl learned
```

PfR Prefix Statistics:							
Prefix	Prot Port [src][dst]	State	Time Curr BR	DSCP Source Prefix			
				CurrI/F	Proto	PasSDly	PasLDly
				PasSUn	PasLUn	PasSLos	PasLLos
				ActSUn	ActLUn	EBw	IBw
				ActSJit	ActPMOS		
10.1.1.0/24	udp [1, 65535] [3000, 4000]			ef 0.0.0.0/0			
	INPOLICY*	@70 1.1.1.2		Et0/0		PBR	
	U	U	0	0	0	0	0
	11	7	0	0	1	0	0
	N	N					
10.1.3.0/24	udp [1, 65535] [3000, 4000]			ef 0.0.0.0/0			
	INPOLICY*	@70 1.1.1.2		Et0/0		PBR	
	U	U	0	0	0	0	0
	3	4	0	0	1	0	0
	N	N					

Table 19: show pfr master appl learned Field Descriptions

Field	Description
DSCP	Differentiated Services Code Point (DSCP) value.
Source Prefix	IP address of the application source.

show pfr master appl

Field	Description
State	Current state of the application traffic class flow.
Time	Time, in seconds, between probe messages.
Curr BR	IP address of the border router through which the prefix associated with this application traffic class is being currently routed.
Currl/F	Interface of the border router through which the prefix associated with this application traffic class is being currently routed.
Proto	Protocol.

The following example shows information about application traffic classes learned using delay as the learning criterion:

```
Router# show pfr master appl learned delay

OER Prefix Statistics:
Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
P - Percentage below threshold, Jit - Jitter (ms),
MOS - Mean Opinion Score
Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
# - Prefix monitor mode is Special, & - Blackholed Prefix
% - Force Next-Hop, ^ - Prefix is denied
Prefix          Prot Port [src][dst]           DSCP Source Prefix
                State   Time Curr BR      Currl/F     Proto
                PassDly  PasLDly  PasSUn    PasLUn  PassLos  PasLLos
                ActSDly  ActLDly  ActSUn    ActLUn   EBw       IBw
                ActSJit  ActPMOS

-----
10.1.3.0/24      udp [1, 65535] [3000, 4000]      ef 0.0.0.0/0
                  INPOLICY* @70 1.1.1.2          Et0/0        PBR
                  U       U       0       0       0       0
                  3       4       0       0       1       0
                  N       N

-----
```

The following example shows information about application traffic classes learned using throughput as the learning criterion:

```
Router# show pfr master appl learned throughput

OER Prefix Statistics:
Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
P - Percentage below threshold, Jit - Jitter (ms),
MOS - Mean Opinion Score
Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
# - Prefix monitor mode is Special, & - Blackholed Prefix
% - Force Next-Hop, ^ - Prefix is denied
Prefix          Prot Port [src][dst]           DSCP Source Prefix
                State   Time Curr BR      Currl/F     Proto
                PassDly  PasLDly  PasSUn    PasLUn  PassLos  PasLLos
                ActSDly  ActLDly  ActSUn    ActLUn   EBw       IBw
                ActSJit  ActPMOS

-----
```

```
10.1.1.0/24      udp [1, 65535] [3000, 4000]      ef 0.0.0.0/0
                  INPOLICY*          @70 1.1.1.2      Et0/0      PBR
                           U           U           0           0           0           0
                           11          7           0           0           1           0
                           N           N           N           N           N           N
```

Related Commands	Command	Description
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr master bandwidth-resolution

show pfr master bandwidth-resolution

To display information about Performance Routing (PfR) bandwidth resolution, use the **show pfr master bandwidth-resolution** command in privileged EXEC mode.

show pfr master bandwidth-resolution {all|mc-peer-ip-address}

Syntax Description	all	Displays bandwidth-resolution information for all master controller peers.
	<i>mc-peer-ip-address</i>	IP address of a master controller peer.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS Release 3.8S	This command was introduced.
	15.3(1)T	This command was integrated into Cisco IOS Release 15.3(1)T.

Usage Guidelines The **show pfr master bandwidth-resolution** command is entered on a master controller (MC). The output of this command displays information about the transmit and receive bandwidths sent from the PfR border routers. PfR bandwidth resolution leverages the target discovery feature and requires target discovery configuration before bandwidth resolution is enabled.

Examples

The following is sample output from the **show pfr master bandwidth-resolution all** command.

```
Device# show pfr master bandwidth-resolution all

PfR Bandwidth Resolution Database
Border Router: 10.0.0.1 External Interface: Tu0
MC-peer address      Overlay Address      Rx BW [kbps]      Tx Load [kbps]
10.20.0.10          10.50.0.1           40                  30
10.30.0.10          10.50.0.3           20                  10

Border Router: 10.0.0.2 External Interface: Tu1
MC-peer address      Overlay Address      Rx BW [kbps]      Tx Load [kbps]
10.20.0.10          10.50.0.2           35                  20
10.30.0.10          10.50.0.4           25                  15
```

Table 20: show pfr master bandwidth-resolution all Field Descriptions

Field	Description
Border Router	IP address of the border router.
External Interface	Interface type and number for the configured external interface.
MC-peer address	IP address of a MC interface used to peer with other MCs.

Field	Description
Overlay Address	IP address used for the tunnel interface connection to the MC peer.
Rx BW	Receive bandwidth, in kilobits per second.
Tx Load	Transmit load, in kilobits per second.

The following is sample output from the **show pfr master bandwidth resolution** command with the *mc-peer-ip-address* argument:

```
Router# show pfr master bandwidth resolution 10.20.0.10
```

```
PfR Bandwidth Resolution Database
MC-peer: 10.20.0.10 Desc: Boxborough
PfR BR      External Interface Overlay Address Rx BW [kbps] Tx Load [kbps]
10.0.0.1    Tu0          10.50.0.1      40        30
10.0.0.2    Tu1          10.50.0.2      35        20
```

Related Commands

Command	Description
pfr master	Enables a PfR process, configures a router as a PfR master controller, and enters PfR master controller configuration mode.

show pfr master border

show pfr master border

To display the status of connected Performance Routing (PfR) border routers, use the **show pfr master border** command in privileged EXEC mode.

show pfr master border [ip-address] [{detail|report|statistics|topology}]

Syntax Description	<table border="1"> <tr> <td><i>ip-address</i></td><td>(Optional) Specifies the IP address of a single border router.</td></tr> <tr> <td>detail</td><td>(Optional) Displays detailed border router information.</td></tr> <tr> <td>report</td><td>(Optional) Displays link reports related to connected border routers.</td></tr> <tr> <td>statistics</td><td>(Optional) Displays statistics related to connected border routers.</td></tr> <tr> <td>topology</td><td>(Optional) Displays the status of the policy-based routing (PBR) requirement.</td></tr> </table>	<i>ip-address</i>	(Optional) Specifies the IP address of a single border router.	detail	(Optional) Displays detailed border router information.	report	(Optional) Displays link reports related to connected border routers.	statistics	(Optional) Displays statistics related to connected border routers.	topology	(Optional) Displays the status of the policy-based routing (PBR) requirement.
<i>ip-address</i>	(Optional) Specifies the IP address of a single border router.										
detail	(Optional) Displays detailed border router information.										
report	(Optional) Displays link reports related to connected border routers.										
statistics	(Optional) Displays statistics related to connected border routers.										
topology	(Optional) Displays the status of the policy-based routing (PBR) requirement.										

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3S	This command was integrated into Cisco IOS XE Release 3.3S and the statistics keyword was added.
	15.2(1)T	The statistics keyword was added.
	15.2(3)T	This command was modified. The output was changed to support the PfR BR Auto Neighbors feature.
	Cisco IOS XE Release 3.8S	With CSCty36217, the PfR BR Auto Neighbors feature was removed from all platforms.
	15.3(1)T	With CSCua59073, the PfR BR Auto Neighbors feature was removed from all platforms.

Usage Guidelines The **show pfr master border** command and all the keywords are entered on a master controller. The output of this command shows the status of connections with border routers.

The PfR BR Auto Neighbors feature introduced dynamic tunnels between border routers and modified the command output. With CSCty36217 and CSCua59073, the PfR BR Auto Neighbors feature was removed from all platforms.

Examples

The following example displays the status of border router connections with a master controller:

```
Router# show pfr master border
```

```

OER state: ENABLED and ACTIVE
Conn Status: SUCCESS, PORT: 3949
Version: 2.2
Number of Border routers: 3
Number of Exits: 3
Number of monitored prefixes: 1 (max 5000)
Max prefixes: total 5000 learn 2500
Prefix count: total 1, learn 0, cfg 1
PBR Requirements met
Nbar Status: Inactive
Border      Status    UP/DOWN          AuthFail  Version
10.165.201.5 ACTIVE    UP    00:05:29        0  2.2
10.165.201.6 ACTIVE    UP    00:05:29        0  2.2
10.165.201.7 ACTIVE    UP    00:05:29        0  2.2

```

The table below describes the significant fields shown in the display. All the other fields in the output are self-explanatory.

Table 21: show pfr master border Field Descriptions

Field	Description
Border	Displays the IP address of the border router.
Status	Displays the status of the border router: "ACTIVE" or "INACTIVE."
UP/DOWN	Displays the connection status ("DOWN" or "UP") with the master controller and the length of time, in hours, minutes, and seconds that the connection has been up.
AuthFail	Displays the number of authentication failures between the master controller and the border router.
Version	Displays the version for all of the border routers configured on the master controller.

The following example displays detailed information about border router connections with a master controller:

```
Router# show pfr master border detail
```

```

Border      Status    UP/DOWN          AuthFail  Version
10.1.1.2    ACTIVE    UP    14:03:40        0  3.0
Et2/0       EXTERNAL UP
Et0/0       INTERNAL UP
Et1/0       EXTERNAL UP

External      Capacity   Max BW   BW Used   Load Status   Exit Id
Interface    (kbps)     (kbps)    (kbps)    (%)          -----
-----  -----  -----  -----  -----  -----
Et2/0        Tx      800      600      226      28 UP          2
           Rx      800      800       0        0
Et1/0        Tx      800      600      97       12 UP          1
           Rx      800      800      55        6

```

Table 22: show pfr master border detail Field Descriptions

Field	Description
Border	Displays the IP address of the border router.

show pfr master border

Field	Description
Status	Displays the status of the border router: "ACTIVE" or "INACTIVE" and the status of the interfaces: "EXTERNAL" or "INTERNAL."
UP/DOWN	Displays the connection status ("DOWN" or "UP") with the master controller and the length of time, in hours, minutes, and seconds that the connection has been up.
AuthFail	Displays the number of authentication failures between the master controller and the border router.
External Interface	Displays the external Pfr controlled interface. "Tx" displays information about the interface utilization in the outbound direction. "Rx" displays information about the interface utilization in the inbound direction.
Capacity	Displays the capacity of the interface in kilobits per second.
Max BW	Displays the maximum usable bandwidth in kilobits per second as configured on the interface.
BW Used	Displays the amount of bandwidth in use in kilobits per second.
Load	Displays the amount of bandwidth in use as a percentage of the total capacity of the interface.
Status	Displays the status of the link.
Exit Id	Displays the ID number assigned by the master controller to identify the exit.

The following example displays whether the PBR requirement for the application control by PfR is met:

```
Router# show pfr master border topology
```

LocalBR	LocalEth	RemoteBR	RemoteEth	nbar_type
10.165.201.4	Ethernet0/0	10.165.202.2	Ethernet0/0	Directly Connected
10.165.201.4	Ethernet0/0	10.165.201.3	Ethernet0/0	Directly Connected
10.165.201.3	Ethernet0/0	10.165.201.4	Ethernet0/0	Directly Connected
10.165.201.3	Ethernet0/0	10.165.201.3	Ethernet0/0	Directly Connected
10.165.201.2	Ethernet0/0	10.165.201.4	Ethernet0/0	Directly Connected
10.165.201.2	Ethernet0/0	10.165.201.2	Ethernet0/0	Directly Connected
PBR Requirements met				

Table 23: show pfr master border topology Field Descriptions

Field	Description
LocalBR	Displays the local border router.
LocalEth	Displays the local interface connection for the local border router.
RemoteBR	Displays the remote border router that is connected with the local border router.
RemoteEth	Displays the remote interface connection for the remote border router.

Field	Description
nbar_type	Displays the type of Network-Based Application Recognition (NBAR) connection for each of the border routers. Three types of connection status are available: Directly Connected, One-Hop-Away Neighbor, and Not Connected.

The following example displays the border router link report:

```
Router# show pfr master border report

Border      Status    UP/DOWN          AuthFail  Version
10.165.202.132 ACTIVE   UP    00:05:54        0  2.2
10.165.202.131 ACTIVE   UP    00:05:57        0  2.2
10.165.202.130 ACTIVE   UP    00:06:00        0  2.2
10.165.202.129 ACTIVE   UP    00:06:03        0  2.2
```

Table 24: show pfr master border report Field Descriptions

Field	Description
Border	Displays the IP address of the border router.
Status	Displays the status of the border router: "ACTIVE" or "INACTIVE."
UP/DOWN	Displays the connection status ("DOWN" or "UP") with the master controller and the length of time, in hours, minutes, and seconds that the connection has been up.
AuthFail	Displays the number of authentication failures between the master controller and the border router.
Status	Displays the status of the link.
Version	Displays the version for all of the border routers configured on the master controller.

The following example displays statistics related to the connected border routers:

```
Router# show pfr master border statistics

PFR Master Controller Border
MC Version: 2.3
Keepalive : 5 second
Keepalive : DISABLED

Last
Border      Status Up/Down UpTime     AuthFail  Receive  Version
----- -----
10.200.200.200 ACTIVE UP    03:12:12        0 00:00:04 2.2
10.1.1.2      ACTIVE UP    03:10:53        0 00:00:10 2.2
10.1.1.1      ACTIVE UP    03:12:12        0 00:01:00 2.2

Border Connection Statistics
=====
Border      Bytes Sent      Bytes Recvd      Msg Sent      Msg Recvd      Sec Buf
----- -----
10.200.200.200      345899      373749      5          10          0
10.1.1.2          345899      373749      5          10          0
```

show pfr master border

10.1.1.1	345899	373749	5	10	0
Border	Socket Closed	Invalid Message	Context Not Found		
10.200.200.200	5	10	100		
10.1.1.2	5	10	100		
10.1.1.1	5	10	100		

Table 25: show pfr master border statistics Field Descriptions

Field	Description
Border	Displays the IP address of the border router.
Bytes Sent	Displays the number of bytes sent to the border router.
Bytes Recvd	Displays the number of bytes received from the border router.
Msg Sent	Displays the number of messages sent to the border router.
Msg Recvd	Displays the number of messages received from the border router.
Sec Buf Bytes Used	Displays the number of bytes used in the secondary buffer.
Socket Closed	Displays the number of sockets closed. A socket is opened when the border router needs to establish a link with the master controller, and the socket is closed when the link goes down.
Invalid Message	Displays the number of invalid messages.
Context Not Found	Displays the number of times that a message from a border router (BR) to the master controller (MC) does not contain a context. Each communication channel opened between the MC and a BR contains a context structure.

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr master cost-minimization

To display the status of cost-based optimization policies, use the **show pfr master cost-minimization** command in privileged EXEC mode.

show pfr master cost-minimization {billing-history|border ip-address [interface]|nickname name}

Syntax Description	billing-history Deployes the billing history border ip-address Displays information for a single border router. <i>interface</i> (Optional) Displays information for only the specified interface. nickname name Displays information for the service provider. A nickname must be configured before output will be displayed.
---------------------------	--

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines The **show pfr master cost-minimization** command is entered on a master controller. The output of this command shows the status of cost-based policies.

Examples The following example displays the billing history for cost policies:

```
Router# show pfr master cost-minimization billing-history

Billing History for the past three months
    ISP2 on 10.1.1.2          Ethernet0/0
    80-percent on 10.1.1.1      Ethernet0/0
                                Mon1           Mon2           Mon3
Nickname     SustUtil       Cost   SustUtil       Cost   SustUtil       Cost
-----      -----
ISP2          ---NA---      1737222676 1737222676      ---NA---
80-percent    ---NA---      1737231684 1737231684      ---NA---
-----      -----
Total Cost                               0                         3474454360                           0
```

Table 26: show pfr master cost-minimization billing-history Field Descriptions

Field	Description
Nickname	The nickname assigned to the service provider.
SustUtil	The sustained utilization of the exit link.

show pfr master cost-minimization

Field	Description
Cost	The financial cost of the link.
Total Cost	The total financial cost for the month.

The following example displays cost optimization information only for Ethernet interface 1/0:

```
Router# show pfr master cost-minimization border 10.1.1.2 Ethernet1/0

Nickname : ispname           Border: 10.1.1.2           Interface: Et1/0
Calc type : Combined
Start Date: 20
Fee       : Tier Based
          Tier1 : 100, fee: 10000
          Tier2 : 90,  fee: 9000
Period    : Sampling 22, Rollup 1400
Discard   : Type Percentage, Value 22
Rollup Information:
Total      Discard      Left      Collected
60         13          36        0
Current Rollup Information:
  MomentaryTgtUtil:    7500 Kbps  CumRxBytes:            38669
  StartingRollupTgt:   7500 Kbps  CumTxBytes:            39572
  CurrentRollupTgt:   7500 Kbps  TimeRemain:           09:11:01
Rollup Utilization (Kbps):
Egress/Ingress Utilization Rollups (Descending order)
1  : 0          2  : 0
```

Table 27: show pfr master cost-minimization border Field Descriptions

Field	Description
Nickname	Nickname of the service provider.
Border	IP address of the border router.
Interface	Interface for which the cost policy is configured.
Calc type	Displays the configured billing method.
Start Date	Displays the starting date of the billing period.
Fee	Displays the billing type (fixed or tiered) and the billing configuration.
Period	Displays the sampling and rollup configuration.
Discard	Displays the discard configuration, type, and value.
Rollup Information	Displays rollup statistics.
Current Rollup Information	Displays rollup statistics for the current sampling cycle.
Rollup Utilization	Displays rollup utilization statistics in kilobytes per second.

The following example displays cost optimization information for the specified service provider:

```
Router# show pfr master cost-minimization nickname ISP1

Nickname : ISP1           Border: 10.1.1.2           Interface: Et1/0
Calc type : Combined
Start Date: 20
Fee       : Tier Based
            Tier1 : 100, fee: 10000
            Tier2 : 90,  fee: 9000
Period    : Sampling 22, Rollup 1400
Discard   : Type Percentage, Value 22
Rollup Information:
Total      Discard      Left      Collected
60          13          36          0
Current Rollup Information:
  MomentaryTgtUtil:      7500 Kbps  CumRxBytes:        38979
  StartingRollupTgt:     7500 Kbps  CumTxBytes:        39692
  CurrentRollupTgt:      7500 Kbps  TimeRemain:       09:10:49
Rollup Utilization (Kbps):
Egress/Ingress Utilization Rollups (Descending order)
1  : 0          2  : 0
```

Related Commands

Command	Description
cost-minimization (PfR)	Configures cost-based optimization policies on a master controller.
debug pfr master cost-minimization	Displays debugging information for cost-based optimization policies.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr master defined application

show pfr master defined application

To display information about user-defined application definitions on a Performance Routing (PfR) master controller, use the **show pfr master defined application** command in privileged EXEC mode.

show pfr master defined application

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Release	Modification
15.1(2)T	This command was introduced.

Usage Guidelines The **show pfr master defined application** command is entered on a PfR master controller. This command displays all applications that are user-defined. To define a custom application to be used by PfR, use the **application define** (PfR) command on the PfR master controller.

To display the same information on a PfR border router, use the **show pfr border defined application** command.

Examples

The following partial example output shows information about the user-defined applications configured for use with PfR:

```
Router# show pfr master defined application

OER Defined Applications:
Name          Appl_ID Dscp Prot     SrcPort      DstPort SrcPrefix
-----+-----+-----+-----+-----+-----+-----+
telnet        1 defa   tcp    23-23      1-65535  0.0.0.0/0
telnet        1 defa   tcp    1-65535    23-23   0.0.0.0/0
ftp           2 defa   tcp    21-21      1-65535  0.0.0.0/0
ftp           2 defa   tcp    1-65535    21-21   0.0.0.0/0
cuseeme       4 defa   tcp    7648-7648  1-65535  0.0.0.0/0
cuseeme       4 defa   tcp    7649-7649  1-65535  0.0.0.0/0
cuseeme       4 defa   tcp    1-65535   7648-7648 0.0.0.0/0
dhcp          5 defa   udp    68-68      67-67   0.0.0.0/0
dns           6 defa   tcp    53-53      1-65535  0.0.0.0/0
dns           6 defa   tcp    1-65535    53-53   0.0.0.0/0
dns           6 defa   udp    53-53      1-65535  0.0.0.0/0
dns           6 defa   udp    1-65535    53-53   0.0.0.0/0
finger         7 defa   tcp    79-79      1-65535  0.0.0.0/0
finger         7 defa   tcp    1-65535    79-79   0.0.0.0/0
gopher         8 defa   tcp    70-70      1-65535  0.0.0.0/0
.
.
.
```

Table 28: show pfr master defined application Field Descriptions

Field	Description
Name	Application name .

Field	Description
Appl_ID	Application ID.
Dscp	Differentiated Services Code Point (DSCP) value.
Prot	Protocol.
SrcPort	Source port number for the traffic class.
DstPort	Destination port number for the traffic class.
SrcPrefix	IP address of the traffic class source.

Related Commands

Command	Description
application define (PfR)	Defines a user-defined application to be monitored by PfR.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
show pfr border defined application	Displays information about user-defined application definitions used on a PfR border router.

show pfr master exits

show pfr master exits

To display information about Performance Routing (PfR) exits, use the **show pfr master exits** command in privileged EXEC mode.

show pfr master exits

Syntax Description This command has no keywords or arguments.

Command Modes Privileged EXEC (#)

Command History

Release	Modification
Cisco IOS XE Release 3.3S	This command was introduced.
15.2(1)T	This command was integrated into Cisco IOS Release 15.2(1)T.

Usage Guidelines

Use this command to display information about the exits used for PfR traffic classes, including the IP address, nickname of the PfR managed external interface, the exit policy, interface of the border router, and exit performance data.

Examples

```
Router# show pfr master exits
```

PfR Master Controller Exits:

General Info:

=====

E - External

I - Internal

N/A - Not Applicable

ID	Name	Border	Interface	ifIdx	IP Address	Mask	Policy	Up/Type	Down
6	external1	10.1.0.23	Fa1/0	9	10.185.252.23	27	Util	E	UP
5	external2	10.1.0.23	Fa1/1	10	172.16.43.23	27	Util	E	UP
4		10.1.0.24	Tu24	33	10.20.20.24	24	Util	E	UP

Global Exit Policy:

=====

Range Egress: In Policy - No difference between exits - Policy 10%

Range Ingress: In Policy - No difference between entrances - Policy 0%

Util Egress: In Policy

Util Ingress: In Policy

Cost: In Policy

Exits Performance:

=====

ID	Egress				Ingress						
	Capacity	MaxUtil	Usage	%	RSVP	POOL	OOP	Capacity	MaxUtil	Usage	%
6	100000	90000	66	0	9000	N/A	100000	100000	40	0	N/A
5	100000	90000	34	0	8452	N/A	100000	100000	26	0	N/A
4	100000	90000	128	0	5669	N/A	100000	100000	104	0	N/A

TC and BW Distribution:

```
=====
# of TCs          BW (kbps)      Probe   Active
Name/ID  Current Controlled InPolicy Controlled Total Failed (count) Unreach (fpm)
-----
6        0            0            0           0       66     0       0
5        548          548          548         0       34     0       0
4        3202         3202         3202         0      128     0       0

Exit Related TC Stats:
=====
Priority
highest nth
-----
Number of TCs with range:    0      0
Number of TCs with util:     0      0
Number of TCs with cost:     0      0

Total number of TCs: 3800
```

Table 29: show pfr master exits Field Descriptions

Field	Description
General Info:	Displays information about the border router exits.
ID	External interface ID.
Name	Indicates the nickname specified for the PfR-managed external interface.
Up/Down	Indicates whether the interface is currently in an UP or DOWN state.
Border	IP address of the border router exit.
Interface	Exit interface name and number.
ifIdx	Interface index assigned by the Cisco IOS software.
IP Address	IP address of the traffic class prefix.
Mask	Mask of the traffic class prefix.
Policy	Type of exit policy configured.
Up/Down	Indicates whether the interface is currently in an UP or DOWN state.
Global Exit Policy:	Displays the status of each type of configured global exit policy in both egress and ingress directions. The status is either "In Policy" or "Out of Policy," and an explanation of the status is included.
Exits Performance:	Displays performance data for an exit in both the egress and ingress direction.
Capacity	Displays the bandwidth capacity of the exit in kilobytes per second.
Max Util	Displays the configured maximum utilization for the exit.
Usage	Displays the actual utilization of the exit.
%	Displays the actual utilization of the exit as a percentage of the capacity.

show pfr master exits

Field	Description
RSVP POOL	Displays RSVP bandwidth pool available, in Kbps.
OOP	Indicates if the exit is Out of Policy (OOP).
# of TCs:	Displays the number of current traffic classes, the number of traffic classes being controlled, and the number of traffic classes in an "In Policy" state.
BW	Displays information about the bandwidth being utilized.
Controlled	Displays the number of bits being used for this exit.
Total	Displays the total bandwidth being used, in kilobits per second.
Probe Failed (count)	Displays the number of failed probes.
Active Unreach (fpm)	Displays the number of unreachable destinations.
Exit Related TC Status:	Displays the policy priority of the traffic classes and the total number of traffic classes.
Priority highest	Displays the number of traffic classes for each type of exit policy where the policy priority is configured to be the highest.
Priority nth	Displays the number of traffic classes for each type of exit policy where the policy priority is configured to be a priority other than the highest.

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr master export statistics

To display Performance Routing (PfR) statistics for the data exported from a master controller, use the **show pfr master export statistics** command in privileged EXEC mode.

```
show pfr master export statistics
```

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Release 3.4S	This command was introduced.
	15.2(2)T	This command was integrated into Cisco IOS Release 15.2(2)T.

Examples The following is sample output from the **show pfr master export statistics** command. The fields displayed are self-explanatory.

```
Router# show pfr master export statistics

PfR NetFlow Version 9 Export: Enabled

Destination IP:      10.0.0.1
Destination port:    2000
Packet #:           0

Type of Export:      Total
----- -----
TC Config            0
External Config      0
Internal Config      0
Policy Config        7
Reason Config        100
Passive Update       0
Passive Performance   0
Active Update         0
Active Performance    0
External Update       0
Internal Update       0
TC Event              0
Cost                  0
BR Alert               0
MC Alert               0
----- -----
Total:                107
```

Related Commands	Command	Description
	flow monitor	Creates a flow monitor.

show pfr master export statistics

Command	Description
pfr master	Enables a Cisco IOS PfR process, configures a router as a PfR master controller, and enters PfR master controller configuration mode.

show pfr master learn list

To display configuration information about Performance Routing (PfR) learn lists, use the **show pfr master learn list** command in privileged EXEC mode.

show pfr master learn list [list-name]

Syntax Description	<i>list-name</i> (Optional) Name of a learn list.
---------------------------	---

Command Modes	Privileged EXEC (#)
----------------------	---------------------

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines	The show pfr master learn list command is entered on a PfR master controller. This command is used to display configuration information about learn lists. Learn lists are a way to categorize learned traffic classes. In each learn list, different criteria for learning traffic classes including prefixes, application definitions, filters, and aggregation parameters can be configured. A traffic class is automatically learned by PfR based on each learn list criteria, and each learn list is configured with a sequence number. The sequence number determines the order in which learn list criteria are applied. Learn lists allow different PfR policies to be applied to each learn list.
-------------------------	---

Examples	The following example shows how to display configuration information about two learn lists, LIST1 and LIST2:
-----------------	--

```
Router# show pfr master learn list

Learn-List LIST1 10
  Configuration:
    Application: ftp
    Aggregation-type: bgp
    Learn type: thruput
    Policies assigned: 8 10
  Stats:
    Application Count: 0
    Application Learned:
Learn-List LIST2 20
  Configuration:
    Application: telnet
    Aggregation-type: prefix-length 24
    Learn type: thruput
    Policies assigned: 5 20
  Stats:
    Application Count: 2
    Application Learned:
      Appl Prefix 10.1.5.0/24 telnet
      Appl Prefix 10.1.5.16/28 telnet
```

show pfr master learn list

Table 30: show pfr master learn list Field Descriptions

Field	Description
Learn-List	Identifies the PfR learn list name and sequence number.
Application	Application protocol.
Aggregation-type	Type of TCF aggregation.
Learn type	Throughput or delay.
Policies assigned	Application policy number.
Application Count	Number of applications learned.
Application Learned	Type of application learned.

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr master link-group

To display information about Performance Routing (PfR) link groups, use the **show pfr master link-group** command in privileged EXEC mode.

show pfr master link-group [link-group-name]

Syntax Description	<i>link-group-name</i> (Optional) Name of a link group.
---------------------------	---

Command Modes	Privileged EXEC (#)
----------------------	---------------------

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3	This command was integrated into Cisco IOS XE Release 3.3.

Usage Guidelines	The show pfr master link-group command is entered on a PfR master controller. This command is used to display information about link groups including the link group name, the border router, and the interface on the border router that is the exit link, and the ID of the exit link.
-------------------------	---

Link groups are used to define a group of exit links as a preferred set of links or as a fallback set of links for PfR to use when optimizing a specified traffic class. Up to three link groups can be specified for each interface. Use the **link-group** (PfR) command to define the link group for an interface, and use the **set link-group** (PfR) command to define the primary link group and a fallback link group for a specified traffic class in an PfR map.

Examples	The following example displays information about all configured link groups:
-----------------	--

```
Router# show pfr master link-group

link group video
  Border      Interface     Exit id
  192.168.1.2  Serial2/0      1
link group voice
  Border      Interface     Exit id
  192.168.1.2  Serial2/0      1
  192.168.1.2  Serial3/0      2
  192.168.3.2  Serial4/0      4
link group data
  Border      Interface     Exit id
  192.168.3.2  Serial3/0      3
```

Table 31: show pfr master link-group Field Descriptions

Field	Description
link group	Name of the link group.

show pfr master link-group

Field	Description
Border	IP address of the border router on which the exit link exists.
Interface	Type and number of the interface on the border router that is the exit link.
Exit id	ID number of the exit link.

The following example displays information only about the link group named voice:

```
Router# show pfr master link-group voice

link group voice
  Border           Interface      Exit id
  192.168.1.2     Serial2/0       1
  192.168.1.2     Serial3/0       2
  192.168.3.2     Serial4/0       4
```

Related Commands

Command	Description
link-group (PfR)	Configures a PfR border router exit interface as a member of a link group.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
set link-group (PfR)	Specifies a link group for traffic classes defined in a PfR policy.

show pfr master nbar application

To display information about the status of an application identified using network-based application recognition (NBAR) for each Performance Routing (PfR) border router, use the **show pfr master nbar application** command in privileged EXEC mode.

show pfr master nbar application

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	Cisco IOS XE Release 3.7S	This command was integrated into Cisco IOS XE Release 3.7S.

Usage Guidelines The **show pfr master nbar application** command is entered on a PfR master controller. This command is used to verify the validity of an application that is identified using NBAR at each PfR border router. If the NBAR application is not supported on one or more border routers, all the traffic classes related to that NBAR application are marked inactive and cannot be optimized using PfR.

NBAR can identify applications based on the following three types of protocols:

- Non-UDP and non-TCP IP protocols—for example, generic routing encapsulation (GRE) and Internet Control Message Protocol (ICMP).
- TCP and UDP protocols that use statically assigned port numbers—for example, CU-SeeMe desktop video conference (CU-SeeMe-Server) and Post Office Protocol over Transport Layer Security (TLS) and Secure Sockets Layer (SSL) server (SPOP3-Server).
- TCP and UDP protocols that dynamically assign port numbers and require stateful inspection—for example, Real-Time Transport Protocol audio streaming (RTP-audio) and BitTorrent file transfer traffic (BitTorrent).

The list of applications identified using NBAR and available for profiling of PfR traffic classes is constantly evolving. For lists of many of the NBAR applications defined using static or dynamically assigned ports, see the “Performance Routing with NBAR/CCE Application Recognition” module.

For more details about NBAR, see the “Classifying Network Traffic Using NBAR” section of the *QoS: NBAR Configuration Guide*.

Examples

The following partial output shows information about the status of a number of applications identified using NBAR at three PfR border routers. In this example, applications based on Border Gateway Protocol (BGP), BitTorrent, and HTTP protocols are valid at all three PfR border routers, and traffic classes for these applications are active. Although applications such as Connectionless Network Service (CLNS) and KaZaA are invalid on at least one border router, all traffic classes based on these application are marked inactive.

```
Router# show pfr master nbar application
```

show pfr master nbar application

NBAR Appl	10.1.1.4	10.1.1.2	10.1.1.3
aarp	Invalid	Invalid	Invalid
appletalk	Invalid	Invalid	Invalid
arp	Invalid	Invalid	Invalid
bgp	Valid	Valid	Valid
bittorrent	Valid	Valid	Valid
bridge	Invalid	Invalid	Invalid
bstun	Invalid	Invalid	Invalid
cdp	Invalid	Invalid	Invalid
citrix	Invalid	Invalid	Invalid
clns	Valid	Invalid	Invalid
clns_es	Invalid	Invalid	Invalid
clns_is	Invalid	Invalid	Invalid
cmns	Invalid	Invalid	Invalid
compressedtcp	Invalid	Invalid	Invalid
cuseeme	Invalid	Invalid	Invalid
decnet	Invalid	Invalid	Invalid
decnet_node	Invalid	Invalid	Invalid
decnet_router-11	Invalid	Invalid	Invalid
decnet_router-12	Invalid	Invalid	Invalid
dhcp	Invalid	Invalid	Invalid
directconnect	Invalid	Invalid	Invalid
dlsw	Invalid	Invalid	Invalid
dns	Invalid	Invalid	Invalid
edonkey	Invalid	Invalid	Invalid
egp	Invalid	Invalid	Invalid
eigrp	Invalid	Invalid	Invalid
exchange	Invalid	Invalid	Invalid
fasttrack	Invalid	Invalid	Invalid
finger	Invalid	Invalid	Invalid
ftp	Invalid	Invalid	Invalid
gnutella	Invalid	Invalid	Invalid
Morpheus	Invalid	Invalid	Invalid
gopher	Invalid	Invalid	Invalid
gre	Invalid	Invalid	Invalid
h323	Invalid	Invalid	Invalid
http	Valid	Valid	Valid
icmp	Invalid	Invalid	Invalid
imap	Invalid	Invalid	Invalid
ip	Invalid	Invalid	Invalid
ipinip	Invalid	Invalid	Invalid
ipsec	Invalid	Invalid	Invalid
ipv6	Invalid	Invalid	Invalid
ipx	Invalid	Invalid	Invalid
irc	Invalid	Invalid	Invalid
kazaa2	Valid	Invalid	Valid
.			
.			
.			

Table 32: show pfr master nbar application Field Descriptions

Field	Description
NBAR Appl	Application name.
10.1.1.4	IP address of a PfR border router.
10.1.1.2	IP address of a PfR border router.

Field	Description
10.1.1.3	IP address of a PfR border router.

Related Commands	Command	Description
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
	show pfr master traffic-class application nbar	Displays information about application traffic classes that are identified using NBAR and that are monitored and controlled by a PfR master controller.

show pfr master policy

show pfr master policy

To display policy settings on a Performance Routing (PfR) master controller, use the **show pfr master policy** command in privileged EXEC mode.

show pfr master policy [{sequence-number}policy-name|default|dynamic**]**

Syntax Description	<table border="1"> <tr> <td><i>sequence-number</i></td><td>(Optional) Displays only the specified PfR map sequence.</td></tr> <tr> <td><i>policy-name</i></td><td>(Optional) Displays only the specified PfR map name.</td></tr> <tr> <td>default</td><td>(Optional) Displays the default policy information.</td></tr> <tr> <td>dynamic</td><td>(Optional) Displays dynamic policy information.</td></tr> </table>	<i>sequence-number</i>	(Optional) Displays only the specified PfR map sequence.	<i>policy-name</i>	(Optional) Displays only the specified PfR map name.	default	(Optional) Displays the default policy information.	dynamic	(Optional) Displays dynamic policy information.
<i>sequence-number</i>	(Optional) Displays only the specified PfR map sequence.								
<i>policy-name</i>	(Optional) Displays only the specified PfR map name.								
default	(Optional) Displays the default policy information.								
dynamic	(Optional) Displays dynamic policy information.								

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.
	15.2(1)T	This command was modified. The output was modified to include information about RSVP.
	Cisco IOS XE Release 3.4S	This command was modified. The output was modified to include information about RSVP.

Usage Guidelines The **show pfr master policy** command is entered on a master controller. The output of this command displays default policy and policies configured with a PfR map.

The PfR application provider interface (API) defines the mode of communication and messaging between applications and the network for the purpose of optimizing the traffic associated with the applications. A provider is defined as an entity outside the network in which the router configured as an PfR master controller exists, for example, an ISP, or a branch office of the same company. The provider has one or more host devices running one or more applications that use the PfR API to communicate with a PfR master controller. The PfR API allows applications running on a host device in the provider network to dynamically create policies to influence the existing traffic classes, or specify new traffic class criteria. The **dynamic** keyword displays the policies dynamically created by an API provider application.

Examples

The following example displays default policy and policies configured in a PfR map named CUSTOMER. The asterisk(*) character is displayed next to policy settings that override default settings.

```
Router# show pfr master policy
* Overrides Default Policy Setting
```

```

Default Policy Settings:
  backoff 300 3000 300
  delay relative 50
  holddown 300
  periodic 0
  mode route control
  mode monitor both
  mode select-exit best
  loss relative 10
  unreachable relative 50
  resolve delay priority 11 variance 20
  resolve utilization priority 12 variance 20
pfr-map CUSTOMER 10
  match ip prefix-lists: NAME
  backoff 300 3000 300
  delay relative 50
  holddown 300
  periodic 0
  mode route control
  mode monitor both
  mode select-exit best
  loss relative 10
  unreachable relative 50
  *resolve utilization priority 1 variance 10
  *resolve delay priority 11 variance 20
  *probe frequency 30
pfr-map CUSTOMER 20
  match ip prefix-lists:
  match pfr learn delay
  backoff 300 3000 300
  delay relative 50
  holddown 300
  periodic 0
  *mode route control
  mode monitor both
  mode select-exit best
  loss relative 10
  unreachable relative 50
  resolve delay priority 11 variance 20
  resolve utilization priority 12 variance 20

```

Table 33: show pfr master policy Field Descriptions

Field	Description
Default Policy Settings:	Displays PfR default configuration settings under this heading.
pfr-map...	Displays the PfR map name and sequence number. The policy settings applied in the PfR map are displayed under this heading.

The following example displays dynamic policies created by applications using the PfR application interface. The asterisk(*) character is displayed next to policy settings that override default settings.

```

Router# show pfr master policy dynamic

Dynamic Policies:

proxy id 10.3.3.3
sequence no. 18446744069421203465, provider id 1001, provider priority 65535
  host priority 65535, policy priority 101, Session id 9
backoff 90 90 90

```

show pfr master policy

```

delay relative 50
holddown 90
periodic 0
probe frequency 56
mode route control
mode monitor both
mode select-exit good
loss relative 10
jitter threshold 20
mos threshold 3.60 percent 30
unreachable relative 50
next-hop not set
forwarding interface not set
resolve delay priority 11 variance 20
resolve utilization priority 12 variance 20
proxy id 10.3.3.3
sequence no. 18446744069421269001, provider id 1001, provider priority 65535
    host priority 65535, policy priority 102, Session id 9
backoff 90 90 90
delay relative 50
holddown 90
periodic 0
probe frequency 56
mode route control
mode monitor both
mode select-exit good
loss relative 10
jitter threshold 20
mos threshold 3.60 percent 30
unreachable relative 50
next-hop not set
forwarding interface not set
resolve delay priority 11 variance 20
resolve utilization priority 12 variance 20

proxy id 10.3.3.4
sequence no. 18446744069421334538, provider id 1001, provider priority 65535
    host priority 65535, policy priority 103, Session id 10
backoff 90 90 90
delay relative 50
holddown 90
periodic 0
probe frequency 56
mode route control
mode monitor both
mode select-exit good
loss relative 10
jitter threshold 20
mos threshold 3.60 percent 30
unreachable relative 50
next-hop not set
forwarding interface not set
resolve delay priority 11 variance 20
resolve utilization priority 12 variance 20

```

Table 34: show pfr master policy dynamic Field Descriptions

Field	Description
Dynamic Policies:	Displays PfR dynamic policy configurations under this heading.
proxy id	IP address of the host application interface device that created the policy.

Field	Description
sequence no.	Number indicating the sequence in which the policy was run.
provider id	ID number of the application interface provider.
provider priority	The priority assigned to the application interface provider. If a priority has not been configured, the default priority is 65535.
host priority	The priority assigned to the host application interface device. If a priority has not been configured, the default priority is 65535.
policy priority	The priority assigned to the policy.
Session id	ID number of the application interface provider session.

Related Commands

Command	Description
api provider (PfR)	Registers an application interface provider with a PfR master controller and enters PfR master controller application interface provider configuration mode.
host-address (PfR)	Configures information about a host device used by an application interface provider to communicate with an PfR master controller.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr master prefix

show pfr master prefix

To display the status of monitored prefixes, use the **show pfr master prefix** command in privileged EXEC mode.

```
show pfr master prefix [{detail|inside [detail]|learned [{delay|inside|throughput}]prefix
[ {detail|policy|report|traceroute [{exit-id|border-address|current}] [now]} ]}]
```

Syntax Description	detail (Optional) Displays detailed prefix information about the specified prefix or all prefixes.
inside	(Optional) Displays detailed prefix information about inside prefixes.
learned	(Optional) Displays information about learned prefixes.
delay	(Optional) Displays information about learned prefixes based on delay.
throughput	(Optional) Displays information about learned prefixes based on throughput.
<i>prefix</i>	(Optional) Specifies the prefix, entered as an IP address and bit length mask.
policy	(Optional) Displays policy information for the specified prefix.
report	(Optional) Displays detailed performance information and information about report requests from Performance Routing (PfR) application interface providers for the specified prefix.
traceroute	(Optional) Displays path information from traceroute probes.
<i>exit-id</i>	(Optional) Displays path information based on the PfR assigned exit ID.
<i>border-address</i>	(Optional) Display path information sourced from the specified border router.
current	(Optional) Displays traceroute probe statistics from the most recent traceroute probe.
now	(Optional) Initiates a new traceroute probe and displays the statistics that are returned.

Command Modes	Privileged EXEC (#)
---------------	---------------------

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines	The show pfr master prefix command is entered on a master controller. This command is used to display the status of monitored prefixes. The output from this command includes information about the source border router, current exit interface, prefix delay, and egress and ingress interface bandwidth. The output can be filtered to display information for only a single prefix, learned prefixes, inside prefixes, and prefixes learned based on delay or throughput.
------------------	--

The **traceroute** keyword is used to display traceroute probe results. The output generated by this keyword provides hop by hop statistics to the probe target network. The output can be filtered to display information only for the exit ID (PfR assigns an ID number to each exit interface) or for the specified border router. The **current** keyword displays traceroute probe results from the most recent traceroute probe. The **now** keyword initiates a new traceroute probe and displays the results.

Examples

The following example shows the status of a monitored prefix:

```
Router# show pfr master prefix

OER Prefix Stats:
  Dly: Delay in ms
  EBw: Egress Bandwidth
  IBw: Ingress Bandwidth
Prefix      State     Curr BR   CurrI/F  Dly    EBw    IBw
-----
10.1.5.0/24 INPOLICY  10.1.1.2  Et1/0    19     1      1
```

Table 35: show pfr master prefix Field Descriptions

Field	Description
Prefix	IP address and prefix length.
State	Status of the prefix.
Curr BR	Border router from which these statistics were gathered.
Curr I/F	Current exit link interface on the border router.
Dly	Delay in milliseconds.
EBw	Egress bandwidth.
IBw	Ingress bandwidth.

The following output shows the detailed status of a monitored prefix:

```
Router# show pfr master prefix detail

Prefix: 10.1.1.0/26
  State: DEFAULT*          Time Remaining: @7
  Policy: Default
  Policy: Default
  Most recent data per exit
    Border           Interface        PasSDly  PasLDly  ActSDly  ActLDly
  *10.2.1.1         Et1/0            181      181      250      250
    10.2.1.2         Et2/0            0        0       351      351
    10.3.1.2         Et3/0            0        0       94       943
  Latest Active Stats on Current Exit:
    Type      Target      TPort  Attem  Comps    DSum    Min     Max     Dly
  echo     10.1.1.1      N      2      2      448    208    240     224
  echo     10.1.1.2      N      2      2      488    228    260     244
  echo     10.1.1.3      N      2      2      568    268    300     284
  Prefix performance history records
  Current index 2, S_avg interval(min) 5, L_avg interval(min) 60
  Age      Border           Interface        OOP/RteChg Reasons
  Pas: DSum  Samples  DAvg  PktLoss Unreach    Ebytes    Ibytes      Pkts    Flows
```

show pfr master prefix

```

Act: Dsum Attempts DAvg Comps Unreach
00:00:03 10.1.1.1 Et1/0
      0      0      0      0      0      0      0      0      0
1504     6    250      6      0

```

Table 36: show pfr master prefix detail Field Descriptions

Field	Description
Prefix	IP address and prefix length.
State	Status of the prefix.
Time Remaining	Time remaining in the current prefix learning cycle.
Policy	The state that the prefix is in. Possible values are Default, In-policy, Out-of-policy, Choose, and Holddown.
Most recent data per exit	Border router exit link statistics for the specified prefix. The asterisk (*) character indicates the exit that is being used.
Latest Active Stats on Current Exit	Active probe statistics. This field includes information about the probe type, target IP address, port number, and delay statistics.
Type	The type of active probe. Possible types are ICMP echo, TCP connect, or UDP echo. The example uses default ICMP echo probes (default TCP), so no port number is displayed.
Prefix performance history records	Displays border router historical statistics. These statistics are updated about once a minute and stored for 1 hour.

The following example shows prefix statistics from a traceroute probing:

```

Router# show pfr master prefix 10.1.5.0/24 traceroute
* - current exit, + - control more specific
Ex - Exit ID, Delay in msec
-----
Path for Prefix: 10.1.5.0/24          Target: 10.1.5.2
Exit ID: 2, Border: 10.1.1.3        External Interface: Et1/0
Status: DONE, How Recent: 00:00:08 minutes old
Hop Host           Time(ms) BGP
1   10.1.4.2       8      0
2   10.1.3.2       8     300
3   10.1.5.2      20      50
-----
Exit ID: 1, Border: 10.1.1.2        External Interface: Et1/0
Status: DONE, How Recent: 00:00:06 minutes old
Hop Host           Time(ms) BGP
1   0.0.0.0       3012      0
2   10.1.3.2       12     100
3   10.1.5.2       12      50
-----
```

Table 37: show pfr master prefix traceroute Field Descriptions

Field	Description
Path for Prefix	Specified IP address and prefix length.
Target	Traceroute probe target.
Exit ID	PfR assigned exit ID.
Status	Status of the traceroute probe.
How Recent	Time since last traceroute probe.
Hop	Hop number of the entry.
Host	IP address of the entry.
Time	Time, in milliseconds, for the entry.
BGP	BGP autonomous system number for the entry.

The following example shows prefix statistics including Jitter and MOS percentage values when the Jitter probe is configured for the 10.1.5.0 prefix:

```
Router# show pfr master prefix 10.1.5.0/24
```

OER Prefix Statistics:

Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
 P - Percentage below threshold, Jit - Jitter, MOS - Mean Opinion Score,
 Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
 E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
 U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
 Prefix State Time Curr BR CurrI/F Protocol
 PassSDly PasLDly PassSun PasLUn PasSLos PasLLos
 ActSDly ActLDly ActSUn ActLUn EBw IBw
 %ActSJit %ActPMOS

Prefix	State	Time	Curr	BR	CurrI/F	Protocol
10.1.1.0/24	DEFAULT*	@3	10.1.1.1		Et5/0	
	U	U	0	0	0	U
	6	6	400000	400000	17	0
			1.45	25		1

The table below describes the significant fields shown in the display that are different from the previous tables.

Table 38: show pfr master prefix (Jitter and MOS) Field Descriptions

Field	Description
Protocol	Protocol: U (UDP).
PasSDly	Delay, in milliseconds, in short-term statistics from passive probe monitoring. If no statistics are reported, it displays U for unknown.
PasLDly	Delay, in milliseconds, in long-term statistics from passive probe monitoring. If no statistics are reported, it displays U for unknown.

show pfr master prefix

Field	Description
PasSun	Number of passively monitored short-term unreachable packets in flows-per-million.
PasLUn	Number of passively monitored long-term unreachable packets in flows-per-million.
PasSLos	Number of passively monitored short-term lost packets in packets-per-million.
PasLLos	Number of passively monitored long-term lost packets in packets-per-million.
ActSDly	Number of actively monitored short-term delay packets.
ActLDly	Number of actively monitored long-term delay packets.
ActSUn	Number of actively monitored short-term unreachable packets in flows-per-million.
ActLUn	Number of actively monitored long-term unreachable packets in flows-per-million.
ActSJit	Number of actively monitored short-term jitter packets.
ActPMOS	Number of actively monitored MOS packets with a percentage below threshold.

The following example shows detailed prefix statistics when Jitter or MOS are configured as a priority:

```
Router# show pfr master prefix 10.1.1.0/24 detail

Prefix: 10.1.1.0/24
  State: DEFAULT*      Time Remaining: @9
  Policy: Default
  Most recent data per exit
    Border      Interface      PasSDly  PasLDly  ActSDly  ActLDly
  *10.1.1.1      Et5/0          0        0        6        6
  10.2.2.3      Et2/0          0        0        7        7
  10.1.1.2      Et0/0          0        0       14       14
  Most recent voice data per exit
    Border      Interface      ActSJit  ActPMOS
  *10.1.1.1      Et5/0        2.00      0
  10.2.2.3      Et2/0        2.01      20
  10.1.1.2      Et0/0        4.56      50
  Latest Active Stats on Current Exit:
    Type      Target      TPort  Attem  Comps      DSum      Min      Max      Dly
  udpJit    10.1.1.8     2000    2      2        8        4        4        4
  udpJit    10.1.1.7     3000    2      2       20        4       16       10
  udpJit    10.1.1.6     4000    2      2        8        4        4        4
  echo      10.1.1.4      N      2      0        0        0        0        0
  echo      10.1.1.3      N      2      0        0        0        0        0
  Latest Voice Stats on Current Exit:
    Type      Target      TPort      Codec  Attem  Comps      JitSum      MOS
  udpJit    10.1.1.8     2000  g711alaw    2      2      2.34      4.56
  udpJit    10.1.1.7     3000  g711ulaw    2      2      2.56      4.11
  udpJit    10.1.1.6     4000  g729a      2      2      1.54      3.57
  udpJit    10.1.1.5     4500   none      2      2      1.76      NA
  Prefix performance history records
  Current index 3, S_avg interval(min) 5, L_avg interval(min) 60
  Age      Border      Interface      OOP/RteChg Reasons
  Pas: DSum  Samples  DAvg  PktLoss  Unreach  Ebytes  Ibytes      Pkts      Flows
  Act: Dsum  Attempts  DAvg  Comps  Unreach  Jitter  LoMOSCnt  MOSCn
  00:00:07  10.1.1.1      Et5/0
                0        0        0        0        0      5920        0       148         1
```

36	10	6	6	4	2	1	1
00:01:07	10.1.1.1		Et5/0				
0	0	0	0	0	12000	12384	606
36	10	6	6	4	3	0	1
00:02:07	10.1.1.1		Et5/0				
0	0	0	0	0	409540	12040	867
36	10	6	6	4	15	1	1

Table 39: show pfr master prefix detail (Jitter or MOS Priority) Field Descriptions

Field	Description
Codec	Displays the codec value configured for MOS calculation. Codec values can be one of the following: g711alaw, g711ulaw, or g729a.
JitSum	Summary of jitter.
MOS	MOS value.
Jitter	Jitter value.
LoMOSCnt	MOS-low count.

The following example shows prefix statistics including information about application interface provider report requests for the 10.1.1.0 prefix:

```
Router# show pfr master prefix 10.1.1.0/24 report

Prefix Performance Report Request
  Created by: Provider 1001, Host 10.3.3.3, Session 9
  Last report sent 3 minutes ago, context 589855, frequency 4 min

Prefix Performance Report Request
  Created by: Provider 1001, Host 10.3.3.4, Session 10
  Last report sent 1 minutes ago, context 655372, frequency 3 min

OER Prefix Statistics:
  Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
  P - Percentage below threshold, Jit - Jitter (ms),
  MOS - Mean Opinion Score
  Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
  E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
  U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
  # - Prefix monitor mode is Special, & - Blackholed Prefix
  % - Force Next-Hop, ^ - Prefix is denied

Prefix          State      Time Curr BR      CurrI/F      Protocol
               PassDly  PasLDly  PassUn  PasLUn  PasSLos  PasLLos
               ActSDly  ActLDly  ActSUn  ActLUn   EBw       IBw
               ActSJit  ActPMOS  ActSLos  ActLLos
-----
10.1.1.0/24    INPOLICY      0 10.3.3.3      Et4/3      BGP
                N         N         N         N         N         N
                138        145        0         0         N         N
                N         N
```

show pfr master prefix

Table 40: show pfr master prefix report Field Descriptions

Field	Description
Provider	Application interface provider ID.
Host	IP address of a host device in the application interface provider network.
Session	Session number automatically allocated by PfR when an application interface provider initiates a session.
Last report sent	The number of minutes since a report was sent to the application interface provider.
ActSLos	Number of actively monitored short-term lost packets in packets-per-million.
ActLDly	Number of actively monitored long-term lost packets in packets-per-million.

PIRO provides the ability for PfR to search for a parent route--an exact matching route, or a less specific route--in any IP Routing Information Base (RIB). The following example shows that the protocol displayed for the prefix 10.1.0.0 is RIB-PBR, which means that the parent route for the traffic class exists in the RIB and policy-based routing is used to control the prefix.

```
Router# show pfr master prefix 10.1.0.0

OER Prefix Statistics:
  Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
  P - Percentage below threshold, Jit - Jitter (ms),
  MOS - Mean Opinion Score
  Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
  E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
  U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
  # - Prefix monitor mode is Special, & - Blackholed Prefix
  % - Force Next-Hop, ^ - Prefix is denied

Prefix          State      Time Curr BR          Curri/F          Protocol
                PassDly  PasLDly  PasSUn  PasLUn  PassLos  PasLLos
                ActSDly  ActLDly  ActSUn  ActLUn  EBw       IBw
                ActSJit  ActPMOS  ActSLos  ActLLos

-----
10.1.0.0/24      INPOLICY      0 10.11.1.3      Et1/0          RIB-PBR
                  129          130          0          0        214        473
                  U            U            0          0        33          3
                  N            N

-----
```

EIGRP route control provides the ability for PfR to search for a parent route--an exact matching route, or a less specific route--in the EIGRP routing table. In this example, the protocol displayed for the prefix 10.1.0.0 is EIGRP and this means that the parent route for the traffic class exists in the EIGRP routing table and OER is controlling the prefix.

```
Router# show pfr master prefix 10.1.0.0

OER Prefix Statistics:
  Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
  P - Percentage below threshold, Jit - Jitter (ms),
  MOS - Mean Opinion Score
  Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
  E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
  U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
  # - Prefix monitor mode is Special, & - Blackholed Prefix
  % - Force Next-Hop, ^ - Prefix is denied
```

Prefix	State	Time	Curr BR	CurrI/F		Protocol
	PasSDly	PasLDly	PasSUn	PasLUn	PasSLos	PasLLos
	ActSDly	ActLDly	ActSUn	ActLUn	EBw	IBw
	ActSJit	ActPMOS				
10.1.0.0/16	DEFAULT*	@69	10.1.1.1	Gi1/22		EIGRP
	U	U	0	0	0	0
	U	U	0	0	22	8
	N	N				

Related Commands	Command	Description
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
	set traceroute reporting (PfR)	Configures an PfR map to enable traceroute reporting.
	traceroute probe-delay (PfR)	Sets the time interval between traceroute probe cycles.

show pfr master statistics

show pfr master statistics

To display Performance Routing (PfR) master controller statistics, use the **show pfr master statistics** command in privileged EXEC mode.

show pfr master statistics [{active-probe|border|cc|exit|netflow|prefix|process|system|timers}]

Syntax Description	
active-probe	(Optional) Displays PfR active-probe statistics.
border	(Optional) Displays PfR border router statistics.
cc	(Optional) Displays PfR communication statistics.
exit	(Optional) Displays PfR exit statistics.
netflow	(Optional) Displays PfR NetFlow statistics.
prefix	(Optional) Displays PfR prefix statistics.
process	(Optional) Displays PfR process statistics.
system	(Optional) Displays PfR system statistics.
timers	(Optional) Displays PfR timer statistics.

Command Default If none of the optional keywords is entered, the output displays statistics for all the keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Release 3.3S	This command was introduced.
	15.2(1)T	This command was integrated into Cisco IOS Release 15.2(1)T.
	15.2(3)T	This command was modified. The output was changed to support the PfR BR Auto Neighbors feature.
	Cisco IOS XE Release 3.8S	With CSCty36217, the PfR BR Auto Neighbors feature was removed from all platforms.
	15.3(1)T	With CSCua59073, the PfR BR Auto Neighbors feature was removed from all platforms.

Usage Guidelines The **show pfr master statistics** command is entered on a PfR master controller. This command is used to display statistics from the PfR master controller related to the selected keyword. Use the keywords to reduce the amount of output; if no keywords are entered, statistics for all the keywords are displayed.

The PfR BR Auto Neighbors feature introduced dynamic tunnels between border routers and modified the command output. With CSCty36217 and CSCua59073, the PfR BR Auto Neighbors feature was removed from all platforms.

Examples

In the following example output, no Field Description tables are provided because most of the output fields are self-explanatory and output fields may be modified in response to future PfR features.

The following example shows traffic class statistics related to the PfR border routers:

```
Router# show pfr master statistics border
```

Border: 10.1.1.4

Traffic-classes learned via throughput	= 11687
Traffic-classes learned via delay	= 0
Inside traffic-classes learned via BGP	= 705

Border: 10.1.1.3

Traffic-classes learned via throughput	= 12028
Traffic-classes learned via delay	= 0
Inside traffic-classes learned via BGP	= 798

The following example shows statistics related to the communication between the PfR master controller and border routers:

```
Router# show pfr master statistics cc
```

Border: 10.1.1.4

Messages sent:

Route Start	= 6
Route Stop	= 0
Remove all prefixes	= 0
Passive monitor status	= 1
Top-talker start	= 716
Top-talker stop	= 0
BR keep-alive	= 7653
Keep-alive configuration	= 0
Async prefix spec	= 0
API prefix un-controlt	= 0
Proxy return status	= 0
Version control	= 1
Rsvp data	= 0
Unrecognized TLV	= 0
Partial learn list	= 0
Traffic-class learn list	= 0
Traffic-class top-talker start	= 0
One application signature	= 124
Delete one application	= 0
One application nbar id	= 0
Delete one nbar id	= 0
Monitor application	= 0
Enable nbar	= 0
Disable nbar	= 0
Monitor application reset	= 0
MC control traffic-class	= 3366
TLV-based probe	= 0
Interface command	= 2
Control traffic-class	= 0
Monitor traffic-class	= 65
Monitor traffic-class reset	= 1713
Trace-route command	= 0
Total messages sent	= 13647

Messages received:

show pfr master statistics

Return status received	= 3623
Control traffic-class	= 0
Application nbar id received	= 0
Netflow v9	= 3555
Top-talker statistics	= 1430
learn inside prefix statistics	= 0
Top-talker traffic-class statistics	= 0
MD5 authentication	= 17183
Passive monitoring status	= 0
Keep-alive received	= 5236
BR top-talker status	= 716
Unrecognized TLV	= 0
Create active probe result	= 0
Delete active probe result	= 0
Get active probe statistics	= 0
TLV interface command	= 2622
TLV probe statistics result	= 0
TLV trace-route command	= 0
Bogus active probe notify	= 0
Proxy create policy	= 0
Proxy create prefix	= 0
Proxy delete policy	= 0
Proxy delete prefix	= 0
Proxy get async prefix policy	= 0
Proxy free client resources	= 0
Version control	= 1
Total messages received	= 34366

Border: 10.1.1.3

Messages sent:

Route Start	= 6
Route Stop	= 0
Remove all prefixes	= 0
Passive monitor status	= 1
Top-talker start	= 716
Top-talker stop	= 0
BR keep-alive	= 7654
Keep-alive configuration	= 0
Async prefix spec	= 0
API prefix un-controlt	= 0
Proxy return status	= 0
Version control	= 1
Rsvp data	= 0
Unrecognized TLV	= 0
Partial learn list	= 0
Traffic-class learn list	= 0
Traffic-class top-talker start	= 0
One application signature	= 124
Delete one application	= 0
One application nbar id	= 0
Delete one nbar id	= 0
Monitor application	= 0
Enable nbar	= 0
Disable nbar	= 0
Monitor application reset	= 0
MC control traffic-class	= 3366
TLV-based probe	= 0
Interface command	= 2
Control traffic-class	= 0
Monitor traffic-class	= 65
Monitor traffic-class reset	= 1713

Trace-route command	= 0
Total messages sent	= 13648

Messages received:

Return status received	= 3623
Control traffic-class	= 0
Application nbar id received	= 0
Netflow v9	= 3554
Top-talker statistics	= 1430
learn inside prefix statistics	= 0
Top-talker traffic-class statistics	= 0
MD5 authentication	= 17183
Passive monitoring status	= 0
Keep-alive received	= 5237
BR top-talker status	= 716
Unrecognized TLV	= 0
Create active probe result	= 0
Delete active probe result	= 0
Get active probe statistics	= 0
TLV interface command	= 2622
TLV probe statistics result	= 0
TLV trace-route command	= 0
Bogus active probe notify	= 0
Proxy create policy	= 0
Proxy create prefix	= 0
Proxy delete policy	= 0
Proxy delete prefix	= 0
Proxy get async prefix policy	= 0
Proxy free client resources	= 0
Version control	= 1
Total messages received	= 34366

The following example shows statistics related to the PfR exits by border router:

```
Router# show pfr master statistics exit
```

Exit: 4 - BR: 10.1.1.4 - Interface: Ethernet0/0:	
Traffic-classes in-policy	= 54
Traffic-classes out-of-policy	= 0
Traffic-classes controlled	= 60
Traffic-classes not controlled	= 5
Egress BW from traffic-classes controlled	= 0
Egress BW from traffic-classes not controlled	= 0
Ingress BW from traffic-classes controlled	= 0
Ingress BW from traffic-classes not controlled	= 0
Total Egress BW	= 0
Total Ingress BW	= 0
Total Unreachables (flows per million)	= 76
Total active-probe failures	= 0

Exit: 3 - BR: 10.1.1.3 - Interface: Ethernet0/0:	
Traffic-classes in-policy	= 54
Traffic-classes out-of-policy	= 0
Traffic-classes controlled	= 60
Traffic-classes not controlled	= 5
Egress BW from traffic-classes controlled	= 0
Egress BW from traffic-classes not controlled	= 0
Ingress BW from traffic-classes controlled	= 0
Ingress BW from traffic-classes not controlled	= 0
Total Egress BW	= 0
Total Ingress BW	= 0
Total Unreachables (flows per million)	= 80

show pfr master statistics

```
Total active-probe failures = 0
```

The following example shows statistics related to the PfR NetFlow and IP Service Level Agreements (SLA) activities:

```
Router# show pfr master statistics netflow
```

```
Cumulative egress netflow updates = 75794
Cumulative ingress netflow updates = 103516

Total jitter probes running = 0
Total udp probes running = 0
Total echo probes running = 320
Total assigned probes = 0
Total un-assigned probes = 320
Total running probes = 0
Total query timers running = 0
```

The following example shows PfR prefix statistics:

```
Router# show pfr master statistics prefix
```

```
Total uncontrol events = 0
Total route changes = 3246
Total route withdrawn events = 0
Total rib mismatch events = 0
Total probe all failure events = 0
```

The following example shows PfR master controller process statistics:

```
Router# show pfr master statistics process
```

```
Message Queue Depth: 0
Cumulative messages received: 3622
Cumulative messages sent: 58232
```

The following example shows PfR system statistics:

```
Router# show pfr master statistics system
```

```
Active Timers: 14
Total Traffic Classes = 65, Prefixes = 65, Appls = 0
TC state:
DEFAULT = 0, HOLDDOWN = 11, INPOLICY = 54, OOP = 0, CHOOSE = 0,
Inside = 1, Probe all = 0, Non-op = 0, Denied = 0
Controlled 60, Uncontrolled 5, Allocated 65, Freed 0, No memory 0
Errors:
Invalid state = 0, Ctrl timeout = 0, Ctrl rej = 0, No ctx = 7616,
Martians = 0
Total Policies = 0
Total Active Probe Targets = 325
Total Active Probes Running = 0
Cumulative Route Changes:
Total : 3246
Delay : 0
Loss : 0
Jitter : 0
MOS : 0
Range : 0
Cost : 0
Util : 0
Cumulative Out-of-Policy Events:
```

```
Total : 0
Delay : 0
Loss  : 0
Jitter: 0
MOS   : 0
Range : 0
Cost   : 0
Util   :
```

The following example shows PfR timer statistics:

```
Router# show pfr master statistics timers
Total traffic-class timers = 3268
Total active-probe timers = 0
```

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

show pfr master target-discovery

show pfr master target-discovery

To display information about Performance Routing (PfR) target-discovery, use the **show pfr master target-discovery** command in privileged EXEC mode.

show pfr master target-discovery [brief]

Syntax Description	brief (Optional) Displays minimal information.
---------------------------	---

Command Modes	Privileged EXEC (#)
----------------------	---------------------

Command History	Release	Modification
	Cisco IOS XE Release 3.5S	This command was introduced.
	15.2(3)T	This command was integrated into Cisco IOS Release 15.2(3)T.

Usage Guidelines	The show pfr master target-discovery command is entered on a master controller (MC). The output of this command displays information about the target IP SLA responder IP addresses and inside prefixes at the local and remote MC peer sites when MC peering is configured and PfR target-discovery is enabled in static or dynamic mode.
-------------------------	---

Examples	The following is sample output from the show pfr master target-discovery command.
-----------------	--

```
Router# show pfr master target-discovery

PfR Target-Discovery Services
Mode: Static Domain: 59501
Responder list: tgt Inside-prefixes list: ipfx
SvcRtg: client-handle: 3 sub-handle: 2 pub-seq: 1

PfR Target-Discovery Database (local)

Local-ID: 10.11.11.1      Desc: Router-hub
Target-list: 10.101.1.2, 10.101.1.1
Prefix-list: 10.101.2.0/24, 10.101.1.0/24

PfR Target-Discovery Database (remote)

MC-peer: 192.168.1.1      Desc: Router-spoke2
Target-list: 10.121.1.2, 10.121.1.1
Prefix-list: 10.121.2.0/26, 10.121.1.0/24

MC-peer: 172.16.1.1      Desc: Router-spoke1
Target-list: 10.111.1.3, 10.111.1.2, 10.111.1.1
Prefix-list: 10.111.3.1/32, 10.111.2.0/26, 10.111.1.0/24
```

Table 41: show pfr master target-discovery Field Descriptions

Field	Description
Mode	Mode of MC peering. The mode is either “Static” or “Dynamic.”
Domain	Service Advertisement Framework (SAF) domain ID.
Responder list	Name of the prefix list that contains the target responder prefixes.
Inside-prefixes list	Name of the prefix list that contains the inside prefixes.
SvcRtg	Service Routing information.
Local-ID	IP address of the local MC loopback interface used to peer with other MCs.
Desc	Text description of the MC.
Target-list	Target prefixes configured or discovered for the IP SLA responders to be enabled.
Prefix-list	Prefixes configured or discovered for the active probes.

The following is sample output from the **show pfr master target-discovery brief** command:

```
Router# show pfr master target-discovery brief

PfR Target-Discovery Services
Mode: Static Domain: 59501
Responder list: tgt Inside-prefixes list: ipfx
SvcRtg: client-handle: 3 sub-handle: 2 pub-seq: 1

PfR Target-Discovery Database (local)

Local-ID: 10.11.11.1
```

Related Commands

Command	Description
pfr master	Enables a PfR process, configures a router as a PfR master controller, and enters PfR master controller configuration mode.

show pfr master traffic-class

show pfr master traffic-class

To display information about traffic classes that are monitored and controlled by a Performance Routing (PfR) master controller, use the **show pfr master traffic-class** command in privileged EXEC mode.

```
show pfr master traffic-class [{access-list access-list-name}|application application-name  
[prefix]|inside|learned [{delay|inside|list list-name|throughput}]|prefix prefix|prefix-list  
prefix-list-name|rsvp}]] [[active] [passive] [status]] [detail]
```

Additional Filter Keywords

```
show pfr master traffic-class [{policy policy-seq-number|rc-protocol}|state {hold|in|out|uncontrolled}]]  
[detail]
```

Syntax Description	access-list	(Optional) Displays information about traffic classes defined by an access list.
	<i>access-list-name</i>	(Optional) Name of an access list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.
	application	(Optional) Displays information about application traffic classes.
	<i>application-name</i>	(Optional) Name of a predefined static application using fixed ports. See the "Usage Guidelines" section for a table of static applications.
	prefix	(Optional) An IP address and bit-length mask representing a prefix to be displayed.
	inside	(Optional) Displays information about inside traffic classes.
	learned	(Optional) Displays information about learned traffic classes.
	delay	(Optional) Displays information about learned traffic classes defined using delay.
	list	(Optional) Displays information about learned traffic classes defined in a PfR learn list.
	<i>list-name</i>	(Optional) Name of a PfR learn list.
	throughput	(Optional) Displays information about learned traffic classes defined using throughput.
	prefix	(Optional) Displays information about traffic classes defined by a specified destination prefix.
	<i>prefix</i>	(Optional) Destination prefix.
	prefix-list	(Optional) Displays information about traffic classes defined by a prefix list.
	<i>prefix-list-name</i>	(Optional) Name of a prefix list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.
	rsvp	(Optional) Displays information about learned traffic classes defined using Resource Reservation Protocol (RSVP).

active	(Optional) Displays active performance monitoring information only.
passive	(Optional) Displays passive performance monitoring information only.
status	(Optional) Displays status information only.
detail	(Optional) Displays detailed information.
policy	(Optional) Displays information about traffic classes controlled using a PfR policy.
<i>policy-seq-number</i>	(Optional) Policy sequence number.
<i>rc-protocol</i>	(Optional) Specify one of the following route control protocols: bgp , cce eigrp , pbr , piro , or static , to display information about traffic classes controlled using the specified protocol.
state	(Optional) Displays information about traffic classes in one of the specified states.
hold	(Optional) Displays information about traffic classe in a holddown state.
in	(Optional) Displays information about traffic classe in an in-policy state.
out	(Optional) Displays information about traffic classe in an out-of-policy (OOP) state.
uncontrolled	(Optional) Displays information about traffic classe in an uncontrolled state.

Command Modes

Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.3S	This command was integrated into Cisco IOS XE Release 3.1S. New keywords were added to filter the display.
	Cisco IOS XE 3.4S	This command was modified. The rsvp keyword was added.
	15.2(1)T	This command was modified. The rsvp keyword was added.

Usage Guidelines

The **show pfr master traffic-class** command is entered on an PfR master controller. This command is used to display information about traffic classes that are configured for monitoring and optimization. The **traffic-class** and **match traffic-class** commands simplify the learning of traffic classes. Four types of traffic classes can be automatically learned using a **traffic-class** command in a learn list, or manually configured using a **match traffic-class** command in a PfR map:

- Traffic classes based on destination prefixes.
- Traffic classes representing custom application definitions using access lists.
- Traffic classes based on a static application mapping name with an optional prefix list filter to define destination prefixes.

show pfr master traffic-class

- Traffic classes based on an NBAR-identified application mapping name with an optional prefix list filter to define destination prefixes.

When using the appropriate keywords, if none of the **active**, **passive**, or **status** keywords is specified, then the output will display the active, passive, and status information for the traffic classes. To restrict the amount of output, you can specify any of the **active**, **passive**, or **status** keywords, but the order of the keywords is important. If you specify the **active** keyword first then the **passive** or **status** keywords can be entered, if you specify the **passive** keyword first, then only the **status** keyword can be entered. The **status** keyword can be entered only by itself; the **active** and **passive** keywords are not accepted if they follow the **status** keyword. The optional **detail** keyword will display detailed output for the traffic classes.



Note To display information about traffic classes identified using NBAR, use the **show pfr master traffic-class application nbar** command.



Note To display information about the performance of traffic classes, use the **show pfr master traffic-class performance** command.

The table below displays the keywords that represent the application that can be configured with the **show pfr master traffic-class application** *application-name* command. Replace the *application-name* argument with the appropriate keyword from the table.

Table 42: Static Application List Keywords

Keyword	Protocol	Port
cuseeme	TCP/UDP	7648 7649 7648 7649 24032
dhcp (Client)	UDP/TCP	68
dhcp (Server)	UDP/TCP	67
dns	UDP/TCP	53
finger	TCP	79
ftp	TCP	20 21
gopher	TCP/UDP	70
http	TCP/UDP	80
https	TCP	443
imap	TCP/UDP	143 220
irc	TCP/UDP	194
kerberos	TCP/UDP	88 749
l2tp	UDP	1701

Keyword	Protocol	Port
ldap	TCP/UDP	389
mssql	TCP	1443
nfs	TCP/UDP	2049
nntp	TCP/UDP	119
notes	TCP/UDP	1352
ntp	TCP/UDP	123
pcany	UDP TCP	22 5632 65301 5631
pop3	TCP/UDP	110
pptp	TCP	17233
simap	TCP/UDP	585 993 (Preferred)
sirc	TCP/UDP	994
sldap	TCP/UDP	636
smtp	TCP	25
snntp	TCP/UDP	563
spop3	TCP/UDP	123
ssh	TCP	22
telnet	TCP	23

Examples

The following example shows information about traffic classes destined for the 10.1.1.0/24 prefix:

```
Router# show pfr master traffic-class

OER Prefix Statistics:
  Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
  P - Percentage below threshold, Jit - Jitter (ms),
  MOS - Mean Opinion Score
  Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
  E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
  U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
  # - Prefix monitor mode is Special, & - Blackholed Prefix
  % - Force Next-Hop, ^ - Prefix is denied

      DstPrefix          Appl_ID Dscp Prot      SrcPort      DstPort SrcPrefix
      Flags             State   Time       CurrBR  Curri/F Protocol
      PassDly  PasLDly  PassUn  PasLUn  PasSLos  PasLLos    EBw     IBw
      ActSDly  ActLDly  ActSUn  ActLUn  ActSJit  ActPMOS  ActSLos  ActLLos
-----
      10.1.1.0/24          N defa   N           N           N N
                           # OOPOLICY        32          10.11.1.3   Et1/0      BGP
```

show pfr master traffic-class

N 130	N 134	N 0	N 0	N N	N N	N IBwN
----------	----------	--------	--------	--------	--------	-----------

The following example of the **show pfr master traffic-class** command with the **inside** keyword shows information about inside traffic classes:

```
Router# show pfr master traffic-class inside

OER Prefix Statistics:
Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
P - Percentage below threshold, Jit - Jitter (ms),
MOS - Mean Opinion Score
Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
# - Prefix monitor mode is Special, & - Blackholed Prefix
% - Force Next-Hop, ^ - Prefix is denied

DstPrefix (inside) Appl_ID Dscp Prot      SrcPort      DstPort SrcPrefix
                  Flags        State       Time          CurrBR Curri/F Protocol
                  PasSDly   PasLdly   PassSun  PasLUn  PassLos  PasLlos   EBw     IBw
                  ActSDly   ActLdly   ActSUn   ActLUn  ActSJit  ActPMos  ActSLos  ActLLos
-----
10.0.0.0/16           N    N    N      N      N    N    N
                      DEFAULT*      0      U      U
                                         U
                                         U
```

Table 43: show pfr master traffic-class Field Descriptions

Field	Description
DstPrefix	Destination IP address and prefix length for the traffic class.
Appl_ID	Application ID.
Dscp	Differentiated services code point (DSCP) value.
Prot	Protocol.
SrcPort	Source port number for the traffic class.
DstPort	Destination port number for the traffic class.
SrcPrefix	IP address of the traffic class source.
Flags	Special characteristics for the traffic class.
State	Current state of the traffic class.
Time	Time, in seconds, between monitoring messages.
Curr BR	IP address of the border router through which this traffic class is being currently routed.
Curri/F	Interface of the border router through which this traffic class is being currently routed.
Protocol	Protocol. A value of U means unknown; there is no measurement data.
PasSDly	Passive monitoring short-term delay, in milliseconds.
PasLDly	Passive monitoring long-term delay, in milliseconds.

Field	Description
PasSUn	Number of passively monitored short-term unreachable packets, in flows per million.
PasLUn	Number of passively monitored long-term unreachable packets, in flows per million.
PasSLos	Number of passively monitored short-term lost packets, in packets per million.
PasLLos	Number of passively monitored long-term lost packets, in packets per million.
EBw	Egress bandwidth.
IBw	Ingress bandwidth.
ActSDly	Active monitoring short-term delay, in milliseconds.
ActLDly	Active monitoring long-term delay, in milliseconds.
ActSUn	Number of actively monitored short-term unreachable packets, in flows per million.
ActLUn	Number of actively monitored long-term unreachable packets, in flows per million.
ActSJit	Number of actively monitored short-term jitter packets.
ActPMOS	Number of actively monitored Mean Opinion Score (MOS) packets with a percentage below threshold.
ActSLos	Number of actively monitored short-term packets that have been lost.
ActLLos	Number of actively monitored long-term packets that have been lost.

The following example of the **show pfr master traffic-class state hold** command with the **state hold** keywords shows information about traffic classes that are currently in a holddown state:

```
Router# show pfr master traffic-class state hold

OER Prefix Statistics:
  Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
  P - Percentage below threshold, Jit - Jitter (ms),
  MOS - Mean Opinion Score
  Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
  E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
  U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
  # - Prefix monitor mode is Special, & - Blackholed Prefix
  % - Force Next-Hop, ^ - Prefix is denied

      DstPrefix          Appl_ID Dscp Prot      SrcPort      DstPort SrcPrefix
      Flags            State     Time           CurrBR Curri/F Protocol
      PassDly  PasLDly  PassSUn  PasLUn  PasSLos  PasLLos   EBw      IBw
      ActSDly  ActLDly  ActSUn  ActLUn  ActSJit  ActPMOS  ActSLos  ActLLos
-----
10.2.8.0/24          N       N       N           N           N       N N
                      HOLDDOWN        89          10.1.1.1 Et0/0          BGP
                     14       14    43478    43478          0       0       3          1
                     N       N       N           N           N       N N
10.3.8.0/24          N       N       N           N           N       N N
                      HOLDDOWN        165         10.1.1.3 Et0/0          BGP
                     15       15    17857    17857          0       0       3          1
```

show pfr master traffic-class

	N	N	N	N	N	N	N	N
10.4.8.0/24		N N N	HOLDDOWN 253		N 10.1.1.1 Et0/0	N N		
16	16	250000	250000	0	0	2		BGP 1
N	N	N	N	N	N	N		
10.3.9.0/24		N N N	HOLDDOWN 15		N 10.1.1.2 Et0/0	N N		
14	14	29702	29702	2183	2183	3		BGP 1
N	N	N	N	N	N	N		

The following example of the **show pfr master traffic-class** command with the **rsvp** keyword shows information about RSVP traffic classes:

```
Router# show pfr master traffic-class rsvp
```

OER Prefix Statistics:

Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
P - Percentage below threshold, Jit - Jitter (ms),
MOS - Mean Opinion Score
Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
- Prefix monitor mode is Special, & - Blackholed Prefix
% - Force Next-Hop, ^ - Prefix is denied

DstPrefix	Appl_ID	Dscp	Prot	SrcPort	DstPort	SrcPrefix
Flags				Time	CurrBR	CurrI/F Protocol
PassDly	PasLDly	PasSUn	PasLUn	PasSLos	PasLLos	EBw
ActSDly	ActLDly	ActSUn	ActLUn	ActSJit	ActPMOS	ActSLos
<hr/>						
10.1.0.10/32	N N	tcp		75-75	75-75	10.1.0.12/32
		INPOLICY		@0	10.1.0.24	Tu24
U	U	0	0	0	0	0
1	1	0	0	N	N	N

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
show pfr master traffic-class application nbar	Displays information about application traffic classes that are identified using NBAR and are monitored and controlled by a PfR master controller.
show pfr master traffic-class performance	Displays performance information about traffic classes that are monitored and controlled by a PfR master controller.

show pfr master traffic-class application nbar

To display information about application traffic classes that are identified using network-based application recognition (NBAR) and are monitored and controlled by a Performance Routing (PfR) master controller, use the **show pfr master traffic-class application nbar** command in privileged EXEC mode.

```
show pfr master traffic-class application nbar nbar-app-name [prefix] [{[[active [passive [status]]][passive [status]]]status}|detail];
```

Syntax Description	<i>nbar-app-name</i>	Name of a dynamic application identified using NBAR. See the “Usage Guidelines” section for more details.
	<i>prefix</i>	(Optional) An IP address and bit length mask representing a prefix.
	active	(Optional) Displays active performance monitoring information only.
	passive	(Optional) Displays passive performance monitoring information only.
	status	(Optional) Displays status information only.
	detail	(Optional) Displays detailed information.

Command Modes	Privileged EXEC (#)
---------------	---------------------

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	Cisco IOS XE Release 3.7S	This command was integrated into Cisco IOS XE Release 3.7S.

Usage Guidelines	The show pfr master traffic-class application nbar command is entered on a PfR master controller. This command is used to display information about application traffic classes that are identified using NBAR. To display information about traffic classes defined using static application mapping, use the show pfr master traffic-class command.
------------------	---

The optional **detail** keyword will display detailed output for the NBAR application traffic classes. If the **detail** keyword is not specified, and if none of the **active**, **passive**, or **status** keywords is specified, then the output will display the active, passive, and status information for the traffic classes. To restrict the amount of output, specify one, or more, of the **active**, **passive**, or **status** keywords. The keywords must be specified in the order shown in the syntax.

NBAR can identify applications based on the following three types of protocols:

- Non-UDP and non-TCP IP protocols—for example, generic routing encapsulation (GRE) and Internet Control Message Protocol (ICMP).
- TCP and UDP protocols that use statically assigned port numbers—for example, CU-SeeMe desktop video conference (CU-SeeMe-Server) and Post Office Protocol over Transport Layer Security (TLS) and Secure Sockets Layer (SSL) server (SPOP3-Server).

show pfr master traffic-class application nbar

- TCP and UDP protocols that dynamically assign port numbers and require stateful inspection—For example, Real-Time Transport Protocol audio streaming (RTP-audio) and BitTorrent file transfer traffic (BitTorrent).

The list of applications identified using NBAR and available for profiling of PfR traffic classes is constantly evolving. For lists of many of the NBAR applications defined using static or dynamically assigned ports, see the “Performance Routing with NBAR/CCE Application Recognition” module.

For more details about NBAR, see the “Classifying Network Traffic Using NBAR” section of the *QoS: NBAR Configuration Guide*.

If the *prefix* argument is specified, only the PfR-controlled traffic class that matches the application specified by the *nbar-app-name* argument and the destination prefix specified by the *prefix* argument are displayed. If the *prefix* argument is not specified, all PfR-controlled traffic classes that match the application specified by the *nbar-app-name* argument, regardless of the destination prefix, are displayed.

Examples

The following example shows information about traffic classes consisting of Real-time Transport Protocol streaming audio (RTP-audio) traffic:

```
Router# show pfr master traffic-class application nbar rtp-audio

OER Prefix Statistics:
Pas - Passive, Act - Active, S - Short term, L - Long term, Dly - Delay (ms),
P - Percentage below threshold, Jit - Jitter (ms),
MOS - Mean Opinion Score
Los - Packet Loss (packets-per-million), Un - Unreachable (flows-per-million),
E - Egress, I - Ingress, Bw - Bandwidth (kbps), N - Not applicable
U - unknown, * - uncontrolled, + - control more specific, @ - active probe all
# - Prefix monitor mode is Special, & - Blackholed Prefix
% - Force Next-Hop, ^ - Prefix is denied
DstPrefix          Appl_ID Dscp Prot      SrcPort      DstPort SrcPrefix
                  Flags        State       Time           CurrBR CurrI/F Protocol
                  PassDly    PasLDly   PassSun   PasLUn     EBw      IBw
                  ActSDly   ActLDly   ActSUn   ActLUn   ActSJit  ActPMOS
-----
10.1.1.0/28        RTP-Audio defa    N          N          N 0.0.0.0/0
                  DEFAULT*   461        10.1.1.2   Et1/0      U
                  U          U          0          0          1          2
                  150        130        0          0          15         0
10.1.1.16/28       RTP-Audio defa   N          N          N 0.0.0.0/0
                  DEFAULT*   461        10.1.1.2   Et1/0      U
                  U          U          0          0          1          2
                  250        200        0          0          30         0
```

Table 44: show pfr master traffic-class application nbar Field Descriptions

Field	Description
DstPrefix	Destination IP address and prefix length for the traffic class.
Appl_ID	Application ID. The application can be a static application or an NBAR identified application.
Dscp	Differentiated services code point (DSCP) value.
Prot	Protocol.
SrcPort	Source port number for the traffic class.

Field	Description
DstPort	Destination port number for the traffic class.
SrcPrefix	IP address of the traffic class source.
Flags	Special characteristics for the traffic class; see the items listed under the “OER Prefix Statistics” section in the output for details.
State	Current state of the traffic class.
Time	Time, in seconds, between monitoring messages.
Curr BR	IP address of the border router through which this traffic class is being currently routed.
CurrI/F	Interface of the border router through which this traffic class is being currently routed.
Protocol	Protocol. If the traffic class is being controlled by PfR this field displays one of the following: BGP, STATIC, or CCE. A value of U means unknown; PfR is not controlling the traffic class.
PasSDly	Passive monitoring short-term delay, in milliseconds.
PasLDly	Passive monitoring long-term delay, in milliseconds.
PasSUn	Number of passively monitored short-term unreachable packets, in flows per million.
PasLUn	Number of passively monitored long-term unreachable packets, in flows per million.
EBw	Egress bandwidth.
IBw	Ingress bandwidth.
ActSDly	Active monitoring short-term delay, in milliseconds.
ActLDly	Active monitoring long-term delay, in milliseconds.
ActSUn	Number of actively monitored short-term unreachable packets, in flows per million.
ActLUn	Number of actively monitored long-term unreachable packets, in flows per million.
ActSJit	Number of actively monitored short-term jitter packets.
ActPMOS	Number of actively monitored Mean Opinion Score (MOS) packets with a percentage below threshold.

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
show pfr master traffic-class	Displays information about traffic classes that are monitored and controlled by an PfR master controller.

show pfr master traffic-class performance

show pfr master traffic-class performance

To display performance information about traffic classes that are monitored and controlled by a Performance Routing (PfR) master controller, use the **show pfr master traffic-class performance** command in privileged EXEC mode.

```
show pfr master traffic-class performance [{application application-name [prefix]|history
[ {active|passive} ]|inside|learn [{delay|inside|list list-name|rsvp|throughput}]|policy policy-seq-number
rc-protocol|state {hold|in|out|uncontrolled}|static} ] [detail]
```

Syntax for the IP Keyword

```
show pfr master traffic-class performance ip {source-ip-address mask|any} {destination-ip-address
mask|any} [{application application-name [prefix]|dscp dscp-value|inside|learn [{delay|inside|list
list-name |rsvp|throughput}]|policy policy-seq-numberrc-protocol|state {hold|in|out|uncontrolled} } ]
[detail]
```

Syntax for TCP and UDP Keywords

```
show pfr master traffic-class performance {tcp|udp} {source-ip-address mask|any}
{destination-ip-address mask|any|range min-src-port-num max-src-port-num [min-dest-port-num
max-dest-port-num]} [{application application-name [prefix]|dscp dscp-value|inside|learn
[{delay|inside|list list-name |rsvp|throughput}]|policy policy-seq-numberrc-protocol|state
{hold|in|out|uncontrolled} }] [detail]
```

Syntax Description	application	(Optional) Displays information about application traffic classes.
	<i>application-name</i>	(Optional) Name of a predefined static application using fixed ports. See the "Usage Guidelines" section for a table of static applications.
	<i>prefix</i>	(Optional) An IP address and bit-length mask representing a prefix to be displayed.
	history	(Optional) Displays the history of performance information.
	active	(Optional) Displays active performance monitoring information only.
	passive	(Optional) Displays passive performance monitoring information only.
	inside	(Optional) Displays information about inside traffic classes.
	learn	(Optional) Displays information about learned traffic classes.
	delay	(Optional) Displays information about learned traffic classes defined using delay.
	list	(Optional) Displays information about learned traffic classes defined in a PfR learn list.
	<i>list-name</i>	(Optional) Name of a PfR learn list.
	rsvp	(Optional) Displays information about learned traffic classes defined using Resource Reservation Protocol (RSVP).
	throughput	(Optional) Displays information about learned traffic classes defined using throughput.

detail	(Optional) Displays detailed information.
policy	(Optional) Displays information about traffic classes controlled using a PfR policy.
<i>policy-seq-number</i>	(Optional) Policy sequence number.
rc-protocol	(Optional) Specify one of the following route control protocols: bgp , cce eigrp , pbr , piro , or static , to display information about traffic-classes controlled using the specified protocol.
state	(Optional) Displays information about traffic classes in one of the specified states.
hold	(Optional) Displays information about traffic classes in a holddown state.
in	(Optional) Displays information about traffic classes in an in-policy state.
out	(Optional) Displays information about traffic classes in an out-of-policy (OOP) state.
uncontrolled	(Optional) Displays information about traffic classes in an uncontrolled state.
static	(Optional) Displays information about traffic classes controlled using static routes.
detail	(Optional) Displays detailed performance information.
ip	Displays information about traffic classes defined using a specific IP address.
<i>source-ip-address</i>	Source IP address.
mask	Mask for IP address.
any	Displays information about traffic classes defined using any IP address.
<i>destination-ip-address</i>	Destination IP address.
dscp	(Optional) Displays information about traffic classes defined using a specified DSCP value.
<i>dscp-value</i>	(Optional) DSCP value.
tcp	Displays information about traffic classes defined using TCP.
udp	Displays information about traffic classes defined using UDP.
range	(Optional) Displays information about traffic classes that match the specified port number.
<i>min-src-port-num</i>	Port number in the range from 0 to 65535. Defines the minimum source port number for a range.
<i>max-src-port-num</i>	Port number in the range from 0 to 65535. Defines the maximum source port number for a range.
<i>min-dest-port-num</i>	(Optional) Port number in the range from 0 to 65535. Defines the minimum destination port number for a range.

show pfr master traffic-class performance

<i>max-dest-port-num</i>	(Optional) Port number in the range from 0 to 65535. Defines the maximum destination port number for a range.
--------------------------	---

Command Modes Privileged EXEC (#)

Command History	Release	Modification
Cisco IOS XE Release 3.3S	This command was introduced.	
Cisco IOS XE 3.4S	This command was modified. The rsvp keyword was added.	
15.2(1)T	This command was integrated into Cisco IOS Release 15.2(1)T.	

Usage Guidelines The **show pfr master traffic-class performance** command is entered on an PfR master controller. This command is used to display performance information about traffic classes that are configured for monitoring and optimization. The syntax is shown in three forms to simplify the listing of the filter keywords used to reduce the amount of output generated for this command. The filter keywords and arguments after the **ip** and the **tcp** or **udp** keywords are separated because of unique keywords or arguments and to make the syntax easier to view.



Note Use the **show pfr master traffic-class** command to display information about traffic classes that are not performance related.

Examples

The following partial example shows the main sections of performance output. This example assumes that both active and passive monitoring modes are configured on the master controller.

```
Router# show pfr master traffic-class performance

Traffic-class: (inside)
destination prefix: 10.2.2.0/24 source prefix: 0.0.0.0/0
dscp: cs5 protocol: tcp
source port: 200-400 destination port: 500-6000
application name: telnet

General:
  Control State          : Controlled using PIRO
  Traffic-class status   : Out of POLICY due to Delay overlapping
  Current Exit           : BR 10.1.1.1 interface Ethernet1/0, tie breaker was
Jitter
  On Current Exit since : 0d 00:00:40
  Time Remaining in Current State : 2 seconds
  Last Uncontrol Reason   : Not enough active probing data (Meaningful uncontrol
string)
  Time Since Last Uncontrol : 0d 00:00:50
  Traffic-class Type       : Learned and Configured
  IMPROPER CONFIG          : jitter resolver used w/o jitter probe configured.

Last Out of Policy Event:
  Exit                  : BR 10.1.1.2 interface Ethernet1/0
  Reason                : Delay
  Time Since Out of Policy Event : 00:01:29
  Delay Performance      : 75 msec          50% ( short 75 msec / Long 50
msec)
```

```

Delay Threshold : 60 msec      25%
Average Passive Performance Current Exit: (Ave. for last 5 minutes)
  Delay : 30 % (130/100)      Threshold : 20 % (Short Term/Long Term)
  Loss  : 10000 ppm           Threshold : 20000 ppm
  Unreachable : 20000 fpm     Threshold : 50000 fpm
  Egress BW : 15 kbps
  Ingress BW : 10 kbps
  Time since Last Update : 00:00:30

Average Active Performance Current Exit: (Ave. for last 5 minutes)
  Jitter : 50 msec            Threshold : 40 msec
  MOS   : 40 % below 3.75    Threshold : 30 % below 3.75
  Delay : 30 % (130/100)      Threshold : 20 %
  Loss  : 10000 ppm           Threshold : 20000 ppm
  Unreachable : 20000 fpm     Threshold : 50000 fpm
  Time since Last Update : 00:00:30

Latest Active Performance All Exits:
BR          Interface Delay Jitter Loss Unreachable PctMOS Attempts Packets Age
                  / Probe
-----
10.200.200.201 Et0/0    100    30    0        0      0       1     100 00:00:56
10.200.200.201 Et1/0    100    20    0        0      0       1     100 00:00:56
10.200.200.202 Et2/0    100    10    0        0      0       1     100 00:00:56
10.200.200.202 Et3/0    100    0     0        0      0       1     100 00:00:60

Active Probing:
State      : Probing ALL Exits
Current Probes :
  Target    Type    Port   DSCP  BR          Interface
  -----  -----  -----  -----  -----
  10.100.100.100 jitter  65000 cs5  10.200.200.201  Et0/0
  10.100.100.100 jitter  65000 cs5  10.200.200.201  Et1/0
  10.100.100.101 jitter  65000 cs5  10.200.200.201  Et0/0
  10.100.100.101 jitter  65000 cs5  10.200.200.201  Et1/0

Last Resolver Decision:
BR          Interface Status Reason Performance Threshold Policy Status
  -----
  10.100.100.100 Et0/0   Eliminated Delay   80 msec  20 msec Out-of-Policy
  10.100.100.100 Et2/0   Eliminated Delay   50 msec  20 msec Out-of-Policy
  10.100.100.100 Et1/0   Best-Path   Delay   30 msec  20 msec Out-of-Policy

Current Policy: MAP1 sequence 20  (OR Dynamic client 10 sequence 200)
  Mode Monitor : Both
  Mode Route   : Control
  Delay Priority : 1      Variance : 10%
  Jitter Priority : 2      Variance : 20%
  .
  .
  .

```

Table 45: show pfr master traffic-class performance Field Descriptions

Field	Description
Traffic-class: (inside)	Displays performance data for an inside traffic class with the destination and source prefixes, DSCP value, protocol, source and destination port ranges, and application name.

show pfr master traffic-class performance

Field	Description
General: Control State	Displays "Controlled with <protocol>" or "Not controlled."
Traffic Class Status	Displays "Out of POLICY" and an explanation, or "INPOLICY" or "DISABLED" and an explanation.
Current Exit	Current border router and interface for the traffic class.
On Current Exit since	Time in days, minutes, hours, and seconds.
Last Uncontrol Reason	Explanation for the last time the prefix was uncontrolled.
Traffic-class Type	How the traffic class was identified.
IMPROPER CONFIG	If the configuration has issues, an explanation is provided.
Last Out of Policy Event:	Identifies the exit, reason, time since last Out of Policy (OOP) event, and the configured delay performance and delay threshold.
Average Passive Performance Current Exit:	If passive monitoring is configured, this section displays performance information on delay, loss, unreachable ingress and egress bandwidth, and the time since the last update. The averages are calculated for the last five minutes.
Average Active Performance Current Exit:	If active monitoring is configured, this section displays performance information on jitter, MOS, delay, loss, unreachable, ingress and egress bandwidth, and the time since the last update. The averages are calculated for the last five minutes.
Latest Active Performance All Exits:	If active monitoring is configured, this section displays performance information on delay, loss, unreachable, ingress and egress bandwidth, and the time since the last update.
Active Probing:	Displays the current active probing state and information about the current active probes.
Last Resolver Decision:	Displays the last resolver decision with an explanation that includes the border router IP address, the status of the exit, performance and threshold data, and the state of the policy.
Current Policy:	Displays the current policy details with the policy name, the mode configurations, the priority information, and other parameters that are configured.

The following output shows traffic class performance history on current exits during the last 60 minutes.

```
Router# show pfr master traffic-class performance history

Prefix: 10.70.0.0/16
Prefix performance history records
  Current index 1, S_avg interval(min) 5, L_avg interval(min) 60

Age      Border      Interface      OOP/RteChg Reasons
Pas: DSum  Samples   DAvg  PktLoss  Unreach   Ebytes   Ibytes      Pkts      Flows
```

	Act:	Dsum	Attempts	DAvg	Comps	Unreach	Jitter	LoMOSCnt	MOSCnt
00:00:33		10.1.1.4			Et0/0				
	Pas:	6466	517	12	2	58	3400299	336921	10499
	Act:	0	0	0	0	0	N	N	N
00:01:35		10.1.1.4			Et0/0				
	Pas:	15661	1334	11	4	157	4908315	884578	20927
	Act:	0	0	0	0	0	N	N	N
00:02:37		10.1.1.4			Et0/0				
	Pas:	13756	1164	11	9	126	6181747	756877	21232
	Act:	0	0	0	0	0	N	N	N
00:03:43		10.1.1.1			Et0/0				
	Pas:	14350	1217	11	6	153	6839987	794944	22919
	Act:	0	0	0	0	0	N	N	N
00:04:39		10.1.1.3			Et0/0				
	Pas:	13431	1129	11	10	122	6603568	730905	21491
	Act:	0	0	0	0	0	N	N	N
00:05:42		10.1.1.2			Et0/0				
	Pas:	14200	1186	11	9	125	4566305	765525	18718
	Act:	0	0	0	0	0	N	N	N
00:06:39		10.1.1.3			Et0/0				
	Pas:	14108	1207	11	5	150	3171450	795278	16671
	Act:	0	0	0	0	0	N	N	N
00:07:39		10.1.1.4			Et0/0				
	Pas:	11554	983	11	15	133	8386375	642790	23238
	Act:	0	0	0	0	0	N	N	N

Table 46: show pfr master traffic-class performance history Field Descriptions

Field	Description
Age	Time since last packet sent in hours, minutes, and seconds.
Border	IP address of the border router.
Interface	Interface name and number.
OOP/Route Chng Reasons	Explanation about Out of Policy (OOP) route changes.
Pas:	Passive monitoring history data.
Dsum	Sum of passive monitoring delay.
Samples	Number of sample passive monitoring packets sent.
DAvg	Average of passive monitoring packet delay.
PktLoss	Number of packets lost.
Unreach	Number of unreachable flows.
Ebytes	Egress bandwidth used, in bytes.
Ibytes	Ingress bandwidth used, in bytes.
Pkts	Number of packets sent.
Flows	Number of traffic flows.
Act:	Active monitoring history data.

show pfr master traffic-class performance

Field	Description
DSum	Sum of active monitoring delay, in milliseconds.
Attempts	Number of active monitoring packets sent.
DAvg	Average of active monitoring packet delay.
Comps	Number of passively monitored short-term unreachable packets, in flows per million.
Jitter	Jitter value.
LoMOSCnt	Number of monitored Mean Opinion Score (MOS) packets with a MOS count below threshold.
MOSCnt	Number of MOS packets.

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
show pfr master traffic-class	Displays information about traffic classes that are monitored and controlled by a PfR master controller.

show pfr proxy



Note Effective with Cisco IOS Releases 15.2(1)S, 15.2(3)T, and Cisco IOS XE Release 3.5S, the **show pfr proxy** command is not available in Cisco IOS software.

To display Performance Routing (PfR) proxy information, use the **show pfr proxy** command in privileged EXEC mode.

show pfr proxy

Syntax Description This command has no arguments or keywords.

Command Modes Privileged EXEC (#)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.2(1)S	This command was modified. This command was removed.
	Cisco IOS XE Release 3.5S	This command was modified. This command was removed.
	15.2(3)T	This command was modified. This command was removed.

Usage Guidelines The **show pfr proxy** command is entered on a master controller. This command is used to display IP address information and the connection status of a PfR proxy.

Examples The following is sample output from the **show pfr proxy** command:

```
Router# show pfr proxy
OER PROXY 0.0.0.0 DISABLED, MC 0.0.0.0 UP/DOWN: DOWN
Conn Status: NOT OPEN, Port 3949
```

Table 47: show pfr proxy Field Descriptions

Field	Description
OER PROXY	Displays the IP address and status of the PfR proxy.
MC	Displays the IP address of the master controller (MC).
UP/DOWN:	Displays the connection status—UP or DOWN.
Conn Status:	Displays the connection status—OPEN or NOT OPEN.
Port	Displays the TCP port number used to communicate with the master controller.

show pfr proxy

Related Commands	Command	Description
	show pfr api provider	Displays information about PfR application interface clients.

show platform hardware qfp active feature pbr

To display the policy-based routing (PBR) class group information in the active Cisco Quantum Flow Processor (QFP), use the **show platform hardware qfp active feature pbr** command in privileged EXEC mode.

show platform hardware qfp active feature pbr [class-group] [class [class-id]]

Syntax Description	<table border="1"> <tr> <td>class-group</td><td>Specifies a class group to display.</td></tr> <tr> <td><i>cg-id</i></td><td>(Optional) Class group ID.</td></tr> <tr> <td>class</td><td>(Optional) Specifies the class ID.</td></tr> <tr> <td><i>class-id</i></td><td>(Optional) Class ID.</td></tr> </table>	class-group	Specifies a class group to display.	<i>cg-id</i>	(Optional) Class group ID.	class	(Optional) Specifies the class ID.	<i>class-id</i>	(Optional) Class ID.
class-group	Specifies a class group to display.								
<i>cg-id</i>	(Optional) Class group ID.								
class	(Optional) Specifies the class ID.								
<i>class-id</i>	(Optional) Class ID.								

Command Modes	Privileged EXEC (#)
----------------------	---------------------

Command History	Release	Modification
	Cisco IOS XE Release 3.8S	This command was introduced.

Usage Guidelines	Use the show platform hardware qfp active feature pbr command to troubleshoot PBR issues on the quantum flow processor.
-------------------------	--

Examples	The following is a sample output from the show platform hardware qfp active feature pbr command for the class group 2 and class ID of 6:
-----------------	---

```
Device# show platform hardware qfp active feature pbr class-group 2 class 6
Class ID: 6
  hw flags enabled: action, prec
  hw flags value: (0x0000000a)
  tos: 0
  precedence: 160
  nexthop: 0.0.0.0
  adj_id: 0
  table_id: 0
  extra_action_size: 0
  cpp_num: 0
  extra_ppe_addr: 0x00000000
  stats_ppe_addr: 0x8bc6a090
```

The table below describes the significant fields shown in the display.

Table 48: show platform hardware qfp active feature pbr Field Descriptions

Field	Description
hw flags enabled	Actions enabled on set clauses.

show platform software pbr

show platform software pbr

To display platform-specific policy-based routing (PBR) information, use the **show platform software pbr** command in the privileged EXEC mode.

```
show platform software pbr slot {active{class-group {allcg-id}|interface {all|name
intf-name}|route-map{all|name rmap-name|sequence cgm-class-id} |statistics}|standby statistics}
```

Syntax Description	
slot	(Optional) Embedded Service Processor or Route Processor slot. Valid options are: <ul style="list-style-type: none">• F0—Embedded-Service-Processor slot 0• F1—Embedded-Service-Processor slot 1• FP—Embedded-Service-Processor• R0—Route-Processor slot 0• R1—Route-Processor slot 1• RP—Route-Processor
active	Displays the active instance of the PBR.
class-group	(Optional) Displays PBR CGD class group information.
all	(Optional) Displays information for all instances of the selected keyword.
<i>cg-id</i>	(Optional) Class group ID.
interface	Displays PBR interface map information.
name	Displays information about a specific interface map.
<i>intf-name</i>	Interface map name.
route-map	Displays PBR route map information.
name	Displays information about a specific route map.
<i>rmap-name</i>	Route map name.
sequence	Displays information about PBR route map sequence.
<i>cgm-class-id</i>	CGM class ID.
statistics	Displays PBR statistic counters.
standby	Displays the standby instance of the PBR.

Command Modes

Privileged EXEC (#)

Command History	Release	Modification
	Cisco IOS XE Release 3.1S	This command was introduced.
	Cisco IOS XE Release 3.8S	This command was modified. The output was modified as a result of the Pfr Scaling Improvement for Application Traffic Class feature.

Examples

The following is a sample output from the **show platform software pbr fp active route-map all** command displaying information about all the active route maps configured on the embedded-service processor:

```
Device#show platform software pbr fp active route-map all

Route-map: rtmpmap-test
CG_id: 1, AOM obj id: 278
Sequence      CGM class ID      AOM ID      Action AOM ID
10            1                  327         328
Interface                               AOM id
GigabitEthernet0/0/2                      281

Route-map: test
CG_id: 2, AOM obj id: 608
Sequence      CGM class ID      AOM ID      Action AOM ID
10            2                  609         610
20            3                  611         612
30            4                  613         614
40            5                  615         616
50            6                  617         618
60            7                  619         620
70            8                  621         622
Interface                               AOM id
GigabitEthernet0/0/0.773                  630
```

The following is a sample output showing the route maps that are configured on the route processor with their corresponding class groups.

```
Device#show platform software pbr fp active class-group all

Class-group      Route-map
1                rtmpmap-test
2                test
```

show platform software route-map

show platform software route-map

To display platform-specific configuration and statistics for route maps configured on Cisco ASR 1000 Series Routers, use the **show platform software route-map** command in privileged EXEC mode.

```
show platform software route-map {client|counters[slot]} {active|standby}
{cgm-filter|feature-reference|map|stats|summary}
```

Syntax Description	client (Optional) Displays information for a feature registered to use a route map. counters (Optional) Displays route map statistic counter information. slot (Optional) Embedded Service Processor or Route Processor slot. Valid options are: <ul style="list-style-type: none"> • F0 —Embedded Service Processor Slot 0 • F1 —Embedded Service Processor Slot 1 • FP —Embedded Service Processor • R0 —Route Processor Slot 0 • R1 —Rout Processor Slot 1 • RP —Route Processor
active	Displays the active instance of the route map.
standby	Displays standby instance of the route map.
cgm-filters	Displays route map CGM filter information. Note This keyword is only available for an embedded-service-processor.
feature-references	Displays route map feature references. Note This keyword is only available for an embedded-service-processor.
map	Displays route-map map information.
stats	Displays route map statistics.
summary	Displays route map summary information.

Command Modes	Privileged EXEC (#)
----------------------	---------------------

Command History	Release	Modification
	Cisco IOS XE Release 3.1S	This command was introduced.

Release	Modification
Cisco IOS XE Release 3.8S	This command was modified. The output was modified as a result of the Pfr Scaling Improvement for Application Traffic Class feature.

Usage Guidelines

Use the **show platform software route-map** to display statistics and configuration information related to route map platform commands on the Cisco ASR 1000 Series Routers. The information can help troubleshoot route map issues related to a specific platform.

Examples

The following is sample output from the **show platform software route-map** command:

```
Router# show platform software route-map rp active map

route-map test, permit, sequence 10
  Match clauses:
    ip address (access-lists): acl-771
  Set clauses:
    IP TOS: 16

route-map test, permit, sequence 20
  Match clauses:
    ip address (access-lists): acl-772
  Set clauses:
    IP DF: 1

route-map test, permit, sequence 30
  Match clauses:
    ip address (access-lists): acl-773
  Set clauses:
    ipv4 nexthop: 20.22.73.108, table_id 0

route-map test, permit, sequence 40
  Match clauses:
    ip address (access-lists): acl-774
  Set clauses:
    global

route-map test, permit, sequence 50
  Match clauses:
    ip address (access-lists): acl-775
  Set clauses:
    ip precedence: 160

route-map test, permit, sequence 60
  Match clauses:
    ip address (access-lists): acl-776
  Set clauses:
    vrf: name vrf-test, id 5, table_id 5

route-map test, permit, sequence 70
  Match clauses:
  Set clauses:

route-map rtmap-test, permit, sequence 10
  Match clauses:
    ip address (access-lists): acl-test
  Set clauses:
    IP DF: 0
    interface: NULL0
```

show platform software route-map

The table below describes the significant fields shown in the display.

Table 49: show platform software route-map rp active map Field Descriptions

Field	Description
sequence	Displays the route-map entry sequence number in the route map.
Match clauses	Lists the match criteria of the route map entry.
Set clauses	Lists the set action of the route map entry.

Related Commands

Command	Description
show route-map dynamic	Displays dynamic route maps configured on the router.

shutdown (PfR)

To stop a Performance Routing (PfR) master controller or PfR border router process without removing the PfR process configuration, use the **shutdown** command in PfR master controller or PfR border router configuration mode. To start a stopped PfR process, use the **no** form of this command.

shutdown
no shutdown

Syntax Description

This command has no arguments or keywords.

Command Default

No master controller or border router is stopped.

Command Modes

PfR master controller configuration (config-pfr-mc) PfR border router configuration (config-pfr-br)

Command History

Release	Modification
15.1(2)T	This command was introduced.
Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines

The **shutdown** command is entered on a master controller or border router. Entering the **shutdown** command stops an active master controller or border router process but does not remove any configuration parameters. The **shutdown** command is displayed in the running configuration file when enabled. To disable a master controller or border router and completely remove the process configuration from the running configuration file, use the **no pfr master** or **no pfr border** command in global configuration mode.

Cisco IOS XE Release 3.1S

This command is supported only in PfR border router configuration mode.

Examples

The following example stops an active PfR border router session:

```
Router(config)# pfr border
Router(config-pfr-br)# shutdown
```

The following example starts an inactive PfR master controller session:

```
Router(config)# pfr master
Router(config-pfr-mc)# no shutdown
```

Related Commands

Command	Description
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

site-prefixes

To create new site-prefix list, use the **site-prefixes** command in master controller configuration mode. To remove the site-prefixes, use the **no** form of this command.

```
site-prefixes prefix-list list-name
no site-prefixes prefix-list list-name
```

Syntax Description

prefix-list Specifies the prefix-list with static site prefixes.

list-name Specifies the prefix-list containing list of site prefixes.

Command Default

The site-prefixes are not created.

Command Modes

Master controller configuration mode (config-domain-vrf-mc)

Command History

Release

Cisco IOS XE
3.13S

Modification

This command was introduced.

Usage Guidelines

Use this command on the hub device for the master controller configuration to configure site-prefixes. Use this command with the **ip prefix-list** command. Match conditions specified in the **ip prefix-list** command are only supported.

Example

The following example shows how to configure site-prefixes:

```
Device (config-domain-vrf-mc) # site-prefixes prefix-list hub_site_prefixes
```

Related Commands

Command	Description
ip prefix-list	Creates a prefix list or adds a prefix-list entry.

smart-probes

To configure smart-probes ports, use the **smart-probes** command in advanced configuration mode. To remove the ports, use the **no** form of this command.

```
smart-probes {destination-port|source-port}{port-number}
smart-probes {destination-port|source-port}
```

Syntax Description

destination-port	Specifies smart-probes destination port.
source-port	Specifies smart-probes source port.
<i>port-number</i>	Specifies port number of the destination and source. The range is from 1 to 65535.

Command Default

Predefined smart-probes ports are used in hub master controller configuration.

Command Modes

advanced (config-domain-vrf-mc-advanced)

Command History

Release	Modification
Cisco IOS XE Release 3.13S	This command was introduced.

Usage Guidelines

Use this command to specify user-defined source and destination smart-probes port numbers.

The following examples shows how to configure smart-probes ports:

```
Device(config-domain-vrf-mc-advanced) # smart-probes destination-port 20
Device(config-domain-vrf-mc-advanced) # smart-probes source-port 25
```

snmp-server enable traps pfr

snmp-server enable traps pfr

To enable Performance Routing (PfR) Simple Network Management Protocol (SNMP) notifications (traps and informs), use the **snmp-server enable traps pfr** command in global configuration mode. To disable PfR notifications, use the **no** form of this command.

```
snmp-server enable traps pfr
no snmp-server enable traps pfr
```

Syntax Description This command has no arguments or keywords.

Command Default PfR SNMP notifications are disabled.

Command Modes Global configuration (config)

Release	Modification
Cisco IOS XE Release 3.7S	This command was introduced.
15.3(2)T	This command was integrated into Cisco IOS Release 15.3(2)T.

Usage Guidelines Use this command to enable SNMP notifications for PfR activity.

Examples This example shows how to enable PfR SNMP notifications:

```
Router(config)# snmp-server host 10.2.2.2 traps public pfr
Router(config)# snmp-server enable traps pfr
Router(config)# exit
```

source-interface

To configure a loopback used as a source for peering with other sites and master controller (MC), use the **source-interface** command in master controller configuration mode or border configuration mode.

source-interface loopback *interface-number*

Syntax Description	loopback Specifies the loopback interface. <i>interface-number</i> Specifies the loopback interface number. The range is from 0 to 2147483647.				
Command Default	The loopback interface is not configured.				
Command Modes	Master controller configuration mode (config-domain-vrf-mc)# Border configuration mode (config-domain-vrf-br)#				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.13S</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.13S	This command was introduced.
Release	Modification				
Cisco IOS XE 3.13S	This command was introduced.				
Usage Guidelines	Use this command to configure the loopback used as a source for peering with other sites or master controller.				

Example

The following example shows how to configure source-interface for hub MC:

```
Device> enable
Device# configure terminal
Device(config)# domain default
Device(config-domain)# vrf default
Device(config-domain-vrf)# master hub
Device(config-domain-vrf-mc)# source-interface loopback 2
```

The following example shows how to configure source-interface for border devices:

```
Device> enable
Device# configure terminal
Device(config)# domain default
Device(config-domain)# vrf default
Device(config-domain-vrf)# border
Device(config-domain-vrf-br)# source-interface loopback 0
```

target-discovery

target-discovery

To enable Performance Routing (PfR) target-discovery, use the **target-discovery** command in PfR master controller configuration mode. To disable PfR target-discovery, use the **no** form of this command.

```
target-discovery [responder-list prefix-list-name [inside-prefixes prefix-list-name]]
no target-discovery
```

Syntax Description	<table border="1"> <tr> <td>responder-list</td><td>(Optional) Specifies a prefix list of IP SLA responder addresses.</td></tr> <tr> <td><i>prefix-list-name</i></td><td>(Optional) Prefix list name.</td></tr> <tr> <td>inside-prefixes</td><td>(Optional) Specifies a list of inside prefixes.</td></tr> </table>	responder-list	(Optional) Specifies a prefix list of IP SLA responder addresses.	<i>prefix-list-name</i>	(Optional) Prefix list name.	inside-prefixes	(Optional) Specifies a list of inside prefixes.
responder-list	(Optional) Specifies a prefix list of IP SLA responder addresses.						
<i>prefix-list-name</i>	(Optional) Prefix list name.						
inside-prefixes	(Optional) Specifies a list of inside prefixes.						

Command Default PfR target-discovery is disabled.

Command Modes PfR master controller configuration (config-pfr-mc)

Command History	Release	Modification
	Cisco IOS XE Release 3.5S	This command was introduced.
	15.2(3)T	This command was integrated into Cisco IOS Release 15.2(3)T.

Usage Guidelines The **target-discovery** command is entered on a PfR master controller. In networks that have Enhanced Interior Gateway Routing Protocol (EIGRP) Service Advertisement Framework (SAF) already configured and in which all remote sites are directly connected, the command can be entered without any keywords to enable dynamic target-discovery. In networks with multihops between sites, the **responder-list** and **inside-prefixes** keywords are entered with associated prefix-list names to configure a static list of IP SLA responders.

The PfR Target Discovery feature introduces a scalable solution for managing the performance of video and voice applications across large Enterprise branch networks by automating the identification and configuration of IP SLA responders. After establishing MC peering using the **mc-peer** command, target-discovery is enabled in either static or dynamic mode depending on the type of network. EIGRP SAF is used as a service routing forwarder between the MC peers to distribute information to allow autodiscovery and automatic configuration of IP SLA responders and to share information about active probes. PfR target-discovery reduces the amount of configuration required at remote sites.

Examples

The following example shows how to enable dynamic PfR target-discovery:

```
Router(config)# pfr master
Router(config-pfr-mc)# target-discovery
```

The following example shows how to enable PfR target-discovery in static mode:

```
Router(config)# pfr master
Router(config-pfr-mc)# target-discovery responder-list tgt inside-prefixes ipfx
```

Related Commands	Command	Description
	mc-peer	Configures PfR master controller peering.
	pfr master	Enables a PfR process, configures a router as a PfR master controller, and enters PfR master controller configuration mode.
	show pfr master target-discovery	Displays information about PfR target-discovery.

threshold-variance

To configure threshold tolerance for hub master controller configuration, use the **threshold-variance** command in advanced configuration mode. To remove the threshold tolerance, use the **no** form of this command.

threshold-variance *tolerance-percentage*
no threshold-variance *tolerance-percentage*

Syntax Description	<i>tolerance-percentage</i> Specifies the percentage of tolerance. The range is from 0 to 100.				
Command Default	Default threshold tolerance is used for hub master controller configuration.				
Command Modes	advanced (config-domain-vrf-mc-advanced)				
Command History	<table border="1"> <thead> <tr> <th>Release</th> <th>Modification</th> </tr> </thead> <tbody> <tr> <td>Cisco IOS XE 3.13S</td> <td>This command was introduced.</td> </tr> </tbody> </table>	Release	Modification	Cisco IOS XE 3.13S	This command was introduced.
Release	Modification				
Cisco IOS XE 3.13S	This command was introduced.				
Usage Guidelines	Use this command to specify the threshold with respect to jitter, loss, and one-way-delay that can be tolerated across two links.				

Example

The following examples shows how to configure threshold variance percentage:

```
Device(config-domain-vrf-mc-advanced) # threshold-variance 20
```

throughput (PfR)

To configure Performance Routing (PfR) to learn the top prefixes based on the highest outbound throughput, use the **throughput** command in Top Talker and Top Delay learning configuration mode or learn list configuration mode. To disable learning based on outbound throughput, use the **no** form of this command.

throughput
no throughput

Syntax Description

This command has no arguments or keywords.

Command Default

No prefixes are learned based on outbound throughput.

Command Modes

PfR Top Talker and Top Delay learning configuration (config-pfr-mc-learn) Learn list configuration (config-pfr-mc-learn-list)

Command History

Release	Modification
15.1(2)T	This command was introduced.
15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines

The **throughput** command is entered on a master controller. The master controller creates a list of prefixes based on the highest outbound throughput. This command is used to configure a master controller to learn prefixes based on the highest outbound packet throughput. When this command is enabled, PfR will learn the top prefixes across all border routers according to the highest outbound throughput.

Examples

The following example shows the commands used to configure a master controller to learn the top prefixes based on the highest outbound throughput:

```
Router(config)# pfr master
Router(config-pfr-mc)# learn
Router(config-pfr-mc-learn)# throughput
```

The following example shows the commands used to configure a master controller to learn top prefixes based on the highest throughput for a learn list named LEARN_REMOTE_LOGIN_TC that learns Telnet and Secure Shell (SSH) application TCF entries:

```
Router(config)# pfr master
Router(config-pfr-mc)# learn
Router(config-pfr-mc-learn)# list seq 10 refname LEARN_REMOTE_LOGIN_TC
Router(config-pfr-mc-learn-list)# traffic-class application telnet ssh
Router(config-pfr-mc-learn-list)# aggregation-type prefix-length 24
Router(config-pfr-mc-learn-list)# throughput
```

throughput (PfR)

Related Commands	Command	Description
	learn (PfR)	Enters PfR Top Talker and Top Delay learning configuration mode to configure prefixes for PfR to learn.
	list (PfR)	Creates a PfR learn list to specify criteria for learning traffic classes and enters learn list configuration mode.
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

traceroute probe-delay (PfR)

To set the time interval between traceroute probe cycles, use the **traceroute probe-delay** command in Performance Routing (PfR) master controller configuration mode. To set the interval between probes to the default value, use the **no** form of this command.

traceroute probe-delay milliseconds
no traceroute probe-delay

Syntax Description	<i>milliseconds</i>	Configures the time interval, in milliseconds, between traceroute probes. The configurable range for this argument is a number from 0 to 65535.
---------------------------	---------------------	---

Command Default The default time interval between traceroute probes is 10,000 milliseconds when this command is not configured or when the **no** form is entered.

Command Modes PfR master controller configuration (config-pfr-mc)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **traceroute probe-delay** command is entered on a master controller. This command is used to set the delay interval between traceroute probes.

Continuous and policy-based traceroute reporting is configured with the **set traceroute reporting** (PfR) command. The time interval between traceroute probes is configured with the **traceroute probe-delay** command in PfR master controller configuration mode. On-demand traceroute probes are triggered by entering the **show pfr master prefix** (PfR) command with the **current** and **now** keywords.

Examples

The following example, which starts in global configuration mode, shows the commands used to set the delay interval between traceroute probes to 10000 milliseconds:

```
Router(config)# pfr master
Router(config-pfr-mc)# traceroute probe-delay 10000
```

Related Commands	Command	Description
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
	set traceroute reporting (PfR)	Configures a PfR map to enable traceroute reporting.
	show pfr master prefix (PfR)	Displays the status of monitored prefixes.

traffic-class access-list (PfR)

To define a Performance Routing (PfR) application traffic class using an access list applied to learned traffic flows, use the **traffic-class access-list** command in learn list configuration mode. To disable the definition of PfR-learned traffic flows into application traffic classes using an access list, use the **no** form of this command.

```
traffic-class access-list access-list-name [filter prefix-list-name]  
no traffic-class access-list
```

Syntax Description	<i>access-list-name</i>	Name of an access list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.
	filter	(Optional) Specifies that the traffic flows are filtered on the basis of a prefix list.
	<i>prefix-list-name</i>	(Optional) Name of a prefix list (created using the ip prefix-list command).

Command Default PfR application traffic classes are not defined using an access list.

Command Modes Learn list configuration (config-pfr-mc-learn-list)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **traffic-class access-list** command is used to configure the master controller to automatically learn application traffic defined in an access list. Only one access list can be specified, but the access list may contain many access list entries (ACEs) to help define the traffic class parameters.

PfR learn lists are a way to categorize learned traffic classes. In each learn list, different criteria for learning traffic classes including prefixes, application definitions, filters, and aggregation parameters can be configured. A traffic class is automatically learned by PfR based on each learn list criteria, and each learn list is configured with a sequence number. The sequence number determines the order in which learn list criteria are applied. Learn lists allow different PfR policies to be applied to each learn list; in previous releases the traffic classes could not be divided, and a PfR policy was applied to all the traffic classes.



Note The **traffic-class access-list** command, the **traffic-class application** command, and the **traffic-class prefix-list** commands are all mutually exclusive in a PfR learn list. Only one of these commands can be specified per PfR learn list.

Examples

The following example, starting in global configuration mode, shows the commands used to define a custom application traffic class using an access list. Every entry in the access list defines one application, and the destination network of the traffic class is determined by the specified aggregation method. After the access list is configured, the master controller automatically learns the defined

application traffic based on highest throughput. A prefix list may be used to filter the traffic flows by destination prefix.

```

Router(config)# ip access-list extended USER_DEFINED_TC
Router(config-ext-nacl)# permit tcp any any 500
Router(config-ext-nacl)# permit tcp any any range 700 750
Router(config-ext-nacl)# permit udp 10.1.1.1 0.0.0.0 any
Router(config-ext-nacl)# permit ip any any dscp ef
Router(config-ext-nacl)# exit
Router(config)# pfr master
Router(config-pfr-mc)# learn
Router(config-pfr-mc-learn)# list seq 10 refname LEARN_USER_DEFINED_TC
Router(config-pfr-mc-learn-list)# traffic-class access-list USER_DEFINED_TC
Router(config-pfr-mc-learn-list)# aggregation-type prefix-length 24
Router(config-pfr-mc-learn-list)# throughput
Router(config-pfr-mc-learn-list)# end

```

Related Commands	Command	Description
	aggregation-type (PfR)	Configures a PfR master controller to aggregate learned prefixes based on the type of traffic flow.
	ip access-list	Defines a standard or extended IP access list.
	ip prefix-list	Creates an entry in a prefix list.
	learn (PfR)	Enters PfR Top Talker and Top Delay learning configuration mode to configure prefixes for PfR to learn.
	list (PfR)	Creates a PfR learn list to specify criteria for learning traffic classes and enters learn list configuration mode.
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

traffic-class aggregate (PfR)

traffic-class aggregate (PfR)

To aggregate Performance Routing (PfR) learned traffic flows into application traffic classes using an access list, use the **traffic-class aggregate** command in PfR Top Talker and Top Delay learning configuration mode. To disable the aggregation of PfR-learned traffic flows into application traffic classes using an access list, use the **no** form of this command.

```
traffic-class aggregate access-list access-list-name
no traffic-class aggregate access-list access-list-name
```

Syntax Description	<table border="1"> <tr> <td>access-list</td><td>Specifies that an IP access list is to be used to aggregate the PfR-learned traffic flows into application traffic classes.</td></tr> <tr> <td><i>access-list-name</i></td><td>Name of the access list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.</td></tr> </table>	access-list	Specifies that an IP access list is to be used to aggregate the PfR-learned traffic flows into application traffic classes.	<i>access-list-name</i>	Name of the access list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.
access-list	Specifies that an IP access list is to be used to aggregate the PfR-learned traffic flows into application traffic classes.				
<i>access-list-name</i>	Name of the access list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.				

Command Default PfR-learned traffic flows are not aggregated into application traffic classes using an access list.

Command Modes PfR Top Talker and Top Delay learning configuration (config-pfr-mc-learn)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **traffic-class aggregate** command can be used with the **traffic-class filter** (PfR) and **traffic-class keys** (PfR) commands to configure the master controller to automatically learn defined application traffic. Only one access list can be specified, but the access list may contain many access list entries to help define the traffic class parameters.

**Note**

The **traffic-class aggregate** command is different from the **aggregation-type** (PfR) command that aggregates learned prefixes based on the type of traffic flow. The **traffic-class aggregate** command introduces the ability to use an access list to aggregate learned traffic flows to create an application traffic class. Both commands can be used in the same configuration.

Examples

The following example, starting in global configuration mode, shows the commands used to configure the master controller to automatically learn defined application traffic. In this example, two access lists are created to identify and define voice traffic in the network. Using the **traffic-class aggregate** (PfR) and the **traffic-class filter** (PfR) commands with the access lists, only voice traffic with a Differentiated Services Code Point (DSCP) bit set to ef, a User Datagram Protocol (UDP), and a destination port in the range of 3000 to 4000 is learned and added to the PfR application database on the master controller.

```

Router(config)# ip access-list extended voice-filter-acl
Router(config-ext-nacl)# permit udp any 10.1.0.0 0.0.255.255 dscp ef
Router(config-ext-nacl)# exit
Router(config)# ip access-list extended voice-agg-acl
Router(config-ext-nacl)# permit udp any any range 3000 4000 dscp ef
Router(config-ext-nacl)# exit
Router(config)# pfr master
Router(config-pfr-mc)# learn
Router(config-pfr-mc-learn)# aggregation-type prefix-length 24
Router(config-pfr-mc-learn)# throughput
Router(config-pfr-mc-learn)# traffic-class filter access-list voice-filter-acl
Router(config-pfr-mc-learn)# traffic-class aggregate access-list voice-agg-acl
Router(config-pfr-mc-learn)# traffic-class keys protocol dport dscp
Router(config-pfr-mc-learn)# end

```

Related Commands	Command	Description
	aggregation-type (PfR)	Configures a PfR master controller to aggregate learned prefixes based on the type of traffic flow.
	ip access-list	Defines a standard or extended IP access list.
	learn (PfR)	Enters PfR Top Talker and Top Delay learning configuration mode to configure prefixes for PfR to learn.
	list (PfR)	Creates a PfR learn list to specify criteria for learning traffic classes and enters learn list configuration mode.
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
	traffic-class filter (PfR)	Filters uninteresting traffic from PfR-learned traffic flows using an access list.
	traffic-class keys (PfR)	Specifies a key list used by an PfR border router to aggregate the traffic flows into learned application classes.

traffic-class application (PfR)

To define a Performance Routing (PfR) traffic class using a predefined static application, use the **traffic-class application** command in learn list configuration mode. To remove the definition of a PfR-learned traffic class using a predefined static application, use the **no** form of this command.

```
traffic-class application application-name [application-name ...] [filter prefix-list-name]
no traffic-class application application-name ... [filter prefix-list-name]
```

Syntax Description	<i>application-name</i>	Name of a predefined static application using fixed ports. See the Usage Guidelines section for a table of applications. One application must be specified, but the ellipsis shows that more than one application keyword can be specified up to a maximum of ten.
	filter	(Optional) Specifies that the traffic flows are filtered on the basis of a prefix list.
	<i>prefix-list-name</i>	(Optional) Name of a prefix list (created using the ip prefix-list command).

Command Default PfR traffic classes are not defined using a static application mapping.

Command Modes Learn list configuration (config-pfr-mc-learn-list)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **traffic-class application** command is used to configure the master controller to automatically learn traffic using a keyword that represents an application. PfR maps the application keyword to a protocol--TCP or UDP, or both--and one or more ports, and this mapping is shown in the table below. More than one application can be configured as part of the traffic class.

Learn lists are a way to categorize learned traffic classes. In each learn list, different criteria for learning traffic classes including prefixes, application definitions, filters, and aggregation parameters can be configured. A traffic class is automatically learned by PfR based on each learn list criteria, and each learn list is configured with a sequence number. The sequence number determines the order in which learn list criteria are applied. Learn lists allow different PfR policies to be applied to each learn list; in previous releases, the traffic classes could not be divided, and a PfR policy was applied to all the traffic classes.



Note The **traffic-class application** (PfR) command, the **traffic-class access-list** (PfR) command, the **traffic-class application nbar** (PfR) command, and the **traffic-class prefix-list** (PfR) commands are all mutually exclusive in a PfR learn list. Only one of these commands can be specified per PfR learn list.

The table below displays the keywords that represent the application that can be configured with the **traffic-class application** command. Replace the *application-name* argument with the appropriate keyword from the table.

Table 50: Static Application List Keywords

Keyword	Protocol	Port
cuseeme	TCP UDP	7648 7649 7648 7649 24032
dhcp (Client)	UDP/TCP	68
dhcp (Server)	UDP/TCP	67
dns	UDP/TCP	53
finger	TCP	79
ftp	TCP	20 21
gopher	TCP/UDP	70
http	TCP/UDP	80
httpsl	TCP	443
imap	TCP/UDP	143 220
irc	TCP/UDP	194
kerberos	TCP/UDP	88 749
l2tp	UDP	1701
ldap	TCP/UDP	389
mssql	TCP	1443
nfs	TCP/UDP	2049
nntp	TCP/UDP	119
notes	TCP/UDP	1352
ntp	TCP/UDP	123
pcany	UDP TCP	22 5632 65301 5631
pop3	TCP/UDP	110
pptp	TCP	17233
simap	TCP/UDP	585 993 (Preferred)
sirc	TCP/UDP	994
sldap	TCP/UDP	636
smtp	TCP	25
snntp	TCP/UDP	563

traffic-class application (PfR)

Keyword	Protocol	Port
spop3	TCP/UDP	123
ssh	TCP	22
telnet	TCP	23

Examples

The following example, starting in global configuration mode, shows the commands used to define application traffic classes using two PfR learn lists, LEARN_REMOTE_LOGIN_TC and LEARN_FILE_TRANSFER_TC. The number of traffic classes to be learned in both learn list sessions is set to 50, and the maximum number of traffic classes to be learned for all sessions of the learn list is set to 90. The remote login traffic class is configured using keywords representing Telnet and Secure Shell (SSH) traffic, and the resulting prefixes are aggregated to a prefix length of 24. The file transfer traffic class is configured using a keyword that represents FTP and is also aggregated to a prefix length of 24. A prefix list is applied to the file transfer traffic class to permit traffic from the 10.0.0.0/8 prefix. The master controller is configured to learn the top prefixes based on highest outbound throughput for the filtered traffic, and the resulting traffic classes are added to the PfR application database to be passively and actively monitored.

```
Router(config)# ip prefix-list INCLUDE_10_NET 10.0.0.0/8
Router(config)# pfr master
Router(config-pfr-mc)# learn
Router(config-pfr-mc-learn)# list seq 10 refname LEARN_REMOTE_LOGIN_TC
Router(config-pfr-mc-learn-list)# count 50 max 90
Router(config-pfr-mc-learn-list)# traffic-class application telnet ssh
Router(config-pfr-mc-learn-list)# aggregation-type prefix-length 24
Router(config-pfr-mc-learn-list)# throughput
Router(config-pfr-mc-learn-list)# exit
Router(config-pfr-mc-learn)# list seq 20 refname LEARN_FILE_TRANSFER_TC
Router(config-pfr-mc-learn-list)# count 50 max 90
Router(config-pfr-mc-learn-list)# traffic-class application ftp filter INCLUDE_10_NET
Router(config-pfr-mc-learn-list)# aggregation-type prefix-length 24
Router(config-pfr-mc-learn-list)# throughput
Router(config-pfr-mc-learn-list)# end
```

Related Commands

Command	Description
aggregation-type (PfR)	Configures a PfR master controller to aggregate learned prefixes based on the type of traffic flow.
ip prefix-list	Creates an entry in a prefix list.
learn (PfR)	Enters PfR Top Talker and Top Delay learning configuration mode to configure prefixes for PfR to learn.
list (PfR)	Creates a PfR learn list to specify criteria for learning traffic classes and enters learn list configuration mode.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

Command	Description
traffic-class application nbar (PfR)	Defines a PfR traffic class using an NBAR application mapping.

traffic-class application nbar (PfR)

To define a Performance Routing (PfR) traffic class using a network-based application recognition (NBAR) application mapping, use the **traffic-class application nbar** command in learn list configuration mode. To remove the definition of a PfR-learned traffic class using an application identified using NBAR, use the **no** form of this command.

```
traffic-class application nbar nbar-app-name [nbar-app-name . . .] [filter prefix-list-name]
no traffic-class application nbar [nbar-app-name . . .]
```

Syntax Description	<table border="1"> <tr> <td><i>nbar-app-name</i></td><td>Keyword representing the name of a dynamic application identified using NBAR. One application keyword must be specified, but more than one can be specified, up to a maximum of ten. See the “Usage Guidelines” section for more details.</td></tr> <tr> <td>filter</td><td>(Optional) Specifies that the traffic flows are filtered on the basis of a prefix list.</td></tr> <tr> <td><i>prefix-list-name</i></td><td>(Optional) Name of a prefix list (created using the ip prefix-list command).</td></tr> </table>	<i>nbar-app-name</i>	Keyword representing the name of a dynamic application identified using NBAR. One application keyword must be specified, but more than one can be specified, up to a maximum of ten. See the “Usage Guidelines” section for more details.	filter	(Optional) Specifies that the traffic flows are filtered on the basis of a prefix list.	<i>prefix-list-name</i>	(Optional) Name of a prefix list (created using the ip prefix-list command).
<i>nbar-app-name</i>	Keyword representing the name of a dynamic application identified using NBAR. One application keyword must be specified, but more than one can be specified, up to a maximum of ten. See the “Usage Guidelines” section for more details.						
filter	(Optional) Specifies that the traffic flows are filtered on the basis of a prefix list.						
<i>prefix-list-name</i>	(Optional) Name of a prefix list (created using the ip prefix-list command).						

Command Default PfR traffic classes are not defined using an NBAR application mapping.

Command Modes Learn list configuration (config-pfr-mc-learn-list)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	Cisco IOS XE Release 3.7S	This command was integrated into Cisco IOS XE Release 3.7S.

Usage Guidelines The **traffic-class application nbar** command is used to configure the master controller to automatically learn traffic using a keyword that represents an application that can be identified using NBAR. More than one application can be configured as part of the traffic class with a maximum of ten applications entered per command line. Enter multiple **traffic-class application nbar** command statements if you need to specify more than ten applications.

NBAR can identify applications based on the following three types of protocols:

- Non-UDP and non-TCP IP protocols—for example, generic routing encapsulation (GRE) and Internet Control Message Protocol (ICMP).
- TCP and UDP protocols that use statically assigned port numbers—for example, CU-SeeMe desktop video conference (CU-SeeMe-Server) and Post Office Protocol over Transport Layer Security (TLS) and Secure Sockets Layer (SSL) server (SPOP3-Server).
- TCP and UDP protocols that dynamically assign port numbers and require stateful inspection—for example, Real-Time Transport Protocol audio streaming (RTP-audio) and BitTorrent file transfer traffic (BitTorrent).

The list of applications identified using NBAR and available for profiling of PfR traffic classes is constantly evolving. For lists of many of the NBAR applications defined using static or dynamically assigned ports, see the “Performance Routing with NBAR/CCE Application Recognition” module.

For more details about NBAR, see the “Classifying Network Traffic Using NBAR” section of the *QoS: NBAR Configuration Guide*.

Use the **traffic-class application nbar ?** command to determine if an application can be identified using NBAR and replace the *nbar-app-name* argument with the appropriate keyword from the screen display.



Note The following commands are mutually exclusive in a PfR learn list. Only one of these commands can be specified per PfR learn list.

- **traffic-class access-list** (PfR) command
- **traffic-class application** (PfR) command
- **traffic-class application nbar** (PfR) command
- **traffic-class prefix-list** (PfR) command

Examples

The following example, starting in global configuration mode, shows the commands used to define application traffic classes identified by using NBAR and two PfR learn lists, LEARN_VOICE_TC and LEARN_VIDEO_TC. The number of traffic classes to be learned in both learn list sessions is 50, and the maximum number of traffic classes to be learned for all sessions of the learn list is 90.

The VoIP traffic class is configured using keywords representing RTP-audio and the resulting prefixes are aggregated to a prefix length of 24. The video traffic class is configured using a keyword that represents RTP-video and is also aggregated to a prefix length of 24. A prefix list is applied to the video traffic class to match traffic for the destination prefix of 10.0.0.0/8. The master controller is configured to learn the top prefixes based on highest outbound throughput for the learned traffic, and the resulting traffic classes are added to the PfR application database.

The traffic streams that the learn list profiles for both the RTP-audio and the RTP-video applications are:

```
10.1.1.1
10.1.2.1
172.17.1.1
172.17.2.1
```

The traffic classes that are learned for each application are:

```
10.1.1.0/24 rtp-audio
10.1.2.0/24 rtp-audio
172.17.1.0/24 rtp-audio
172.17.2.0/24 rtp-audio
10.1.1.0/24 rtp-video
10.1.2.0/24 rtp-video
```

The difference in traffic classes learned is due to the optional INCLUDE_10_NET prefix list that only includes RTP-video application traffic with a destination prefix that matches the prefix 10.0.0.0/8.

```
Router(config)# ip prefix-list INCLUDE_10_NET 10.0.0.0/8
Router(config)# pfr master
Router(config-pfr-mc)# learn
Router(config-pfr-mc-learn)# list seq 10 refname LEARN_VOICE_TC
Router(config-pfr-mc-learn-list)# count 50 max 90
Router(config-pfr-mc-learn-list)# traffic-class application nbar rtp-audio
Router(config-pfr-mc-learn-list)# aggregation-type prefix-length 24
```

traffic-class application nbar (PfR)

```

Router(config-pfr-mc-learn-list)# throughput
Router(config-pfr-mc-learn-list)# exit
Router(config-pfr-mc-learn)# list seq 20 refname LEARN_VIDEO_TC
Router(config-pfr-mc-learn-list)# count 50 max 90
Router(config-pfr-mc-learn-list)# traffic-class application nbar rtp-video
filter INCLUDE_10_NET
Router(config-pfr-mc-learn-list)# aggregation-type prefix-length 24
Router(config-pfr-mc-learn-list)# throughput
Router(config-pfr-mc-learn-list)# end

```

Related Commands	Command	Description
	aggregation-type (PfR)	Configures a PfR master controller to aggregate learned prefixes based on the type of traffic flow.
	ip prefix-list	Creates an entry in a prefix list.
	learn (PfR)	Enters PfR Top Talker and Top Delay learning configuration mode to configure prefixes for PfR to learn.
	list (PfR)	Creates a PfR learn list to specify criteria for learning traffic classes and enters learn list configuration mode.
	match traffic-class application (PfR)	Defines a match clause using a static application mapping in a PfR map to create a traffic class.
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
	traffic-class access-list (PfR)	Defines a PfR traffic class using an access list.
	traffic-class application (PfR)	Defines a PfR traffic class using static application mapping.
	traffic-class prefix-list (PfR)	Defines a PfR traffic class using a prefix list.

traffic-class filter (PfR)

To filter uninteresting traffic from Performance Routing (PfR) learned traffic flows using an access list, use the **traffic-class filter** command in PfR Top Talker and Top Delay learning configuration mode. To disable the filtering of PfR-learned traffic flows using an access list, use the **no** form of this command.

```
traffic-class filter access-list access-list-name
no traffic-class filter access-list access-list-name
```

Syntax Description	<table border="1"> <tr> <td>access-list</td><td>Specifies that an IP access list is to be used to filter uninteresting traffic from PfR-learned traffic flows.</td></tr> <tr> <td><i>access-list-name</i></td><td>Name of the access list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.</td></tr> </table>	access-list	Specifies that an IP access list is to be used to filter uninteresting traffic from PfR-learned traffic flows.	<i>access-list-name</i>	Name of the access list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.
access-list	Specifies that an IP access list is to be used to filter uninteresting traffic from PfR-learned traffic flows.				
<i>access-list-name</i>	Name of the access list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.				

Command Default Uninteresting traffic is not filtered from PfR traffic flows using an access list.

Command Modes PfR Top Talker and Top Delay learning configuration (config-pfr-mc-learn)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines PfR is used to optimize the performance of selected traffic flows in your network. While defining the selected traffic flows, this command is used to filter out traffic that you are not interested in optimizing.

The **traffic-class filter** command can be used with the **traffic-class aggregate** (PfR) and **traffic-class keys** (PfR) commands to configure the master controller to automatically learn defined application traffic. Only one access list can be specified, but the access list may contain many access list entries (ACEs) to help define the traffic class parameters.

Examples

The following example, starting in global configuration mode, shows the commands used to configure the master controller to automatically learn defined application traffic. In this example, two access lists are created to identify and define voice traffic in the network. Using the **traffic-class aggregate** (PfR) and the **traffic-class filter** commands with the access lists, only voice traffic with a Differentiated Services Code Point (DSCP) bit set to ef, a User Datagram Protocol (UDP), and a destination port in the range of 3000 to 4000 is learned and added to the PfR application database on the master controller.

```
Router(config)# ip access-list extended voice-filter-acl
Router(config-ext-nacl)# permit udp any 10.1.0.0 0.0.255.255 dscp ef
Router(config-ext-nacl)# exit
Router(config)# ip access-list extended voice-agg-acl
Router(config-ext-nacl)# permit udp any any range 3000 4000 dscp ef
Router(config-ext-nacl)# exit
Router(config)# pfr master
```

traffic-class filter (PfR)

```

Router(config-pfr-mc)# learn
Router(config-pfr-mc-learn)# aggregation-type prefix-length 24
Router(config-pfr-mc-learn)# throughput
Router(config-pfr-mc-learn)# traffic-class filter access-list voice-filter-acl
Router(config-pfr-mc-learn)# traffic-class aggregate access-list voice-agg-acl
Router(config-pfr-mc-learn)# traffic-class keys dscp protocol dport
Router(config-pfr-mc-learn)# end

```

Related Commands	Command	Description
	aggregation-type (PfR)	Configures a PfR master controller to aggregate learned prefixes based on the type of traffic flow.
	ip access-list	Defines a standard or extended IP access list.
	learn (PfR)	Enters PfR Top Talker and Top Delay learning configuration mode to configure prefixes for PfR to learn.
	list (PfR)	Creates a PfR learn list to specify criteria for learning traffic classes and enters learn list configuration mode.
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
	traffic-class aggregate (PfR)	Aggregates PfR learned traffic flows into application traffic classes using an access list.
	traffic-class keys (PfR)	Specifies a key list used by a PfR border router to aggregate the traffic flows into learned application classes.

traffic-class keys (PfR)

To specify a key list of fields in the traffic flows that a Performance Routing (PfR) border router uses to aggregate traffic flows into application traffic classes, use the **traffic-class keys** command in PfR Top Talker and Top Delay learning configuration mode. To remove the key list, use the **no** form of this command.

```
traffic-class keys [{default|[dscp] [protocol [dport] [sport]]}]
no traffic-class keys [{default|[dscp] [protocol [dport] [sport]]}]
```

Syntax Description	default (Optional) Aggregates the traffic flows into application traffic classes on the basis of protocol and destination port.
dscp	(Optional) Aggregates the traffic flows into application traffic classes on the basis of a Differentiated Services Code Point (DSCP) value.
protocol	(Optional) Aggregates the traffic flows into application traffic classes on the basis of the protocol.
dport	(Optional) Aggregates the traffic flows into application traffic classes on the basis of the destination port.
sport	(Optional) Aggregates the traffic flows into application traffic classes on the basis of the source port.

Command Default No PfR traffic class key lists are created.

Command Modes PfR Top Talker and Top Delay learning configuration (config-pfr-mc-learn)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **traffic-class keys** command can be used with the **traffic-class filter** (PfR) and **traffic-class aggregate** (PfR) commands to configure the master controller to automatically learn defined application traffic. This command is used only if the **traffic-class aggregate** (PfR) command is not configured or returns no matches.

Examples In this example, only voice traffic with a DSCP bit set to ef, a User Datagram Protocol (UDP), and a destination port in the range of 3000 to 4000 is learned and added to the PfR application database on the master controller.

```
Router(config)# ip access-list extended voice-filter-acl
Router(config-ext-nacl)# permit udp any 10.1.0.0 0.0.255.255 dscp ef
Router(config-ext-nacl)# exit
Router(config)# ip access-list extended voice-agg-acl
Router(config-ext-nacl)# permit udp any any range 3000 4000 dscp ef
Router(config-ext-nacl)# exit
Router(config)# pfr master
```

traffic-class keys (PfR)

```

Router(config-pfr-master)# learn
Router(config-pfr-master-learn)# aggregation-type prefix-length 24
Router(config-pfr-master-learn)# throughput
Router(config-pfr-master-learn)# traffic-class filter access-list voice-filter-acl
Router(config-pfr-master-learn)# traffic-class aggregate access-list voice-agg-acl
Router(config-pfr-master-learn)# traffic-class keys dscp protocol dport
Router(config-pfr-master-learn)# end

```

Related Commands

Command	Description
learn (PfR)	Enters PfR Top Talker and Top Delay learning configuration mode to configure prefixes for PfR to learn.
pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
traffic-class aggregate (PfR)	Aggregates PfR-learned traffic flows into application traffic classes using an access list.
traffic-class filter (PfR)	Filters uninteresting traffic from PfR-learned traffic flows using an access list.

traffic-class prefix-list (PfR)

To define a Performance Routing (PfR) traffic class using a prefix list applied to learned traffic classes, use the **traffic-class prefix-list** command in learn list configuration mode. To disable the definition of PfR-learned traffic flows into traffic classes using a prefix list, use the **no** form of this command.

```
traffic-class prefix-list prefix-list-name [inside]
no traffic-class prefix-list
```

Syntax Description	<table border="1"> <tr> <td><i>prefix-list-name</i></td><td>Name of a prefix list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.</td></tr> <tr> <td>inside</td><td>(Optional) Specifies that the prefix list contains inside prefixes.</td></tr> </table>	<i>prefix-list-name</i>	Name of a prefix list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.	inside	(Optional) Specifies that the prefix list contains inside prefixes.
<i>prefix-list-name</i>	Name of a prefix list. Names cannot contain either a space or quotation marks and must begin with an alphabetic character to distinguish them from numbered access lists.				
inside	(Optional) Specifies that the prefix list contains inside prefixes.				

Command Default PfR application traffic classes are not defined using a prefix list.

Command Modes Learn list configuration (config-pfr-mc-learn-list)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **traffic-class prefix-list** command is used to configure the master controller to automatically learn traffic based only on destination prefixes. Use the optional **inside** keyword to specify prefixes that are within the internal network.

Learn lists are a way to categorize learned traffic classes. In each learn list, different criteria for learning traffic classes including prefixes, application definitions, filters, and aggregation parameters can be configured. A traffic class is automatically learned by PfR based on each learn list criteria, and each learn list is configured with a sequence number. The sequence number determines the order in which learn list criteria are applied. Learn lists allow different PfR policies to be applied to each learn list; in previous releases the traffic classes could not be divided, and a PfR policy was applied to all the traffic classes.



Note

The **traffic-class prefix-list** command, the **traffic-class application** (PfR) command, the **traffic-class application nbar** (PfR) command, and the **traffic-class access-list** (PfR) commands are all mutually exclusive in a PfR learn list. Only one of these commands can be specified per PfR learn list.

Examples

The following example, starting in global configuration mode, shows the commands used to define traffic classes based only on destination prefixes for a learn list named LEARN_PREFIX_TC. The traffic classes are created using the prefix list, LEARN_LIST1, in which every entry in the prefix list defines one destination network of a traffic class. After the prefix list is configured, the master controller automatically learns the traffic classes based on the highest throughput.

traffic-class prefix-list (PfR)

```

Router(config)# ip prefix-list LEARN_LIST1 permit seq 10 10.0.0.0/8
Router(config)# ip prefix-list LEARN_LIST1 permit seq 20 172.16.0.0/16
Router(config)# pfr master
Router(config-pfr-mc)# learn
Router(config-pfr-mc-learn)# list seq 10 refname LEARN_PREFIX_TC
Router(config-pfr-mc-learn-list)# aggregation-type prefix-length 24
Router(config-pfr-mc-learn-list)# traffic-class prefix-list LEARN_LIST1
Router(config-pfr-mc-learn-list)# throughput
Router(config-pfr-mc-learn-list)# end

```

Related Commands	Command	Description
	aggregation-type (PfR)	Configures a PfR master controller to aggregate learned prefixes based on the type of traffic flow.
	ip prefix-list	Creates an entry in a prefix list.
	learn (PfR)	Enters PfR Top Talker and Top Delay learning configuration mode to configure prefixes for PfR to learn.
	list (PfR)	Creates a PfR learn list to specify criteria for learning traffic classes and enters learn list configuration mode.
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.

trap-enable

To enable the generation of Performance Routing (PfR) Simple Network Management Protocol (SNMP) traps for specific PfR traffic class events, use the **trap-enable** command in PfR master controller configuration mode. To disable the generation of PfR SNMP traps, use the **no** form of this command.

trap-enable
no trap-enable

Syntax Description

This command has no arguments or keywords.

Command Default

No PfR SNMP traps are generated for specific PfR traffic class events.

Command Modes

PfR master controller configuration (config-pfr-mc)

Command History

Release	Modification
Cisco IOS XE Release 3.7S	This command was introduced.
15.3(2)T	This command was integrated into Cisco IOS Release 15.3(2)T.

Usage Guidelines

The **trap-enable** command is entered on a master controller in PfR master controller configuration mode.

When the **trap-enable** command is configured in PfR master controller configuration mode a PfR SNMP trap is created under the following conditions:

- When a traffic class moves from being a primary link to a fallback link.
- When a traffic class goes into a default or out-of-policy status.

Examples

The following example shows the commands used to enable the generation of PfR SNMP traps for specific PfR traffic class events:

```
Device> enable
Device# configure terminal
Device(config)# snmp-server host 10.2.2.2 traps public pfr
Device(config)# snmp-server enable traps pfr
Device(config)# pfr-master
Device(config-pfr-mc)# trap-enable
```

Related Commands

Command	Description
pfr	Enters PfR map configuration mode to configure a PfR map to apply policies to selected IP prefixes.
set trap-enable	Configures a PfR map to enable the generation of PfR SNMP traps for specific PfR traffic class events.

trigger-log-percentage

trigger-log-percentage

To change the percentage of out-of-policy (OOP) Performance Routing (PfR) traffic classes that trigger a syslog, use the **trigger-log-percentage** command in PfR master controller configuration mode. To reset the percentage to its default value, use the **no** form of this command.

```
trigger-log-percentage percentage
no trigger-log-percentage
```

Syntax Description	<i>percentage</i> Number, as a percentage. The default is 30.				
Command Default	The default percentage of OOP PfR traffic classes that trigger a syslog is 30 percent.				
Command Modes	PfR master controller configuration (config-pfr-mc)				
Command History	<table border="1"> <thead> <tr> <th>Release</th><th>Modification</th></tr> </thead> <tbody> <tr> <td>Cisco IOS XE Release 3.7S</td><td>This command was introduced.</td></tr> </tbody> </table>	Release	Modification	Cisco IOS XE Release 3.7S	This command was introduced.
Release	Modification				
Cisco IOS XE Release 3.7S	This command was introduced.				
Usage Guidelines	Use the trigger-log-percentage command to change the percentage of OOP traffic classes that trigger a syslog.				
Examples	The following example shows the commands used to change the percentage of OOP traffic classes that trigger a syslog:				
	<pre>Device> enable Device# configure terminal Device(config)# pfr master Device(config-pfr-mc)# trigger-log-percentage 45</pre>				
Related Commands	<table border="1"> <thead> <tr> <th>Command</th><th>Description</th></tr> </thead> <tbody> <tr> <td>pfr master</td><td>Enables a PfR process, configures a router as a PfR master controller, and enters PfR master controller configuration mode.</td></tr> </tbody> </table>	Command	Description	pfr master	Enables a PfR process, configures a router as a PfR master controller, and enters PfR master controller configuration mode.
Command	Description				
pfr master	Enables a PfR process, configures a router as a PfR master controller, and enters PfR master controller configuration mode.				

unreachable (PfR)

To set the relative percentage or maximum number of unreachable hosts that Performance Routing (PfR) permits from an PfR-managed exit link, use the **unreachable** command in PfR master controller configuration mode. To return the maximum number of unreachable hosts to the default value, use the **no** form of this command.

unreachable {relative average|threshold maximum}
no unreachable

Syntax Description	<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="padding: 5px; vertical-align: top;">relative average</td><td style="padding: 5px;">Sets a relative percentage of unreachable hosts based on a comparison of short-term and long-term percentages. The range of values that can be configured for this argument is a number from 1 to a 1000. Each increment represents one tenth of a percent.</td></tr> <tr> <td style="padding: 5px; vertical-align: top;">threshold maximum</td><td style="padding: 5px;">Sets the absolute maximum number of unreachable hosts based on flows per million (fpm). The range of values that can be configured for this argument is from 1 to 1000000.</td></tr> </table>	relative average	Sets a relative percentage of unreachable hosts based on a comparison of short-term and long-term percentages. The range of values that can be configured for this argument is a number from 1 to a 1000. Each increment represents one tenth of a percent.	threshold maximum	Sets the absolute maximum number of unreachable hosts based on flows per million (fpm). The range of values that can be configured for this argument is from 1 to 1000000.
relative average	Sets a relative percentage of unreachable hosts based on a comparison of short-term and long-term percentages. The range of values that can be configured for this argument is a number from 1 to a 1000. Each increment represents one tenth of a percent.				
threshold maximum	Sets the absolute maximum number of unreachable hosts based on flows per million (fpm). The range of values that can be configured for this argument is from 1 to 1000000.				

Command Default PfR uses a default relative percentage of 50 (5-percent) unreachable hosts if this command is not configured or if the **no** form of this command is entered.

Command Modes Master controller configuration (config-pfr-mc)

Command History	Release	Modification
	15.1(2)T	This command was introduced.
	15.0(1)S	This command was integrated into Cisco IOS Release 15.0(1)S.
	Cisco IOS XE Release 3.1S	This command was integrated into Cisco IOS XE Release 3.1S.

Usage Guidelines The **unreachable** command is entered on a master controller in PfR map configuration mode. This command is used to set the relative percentage or the absolute maximum number of unreachable hosts, based on flows per million, that PfR will permit from a PfR managed exit link. If the absolute number or relative percentage of unreachable hosts is greater than the user-defined or the default value, PfR determines that the exit link is out-of-policy and searches for an alternate exit link.

The **relative** keyword is used to configure the relative percentage of unreachable hosts. The relative unreachable host percentage is based on a comparison of short-term and long-term measurements. The short-term measurement reflects the percentage of hosts that are unreachable within a 5-minute period. The long-term measurement reflects the percentage of unreachable hosts within a 60 minute period. The following formula is used to calculate this value:

Relative percentage of unreachable hosts = ((short-term percentage - long-term percentage) / long-term percentage) * 100

The master controller measures the difference between these two values as a percentage. If the percentage exceeds the user-defined or default value, the exit link is determined to be out-of-policy. For example, if 10

unreachable (PfR)

hosts are unreachable during the long-term measurement and 12 hosts are unreachable during short-term measurement, the relative percentage of unreachable hosts is 20-percent.

The **threshold** keyword is used to configure the absolute maximum number of unreachable hosts. The maximum value is based on the actual number of hosts that are unreachable based on fpm.

Examples

The following example shows the commands used to configure the master controller to search for a new exit link when the difference between long- and short-term measurements (relative percentage) is greater than 10-percent:

```
Router(config)# pfr master
Router(config-pfr-mc)# unreachable relative 100
```

The following example shows the commands used to configure PfR to search for a new exit link when 10,000 hosts are unreachable:

```
Router(config)# pfr master
Router(config-pfr-mc)# unreachable threshold 10000
```

Related Commands	Command	Description
	pfr	Enables a PfR process and configures a router as a PfR border router or as a PfR master controller.
	set unreachable (PfR)	Configures a PfR map to set the relative percentage or maximum number of unreachable hosts that PfR permits from a PfR-managed exit link.

vrf (domain configuration)

To configure a Virtual Routing and Forwarding (VRF) instance for a domain, use the **vrf** command in domain configuration mode. To remove VRF instance, use the **no** form of this command.

```
vrf {vrf-name|default}  
no vrf {vrf-name|default}
```

Syntax Description

vrf-name Name of the VRF instance.

default Default VRF.

Command Default

VRF instance is not configured for a domain.

Command Modes

Domain configuration (config-domain)#

Command History

Release	Modification
Cisco IOS XE 3.13S	This command was introduced.

Usage Guidelines

Use the **vrf** command to configure user-defined VRFs for PfRv3 configuration. You can either configure default VRF or specific VRF definitions for master controller and border devices.

Example

The following example shows how to configure VRF:

```
Device> enable  
Device# configure terminal  
Device(config)# domain default  
Device(config-domain)# vrf default  
Device(config-domain)# vrf vrf-cisco
```

