

IPv6 ACL Extensions for Hop by Hop Filtering

The IPv6 ACL Extensions for Hop by Hop Filtering feature allows you to control IPv6 traffic that might contain hop-by-hop extension headers. You can configure an access control list (ACL) to deny all hop-by-hop traffic or to selectively permit traffic based on protocol.

- Finding Feature Information, on page 1
- Information About IPv6 ACL Extensions for Hop by Hop Filtering, on page 1
- How to Configure IPv6 ACL Extensions for Hop by Hop Filtering, on page 2
- Configuration Example for IPv6 ACL Extensions for Hop by Hop Filtering, on page 3
- Additional References, on page 4
- Feature Information for IPv6 ACL Extensions for Hop by Hop Filtering, on page 5

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest caveats and feature information, see Bug Search Tool and the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the feature information table.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Information About IPv6 ACL Extensions for Hop by Hop Filtering

ACLs and Traffic Forwarding

IPv6 access control lists (ACLs) determine what traffic is blocked and what traffic is forwarded at device interfaces. ACLs allow filtering based on source and destination addresses, inbound and outbound to a specific interface. Use the **ipv6 access-list** command to define an IPv6 ACL, and the **deny** and **permit** commands to configure its conditions.

The IPv6 ACL Extensions for Hop by Hop Filtering feature implements RFC 2460 to support traffic filtering in any upper-layer protocol type.

How to Configure IPv6 ACL Extensions for Hop by Hop Filtering

Configuring IPv6 ACL Extensions for Hop by Hop Filtering

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. ipv6 access-list access-list-name
- 4. permit protocol {source-ipv6-prefix/prefix-length | any | host source-ipv6-address | auth} [operator [port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address | auth} [operator [port-number]] [dest-option-type [header-number | header-type]] [dscp value] [flow-label value] [fragments] [hbh] [log] [log-input] [mobility] [mobility-type [mh-number | mh-type]] [reflect name [timeout value]] [routing] [routing-type routing-number] [sequence value] [time-range name]
- 5. deny protocol {source-ipv6-prefix/prefix-length | any | host source-ipv6-address | auth} [operator [port-number]] {destination-ipv6-prefix/prefix-length | any | host destination-ipv6-address | auth} [operator [port-number]] [dest-option-type [header-number | header-type]] [dscp value] [flow-label value] [fragments] [hbh] [log] [log-input] [mobility] [mobility-type [mh-number | mh-type]] [routing-type routing-number] [sequence value] [time-range name] [undetermined-transport]
- 6. end

DETAILED STEPS

	Command or Action	Purpose	
Step 1	enable	Enables privileged EXEC mode.	
	Example:	• Enter your password if prompted.	
	Device> enable		
Step 2	configure terminal	Enters global configuration mode.	
	Example:		
	Device# configure terminal		
Step 3	ipv6 access-list access-list-name	Defines an IPv6 ACL and enters IPv6 access list	
	Example:	configuration mode.	
	Device(config)# ipv6 access-list hbh-acl		
Step 4	permit protocol {source-ipv6-prefix/prefix-length any	Sets permit conditions for the IPv6 ACL.	
·	host source-ipv6-address auth } [operator [port-number]]		
	{destination-ipv6-prefix/prefix-length any host		
	destination-ipv6-address auth} [operator [port-number]]		
	[dest-option-type [header-number header-type]] [dscp		
	value] [flow-label value] [fragments] [hbh] [log]		
	[log-input] [mobility] [mobility-type [mh-number		
	mh-type]] [reflect name [timeout value]] [routing]		

	Command or Action	Purpose
	[routing-type routing-number] [sequence value] [time-range name]	
	Example:	
	Device(config-ipv6-acl)# permit icmp any any dest-option-type	
Step 5	deny protocol {source-ipv6-prefix/prefix-length any host source-ipv6-address auth} [operator [port-number]] {destination-ipv6-prefix/prefix-length any host destination-ipv6-address auth} [operator [port-number]] [dest-option-type [header-number header-type]] [dscp value] [flow-label value] [fragments] [hbh] [log] [log-input] [mobility] [mobility-type [mh-number mh-type]] [routing] [routing-type routing-number] [sequence value] [time-range name] [undetermined-transport]	
	Example:	
	Device(config-ipv6-acl)# deny icmp any any dest-option-type	
Step 6	end	Returns to privileged EXEC configuration mode.
	Example:	
	Device (config-ipv6-acl)# end	

Configuration Example for IPv6 ACL Extensions for Hop by Hop Filtering

Example: IPv6 ACL Extensions for Hop by Hop Filtering

```
Device(config)# ipv6 access-list hbh_acl
Device(config-ipv6-acl)# permit tcp any any hbh
Device(config-ipv6-acl)# permit tcp any any
Device(config-ipv6-acl)# permit udp any any
Device(config-ipv6-acl)# permit udp any any hbh
Device(config-ipv6-acl)# permit hbh any any
Device(config-ipv6-acl)# permit any any
Device(config-ipv6-acl)# permit any any
Device(config-ipv6-acl)# hardware statistics
Device(config-ipv6-acl)# exit

! Assign an IP address and add the ACL on the interface.

Device(config-if)# interface FastEthernet3/1
Device(config-if)# ipv6 address 1001::1/64
Device(config-if)# ipv6 traffic-filter hbh_acl in
Device(config-if)# exit

Device(config)# exit
```

```
Device# clear counters
Clear "show interface" counters on all interfaces [confirm]
Device#
! Verify the configurations.

Device# show running-config interface FastEthernet3/1

Building configuration...

Current configuration : 114 bytes
!
interface FastEthernet3/1
no switchport
ipv6 address 1001::1/64
ipv6 traffic-filter hbh_acl
```

Additional References

Related Documents

Related Topic	Document Title
IPv6 addressing and connectivity	IPv6 Configuration Guide
Cisco IOS commands	Cisco IOS Master Commands List, All Releases
IPv6 commands	Cisco IOS IPv6 Command Reference
Cisco IOS IPv6 features	Cisco IOS IPv6 Feature Mapping

Standards and RFCs

Standard/RFC	Title
RFCs for IPv6	IPv6 RFCs

MIBs

MIB	MIBs Link
	To locate and download MIBs for selected platforms, Cisco IOS releases, and feature sets, use Cisco MIB Locator found at the following URL:
	http://www.cisco.com/go/mibs

Technical Assistance

Description	Link
The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.	

Feature Information for IPv6 ACL Extensions for Hop by Hop Filtering

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Table 1: Feature Information for IPv6 ACL Extensions for Hop by Hop Filtering

Feature Name	Releases	Feature Information
IPv6 ACL Extensions for Hop by Hop Filtering	Cisco IOS Release XE 3.4S Cisco IOS Release XE 3.5S Cisco IOS Release XE 3.6S Cisco IOS Release XE 3.3SG	Allows you to control IPv6 traffic that might contain hop-by-hop extension headers. The following commands were introduced or modified: deny (IPv6), permit (IPv6).

Feature Information for IPv6 ACL Extensions for Hop by Hop Filtering