



# Configuring SIP 181 Call is Being Forwarded Message

**Last Updated: December 20, 2011**

You can configure support for SIP 181 Call is Being Forwarded messages either globally or on a specific dial-peer. Use the **block** command in voice service SIP configuration mode to globally configure Cisco IOS voice gateways and Cisco UBEs to drop specified SIP provisional response messages. To configure settings for an individual dial peer, use the **voice-class sip block** command in dial peer voice configuration mode. Both globally and at the dial peer level, you can also use the **sdp** keyword to further control when the specified SIP message is dropped based on either the absence or presence of SDP information.

Additionally, you can use commands introduced for this feature to configure a Cisco UBE, either globally or at the dial peer level, to map specific received SIP provisional response messages to a different SIP provisional response message on the outgoing SIP dial peer. To do so, use the **map resp-code** command in voice service SIP configuration mode for global configuration or, to configure a specific dial peer, use the **voice-class sip map resp-code** in dial peer voice configuration mode.

This section contains the following tasks:

- [Finding Feature Information, page 1](#)
- [Prerequisites for SIP 181 Call is Being Forwarded Message, page 2](#)
- [Configuring SIP 181 Call is Being Forwarded Message Globally, page 2](#)
- [Configuring SIP 181 Call is Being Forwarded Message at the Dial-Peer Level, page 3](#)
- [Configuring Mapping of SIP Provisional Response Messages Globally, page 4](#)
- [Configuring Mapping of SIP Provisional Response Messages at the Dial-Peer Level, page 6](#)
- [Feature Information for Configuring SIP 181 Call is Being Forwarded Message, page 7](#)

## Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.



**Americas Headquarters:**  
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

# Prerequisites for SIP 181 Call is Being Forwarded Message

## Cisco Unified Border Element

Cisco IOS Release 15.0(1)XA or a later release must be installed and running on your Cisco Unified Border Element.

## Cisco Unified Border Element (Enterprise)

- Cisco IOS XE Release 3.1S or a later release must be installed and running on your Cisco ASR 1000 Series Router.

# Configuring SIP 181 Call is Being Forwarded Message Globally

Perform this task to configure support for SIP 181 messages at a global level in SIP configuration (conf-serv-sip) mode.

## SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **voice service voip**
4. **sip**
5. **block {180 | 181 | 183} [sdp {absent | present}]**
6. **exit**

## DETAILED STEPS

	Command or Action	Purpose
Step 1	<b>enable</b>  Example: Router> enable	Enters privileged EXEC mode, or other security level set by a system administrator.  • Enter your password if prompted.
Step 2	<b>configure terminal</b>  Example: Router# configure terminal	Enters global configuration mode.

Command or Action	Purpose
<b>Step 3</b> <code>voice service voip</code>  <b>Example:</b> <code>Router(config)# voice service voip</code>	Enters voice service VoIP configuration mode.
<b>Step 4</b> <code>sip</code>  <b>Example:</b> <code>Router(conf-voi-serv)# sip</code>	Enters SIP configuration mode.
<b>Step 5</b> <code>block {180   181   183} [sdp {absent   present}]</code>  <b>Example:</b> <code>Router(conf-serv-sip)# block 181 sdp present</code>	Configures support of SIP 181 messages globally so that messages are passed as is. The <code>sdp</code> keyword is optional and allows for dropping or passing of SIP 181 messages based on the presence or absence of SDP.
<b>Step 6</b> <code>exit</code>  <b>Example:</b> <code>Router(conf-serv-sip)# exit</code>	Exits the current mode.

## Configuring SIP 181 Call is Being Forwarded Message at the Dial-Peer Level

Perform this task to configure support for SIP 181 messages at the dial-peer level, in dial peer voice configuration (`config-dial-peer`) mode.

### SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `dial-peer voice tag voip`
4. `voice-class sip block {180 | 181 | 183} [sdp {absent | present}]`
5. `exit`

## DETAILED STEPS

Command or Action	Purpose
<p><b>Step 1</b> <code>enable</code></p> <p><b>Example:</b></p> <pre>Router&gt; enable</pre>	<p>Enters privileged EXEC mode, or other security level set by a system administrator.</p> <ul style="list-style-type: none"> <li>Enter your password if prompted.</li> </ul>
<p><b>Step 2</b> <code>configure terminal</code></p> <p><b>Example:</b></p> <pre>Router# configure terminal</pre>	<p>Enters global configuration mode.</p>
<p><b>Step 3</b> <code>dial-peer voice tag voip</code></p> <p><b>Example:</b></p> <pre>Router(config)# dial-peer voice 2 voip</pre>	<p>Enters dial peer VoIP configuration mode.</p>
<p><b>Step 4</b> <code>voice-class sip block {180   181   183} [sdp {absent   present}]</code></p> <p><b>Example:</b></p> <pre>Router(config-dial-peer)# voice-class sip block 181 sdp present</pre>	<p>Configures support of SIP 181 messages on a specific dial peer so that messages are passed as is. The sdp keyword is optional and allows for dropping or passing of SIP 181 messages based on the presence or absence of SDP.</p>
<p><b>Step 5</b> <code>exit</code></p> <p><b>Example:</b></p> <pre>Router(config-dial-peer)# exit</pre>	<p>Exits the current mode.</p>

## Configuring Mapping of SIP Provisional Response Messages Globally

Perform this task to configure mapping of specific received SIP provisional response messages at a global level in SIP configuration (conf-serv-sip) mode.

**SUMMARY STEPS**

1. enable
2. configure terminal
3. voice service voip
4. sip
5. map resp-code 181 to 183
6. exit

**DETAILED STEPS**

Command or Action	Purpose
<b>Step 1</b> enable  <b>Example:</b> Router> enable	Enters privileged EXEC mode, or other security level set by a system administrator. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b> configure terminal  <b>Example:</b> Router# configure terminal	Enters global configuration mode.
<b>Step 3</b> voice service voip  <b>Example:</b> Router(config)# voice service voip	Enters voice service VoIP configuration mode.
<b>Step 4</b> sip  <b>Example:</b> Router(conf-voi-serv)# sip	Enters SIP configuration mode.
<b>Step 5</b> map resp-code 181 to 183  <b>Example:</b> Router(conf-serv-sip)# map resp-code 181 to 183	Enables mapping globally of received SIP messages of a specified message type to a different SIP message type.

Command or Action	Purpose
<b>Step 6</b> <code>exit</code>  <b>Example:</b>  <code>Router(conf-serv-sip)# exit</code>	Exits the current mode.

## Configuring Mapping of SIP Provisional Response Messages at the Dial-Peer Level

Perform this task to configure mapping of received SIP provisional response messages at the dial-peer level, in dial peer voice configuration (config-dial-peer) mode.

### SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `dial-peer voice tag voip`
4. `voice-class sip map resp-code 181 to 183`
5. `exit`

### DETAILED STEPS

Command or Action	Purpose
<b>Step 1</b> <code>enable</code>  <b>Example:</b>  <code>Router&gt; enable</code>	Enters privileged EXEC mode, or other security level set by a system administrator. <ul style="list-style-type: none"> <li>• Enter your password if prompted.</li> </ul>
<b>Step 2</b> <code>configure terminal</code>  <b>Example:</b>  <code>Router# configure terminal</code>	Enters global configuration mode.
<b>Step 3</b> <code>dial-peer voice tag voip</code>  <b>Example:</b>  <code>Router(config)# dial-peer voice 2 voip</code>	Enters dial peer VoIP configuration mode.

Command or Action	Purpose
<p><b>Step 4</b> <code>voice-class sip map resp-code 181 to 183</code></p> <p><b>Example:</b></p> <pre>Router(config-dial-peer)# voice-class sip map resp-code 181 to 183</pre>	Enables mapping of received SIP messages of a specified SIP message type on a specific dial peer to a different SIP message type.
<p><b>Step 5</b> <code>exit</code></p> <p><b>Example:</b></p> <pre>Router(config-dial-peer)# exit</pre>	Exits the current mode.

## Feature Information for Configuring SIP 181 Call is Being Forwarded Message

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to [www.cisco.com/go/cfn](http://www.cisco.com/go/cfn). An account on Cisco.com is not required.

Feature History Table entry for the Cisco Unified Border Element.

**Table 1** Feature Information for SIP 181 Call is Being Forwarded Messages

Feature Name	Releases	Feature Information
SIP 181 Call is Being Forwarded Message	12.2(13)T	<p>This feature allows users to configure support for SIP 181 Call is Being Forwarded messages either globally or on a specific dial-peer.</p> <p>This feature includes the following new or modified commands: <b>block</b>, <b>map resp-code</b>, <b>voice-class sip block</b>, <b>voice-class sip map resp-code</b>.</p>

Feature History Table entry for the Cisco Unified Border Element (Enterprise).

**Table 2**      **Feature Information for SIP 181 Call is Being Forwarded Messages**

Feature Name	Releases	Feature Information
SIP 181 Call is Being Forwarded Message	Cisco IOS XE Release 3.1S	<p>This feature allows users to configure support for SIP 181 Call is Being Forwarded messages either globally or on a specific dial-peer.</p> <p>This feature includes the following new or modified commands: <b>block</b>, <b>map resp-code</b>, <b>voice-class sip block</b>, <b>voice-class sip map resp-code</b>.</p>

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: [www.cisco.com/go/trademarks](http://www.cisco.com/go/trademarks). Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2011 Cisco Systems, Inc. All rights reserved.