

Codec Preference Lists

This chapter describes how to negotiate an audio codec from a list of codec associated with a preference. This chapter also describes how to disable codec filtering by configuring CUBE to send an outgoing offer with all configured audio codecs in the list assuming that the dspfarm supports all these codecs.

- Feature Information for Negotiation of an Audio Codec from a List of Codecs, page 1
- Codecs configured using Preference Lists, page 2
- Prerequisites for Codec Preference Lists, page 3
- Restrictions for Codecs Preference Lists, page 3
- How to Configure Codec Preference Lists, page 4
- Troubleshooting Negotiation of an Audio Codec from a List of Codecs, page 7
- Verifying Negotiation of an Audio Codec from a List of Codecs, page 7

Feature Information for Negotiation of an Audio Codec from a List of Codecs

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to . An account on Cisco.com is not required.

Feature Name	Releases	Feature Information				
Negotiation of an Audio Codec from a List of Codecs on Each Leg of a SIP-to-SIP Call on the Cisco Unified Border Element	15.1(2)T	The Negotiation of an Audio Codec from a List of Codecs on Each Leg of a SIP-to-SIP Call on the Cisco Unified Border Element feature supports negotiation of an audio codec using the Voice Class Codec and Codec Transparent infrastructure on the Cisco UBE. The following command was introduced or modified: voice-class codec (dial peer).				
Negotiation of an Audio Codec from a List of Codecs on Each Leg of a SIP-to-SIP Call on the Cisco Unified Border Element	Cisco IOS XE Release 3.8S	The Negotiation of an Audio Codec from a List of Codecs on Each Leg of a SIP-to-SIP Call on the Cisco Unified Border Element feature supports negotiation of an audio codec using the Voice Class Codec and Codec Transparent infrastructure on the Cisco UBE. The following command was introduced or modified: voice-class codec (dial peer).				
Negotiation of an Audio Codec from a List of Codecs on Each Leg of a SIP-to-SIP Call on the Cisco Unified Border Element.	15.3(2)T	This feature provides high availability support for negotiation of an audio codec from a list of codecs on each leg of a SIP-to-SIP call on the Cisco Unified Border Element under the Voice Class Codec.				

Table 1: Feature Information for Negotiation of an Audio Codec from a List of Codecs on Each Leg of a SIP-to-SIP Call on the Cisco Unified Border Element

Codecs configured using Preference Lists

SIP-to-SIP calls configured using codecs using preference lists have the following features:

- Incoming and outgoing dial-peers can be configured with different preference lists.
- Both normal transcoding and high-density transcoding are supported with preference lists.
- Mid-call codec changes for supplementary services are supported with preference lists. Transcoder resources are dynamically inserted or deleted when there is a codec or RTP-NTE to inband DTMF interworking required.

- Reinvite-based supplementary services invoked from the Cisco Unified Communications Manager (CUCM), like call hold, call resume, music on hold (MOH), call transfer, and call forward are supported with preference lists.
- T.38 fax and fax passthrough switchover with preference lists are supported.
- Reinvite-based call hold and call resume for Secure Real-Time Transfer protocol (SRTP) and Real-Time Transport Protocol (RTP) interworking on CUBE is supported with preference lists.
- High availability is supported for calls that use codecs with preference lists. But calls requiring the transcoder to be invoked are not checkpointed. During mid-call renegotiation, if the call releases the transcoder, then the call is checkpointed.

Prerequisites for Codec Preference Lists

- Transcoding configuration on the CUBE.
- The digital signal processor (DSP) requirements to support the transcoding feature on the CUBE.

Restrictions for Codecs Preference Lists

For All Calls (SIP-to-SIP, H323-to-H323, SIP-to-H323 calls)

- Video codecs are not supported with preference lists.
- Multiple audio streams are not supported.
- High-density transcoding is not supported when delayed offer to early offer is configured. Only low
 density transcoding is supported.
- · Codec re-packetization feature is not supported when preference lists are configured.

For H323-to-H323 and SIP-to-H323 Calls

The below restrictions do not exist for SIP-to-SIP calls from 15.1(2)T and Cisco IOS XE Release 3.8S onwards.

- You can configure dissimilar preference lists on the incoming and outgoing dial peers.
- Incoming and outgoing dial-peers cannot be configured with the different preference lists.
- Transcoding is not supported when preference lists are used.
- Mid-call codec changes and supplementary services (call-hold / resume, call forward) do not work when a preference list is configured.
- Mid-call insertion or deletion of transcoder is not supported with preference lists.
- Rotary dial peers are not supported when preference lists are used.
- Both incoming and outgoing dial-peers need to be configured with the same codec voice classes.
- The preference of codecs configured in a codec voice classes is not be applied to the outgoing call-leg. Basically codec filtering is applied first and only the filtered codecs will be sent out in the outgoing offer from CUBE.

15M&T

- T.38 fax, fax-passthru and modem-passthru is not be supported with preference lists.
- SRTP<->RTP is not supported with preference lists.
- When a codec voice class is configured, call establishment is un-predictable when a transcoder is involved in the call. The call succeeds only if the end points choose the first codec in the list of offered codecs.

How to Configure Codec Preference Lists

Configuring Audio Codecs Using a Codec Voice Class and Preference Lists

Preferences can be used to determine which codecs will be selected over others.

A codec voice class is a construct within which a codec preference order can be defined. A codec voice class can then be applied to a dial peer, which then follows the preference order defined in the codec voice class.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- **3**. voice class codec *tag*
- 4. Do the following for each audio codec you want to configure in the voice class:
 - codec preference value codec-type[bytes payload-size fixed-bytes]
 - codec preference value isac [mode {adaptive | independent} [bit-rate value framesize { 30 | 60 } [fixed]]
 - codec preference value ilbc [mode frame-size [bytes payload-size]]
 - codec preference value mp4-latm [profile tag]
- 5. exit
- 6. dial-peer voice number voip
- 7. voice-class codec tag offer-all
- 8. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example: Device> enable	• Enter your password if prompted.
Step 2	configure terminal	Enters global configuration mode.
	Example: Device> configure terminal	



	Command or Action	Purpose			
Step 3	voice class codec tag	Enters voice-class configuration mode for the specific codec voice class.			
	<pre>Example: Device(config)# voice class codec 10</pre>				
Step 4	 Do the following for each audio codec you want to configure in the voice class: codec preference value codec-type[bytes payload-size fixed-bytes] 	Configure a codec within the voice class and specifies a preference for the codec. This becomes part of a preference list			
	• codec preference <i>value</i> isac [mode {adaptive independent} [bit-rate <i>value</i> framesize { 30 60 } [fixed]]				
	• codec preference value ilbc [mode frame-size [bytes payload-size]]				
	• codec preference value mp4-latm [profile tag]				
Step 5	exit	Exits the current mode.			
	Example: Device(config-class)# exit	• Enter your password if prompted.			
Step 6	dial-peer voice number voip	Enters dial peer configuration mode for the specified VoIP dial peer.			
	<pre>Example: Device(config)# dial-peer voice 1 voip</pre>				
Step 7	voice-class codec <i>tag</i> offer-all	Applies the previously configured voice class and associated codecs to a dial peer.			
	<pre>Example: Device(config-dial-peer)# voice-class codec 10</pre>	• The offer-all keyword allows the device to offer all codecs configured in a codec voice class.			
Step 8	end	Returns to privileged EXEC mode.			
	<pre>Example: Device(config-dial-peer)# end</pre>				

Disabling Codec Filtering

I

Cisco UBE is configured to filter common codecs for the subsets, by default. The filtered codecs are sent in the outgoing offer. You can configure the Cisco UBE to offer all the codecs configured on an outbound leg instead of offering only the filtered codecs.

5

15M&T



This configuration is applicable only for early offer calls from the Cisco UBE. For delayed offer calls, by default all codecs are offered irrespective of this configuration.

Perform this task to disable codec filtering and allow all the codecs configured on an outbound leg.

SUMMARY STEPS

- 1. enable
- 2. configure terminal
- 3. dial-peer voice tag voip
- 4. voice-class codec tag offer-all
- 5. end

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable	Enables privileged EXEC mode.
	Example:	• Enter your password if prompted.
	Device> enable	
Step 2	configure terminal	Enters global configuration mode.
	Example:	
	Device# configure terminal	
Step 3	dial-peer voice tag voip	Enters dial peer voice configuration mode.
	Example:	
	Device(config)# dial-peer voice 10 voip	
Step 4	voice-class codec tag offer-all	Adds all the configured voice class codec to the outgoing offer from the Cisco UBE.
	Example:	
	Device(config-dial-peer)# voice-class codec 10 offer-all	
Step 5	end	Exits the dial peer voice configuration mode.
	Example:	
	Device(config-dial-peer)# end	



Troubleshooting Negotiation of an Audio Codec from a List of Codecs

Use the following commands to debug any errors that you may encounter when you configure the Negotiation of an Audio Codec from a List of Codecs on Each Leg of a SIP-to-SIP Call on the Cisco Unified Border Element feature:

- debug ccsip all
- debug voip ccapi input
- debug sccp messages
- debug voip rtp session

For DSP-related debugs, use the following commands:

- debug voip dsmp all
- · debug voip dsmp rtp both payload all
- debug voip ipipgw

Verifying Negotiation of an Audio Codec from a List of Codecs

Perform this task to display information to verify Negotiation of an Audio Codec from a List of Codecs on Each Leg of a SIP-to-SIP Call on the Cisco Unified Border Element configuration. These **show** commands need not be entered in any specific order.

SUMMARY STEPS

- 1. enable
- 2. show call active voice brief
- 3. show voip rtp connections
- 4. show sccp connections
- 5. show dspfarm dsp active

DETAILED STEPS

Step 1 enable Enables privileged EXEC mode.

Step 2 show call active voice brief

Displays a truncated version of call information for voice calls in progress.

Example:

```
Device# show call active voice brief
```

Cisco Unified Border Element Protocol-Independent Features and Setup Configuration Guide, Cisco IOS Release

15M&T

```
<ID>: <CallID> <start>ms.<index> +<connect> pid:<peer id> <dir> <addr> <state>
  dur hh:mm:ss tx:<packets>/<bytes> rx:<packets>/<bytes>
 IP <ip>:<udp> rtt:<time>ms pl:<play>/<gap>ms lost:<lost>/<early>/<late>
 delay:<last>/<min>/<max>ms <codec>
media inactive detected:<y/n> media cntrl rcvd:<y/n> timestamp:<time>
long duration call detected:<y/n> long duration call duration :<sec> timestamp:<time>
 MODEMPASS <method> buf:<fills>/<drains> loss <overall%> <multipkt>/<corrected>
  last <buf event time>s dur:<Min>/<Max>s
 FR <protocol> [int dlci cid] vad:<y/n> dtmf:<y/n> seq:<y/n>
  <codec> (payload size)
ATM <protocol> [int vpi/vci cid] vad:<y/n> dtmf:<y/n> seq:<y/n>
  <codec> (payload size)
 Tele <int> (callID) [channel id] tx:<tot>/<v>/<fax>ms <codec> noise:<l> acom:<l> i/o:<l>/<l> dBm
 MODEMRELAY info:<rcvd>/<sent> xid:<rcvd>/<sent> total:<rcvd>/<sent>/<drops>
        speeds(bps): local <rx>/<tx> remote <rx>/<tx>
Proxy <ip>:<audio udp>,<tcp0>,<tcp1>,<tcp2>,<tcp3> endpt: <type>/<manf>
bw: <req>/<act> codec: <audio>/<video>
  tx: <audio pkts>/<audio bytes>,<video pkts>/<video bytes>,<t120 pkts>/<t120 bytes>
 rx: <audio pkts>/<audio bytes>,<video pkts>/<video bytes>,<t120 pkts>/<t120 bytes>
Telephony call-legs: 0
SIP call-legs: 2
H323 call-legs: 0
Call agent controlled call-legs: 0
SCCP call-legs: 2
Multicast call-legs: 0
Total call-legs: 4
1243 : 11 971490ms.1 +-1 pid:1 Answer 1230000 connecting
 dur 00:00:00 tx:415/66400 rx:17/2561
IP 192.0.2.1:19304 SRTP: off rtt:Oms pl:0/Oms lost:0/0/0 delay:0/0/Oms g711ulaw TextRelay: off
media inactive detected:n media contrl rcvd:n/a timestamp:n/a
 long duration call detected:n long duration call duration:n/a timestamp:n/a
1243 : 12 971500ms.1 +-1 pid:2 Originate 3210000 connected
 dur 00:00:00 tx:5/10 rx:4/8
IP 9.44.26.4:16512 SRTP: off rtt:Oms pl:O/Oms lost:O/O/O delay:O/O/Oms g729br8 TextRelay: off
media inactive detected:n media contrl rcvd:n/a timestamp:n/a
long duration call detected:n long duration call duration:n/a timestamp:n/a
    : 13 971560ms.1 +0 pid:0 Originate connecting
0
dur 00:00:08 tx:415/66400 rx:17/2561
IP 192.0.2.2:2000 SRTP: off rtt:Oms pl:0/Oms lost:0/0/0 delay:0/0/Oms g711ulaw TextRelay: off
media inactive detected:n media contrl rcvd:n/a timestamp:n/a
 long duration call detected:n long duration call duration:n/a timestamp:n/a
     : 15 971570ms.1 +0 pid:0 Originate connecting
dur 00:00:08 tx:5/10 rx:3/6
IP 192.0.2.3:2000 SRTP: off rtt:Oms pl:O/Oms lost:O/O/O delay:O/O/Oms g729br8 TextRelay: off
media inactive detected:n media contrl rcvd:n/a timestamp:n/a
 long duration call detected:n long duration call duration:n/a timestamp:n/a
Telephony call-legs: 0
SIP call-legs: 2
H323 call-legs: 0
Call agent controlled call-legs: 0
SCCP call-legs: 2
Multicast call-legs: 0
Total call-legs: 4
```

Step 3 show voip rtp connections

Displays Real-Time Transport Protocol (RTP) connections.

Example:

Devic	e# s	show	voip	rtp	connec	tions	
VoIP 1	RTP	acti	ve co	onnec	tions	:	

No. Ca 1 192.0.	11	stCallId Lo 12	ocalRTP Rr 16662		LocalIP 192.0.2.1
192.0. 2 192.0.	12	11	17404	16512	192.0.2.2
3	13	14	18422	2000	192.0.2.4
4		14	16576	2000	192.0.2.6

RemoteIP

Cisco Unified Border Element Protocol-Independent Features and Setup Configuration	Guide, Cisco IOS
Release 15M&T	

192.0.2.5 Found 4 active RTP connections

Step 4 show sccp connections

Displays information about the connections controlled by the Skinny Client Control Protocol (SCCP) transcoding and conferencing applications.

Example:

Device# show sccp connections sess_id conn_id stype mode codec sport rport ripaddr 5 5 xccde sendrecv g729b 16576 2000 192.0.2.3 5 6 xcode sendrecv g711u 18422 2000 192.0.2.4 Total number of active session(s) 1, and connection(s) 2

Step 5 show dspfarm dsp active

Displays active DSP information about the DSP farm service.

Example:

Device# show dspfarm dsp active													
SLOT	DSP	VERSION	STATUS	CHNL	USE	TYPE	RSC ID	BRIDGE	ID	PKTS	TXED	PKTS	RXED
0	1	27.0.201	UP	1	USED	xcode	1	0x9 -		5	_	8	_
0	1	27.0.201	UP	1	USED	xcode	1	0x8		255	58	17	
Tota	Total number of DSPFARM DSP channel(s) 1												

٦