



Configurable SIP Parameters via DHCP

Last Updated: December 20, 2011

The Configurable SIP Parameters via DHCP feature allows a Dynamic Host Configuration Protocol (DHCP) server to provide Session Initiation Protocol (SIP) parameters via a DHCP client. These parameters are used for user registration and call routing.

The DHCP server returns the SIP Parameters via DHCP options 120 and 125. These options are used to specify the SIP user registration and call routing information. The SIP parameters returned are the SIP server address via Option 120, and vendor-specific information such as the pilot, contract or primary number, an additional range of secondary numbers, and the SIP domain name via Option 125.

In the event of changes to the SIP parameter values, this feature also allows a DHCP message called DHCPFORCERENEW to reset or apply a new set of values.

The SIP parameters provisioned by DHCP are stored, so that on reboot they can be reused.

- [Finding Feature Information, page 1](#)
- [Prerequisites for Configurable SIP Parameters via DHCP, page 1](#)
- [Restrictions for Configurable SIP Parameters via DHCP, page 2](#)
- [Information About Configurable SIP Parameters via DHCP, page 2](#)
- [How to Configure SIP Parameters via DHCP, page 6](#)
- [Feature Information for Configurable SIP Parameters via DHCP, page 14](#)

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the Feature Information Table at the end of this document.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Prerequisites for Configurable SIP Parameters via DHCP



Americas Headquarters:
Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

- A DHCP interface has to be associated with SIP before configurable SIP parameters via DHCP can be enabled.

Cisco Unified Border Element

- Cisco IOS Release 12.4(22)YB or a later release must be installed and running on your Cisco Unified Border Element.

Cisco Unified Border Element (Enterprise)

- Cisco IOS XE Release <TBD> or a later release must be installed and running on your Cisco ASR 1000 Series Router.

Restrictions for Configurable SIP Parameters via DHCP

- DHCP Option 120 is the standard DHCP option (RFC3361) to get a SIP server address, and this can be used by any vendor DHCP server. Only one address is supported, which is in the IPv4 address format. Multiple IPv4 address entries are not supported. Also, there is no support for a DNS name in this or for any port number given behind the IPv4 address.
- DHCP Option 125 (RFC 3925) provides vendor-specific information and its interpretation is associated with the enterprise identity. The primary and secondary phone numbers and domain are obtained using Option 125, which is vendor-specific. As long as other customers use the same format as in the Next Generation Network (NGN) DHCP specification, they can use this feature.
- A primary or contract number is required in suboption 202 of DHCP Option 125. There can be only one instance of the primary number and not multiple instances.
- Multiple secondary or numbers in suboption 203 of DHCP Option 125 are supported. Up to five numbers are accepted and the rest ignored. Also, they have to follow the contract number in the DHCP packet data.
- Authentication is not supported for REGISTER and INVITE messages sent from a Cisco Unified Border Element that uses DHCP provisioning
- The DHCP provisioning of SIP Parameters is supported only over one DHCP interface.
- The DHCP option is available only to be configured for the primary registrar. It will not be available for a secondary registrar.

Information About Configurable SIP Parameters via DHCP

To perform basic Configurable SIP Parameters via DHCP configuration tasks, you should understand the following concepts:

Cisco Unified Border Element Support for Configurable SIP Parameters via DHCP

The Cisco Unified Border Element provides the support for the DHCP provisioning of the SIP parameters.

The NGN is modeled using SIP as a VoIP protocol. In order to connect to NGN, the User to Network Interface (UNI) specification is used. Cisco TelePresence Systems (CTS), consisting of an IP Phone, a codec, and Cisco Unified Communications Manager, are required to interconnect over the NGN for point-to-point and point-to-multipoint video calls. Because Cisco Unified Communications Manager does not provide a UNI interface, there has to be an entity to provide the UNI interface. The Cisco Unified Border

Element provides the UNI interface and has several advantages such as demarcation, delayed offer to early offer, and registration.

The figure below shows the Cisco Unified Border Element providing the UNI interface for the NGN.

Figure 1 Cisco NGN with Cisco Unified Border Element providing UNI interface



DHCP to Provision SIP Server, Domain Name, and Phone Number

NGN requires Cisco Unified Border Element to support DHCP (RFC 2131 and RFC 2132) to provision the following:


- IP address for Cisco Unified Border Element's UNI interface facing NGN
- SIP server address using option 120
- Option 125 vendor specific information to get:
 - Pilot number (also called primary or contract number), there is only one pilot number in DHCPACK, and REGISTER is done only for the pilot number
 - Additional numbers, or secondary numbers, are in DHCPACK; there is no REGISTER for additional numbers
 - SIP domain name
- DHCPFORCERENEW to reset or apply a new set of SIP parameters (RFC 3203)

DHCP-SIP Call Flow

The following scenario shows the DHCP messages involved in provisioning information such as the IP address for UNI interface, and SIP parameters including the SIP server address, phone number, and domain name, along with how SIP messages use the provisioned information.

The figure below shows the DHCP and SIP messages involved in obtaining the SIP parameters and using them for REGISTER and INVITE.


Figure 2 DHCP-SIP Call Flow

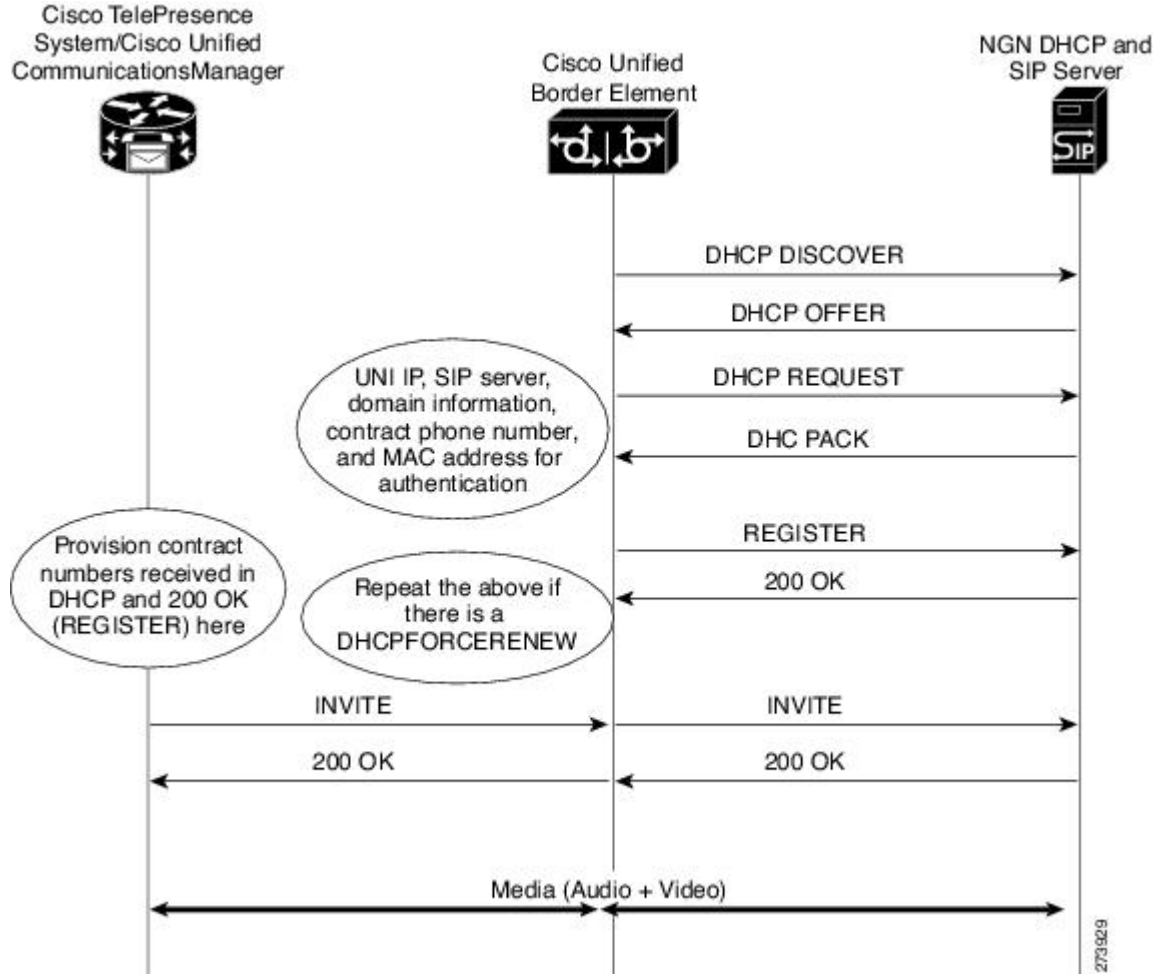

DHCP Message Details

The DHCP call flow involved in obtaining Cisco Unified Border Element provision information, including the IP address for UNI interface and SIP information such as phone number, domain, and SIP server, is shown in the figure below.

Figure 3 DHCP Message Details

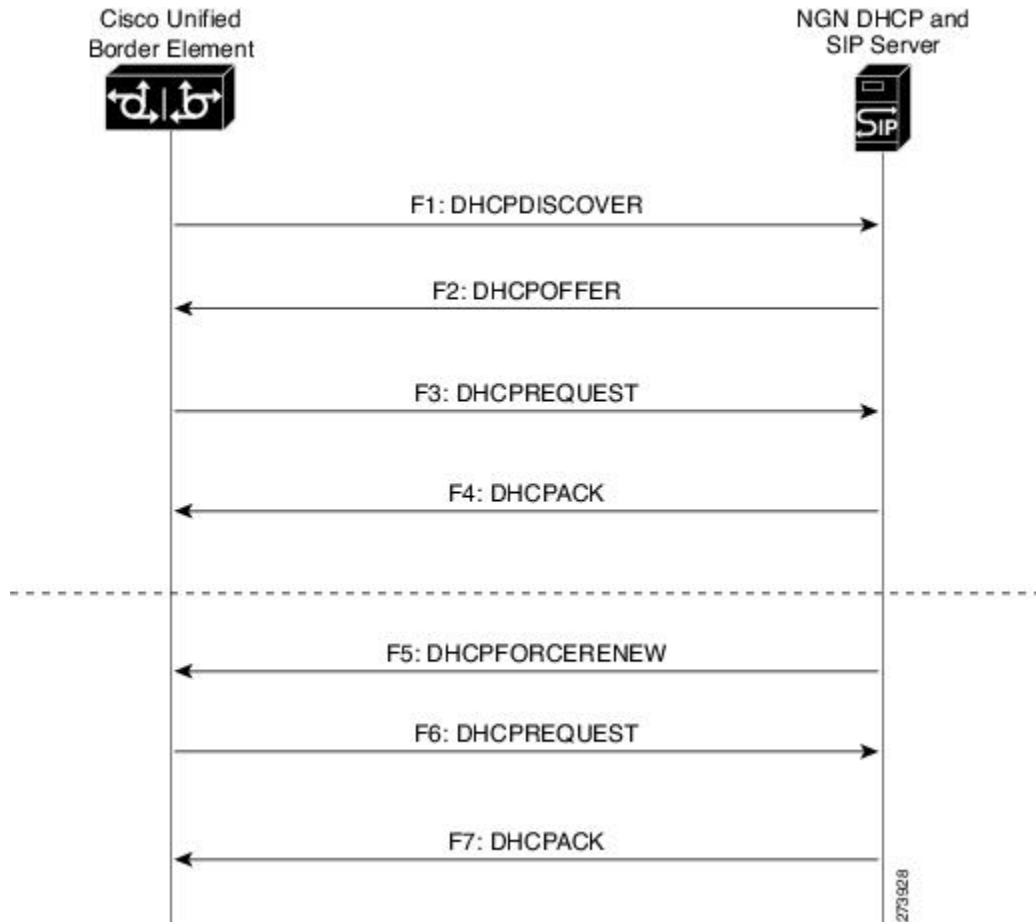

The DHCP messages involved in provisioning the SIP parameters are described in Steps 1 to 6.

- 1 F1: The Cisco Unified Border Element DHCP client sends a DHCPDISCOVER message to find the available NGN DHCP servers on the network and obtain a valid IPv4 address. The Cisco Unified Border Element DHCP client identity (computer name) and MAC address are included in this message.
- 2 F2: The Cisco Unified Border Element DHCP client receives a DHCPOFFER message from each available NGN DHCP server. The DHCPOFFER message includes the offered DHCP server's IPv4 address, the DHCP client's MAC address, and other configuration parameters.
- 3 F3: The Cisco Unified Border Element DHCP client selects an NGN DHCP server and its IPv4 address configuration from the DHCPOFFER messages it receives, and sends a DHCPREQUEST message requesting its usage. Note that this is where Cisco Unified Border Element requests SIP server information via DHCP Option 120 and vendor-identifying information via DHCP Option 125.
- 4 F4: The chosen NGN DHCP server assigns its IPv4 address configuration to the Cisco Unified Border Element DHCP client by sending a DHCPACK message to it. The Cisco Unified Border Element DHCP client receives the DHCPACK message. This is where the SIP server address, phone number and

domain name information are received via DHCP options 120 and 125. The Cisco Unified Border Element will use the information for registering the phone number and routing INVITE messages to the given SIP server.

- 5 F5: When NGN has a change of information or additional information (such as changing SIP server address from 1.1.1.1 to 2.2.2.2) for assigning to Cisco Unified Border Element, the DHCP server initiates DHCPFORCERENEW to the Cisco Unified Border Element. If the authentication is successful, the Cisco Unified Border Element DHCP client accepts the DHCPFORCERENEW and moves to the next stage of sending DHCPREQUEST. Otherwise DHCPFORCERENEW is ignored and the current information is retained and used.
- 6 F6 and F7: In response to DHCPFORCERENEW, similar to steps F3 and F4, the Cisco Unified Border Element requests DHCP Options 120 and 125. Upon getting the response, SIP will apply these parameters if they are different by sending an UN-REGISTER message for the previous phone number and a REGISTER message for the new number. Similarly, a new domain and SIP server address will be used. If the returned information is the same as the current set, it is ignored and hence registration and call routing remains the same.

How to Configure SIP Parameters via DHCP

- [Configuring the DHCP Client, page 6](#)
- [Configuring the DHCP Client Example, page 8](#)
- [Enabling the SIP Configuration, page 8](#)
- [Enabling the SIP Configuration Example, page 10](#)
- [Troubleshooting Tips, page 10](#)
- [Configuring a SIP Outbound Proxy Server, page 10](#)
- [Configuring a SIP Outbound Proxy Server in Voice Service VoIP Configuration Mode, page 11](#)
- [Configuring a SIP Outbound Proxy Server in Voice Service VoIP Configuration Mode Example, page 12](#)
- [Configuring a SIP Outbound Proxy Server and Session Target in Dial Peer Configuration Mode, page 12](#)
- [Configuring a SIP Outbound Proxy Server in Dial Peer Configuration Mode Example, page 14](#)

Configuring the DHCP Client

To receive the SIP configuration parameters the Cisco Unified Border Element has to act as a DHCP client. This is because in the NGN network, a DHCP server pushes the configuration to a DHCP client. Thus the Cisco Unified Border Element must be configured as a DHCP client.

Perform this task to configure the DHCP client.

You must configure the **ip dhcp client** commands before entering the **ip address dhcp** command on an interface to ensure that the DHCPDISCOVER messages that are generated contain the correct option values. The **ip dhcp client** commands are checked only when an IP address is acquired from DHCP. If any of the **ip dhcp client** commands are entered after an IP address has been acquired from DHCP, the DHCPDISCOVER messages' correct options will not be present or take effect until the next time the router acquires an IP address from DHCP. This means that the new configuration will only take effect after either the **ip address dhcp** command or the **release dhcp** and **renew dhcp EXEC** commands have been configured.

SUMMARY STEPS

1. enable
2. configure terminal
3. interface type number
4. ip dhcp client request sip-server-address
5. ip dhcp client request vendor-identifying-specific
6. ip address dhcp
7. exit

DETAILED STEPS

Command or Action	Purpose
Step 1 enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2 configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3 interface type number Example: Router(config)# interface gigabitethernet 0/0	Configures an interface type and enters interface configuration mode.
Step 4 ip dhcp client request sip-server-address Example: Router(config-if)# ip dhcp client request sip-server-address	Configures the DHCP client to request a SIP server address from a DHCP server.
Step 5 ip dhcp client request vendor-identifying-specific Example: Router(config-if)# ip dhcp client request vendor-identifying-specific	Configures the DHCP client to request vendor-specific information from a DHCP server.

Command or Action	Purpose
Step 6 <code>ip address dhcp</code> Example: Router(config-if)# ip address dhcp	Acquires an IP address on the interface from the DHCP.
Step 7 <code>exit</code> Example: Router(config-if)# <code>exit</code>	Exits the current mode.

Configuring the DHCP Client Example

The following is an example of how to enable the DHCP client:

```
Router> enable
Router# configure terminal
Router(config)# interface gigabitethernet 1/1
Router(config-if)# ip dhcp client request sip-server-address
Router(config-if)# ip dhcp client request vendor-identifying-specific
Router(config-if)# ip address dhcp
Router(config-if)# exit
```

Enabling the SIP Configuration

Enabling the SIP configuration allows the Cisco Unified Border Element to use the SIP parameters received via DHCP for user registration and call routing. Perform this task to enable the SIP configuration.

The **dhcp interface** command has to be entered to declare the interface before the **registrar** and **credential** commands are entered.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface type number**
4. **sip-ua**
5. **dhcp interface type number**
6. **registrar dhcp expires seconds random-contact refresh-ratio seconds**
7. **credentials dhcp password [0|7] password realm domain-name**
8. **exit**

DETAILED STEPS

Command or Action	Purpose
<p>Step 1 <code>enable</code></p> <p>Example:</p> <pre>Router> enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> Enter your password if prompted.
<p>Step 2 <code>configure terminal</code></p> <p>Example:</p> <pre>Router# configure terminal</pre>	<p>Enters global configuration mode.</p>
<p>Step 3 <code>interface type number</code></p> <p>Example:</p> <pre>Router(config)# interface gigabitethernet 0/0</pre>	<p>Configures an interface type and enters interface configuration mode.</p>
<p>Step 4 <code>sip-ua</code></p> <p>Example:</p> <pre>Router(config-if)# sip-ua</pre>	<p>Enters SIP user-agent configuration mode.</p>
<p>Step 5 <code>dhcp interface type number</code></p> <p>Example:</p> <pre>Router(sip-ua)# dhcp interface gigabitethernet 0/0</pre>	<p>Assigns a specific interface for DHCP provisioning of SIP parameters.</p> <ul style="list-style-type: none"> Multiple interfaces on the CUBE can be configured with DHCP--this command specifies the DHCP interface used with SIP.
<p>Step 6 <code>registrar dhcp expires seconds random-contact refresh-ratio seconds</code></p> <p>Example:</p> <pre>Router(sip-ua)# registrar dhcp expires 100 random-contact refresh-ratio 90</pre>	<p>Registers E.164 numbers on behalf of analog telephone voice ports (FXS) and IP phone virtual voice ports (EFXS) with an external SIP proxy or SIP registrar server.</p> <ul style="list-style-type: none"> expires <i>seconds</i> --Specifies the default registration time, in seconds. Range is 60 to 65535. Default is 3600. refresh-ratio <i>seconds</i> --Specifies the refresh-ratio, in seconds. Range is 1 to 100 seconds. Default is 80.

Command or Action	Purpose
<p>Step 7 <code>credentials dhcp password [0 7] password realm domain-name</code></p> <p>Example:</p> <pre>Router(sip-ua)# credentials dhcp password cisco realm cisco.com</pre>	Sends a SIP registration message from a Cisco Unified Border Element in the UP state.
<p>Step 8 <code>exit</code></p> <p>Example:</p> <pre>Router(sip-ua)# exit</pre>	Exits the current mode.

Enabling the SIP Configuration Example

The following is an example of how to enable the SIP configuration:

```
Router> enable
Router# configure terminal
Router(config)# interface gigabitethernet 1/0
Router(config-if)# sip-ua
Router(sip-ua)# dhcp interface gigabitethernet 1/0
Router(sip-ua)# registrar dhcp expires 90 random-contact refresh-ratio 90
Router(sip-ua)# credentials dhcp password cisco realm cisco.com
Router(sip-ua)# exit
```

Troubleshooting Tips

To display information on DHCP and SIP interaction when SIP parameters are provisioned by DHCP, use the `debug ccsip dhcp` command in privileged EXEC mode.

Configuring a SIP Outbound Proxy Server

An outbound-proxy configuration sets the Layer 3 address (IP address) for any outbound REGISTER and INVITE SIP messages. The SIP server can be configured as an outbound proxy server in voice service SIP configuration mode or dial peer configuration mode. When enabled in voice service SIP configuration mode, all the REGISTER and INVITE messages are forwarded to the configured outbound proxy server. When enabled in dial-peer configuration mode, only the messages hitting the defined dial-peer will be forwarded to the configured outbound proxy server.

The configuration tasks in each mode are presented in the following sections:

Perform either of these tasks to configure the SIP server as a SIP outbound proxy server.

Configuring a SIP Outbound Proxy Server in Voice Service VoIP Configuration Mode

Perform this task to configure the SIP server as a SIP outbound proxy server in voice service SIP configuration mode.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **voice service voip**
4. **sip**
5. **outbound-proxy dhcp**
6. **exit**

DETAILED STEPS

Command or Action	Purpose
<p>Step 1 enable</p> <p>Example:</p> <pre>Router> enable</pre>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> • Enter your password if prompted.
<p>Step 2 configure terminal</p> <p>Example:</p> <pre>Router# configure terminal</pre>	<p>Enters global configuration mode.</p>
<p>Step 3 voice service voip</p> <p>Example:</p> <pre>Router(config)# voice service voip</pre>	<p>Enters voice service VoIP configuration mode and specifies VoIP as the voice-encapsulation type.</p>
<p>Step 4 sip</p> <p>Example:</p> <pre>Router(config-voi-srv)# sip</pre>	<p>Enters voice service SIP configuration mode.</p>

Command or Action	Purpose
Step 5 <code>outbound-proxy dhcp</code> Example: <pre>Router(conf-serv-sip)# outbound-proxy dhcp</pre>	Configures the DHCP client to request a SIP server address from a DHCP server.
Step 6 <code>exit</code> Example: <pre>Router(config-serv-sip)# exit</pre>	Exits the current mode.

Configuring a SIP Outbound Proxy Server in Voice Service VoIP Configuration Mode Example

The following is an example of how to configure a SIP outbound proxy in voice service SIP configuration mode:

```
Router> enable
Router# configure terminal

Router(config)# voice service voip
Router(config-voi-srv)# sip
Router(conf-serv-sip)# outbound-proxy dhcp
Router(config-serv-if)# exit
```

Configuring a SIP Outbound Proxy Server and Session Target in Dial Peer Configuration Mode

Perform this task to configure the SIP server as a SIP outbound proxy server in dial peer configuration mode.



Note

SIP must be configured on the dial peer before DHCP is configured. Therefore the **session protocol sipv2** command must be executed before the **session target dhcp** command. DHCP is supported only with SIP configured on the dial peer.

>

SUMMARY STEPS

1. enable
2. configure terminal
3. dial-peer voice number voip
4. session protocol sipv2
5. voice-class sip outbound-proxy dhcp
6. session target dhcp
7. exit

DETAILED STEPS

Command or Action	Purpose
Step 1 enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2 configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3 dial-peer voice number voip Example: Router(config)# dial-peer voice 10 voip	Defines a dial peer, specifies VoIP as the method of voice encapsulation, and enters dial peer configuration mode.
Step 4 session protocol sipv2 Example: Router(config-dial-peer)# session protocol sipv2	Enters the session protocol type as SIP.
Step 5 voice-class sip outbound-proxy dhcp Example: Router(config-dial-peer)# voice-class sip outbound-proxy dhcp	Configures the SIP server received from the DHCP server as a SIP outbound proxy server.

Command or Action	Purpose
<p>Step 6 <code>session target dhcp</code></p> <p>Example:</p> <pre>Router(config-dial-peer)# session target dhcp</pre>	<p>Specifies that the DHCP protocol is used to determine the IP address of the session target.</p>
<p>Step 7 <code>exit</code></p> <p>Example:</p> <pre>Router(config-dial-peer)# exit</pre>	<p>Exits the current mode.</p>

Configuring a SIP Outbound Proxy Server in Dial Peer Configuration Mode Example

The following is an example of how to configure a SIP outbound proxy in dial peer configuration mode:

```
Router> enable
Router# configure terminal
Router(config)# dial-peer voice 11 voip
Router(config-dial-peer)# session protocol sipv2

Router(config-dial-peer)# voice-class sip outbound-proxy dhcp
Router(config-dial-peer)# session target dhcp
Router(config-dial-peer)# exit
```

Feature Information for Configurable SIP Parameters via DHCP

The following table provides release information about the feature or features described in this module. This table lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to www.cisco.com/go/cfn. An account on Cisco.com is not required.

Feature History Table for the ISR.

Table 1 *Feature Information for Configurable SIP Parameters via DHCP*

Feature Name	Releases	Feature Information
Configurable SIP Parameters via DHCP	12.4(22)YB 15.0(1)M	<p>The Configurable SIP Parameters via DHCP feature introduces the configuring of SIP parameters via DHCP.</p> <p>The following commands were introduced or modified: credentials (sip-ua), debug ccsip dhcp, dhcp interface, ip dhcp-client forcerenew, outbound-proxy, registrar, session target (VoIP dial peer), show sip dhcp, voice-class sip outbound-proxy.</p>

Feature History Table for the ASR.

Table 2 *Feature Information for Configurable SIP Parameters via DHCP*

Feature Name	Releases	Feature Information
Configurable SIP Parameters via DHCP	IOS XE Release <TBD>	<p>The Configurable SIP Parameters via DHCP feature introduces the configuring of SIP parameters via DHCP.</p> <p>The following commands were introduced or modified: credentials (sip-ua), debug ccsip dhcp, dhcp interface, ip dhcp-client forcerenew, outbound-proxy, registrar, session target (VoIP dial peer), show sip dhcp, voice-class sip outbound-proxy.</p>

Cisco and the Cisco logo are trademarks or registered trademarks of Cisco and/or its affiliates in the U.S. and other countries. To view a list of Cisco trademarks, go to this URL: www.cisco.com/go/trademarks. Third-party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1110R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2011 Cisco Systems, Inc. All rights reserved.