



---

## Symbols

<cr> [xv](#)

? command [xiv](#)

---

## A

absolute-timeout command [TR-2](#)

access-class (LAT) command [TR-3](#)

access control

ARA [TR-7, TR-9, TR-14](#)

LAT

access conditions [TR-39](#)

connections [TR-3](#)

group list [TR-47](#)

group list name assignments [TR-42](#)

ARA (AppleTalk Remote Access)

access control [TR-7, TR-9, TR-14](#)

monitoring [TR-92](#)

arap dedicated command [TR-5](#)

arap enable command [TR-6](#)

arap net-access-list command [TR-7](#)

arap network command [TR-9](#)

arap nolog command [TR-10](#)

arap require-manual-password command [TR-11](#)

arap timelimit command [TR-12](#)

arap warningtime command [TR-13](#)

arap zonelist command [TR-14](#)

async default ip address command

*See* peer default ip address command

authentication translate option

virtual interface template, mapping to [TR-171, TR-196](#)

autocommand command [TR-16](#)

---

## B

baud rates

transmit line speed, configuring [TR-208](#)

buffers

XRemote size [TR-224](#)

busy-message command [TR-17](#)

---

## C

callback, enabling [TR-85](#)

carriage return (<cr>) [xv](#)

cautions, usage in text [x](#)

changed information in this release [ix](#)

character mapping

configuring [TR-153](#)

displaying TN3270 [TR-121](#)

chat scripts, SLIP and PPP backward compatibility [TR-86](#)

Cisco IOS configuration changes, saving [xviii](#)

clear entry command [TR-18](#)

command modes, understanding [xiii to xiv](#)

commands

context-sensitive help for abbreviating [xiv](#)

default form, using [xvii](#)

no form, using [xvii](#)

command syntax

conventions [ix](#)

displaying (example) [xv](#)

configurations, saving [xviii](#)

connect command [TR-19, TR-37, TR-137](#)

connections

display open [TR-209](#)

LAT [TR-37, TR-38](#)

NASI client [TR-27](#)  
 notification of pending output [TR-76](#)  
 queued host-initiated entries, clearing [TR-18](#)  
 refuse full duplex [TR-142](#)  
 rlogin [TR-78, TR-80, TR-135 to TR-138](#)  
 SLIP [TR-133](#)  
 switching between [TR-74, TR-77](#)  
 Telnet [TR-135 to TR-138](#)  
   line, configuring [TR-143](#)  
 TN3270 [TR-150](#)  
 transparent, local [TR-19, TR-78, TR-135](#)  
 X.3 PAD [TR-217](#)  
 XRemote [TR-219, TR-223, TR-227](#)  
 console port  
   configuration (example) [TR-63](#)

---

## D

DEC LAT  
   *See* LAT  
 disconnect warning time, configuring [TR-13](#)  
 dispatch-timeout command [TR-120](#)  
 documentation  
   conventions [ix](#)  
   feedback, providing [xi](#)  
   modules [v to vii](#)  
   online, accessing [x](#)  
   ordering [xi](#)  
 Documentation CD-ROM [x](#)  
 documents and resources, supporting [viii](#)

---

## E

escape character  
   EXEC prompt [TR-219](#)  
 exec-timeout command [TR-120](#)

---

## F

Feature Navigator  
   *See* platforms, supported  
 filtering output, show and more commands [xviii](#)  
 flush-at-activation command [TR-24](#)

---

## G

global configuration mode, summary of [xiv](#)  
 guests  
   allowing [TR-10](#)  
   disallowing [TR-10](#)

---

## H

hardware platforms  
   *See* platforms, supported  
 header compressions  
   virtual interface template, translate map to [TR-171, TR-196](#)  
 help command [xiv](#)  
 host-failed message, configuring [TR-17](#)

---

## I

indexes, master [viii](#)  
 interface configuration mode, summary of [xiv](#)  
 IP addresses  
   TCP port assignment [TR-26](#)  
 ip alias command [TR-26](#)  
 ip-pool translate option  
   map to virtual interface template [TR-171, TR-196](#)  
 IPX (Internet Packet Exchange)  
   loopback interfaces [TR-166, TR-167, TR-176, TR-177, TR-187, TR-188](#)  
   loopback translate option  
     virtual interface template, mapping to [TR-171, TR-196](#)  
 ipx nasi-server enable command [TR-27](#)

**K**

keepalive translate option  
 virtual interface template, mapping to [TR-171, TR-196](#)

keyboard mapping characteristics [TR-29](#)

keymap command [TR-29](#)

keymaps  
 custom [TR-31](#)  
 default [TR-31](#)  
 special characters [TR-30](#)  
 syntax [TR-31](#)

keymap-type command [TR-36](#)

keys, Break [TR-69](#)

**L**

LAT (local-area transport)  
 access control  
 access conditions [TR-39](#)  
 group list [TR-47](#)  
 group list name assignments [TR-42](#)  
 on connections [TR-3](#)

active sessions [TR-101](#)

associate rotary group with a service [TR-58](#)

available services list [TR-37, TR-100](#)

connection queue entry, clearing [TR-18](#)

connections [TR-37 to TR-38](#)

description [TR-37](#)

enabling [TR-41](#)

group code mask, configuring [TR-53](#)

inbound connections, enabling [TR-52](#)

keepalive timer, configuring [TR-45](#)

learned services [TR-100, TR-115](#)

list of services, defining [TR-146](#)

maximum number of sessions, configuring [TR-60](#)

multiple connections [TR-37](#)

node name [TR-46](#)

password for a service, configuring [TR-55](#)

pattern matching symbols (table) [TR-39](#)

proxy node, configuring [TR-57](#)

receive buffers  
 host [TR-44](#)  
 server [TR-50](#)

remotely modifiable line, configuring [TR-147](#)

service advertisement timer [TR-59](#)

service announcements  
 configuring [TR-51](#)  
 reenabling [TR-51](#)

service identification, configuring [TR-54](#)

static service rating, configuring [TR-56](#)

transmission interval, configuring [TR-61](#)

lat access-list command [TR-39](#)

lat command [TR-37](#)

lat enabled command [TR-41](#)

lat group-list command [TR-42](#)

lat host-buffers command [TR-44](#)

lat ka-timer command [TR-45](#)

lat node command [TR-46](#)

lat out-group command [TR-47](#)

lat remote-modification command [TR-48](#)

lat retransmit-limit command [TR-49](#)

lat server-buffers command [TR-50](#)

lat service-announcements command [TR-51](#)

lat service enabled command [TR-52](#)

lat service-group command [TR-53](#)

lat service ident command [TR-54](#)

lat service password command [TR-55](#)

lat service rating command [TR-56](#)

lat service-responder command [TR-57, TR-59](#)

lat service rotary command [TR-58](#)

lat service-timer command [TR-59](#)

lat vc-sessions command [TR-60](#)

lat vc-timer command [TR-61](#)

line command [TR-62](#)

lines  
 ARA connections, configuring [TR-5, TR-6](#)  
 auxiliary port absolute line number [TR-63](#)  
 characteristics, configuring [TR-48](#)

console port [TR-63](#)  
 dedicated ARA-only, configuring [TR-5](#)  
 line configuration mode [TR-61, TR-62](#)  
 relative line number [TR-62](#)  
 session limits [TR-89](#)  
 status [TR-126](#)  
 types  
   (table) [TR-63](#)  
   specifying [TR-62](#)  
 virtual terminal [TR-64](#)  
 logging in  
   Break key [TR-69](#)  
   username, configuring [TR-65](#)  
 login (EXEC) command [TR-65](#)  
 login (line) command [TR-67](#)  
 login-string command [TR-69](#)

---

## M

messages  
   failed connection [TR-17](#)  
   login [TR-17, TR-69](#)  
   successful connection [TR-17, TR-69](#)  
 MIB, descriptions online [viii](#)  
 modem answer-timeout command [TR-120](#)  
 modes  
   *See* command modes  
 mtu translate option  
   virtual interface template, mapping to [TR-171, TR-196](#)

---

## N

NASI (NetWare Access Server Interface)  
   clients, enabling [TR-27](#)  
   TTY lines, connecting through [TR-27](#)  
   virtual terminal lines, connecting through [TR-27](#)  
 new information in this release [ix](#)  
 node name

LAT, changing [TR-46](#)  
 notes, usage in text [x](#)

---

## P

PAD (packet assembler/disassembler)  
   log in [TR-70](#)  
   parameters  
     (table) [TR-73](#)  
   parameters, configuring [TR-217](#)  
   parameters, setting [TR-72 to TR-74](#)  
   *See also* X.3 PAD  
 pad command [TR-70](#)  
 password command [TR-72](#)  
 passwords  
   ARAP [TR-11](#)  
   line assignment [TR-72](#)  
 platforms, supported  
   Feature Navigator, identify using [xix](#)  
   release notes, identify using [xix](#)  
 ppp use-tacacs translate option  
   virtual interface template, mapping to [TR-171, TR-196](#)  
 privileged EXEC mode, summary of [xiv](#)  
 prompts, system [xiv](#)  
 protocols, terminal transport [TR-148](#)  
 protocol translations  
   ARA outgoing connection [TR-163, TR-174, TR-184](#)  
     (example) [TR-192](#)  
   global options  
     LAT [TR-164, TR-170](#)  
     LAT virtual access interface [TR-170](#)  
     TCP [TR-181](#)  
     TCP virtual access interface [TR-181](#)  
     X.25 [TR-185](#)  
     x.25 virtual access interface [TR-181](#)  
   LAT [TR-163](#)  
   LAT options, displaying [TR-164](#)  
   LAT virtual access interface [TR-170](#)  
   outgoing options

LAT-to-TCP [TR-167](#)  
 LAT-to-X.25 [TR-168](#)  
 TCP-to-LAT [TR-176](#)  
 TCP-to-PPP [TR-176](#)  
 TCP-to-SLIP [TR-177](#)  
 TCP-to-X.25 [TR-178](#)  
 X.25-to-LAT [TR-186](#)  
 X.25-to-PPP [TR-187](#)  
 X.25-to-SLIP [TR-188](#)  
 X.25-to-TCP [TR-188](#)  
 TCP [TR-173](#)  
 TCP options, displaying [TR-175](#)  
 TCP virtual access interface [TR-180](#)  
 virtual interface template, mapping outgoing options  
 to [TR-171, TR-196](#)  
 X.25 [TR-183](#)  
 X.25 connections, swapping [TR-174, TR-185](#)  
 X.25 interface assignments [TR-191](#)  
 X.25 options, displaying [TR-185](#)  
 X.25 PVCs  
     configuring [TR-189](#)  
     removing [TR-190](#)  
 X.25 virtual access interface [TR-194](#)  
 proxy, configuring for LAT [TR-57](#)

---

## Q

question mark (?) command [xiv](#)

---

## R

receive buffers  
     LAT host [TR-44](#)  
     LAT server [TR-50](#)  
 release notes  
     *See* platforms, supported  
 resume (setting X.3 parameters) command [TR-72](#)  
 resume (switching sessions) command [TR-76](#)  
 retransmission limit, LAT [TR-49](#)

RFC  
     full text, obtaining [viii](#)  
 RFC 1144, TCP/IP header compression [TR-133](#)  
 rlogin  
     connections, local transparent [TR-78](#)  
     login string [TR-69](#)  
     server connections [TR-82](#)  
     username authentication [TR-80](#)  
 rlogin command [TR-78](#)  
 rlogin trusted-localuser-source command [TR-80](#)  
 rlogin trusted-remoteuser-source local command [TR-82](#)  
 ROM monitor mode, summary of [xiv](#)  
 routing translate option  
     virtual interface template, mapping to [TR-171, TR-196](#)  
 rxspeed command [TR-84](#)

---

## S

server connections  
     LAT [TR-37 to TR-38](#)  
     rlogin [TR-80, TR-138](#)  
     SLIP [TR-133 to TR-134](#)  
     Telnet [TR-135, TR-138](#)  
     TN3270 [TR-150](#)  
     transparent, local [TR-135](#)  
     XRemote [TR-219, TR-223, TR-227](#)  
 service advertisement timer, configuring [TR-59](#)  
 service announcements, reenabling LAT [TR-51](#)  
 service exec-callback command [TR-85](#)  
 service old-slip-prompts command [TR-86](#)  
 service pt-vty-logging command [TR-87](#)  
 session-limit command [TR-89](#)  
 session-timeout command [TR-90](#)  
 setenv command [TR-220, TR-222](#)  
 show arap command [TR-92](#)  
 show entry command [TR-94](#)  
 show keymap command [TR-95](#)  
 show lat advertised command [TR-96](#)  
 show lat groups command [TR-97](#)

show lat nodes command [TR-98](#)  
 show lat services command [TR-100](#)  
 show lat sessions command [TR-101](#)  
 show lat traffic command [TR-105](#)  
 show line command [TR-107](#)  
 show node command [TR-112](#)  
 show service command [TR-115](#)  
 show terminal command [TR-117](#)  
 show tn3270 ascii-hexval command [TR-121](#)  
 show tn3270 character-map command [TR-122](#)  
 show translate command [TR-123](#)  
 show ttycap command [TR-125](#)  
 show users command [TR-126](#)  
 show x25 pad command [TR-128](#)  
 show xremote command [TR-130](#)  
 show xremote line command [TR-132](#)  
 signals, Break  
     generating [TR-140](#)  
 SLIP (Serial Line Internet Protocol), server  
     connections [TR-133](#), [TR-134](#)  
 slip command [TR-133](#)

---

## T

Tab key, command completion [xiv](#)  
 TCP/IP  
     rlogin connections [TR-78](#), [TR-80](#), [TR-82](#)  
     Telnet connections [TR-135](#)  
     transparent connections [TR-78](#), [TR-135](#)  
 Telnet  
     Break signal [TR-140](#)  
     connections [TR-135 to TR-138](#)  
         line, configuring [TR-143](#)  
         transparent, local [TR-135](#)  
     description [TR-137](#)  
     login string [TR-69](#)  
     notification of pending output [TR-76](#)  
     protocol translation [TR-177](#), [TR-188](#)  
     Remote Echo option [TR-142](#)  
         special commands (table) [TR-137](#)  
         Suppress Go Ahead option [TR-142](#)  
 telnet break-on-ip command [TR-140](#)  
 telnet command [TR-135](#)  
 telnet refuse-negotiations command [TR-142](#)  
 telnet speed command [TR-143](#)  
 telnet sync-on-break command [TR-144](#)  
 telnet transparent command [TR-145](#)  
 terminal lat out-group command [TR-146](#)  
 terminal lat remote-modification command [TR-147](#)  
 terminals  
     baud rates, configuring [TR-208](#)  
     session limits, setting [TR-89](#)  
     session timeout interval, setting [TR-90](#)  
     transport protocol [TR-148](#)  
 terminal transport preferred command [TR-148](#)  
 time limits  
     sessions, configuring [TR-12](#)  
 timeouts  
     absolute [TR-2](#)  
     session, setting [TR-90](#)  
 timers  
     service advertisement, configuring [TR-59](#)  
 TN3270  
     character mapping, configuring [TR-153](#)  
     character mapping, monitoring [TR-121](#), [TR-122](#)  
     data character bits, setting [TR-151](#), [TR-152](#)  
     default keymaps [TR-31](#)  
     description [TR-150](#)  
     extended feature mode [TR-157](#)  
     international characters [TR-153](#)  
         monitoring [TR-121](#)  
     null processing handling [TR-158](#)  
     require reset after user error [TR-160](#)  
     server connections [TR-150](#)  
     special characters [TR-30](#)  
 tn3270 8bit display command [TR-151](#)  
 tn3270 8bit transparent-mode command [TR-152](#)  
 tn3270 character-map command [TR-153](#)

tn3270 command [TR-150](#)  
 tn3270 datastream command [TR-157](#)  
 tn3270 null-processing command [TR-158](#)  
 tn3270 optimize-cursor-move command [TR-159](#)  
 tn3270 reset-required command [TR-160](#)  
 tn3270 status-message command [TR-161](#)  
 tn3270 typeahead command [TR-162](#)  
 translate lat (virtual access interfaces) command [TR-170](#)  
 translate lat command [TR-163](#)  
 translate tcp (virtual access interfaces) command [TR-180](#)  
 translate tcp command [TR-173](#)  
 translate x25 (virtual access interfaces) command [TR-194](#)  
 translate x25 command [TR-183](#)  
 translation options  
   LAT [TR-163, TR-170, TR-176, TR-186](#)  
   LAT service advertisements, preventing [TR-176, TR-186](#)  
   TCP [TR-173](#)  
   TCP/IP  
     binary mode [TR-180](#)  
     incoming address [TR-180](#)  
   Telnet binary mode [TR-173](#)  
 virtual interface template, mapping outgoing options  
   to [TR-171, TR-196](#)  
 X.25 [TR-183](#)  
   outgoing connections, swapping [TR-195](#)  
     (example) [TR-191](#)  
 transport input command [TR-198](#)  
 transport output command [TR-200](#)  
 transport preferred command [TR-202](#)  
 ttycap command [TR-204](#)  
 ttycap support [TR-205](#)  
 txspeed command [TR-208](#)

---

## U

user EXEC mode, summary of [xiv](#)

---

## V

virtual interface template  
   LAT protocol translation on [TR-170, TR-195](#)  
   TCP protocol translation on [TR-180](#)  
 virtual terminal lines  
   configuring [TR-64](#)  
   loopback interfaces for translation [TR-166, TR-167, TR-176, TR-177, TR-187, TR-188](#)

---

## W

where command [TR-209](#)

---

## X

X.25  
   pad connections display [TR-128](#)  
 X.29, SET PARAMETER packet [TR-72, TR-217](#)  
 X.3 PAD  
   connections [TR-217](#)  
   description [TR-217](#)  
 X.3 PAD parameters  
   change dynamically [TR-72](#)  
   default values [TR-72, TR-217](#)  
   setting [TR-217](#)  
   settings display [TR-128](#)  
   X.28 mode [TR-211](#)  
 x25 subaddress command [TR-210](#)  
 x28 command [TR-211](#)  
 x3 command [TR-217](#)  
 XDMCP (X Display Manager Control Protocol)  
   XRemote, starting [TR-227](#)  
 XRemote  
   automatic session startup [TR-223](#)  
   buffer size, configuring [TR-224](#)  
   clients, starting [TR-219](#)  
   connections, monitoring [TR-132](#)  
   description [TR-219, TR-223, TR-227](#)

EXEC prompt [TR-219](#)  
font server identification [TR-225](#)  
host computer connections [TR-219](#)  
manual session startup [TR-219](#)  
reenabling manually [TR-219](#)  
server connections [TR-219](#)  
server sessions [TR-221](#)  
terminal, configuring [TR-220](#)  
terminal line statistics [TR-132](#)  
terminate session [TR-219](#)  
X display location, configuring [TR-219](#)  
xremote command [TR-219](#)  
xremote lat command [TR-223](#)  
xremote tftp buffersize command [TR-224](#)  
xremote tftp host command [TR-225](#)  
xremote tftp retries command [TR-226](#)  
xremote xdm command [TR-227](#)  
X Window System  
display location, configuring [TR-219](#)