



Symbols

<cr> [xv](#)

? command [xiv](#)

A

absolute-timeout command [TR-2](#)

access-class (LAT) command [TR-3](#)

access control

ARA [TR-7, TR-9, TR-14](#)

LAT

access conditions [TR-39](#)

connections [TR-3](#)

group list [TR-47](#)

group list name assignments [TR-42](#)

ARA (AppleTalk Remote Access)

access control [TR-7, TR-9, TR-14](#)

monitoring [TR-92](#)

arap dedicated command [TR-5](#)

arap enable command [TR-6](#)

arap net-access-list command [TR-7](#)

arap network command [TR-9](#)

arap noquest command [TR-10](#)

arap require-manual-password command [TR-11](#)

arap timelimit command [TR-12](#)

arap warningtime command [TR-13](#)

arap zonelist command [TR-14](#)

async default ip address command

See peer default ip address command

authentication translate option

virtual interface template, mapping to [TR-171, TR-196](#)

autocommand command [TR-16](#)

B

baud rates

transmit line speed, configuring [TR-208](#)

buffers

XRemote size [TR-224](#)

busy-message command [TR-17](#)

C

callback, enabling [TR-85](#)

carriage return (<cr>) [xv](#)

cautions, usage in text [x](#)

changed information in this release [ix](#)

character mapping

configuring [TR-153](#)

displaying TN3270 [TR-121](#)

chat scripts, SLIP and PPP backward compatibility [TR-86](#)

Cisco IOS configuration changes, saving [xviii](#)

clear entry command [TR-18](#)

command modes, understanding [xiii to xiv](#)

commands

context-sensitive help for abbreviating [xiv](#)

default form, using [xvii](#)

no form, using [xvii](#)

command syntax

conventions [ix](#)

displaying (example) [xv](#)

configurations, saving [xviii](#)

connect command [TR-19, TR-37, TR-137](#)

connections

display open [TR-209](#)

LAT [TR-37, TR-38](#)

NASI client [TR-27](#)
 notification of pending output [TR-76](#)
 queued host-initiated entries, clearing [TR-18](#)
 refuse full duplex [TR-142](#)
 rlogin [TR-78, TR-80, TR-135 to TR-138](#)
 SLIP [TR-133](#)
 switching between [TR-74, TR-77](#)
 Telnet [TR-135 to TR-138](#)
 line, configuring [TR-143](#)
 TN3270 [TR-150](#)
 transparent, local [TR-19, TR-78, TR-135](#)
 X.3 PAD [TR-217](#)
 XRemote [TR-219, TR-223, TR-227](#)
 console port
 configuration (example) [TR-63](#)

D

DEC LAT
 See LAT
 disconnect warning time, configuring [TR-13](#)
 dispatch-timeout command [TR-120](#)
 documentation
 conventions [ix](#)
 feedback, providing [xi](#)
 modules [v to vii](#)
 online, accessing [x](#)
 ordering [xi](#)
 Documentation CD-ROM [x](#)
 documents and resources, supporting [viii](#)

E

escape character
 EXEC prompt [TR-219](#)
 exec-timeout command [TR-120](#)

F

Feature Navigator
 See platforms, supported
 filtering output, show and more commands [xviii](#)
 flush-at-activation command [TR-24](#)

G

global configuration mode, summary of [xiv](#)
 guests
 allowing [TR-10](#)
 disallowing [TR-10](#)

H

hardware platforms
 See platforms, supported
 header compressions
 virtual interface template, translate map to [TR-171, TR-196](#)
 help command [xiv](#)
 host-failed message, configuring [TR-17](#)

I

indexes, master [viii](#)
 interface configuration mode, summary of [xiv](#)
 IP addresses
 TCP port assignment [TR-26](#)
 ip alias command [TR-26](#)
 ip-pool translate option
 map to virtual interface template [TR-171, TR-196](#)
 IPX (Internet Packet Exchange)
 loopback interfaces [TR-166, TR-167, TR-176, TR-177, TR-187, TR-188](#)
 loopback translate option
 virtual interface template, mapping to [TR-171, TR-196](#)
 ipx nasi-server enable command [TR-27](#)

K

keepalive translate option
 virtual interface template, mapping to [TR-171, TR-196](#)

keyboard mapping characteristics [TR-29](#)

keymap command [TR-29](#)

keymaps
 custom [TR-31](#)
 default [TR-31](#)
 special characters [TR-30](#)
 syntax [TR-31](#)

keymap-type command [TR-36](#)

keys, Break [TR-69](#)

L

LAT (local-area transport)

access control
 access conditions [TR-39](#)
 group list [TR-47](#)
 group list name assignments [TR-42](#)
 on connections [TR-3](#)

active sessions [TR-101](#)

associate rotary group with a service [TR-58](#)

available services list [TR-37, TR-100](#)

connection queue entry, clearing [TR-18](#)

connections [TR-37 to TR-38](#)

description [TR-37](#)

enabling [TR-41](#)

group code mask, configuring [TR-53](#)

inbound connections, enabling [TR-52](#)

keepalive timer, configuring [TR-45](#)

learned services [TR-100, TR-115](#)

list of services, defining [TR-146](#)

maximum number of sessions, configuring [TR-60](#)

multiple connections [TR-37](#)

node name [TR-46](#)

password for a service, configuring [TR-55](#)

pattern matching symbols (table) [TR-39](#)

proxy node, configuring [TR-57](#)

receive buffers
 host [TR-44](#)
 server [TR-50](#)

remotely modifiable line, configuring [TR-147](#)

service advertisement timer [TR-59](#)

service announcements
 configuring [TR-51](#)
 reenabling [TR-51](#)

service identification, configuring [TR-54](#)

static service rating, configuring [TR-56](#)

transmission interval, configuring [TR-61](#)

lat access-list command [TR-39](#)

lat command [TR-37](#)

lat enabled command [TR-41](#)

lat group-list command [TR-42](#)

lat host-buffers command [TR-44](#)

lat ka-timer command [TR-45](#)

lat node command [TR-46](#)

lat out-group command [TR-47](#)

lat remote-modification command [TR-48](#)

lat retransmit-limit command [TR-49](#)

lat server-buffers command [TR-50](#)

lat service-announcements command [TR-51](#)

lat service enabled command [TR-52](#)

lat service-group command [TR-53](#)

lat service ident command [TR-54](#)

lat service password command [TR-55](#)

lat service rating command [TR-56](#)

lat service-responder command [TR-57, TR-59](#)

lat service rotary command [TR-58](#)

lat service-timer command [TR-59](#)

lat vc-sessions command [TR-60](#)

lat vc-timer command [TR-61](#)

line command [TR-62](#)

lines
 ARA connections, configuring [TR-5, TR-6](#)
 auxiliary port absolute line number [TR-63](#)
 characteristics, configuring [TR-48](#)

console port [TR-63](#)
 dedicated ARA-only, configuring [TR-5](#)
 line configuration mode [TR-61, TR-62](#)
 relative line number [TR-62](#)
 session limits [TR-89](#)
 status [TR-126](#)
 types
 (table) [TR-63](#)
 specifying [TR-62](#)
 virtual terminal [TR-64](#)
 logging in
 Break key [TR-69](#)
 username, configuring [TR-65](#)
 login (EXEC) command [TR-65](#)
 login (line) command [TR-67](#)
 login-string command [TR-69](#)

M

messages
 failed connection [TR-17](#)
 login [TR-17, TR-69](#)
 successful connection [TR-17, TR-69](#)
 MIB, descriptions online [viii](#)
 modem answer-timeout command [TR-120](#)
 modes
 See command modes
 mtu translate option
 virtual interface template, mapping to [TR-171, TR-196](#)

N

NASI (NetWare Access Server Interface)
 clients, enabling [TR-27](#)
 TTY lines, connecting through [TR-27](#)
 virtual terminal lines, connecting through [TR-27](#)
 new information in this release [ix](#)
 node name

LAT, changing [TR-46](#)
 notes, usage in text [x](#)

P

PAD (packet assembler/disassembler)
 log in [TR-70](#)
 parameters
 (table) [TR-73](#)
 parameters, configuring [TR-217](#)
 parameters, setting [TR-72 to TR-74](#)
 See also X.3 PAD
 pad command [TR-70](#)
 password command [TR-72](#)
 passwords
 ARAP [TR-11](#)
 line assignment [TR-72](#)
 platforms, supported
 Feature Navigator, identify using [xix](#)
 release notes, identify using [xix](#)
 ppp use-tacacs translate option
 virtual interface template, mapping to [TR-171, TR-196](#)
 privileged EXEC mode, summary of [xiv](#)
 prompts, system [xiv](#)
 protocols, terminal transport [TR-148](#)
 protocol translations
 ARA outgoing connection [TR-163, TR-174, TR-184](#)
 (example) [TR-192](#)
 global options
 LAT [TR-164, TR-170](#)
 LAT virtual access interface [TR-170](#)
 TCP [TR-181](#)
 TCP virtual access interface [TR-181](#)
 X.25 [TR-185](#)
 x.25 virtual access interface [TR-181](#)
 LAT [TR-163](#)
 LAT options, displaying [TR-164](#)
 LAT virtual access interface [TR-170](#)
 outgoing options

LAT-to-TCP [TR-167](#)
 LAT-to-X.25 [TR-168](#)
 TCP-to-LAT [TR-176](#)
 TCP-to-PPP [TR-176](#)
 TCP-to-SLIP [TR-177](#)
 TCP-to-X.25 [TR-178](#)
 X.25-to-LAT [TR-186](#)
 X.25-to-PPP [TR-187](#)
 X.25-to-SLIP [TR-188](#)
 X.25-to-TCP [TR-188](#)
 TCP [TR-173](#)
 TCP options, displaying [TR-175](#)
 TCP virtual access interface [TR-180](#)
 virtual interface template, mapping outgoing options
 to [TR-171, TR-196](#)
 X.25 [TR-183](#)
 X.25 connections, swapping [TR-174, TR-185](#)
 X.25 interface assignments [TR-191](#)
 X.25 options, displaying [TR-185](#)
 X.25 PVCs
 configuring [TR-189](#)
 removing [TR-190](#)
 X.25 virtual access interface [TR-194](#)
 proxy, configuring for LAT [TR-57](#)

Q

question mark (?) command [xiv](#)

R

receive buffers
 LAT host [TR-44](#)
 LAT server [TR-50](#)
 release notes
 See platforms, supported
 resume (setting X.3 parameters) command [TR-72](#)
 resume (switching sessions) command [TR-76](#)
 retransmission limit, LAT [TR-49](#)

RFC
 full text, obtaining [viii](#)
 RFC 1144, TCP/IP header compression [TR-133](#)
 rlogin
 connections, local transparent [TR-78](#)
 login string [TR-69](#)
 server connections [TR-82](#)
 username authentication [TR-80](#)
 rlogin command [TR-78](#)
 rlogin trusted-localuser-source command [TR-80](#)
 rlogin trusted-remoteuser-source local command [TR-82](#)
 ROM monitor mode, summary of [xiv](#)
 routing translate option
 virtual interface template, mapping to [TR-171, TR-196](#)
 rxspeed command [TR-84](#)

S

server connections
 LAT [TR-37 to TR-38](#)
 rlogin [TR-80, TR-138](#)
 SLIP [TR-133 to TR-134](#)
 Telnet [TR-135, TR-138](#)
 TN3270 [TR-150](#)
 transparent, local [TR-135](#)
 XRemote [TR-219, TR-223, TR-227](#)
 service advertisement timer, configuring [TR-59](#)
 service announcements, reenabling LAT [TR-51](#)
 service exec-callback command [TR-85](#)
 service old-slip-prompts command [TR-86](#)
 service pt-vty-logging command [TR-87](#)
 session-limit command [TR-89](#)
 session-timeout command [TR-90](#)
 setenv command [TR-220, TR-222](#)
 show arap command [TR-92](#)
 show entry command [TR-94](#)
 show keymap command [TR-95](#)
 show lat advertised command [TR-96](#)
 show lat groups command [TR-97](#)

show lat nodes command [TR-98](#)
 show lat services command [TR-100](#)
 show lat sessions command [TR-101](#)
 show lat traffic command [TR-105](#)
 show line command [TR-107](#)
 show node command [TR-112](#)
 show service command [TR-115](#)
 show terminal command [TR-117](#)
 show tn3270 ascii-hexval command [TR-121](#)
 show tn3270 character-map command [TR-122](#)
 show translate command [TR-123](#)
 show ttycap command [TR-125](#)
 show users command [TR-126](#)
 show x25 pad command [TR-128](#)
 show xremote command [TR-130](#)
 show xremote line command [TR-132](#)
 signals, Break
 generating [TR-140](#)
 SLIP (Serial Line Internet Protocol), server
 connections [TR-133](#), [TR-134](#)
 slip command [TR-133](#)

T

Tab key, command completion [xiv](#)
 TCP/IP
 rlogin connections [TR-78](#), [TR-80](#), [TR-82](#)
 Telnet connections [TR-135](#)
 transparent connections [TR-78](#), [TR-135](#)
 Telnet
 Break signal [TR-140](#)
 connections [TR-135 to TR-138](#)
 line, configuring [TR-143](#)
 transparent, local [TR-135](#)
 description [TR-137](#)
 login string [TR-69](#)
 notification of pending output [TR-76](#)
 protocol translation [TR-177](#), [TR-188](#)
 Remote Echo option [TR-142](#)
 special commands (table) [TR-137](#)
 Suppress Go Ahead option [TR-142](#)
 telnet break-on-ip command [TR-140](#)
 telnet command [TR-135](#)
 telnet refuse-negotiations command [TR-142](#)
 telnet speed command [TR-143](#)
 telnet sync-on-break command [TR-144](#)
 telnet transparent command [TR-145](#)
 terminal lat out-group command [TR-146](#)
 terminal lat remote-modification command [TR-147](#)
 terminals
 baud rates, configuring [TR-208](#)
 session limits, setting [TR-89](#)
 session timeout interval, setting [TR-90](#)
 transport protocol [TR-148](#)
 terminal transport preferred command [TR-148](#)
 time limits
 sessions, configuring [TR-12](#)
 timeouts
 absolute [TR-2](#)
 session, setting [TR-90](#)
 timers
 service advertisement, configuring [TR-59](#)
 TN3270
 character mapping, configuring [TR-153](#)
 character mapping, monitoring [TR-121](#), [TR-122](#)
 data character bits, setting [TR-151](#), [TR-152](#)
 default keymaps [TR-31](#)
 description [TR-150](#)
 extended feature mode [TR-157](#)
 international characters [TR-153](#)
 monitoring [TR-121](#)
 null processing handling [TR-158](#)
 require reset after user error [TR-160](#)
 server connections [TR-150](#)
 special characters [TR-30](#)
 tn3270 8bit display command [TR-151](#)
 tn3270 8bit transparent-mode command [TR-152](#)
 tn3270 character-map command [TR-153](#)

tn3270 command [TR-150](#)
 tn3270 datastream command [TR-157](#)
 tn3270 null-processing command [TR-158](#)
 tn3270 optimize-cursor-move command [TR-159](#)
 tn3270 reset-required command [TR-160](#)
 tn3270 status-message command [TR-161](#)
 tn3270 typeahead command [TR-162](#)
 translate lat (virtual access interfaces) command [TR-170](#)
 translate lat command [TR-163](#)
 translate tcp (virtual access interfaces) command [TR-180](#)
 translate tcp command [TR-173](#)
 translate x25 (virtual access interfaces) command [TR-194](#)
 translate x25 command [TR-183](#)
 translation options
 LAT [TR-163, TR-170, TR-176, TR-186](#)
 LAT service advertisements, preventing [TR-176, TR-186](#)
 TCP [TR-173](#)
 TCP/IP
 binary mode [TR-180](#)
 incoming address [TR-180](#)
 Telnet binary mode [TR-173](#)
 virtual interface template, mapping outgoing options
 to [TR-171, TR-196](#)
 X.25 [TR-183](#)
 outgoing connections, swapping [TR-195](#)
 (example) [TR-191](#)
 transport input command [TR-198](#)
 transport output command [TR-200](#)
 transport preferred command [TR-202](#)
 ttycap command [TR-204](#)
 ttycap support [TR-205](#)
 txspeed command [TR-208](#)

U

user EXEC mode, summary of [xiv](#)

V

virtual interface template
 LAT protocol translation on [TR-170, TR-195](#)
 TCP protocol translation on [TR-180](#)
 virtual terminal lines
 configuring [TR-64](#)
 loopback interfaces for translation [TR-166, TR-167, TR-176, TR-177, TR-187, TR-188](#)

W

where command [TR-209](#)

X

X.25
 pad connections display [TR-128](#)
 X.29, SET PARAMETER packet [TR-72, TR-217](#)
 X.3 PAD
 connections [TR-217](#)
 description [TR-217](#)
 X.3 PAD parameters
 change dynamically [TR-72](#)
 default values [TR-72, TR-217](#)
 setting [TR-217](#)
 settings display [TR-128](#)
 X.28 mode [TR-211](#)
 x25 subaddress command [TR-210](#)
 x28 command [TR-211](#)
 x3 command [TR-217](#)
 XDMCP (X Display Manager Control Protocol)
 XRemote, starting [TR-227](#)
 XRemote
 automatic session startup [TR-223](#)
 buffer size, configuring [TR-224](#)
 clients, starting [TR-219](#)
 connections, monitoring [TR-132](#)
 description [TR-219, TR-223, TR-227](#)

EXEC prompt [TR-219](#)
font server identification [TR-225](#)
host computer connections [TR-219](#)
manual session startup [TR-219](#)
reenabling manually [TR-219](#)
server connections [TR-219](#)
server sessions [TR-221](#)
terminal, configuring [TR-220](#)
terminal line statistics [TR-132](#)
terminate session [TR-219](#)
X display location, configuring [TR-219](#)
xremote command [TR-219](#)
xremote lat command [TR-223](#)
xremote tftp buffersize command [TR-224](#)
xremote tftp host command [TR-225](#)
xremote tftp retries command [TR-226](#)
xremote xdm command [TR-227](#)
X Window System
display location, configuring [TR-219](#)