



---

## Symbols

<cr> [xv](#)

? command [xiv](#)

---

## A

AAA account identification

off-ramp fax location, specifying [VR-472, VR-474](#)

AAA accounting services

off-ramp fax service, enabling [VR-470 to VR-471](#)

on-ramp fax service, enabling [VR-464](#)

AAA authentication services

enabling on-ramp [VR-465](#)

aaa nas port voip command [VR-2](#)

ABCD signaling

OOS bit patterns, defining [VR-876](#)

accounting

overloaded Acct-Session-Id field [VR-353](#)

syslog messages [VR-356](#)

vendor-specific RADIUS attributes [VR-355](#)

acc-qos command [VR-3](#)

alarm-trigger command [VR-5](#)

aliases

SMTP off-ramp fax host name, specifying [VR-483](#)

alias static command [VR-7](#)

alt-dial command [VR-9](#)

answer-address command [VR-10](#)

application command [VR-12](#)

arq reject-unknown-prefix command [VR-14](#)

as command [VR-16](#)

asp command [VR-19](#)

ASR (application-specific routing)

proxy bandwidth maximum, specifying [VR-360](#)

ATM interface NSAP addresses, displaying [VR-649](#)

atm scramble-enable command [VR-22](#)

atm video aesa command [VR-23](#)

audio-prompt load command [VR-25](#)

auto-cut-through command [VR-26](#)

---

## B

backhaul-session-manager command [VR-27](#)

bandwidth command [VR-29](#)

bandwidth remote command [VR-31](#)

battery-reversal command [VR-32](#)

block-caller command [VR-34](#)

Blue Alarm

*See* DS1 links, shutting down

busyout forced command [VR-36](#)

busyout monitor command [VR-38](#)

busyout monitor probe command [VR-41](#)

busyout seize command [VR-43](#)

---

## C

cac master command [VR-46](#)

cadence-list command [VR-47](#)

cadence-max-off-time command [VR-49](#)

cadence-min-on-time command [VR-50](#)

cadence-variation command [VR-51](#)

call application cache reload time command [VR-52](#)

call application voice access-method command [VR-55](#)

call application voice accounting enable command [VR-57](#)

call application voice accounting-list command [VR-58](#)

call application voice authen-list command [VR-59](#)

- call application voice authen-method command [VR-61](#)
- call application voice authentication enable command [VR-63](#)
- call application voice command [VR-53](#)
- call application voice global-password command [VR-64](#)
- call application voice language command [VR-65](#)
- call application voice load command [VR-68](#)
- call application voice pin-len command [VR-69](#)
- call application voice redirect-number command [VR-72](#)
- call application voice retry-count command [VR-75](#)
- call application voice set-location command [VR-78](#)
- call application voice uid-len command [VR-81](#)
- call application voice uid-length command [VR-81](#)
- call application voice warning-time command [VR-84](#)
- call completion without M-lead response, enabling [VR-26](#)
- called-number dial-peer configuration command [VR-114](#)
- caller-id alerting dsp-pre-alloc command [VR-118](#)
- caller-id alerting line-reversal command [VR-120](#)
- caller-id alerting pre-ring command [VR-122](#)
- caller-id alerting ring command [VR-124](#)
- caller-id attenuation command [VR-126](#)
- caller-id block command [VR-127](#)
- Caller ID Call Blocking, configuring [VR-34](#)
- caller-id command [VR-116](#)
- caller-id enable command [VR-129](#)
- call fallback
  - configuration, displaying [VR-668](#)
  - statistics, displaying [VR-669](#)
- call fallback active command [VR-87](#)
- call fallback cache-size command [VR-89](#)
- call fallback instantaneous-value-weight command [VR-92](#)
- call fallback jitter-probe num-packets command [VR-94](#)
- call fallback jitter-probe precedence command [VR-96](#)
- call fallback jitter-probe priority-queue command [VR-97](#)
- call fallback key-chain command [VR-99](#)
- call fallback map target address-list command [VR-100](#)
- call fallback map target subnet command [VR-102](#)
- call fallback monitor command [VR-104](#)
- call fallback probe-timeout command [VR-105](#)
- call fallback threshold delay loss command [VR-106](#)
- call fallback threshold icpif command [VR-108](#)
- calling-number outbound command [VR-131](#)
- call rsvp-sync command [VR-110](#)
- call rsvp-sync resv-timer command [VR-111](#)
- calls
  - authorization, forcing [VR-618](#)
  - blocking new [VR-438](#)
  - called party number translation rules, applying [VR-588](#)
  - call history table attributes, specifying [VR-247](#)
  - calling party number translation rules, applying [VR-588](#)
  - Cisco 800 series router CSM status, displaying [VR-753](#)
  - country-specific defaults, configuring [VR-529](#)
  - digits to forward for voice, specifying [VR-324](#)
  - disconnecting [VR-941](#)
  - disconnect notification, configuring [VR-533](#)
  - H.323 connect procedures, forcing [VR-361](#)
  - H.323 proxy calls, displaying [VR-758](#), [VR-759](#)
  - idle state timing parameter, configuring [VR-882](#)
  - POTS dial peer call leg digits, stripping [VR-258](#)
  - session protocol on packet network, selecting [VR-601](#)
  - VoFR session protocol on packet network, selecting [VR-603](#)
  - voice and fax active call information, displaying [VR-655](#)
- calls, video
  - configuring [VR-252](#)
  - history, displaying [VR-679](#)
  - statistics, displaying [VR-678](#)
  - status summary, displaying [VR-821](#)
- call start command [VR-112](#)
- call-waiting command [VR-113](#)
- cap-list vfc command [VR-133](#)
- card type command [VR-134](#)
- carriage return (<cr>) [xv](#)
- CAs (certificate authorities)
  - root, specifying [VR-999](#)
- CAS (channel-associated signalling)
  - state, displaying [VR-695](#)

- cautions, usage in text **x**
- ccm-manager application redundant-link port command **VR-135**
- ccm-manager mgcp command **VR-136**
- ccm-manager redundant-host command **VR-137**
- ccm-manager switchback command **VR-138**
- ccs connect (controller) command **VR-139, VR-141**
- ccs encap frf11 command **VR-143**
- CDAPI (Call Distributor Application Programming Interface)
  - registered applications, displaying **VR-688**
- CES (circuit emulation service)
  - ATM encapsulation, enabling **VR-294**
  - ATM PVC, mapping to **VR-148**
  - cell-loss integration period, setting **VR-144**
  - clock, setting **VR-146**
  - clocking signals, specifying **VR-187**
  - receive buffer, configuring **VR-150**
  - structured type, configuring **VR-154**
  - synchronous clock mode, setting **VR-147**
  - transmit buffer, configuring **VR-152**
- ces cell-loss-integration-period command **VR-144**
- ces-clock command **VR-146**
- ces clockmode synchronous command **VR-147**
- ces connect command **VR-148**
- ces initial-delay command **VR-150**
- ces max-buf-size command **VR-152**
- ces service command **VR-154**
- Cisco 800 series routers
  - telephone port characteristics, displaying **VR-754**
- Cisco IOS configuration changes, saving **xviii**
- Cisco MC3810 universal concentrator
  - ATM scrambling on E1, enabling **VR-22**
  - PCM signal companding standard, selecting **VR-206**
- CiscoSecure for Windows NT
  - password, defining **VR-459**
- clear backhaul-session-manager group command **VR-156**
- clear call fallback cache command **VR-157**
- clear call fallback stats command **VR-158**
- clear controllers call-counters command **VR-159**
- clear csm-statistics command **VR-174, VR-175**
- clear h323 gatekeeper call command **VR-176**
- clear ip sctp statistics **VR-178**
- clear mgcp statistics command **VR-179**
- clear rlm group command **VR-180**
- clear rudpv0 statistics command **VR-182**
- clear rudpv1 statistics command **VR-183**
- clear sgcp statistics command **VR-184**
- clear ss7 sm stats command **VR-185**
- clear voice port command **VR-186**
- clock-select command **VR-187**
- codec (dial-peer) command **VR-188**
- codec (dsp) command **VR-195**
- codec (voice-port) command **VR-197**
  - See* codec (dial-peer) command
- codec aal2-profile command **VR-198**
- codec complexity command **VR-200**
- codec preference command **VR-202**
- codecs
  - configuring **VR-440**
  - digits on compressed, forwarding **VR-443**
  - list of preferred **VR-202**
  - local video serial interface location, specifying **VR-526**
  - pass-through analog data, enabling **VR-447**
  - selection preference list, assigning **VR-1034, VR-1039**
  - video ATM dial peer, defining **VR-252**
  - voice coder rate of speech, specifying **VR-188**
- comfort-noise command **VR-205**
- command modes, understanding **xiii to xiv**
- commands
  - context-sensitive help for abbreviating **xiv**
  - default form, using **xvii**
  - no form, using **xvii**
- command syntax
  - conventions **ix**
  - displaying (example) **xv**
- compand-type command **VR-206**
- condition command **VR-207**

- configurations, saving [xviii](#)
  - connect (atm) command [VR-209](#)
  - connect (drop-and-insert) command [VR-211](#)
  - connect (global) command [VR-213](#)
  - connect command [VR-211](#)
  - connection command [VR-215](#)
  - connections
    - ATM T1 and E1, defining [VR-209](#)
    - drop-and-insert statistics, displaying [VR-691](#)
    - T1 and E1 TDM cross-connect
      - configuring slots [VR-935](#)
      - defining [VR-211](#)
    - timeout, configuring [VR-219](#)
    - voice port, specifying [VR-215](#)
  - connection-timeout command [VR-219](#)
  - connect voice command [VR-214](#)
  - copy flash vfc command [VR-221](#)
  - copy tftp vfc command [VR-222](#)
  - cptone command [VR-223](#)
  - cross-connect command [VR-228](#)
  - CSI (called subscriber identifier)
    - fax, defining [VR-308](#)
  - CSM (call switching module)
    - statistics
      - clearing [VR-174 to VR-175](#)
      - displaying [VR-701](#)
  - customer-id command [VR-230](#)
- 
- D**
- default [VR-234](#)
  - default command [VR-234](#)
  - default-file vfc command [VR-235](#)
  - define command [VR-236](#)
  - delete vfc command [VR-238](#)
  - description (dspfarm) command [VR-240](#)
  - description command [VR-239](#)
  - destination-pattern (interface) command [VR-244](#)
  - destination-pattern (ISDN) command [VR-244](#)
  - destination-pattern command [VR-241](#)
  - detect v54 channel-group command [VR-245](#)
  - device-id command [VR-246](#)
  - dial-control-mib command [VR-247](#)
  - dialing
    - delayed, wink pulse duration [VR-977](#)
  - dial-peer hunt command [VR-248](#)
  - dial peers
    - alternate dial-out string [VR-9](#)
    - application, enabling [VR-12](#)
    - association with telephone number, displaying [VR-716](#)
    - ATM video NSAP address, specifying [VR-505](#)
    - call leg numbering type, selecting [VR-508](#)
    - configuration, displaying [VR-708](#)
    - fax relay VoIP ECM, disabling [VR-309](#)
    - fax transmission rate, establishing [VR-306](#)
    - FRF.11 Annex A frames, generating [VR-283](#)
    - hunting, disabling when call fails [VR-377](#)
    - hunting after user-busy disconnect, configuring [VR-1049](#)
    - hunt selection order, specifying [VR-248](#)
    - information digits, specifying [VR-390](#)
    - information type, selecting [VR-391](#)
    - maximum connections, specifying [VR-431](#)
    - maximum redirect servers, setting [VR-435](#)
    - Modem Passthrough over VoIP, configuring [VR-479](#)
    - network-specific address, specifying [VR-607, VR-610](#)
    - packet priority (IP Precedence), setting [VR-396](#)
    - roaming capability, enabling [VR-584](#)
    - shutting down [VR-864](#)
    - signal type, selecting [VR-896](#)
    - technology prefix, specifying [VR-937](#)
    - video configuration, displaying [VR-708](#)
    - voice configuration, displaying [VR-709](#)
    - VoIP fax protocol, specifying [VR-302, VR-304](#)
    - VoIP H.225 TCP timeout value, setting [VR-359](#)
    - VoIP network-specific address, specifying [VR-613](#)
    - VoIP poor voice quality notifications,
      - generating [VR-901](#)
  - dial-peer terminator command [VR-250](#)

dial-peer video command [VR-252](#)  
dial-peer voice command [VR-253](#)  
dial-type command [VR-256](#)  
DID (direct inward dial) call treatment, enabling [VR-261](#)  
digit-strip command [VR-258](#)  
direct-inward-dial command [VR-261](#)  
disc\_pi\_off command [VR-262](#)  
disconnect-ack command [VR-263](#)  
documentation  
    conventions [ix](#)  
    feedback, providing [xi](#)  
    modules [v to vii](#)  
    online, accessing [x](#)  
    ordering [xi](#)  
Documentation CD-ROM [x](#)  
documents and resources, supporting [viii](#)  
ds0 busyout command [VR-264](#)  
ds0-group command [VR-266, VR-555](#)  
DS0 groups  
    cross connecting [VR-228](#)  
    DTMF inter-digit timer, configuring [VR-285](#)  
DS0 high water marks, clearing [VR-159](#)  
DS0 timeslot  
    busyout state, forcing [VR-264](#)  
    logical voice ports, specifying [VR-266](#)  
DS1 links, shutting down [VR-865](#)  
DSN (delivery status notice)  
    delivery options, configuring [VR-277](#)  
dsn command [VR-277](#)  
DSP (digital signal processor)  
    busy out test [VR-957](#)  
    enabling [VR-280](#)  
    interface, description [VR-239, VR-240](#)  
    playout buffers, tuning [VR-513, VR-517](#)  
    playout delay mode, selecting [VR-519, VR-521](#)  
    reset test [VR-959](#)  
    resetting [VR-566](#)  
    restore activity test [VR-960, VR-962](#)  
    shutting down [VR-863](#)

    statistics, displaying [VR-737](#)  
    VFC summary, displaying [VR-852, VR-855](#)  
    VoFR frame sequence numbers, generating [VR-592](#)  
    voice channel status, displaying [VR-824, VR-828](#)  
dspint dspfarm command [VR-280](#)  
dtmf-relay (Voice over Frame Relay) command [VR-283](#)  
dtmf-relay (Voice over IP) command [VR-281](#)  
dtmf timer inter-digit command [VR-285](#)

---

## E

E&M interface type, specifying [VR-1009](#)  
E&M MELCAS (Mercury Exchange Limited Channel Associated Signaling) voice signaling  
    receive bits, ignoring [VR-381](#)  
    transmit and receive bits, defining [VR-236](#)  
E.164 addresses  
    gateway, registering to [VR-562](#)  
E.164 telephone numbers  
    destination pattern [VR-241](#)  
    incoming call, identifying to dial peer [VR-10](#)  
E1  
    CCS cross-connect, configuring [VR-478](#)  
    CCS frame-forwarding, configuring [VR-478](#)  
    contiguous bearer channel handling, configuring [VR-399](#)  
    controller interface mode, configuring [VR-476](#)  
    microcode images, reloading [VR-458](#)  
    out-of-service alarm, configuring [VR-5](#)  
    signal levels, attenuating [VR-287, VR-288](#)  
echo-cancel comfort-noise command [VR-286](#)  
echo-cancel compensation command [VR-287](#)  
echo-cancel coverage command [VR-288](#)  
echo-cancel enable (controller) command [VR-292](#)  
echo-cancel enable command [VR-290](#)  
echo cancellation processor  
    loopback mode, configuring [VR-293](#)  
echo-cancel loopback command [VR-293](#)  
echo suppression, nonlinear processing [VR-504](#)

encapsulation atm-ces command [VR-294](#)  
 encapsulation ftc-trunk command [VR-296](#)  
 encapsulations  
   voice types, specifying [VR-1058](#)  
 encryption algorithm, setting [VR-297](#)  
 encryption command [VR-297](#)  
 erase vfc command [VR-299](#)  
 EXEC commands  
   show dialplan incall number [VR-712](#)  
 expect-factor command [VR-300](#)  
 external applications, triggering [VR-597](#)

---

## F

fax cover sheet  
   e-mail, generating from [VR-315](#), [VR-316](#)  
   header data, specifying [VR-317](#), [VR-320](#)  
   personalizing [VR-312](#)  
   standard, generating [VR-313](#)  
 fax header information, configuring [VR-310](#)  
 fax image resolution, specifying [VR-385](#)  
 fax images, encoding method [VR-383](#)  
 fax protocol (dial-peer) command [VR-302](#)  
 fax protocol (voice-service) command [VR-304](#)  
 fax rate command [VR-306](#)  
 fax receive called-subscriber [VR-308](#)  
 fax receive called-subscriber command [VR-308](#)  
 fax-relay ecm disable command [VR-309](#)  
 fax send center-header [VR-310](#)  
 fax send center-header command [VR-310](#)  
 fax send coverage comment [VR-312](#)  
 fax send coverage comment command [VR-312](#)  
 fax send coverage e-mail-controllable [VR-313](#)  
 fax send coverage e-mail-controllable command [VR-313](#)  
 fax send coverage enable [VR-315](#)  
 fax send coverage enable command [VR-315](#)  
 fax send coverage show-detail [VR-316](#)  
 fax send coverage show-detail command [VR-316](#)  
 fax send left-header [VR-317](#)  
 fax send left-header command [VR-317](#)  
 fax send max-speed [VR-319](#)  
 fax send max-speed command [VR-319](#)  
 fax send right-header [VR-320](#)  
 fax send right-header command [VR-320](#)  
 fax send transmitting-subscriber command [VR-322](#)  
 fax transmission rate, establishing [VR-319](#)  
 Feature Navigator  
   *See* platforms, supported  
 filtering output, show and more commands [xviii](#)  
 firmware, unbundling VFC [VR-1013](#)  
 forward-alarms command [VR-323](#)  
 forward-digits command [VR-324](#)  
 frag-pre-queuing command [VR-328](#)  
 frame-relay voice bandwidth command [VR-326](#)  
 freq-max-power command [VR-331](#)  
 freq-min-power command [VR-332](#)  
 freq-pair command [VR-333](#)  
 freq-power-twist command [VR-335](#)  
 FRF.11 subchannel information, displaying [VR-719](#)  
 FRF.11 trunk  
   voice class, creating [VR-1040](#), [VR-1042](#), [VR-1044](#)  
 ftc-trunk frame-relay-dlci command [VR-336](#)  
 ftc-trunk management-dlci command [VR-337](#)  
 ftc-trunk management-protocol command [VR-338](#)  
 FXO (foreign exchange office)  
   analog-to-digital gain offset, specifying [VR-422](#)  
   battery polarity reversal, configuring [VR-32](#)  
   guard-out durations, specifying [VR-985](#)  
 FXO supervisory disconnect  
   enabling [VR-930](#)  
   tone, assigning [VR-933](#)  
   tone detection parameters voice class, creating [VR-1036](#)  
   voice port tone detection, configuring [VR-931](#)  
 FXS (foreign exchange station)  
   analog-to-digital gain offset, specifying [VR-422](#)  
   battery polarity reversal, configuring [VR-32](#)  
   disconnect signal acknowledgment,  
     configuring [VR-263](#)

hook flash duration, specifying [VR-986](#)  
 idle port voltage, specifying [VR-379](#)  
 voice port ring  
   cadence, specifying [VR-578](#)  
   frequency, specifying [VR-580](#)  
   specifying number of [VR-582](#)

---

## G

gatekeeper command [VR-340](#)  
 gatekeepers  
   active calls, displaying [VR-722](#)  
   ARQ requests, rejecting [VR-14](#)  
   call disconnect, forcing [VR-176](#)  
   disabling [VR-866](#)  
   full status, displaying [VR-731](#)  
   H.323, specifying [VR-363](#)  
   listener port, configuring [VR-596](#)  
   local zone, configuring [VR-1065](#)  
 LRQs  
   delay, configuring [VR-429](#)  
   forwarding [VR-424](#)  
   rejecting [VR-427](#)  
   sending multiple [VR-429](#)  
   sending sequential [VR-430](#)  
 registered endpoint status, displaying [VR-724](#)  
 registered server triggers, displaying [VR-729](#)  
 remote zone, configuring [VR-1070](#)  
 security, enabling [VR-590](#)  
 static entry, creating [VR-7](#)  
 technology prefix, configuring [VR-357](#)  
 zone accessibility, configuring [VR-1062](#)  
 zone bandwidth, configuring [VR-1064](#)  
 zone prefix, configuring [VR-1067](#)  
 zone prefix table, displaying [VR-732](#)  
 zone status, displaying [VR-733](#)  
 zone subnetworks, configuring [VR-1072](#)  
 gateway command [VR-341](#)  
 gateways

  alert message on terminating, enabling [VR-1028](#)  
   H.323 resource availability, reporting [VR-567](#)  
   Modem Passthrough over VoIP, configuring [VR-481](#)  
   SMTP server response MDN, processing [VR-485](#)  
   status, displaying [VR-735](#)  
   technology prefix table, displaying [VR-726](#)  
 global configuration mode, summary of [xiv](#)  
 group auto-reset command [VR-343](#)  
 group command [VR-342](#)  
 group cumulative-ack command [VR-344](#)  
 group out-of-sequence command [VR-345](#)  
 group receive command [VR-346](#)  
 group retransmit command [VR-347](#)  
 group timer cumulative ack command [VR-348](#)  
 group timer keepalive command [VR-349](#)  
 group timer retransmit command [VR-350](#)  
 group timer transfer command [VR-351](#)  
 gw-accounting command [VR-352](#)  
 gw-accounting h323 command [VR-352](#), [VR-354](#)  
 gw-accounting h323 syslog command [VR-356](#)  
 gw-type-prefix command [VR-357](#)

---

## H

H.323 accounting, enabling [VR-352](#)  
 H.323 gateway  
   call disconnect, enabling [VR-262](#)  
   DTMF tones, relaying [VR-281](#)  
   gatekeeper ID name, defining [VR-366](#)  
   gatekeeper location, defining [VR-367](#)  
   interface, configuring [VR-369](#)  
   resource statistics, displaying [VR-681](#)  
   technology index, defining [VR-370](#)  
   threshold settings, displaying [VR-683](#)  
 H.323 proxy  
   alias, registering [VR-372](#)  
   calls, displaying [VR-758](#), [VR-759](#)  
   local and remote zone communication,  
     configuring [VR-1016](#)

- status, displaying [VR-765](#)
  - H.323 traffic
    - bandwidth maximum, specifying [VR-29](#)
    - bandwidth total, specifying [VR-31](#)
  - H.323 voice class, creating [VR-1038](#)
  - h323 timeout tcp establish command [VR-359](#)
  - h323 asr bandwidth command [VR-360](#)
  - h323 asr command [VR-360](#)
  - h323 call start command [VR-361](#)
  - h323 gatekeeper command [VR-363](#)
  - h323-gateway voip bind srcaddr command [VR-365](#)
  - h323-gateway voip h323-id command [VR-366](#)
  - h323-gateway voip id command [VR-367](#)
  - h323-gateway voip interface command [VR-369](#)
  - h323-gateway voip tech-prefix command [VR-370](#)
  - h323 h323-id command [VR-372](#)
  - h323 interface command [VR-373](#)
  - h323 qos command [VR-375](#)
  - h323 t120 command [VR-376](#)
  - hardware platforms
    - See* platforms, supported
  - HDLC interface
    - VoHDLC segmentation size, defining [VR-1048](#)
  - help command [xiv](#)
  - huntstop command [VR-377](#)
- 
- ICPIF (Impairment/Calculated Planning Impairment Factor)
    - estimates
      - clearing [VR-157](#)
      - displaying [VR-666](#)
    - RTR values, displaying [VR-939](#)
    - VoIP dial peers, specifying [VR-378](#)
  - icpif command [VR-378](#)
  - idle-voltage command [VR-379](#)
  - ignore command [VR-381](#)
  - image encoding command [VR-383](#)
  - image resolution command [VR-385](#)
  - imaging encoding command [VR-383](#)
  - impedance command [VR-387](#)
  - incoming called-number command [VR-388](#)
  - indexes, master [viii](#)
  - info-digits command [VR-390](#)
  - information-type command [VR-391](#)
  - input gain command [VR-392](#)
  - interface (RLM server) command [VR-394](#)
  - interface configuration mode, summary of [xiv](#)
  - IP
    - addresses
      - configuring [VR-394](#)
    - ip circuit command [VR-396](#)
    - ip precedence (dial-peer) command [VR-396](#)
    - ip udp checksum command [VR-397](#)
  - ISDN
    - subscriber line [VR-402](#)
    - telephone number destination pattern [VR-244](#)
  - isdn bind-l3 command [VR-398](#)
  - ISDN BRI
    - line power supply, configuring [VR-413](#)
    - state, displaying [VR-695](#)
  - isdn contiguous-bchan command [VR-399](#)
  - isdn global-disconnect command [VR-400](#)
  - isdn i-number command [VR-402](#)
  - isdn network-failure-cause command [VR-403](#)
  - ISP (Internet service provider) address,
    - configuring [VR-1014](#)
  - IVR (interactive voice response)
    - dynamic audio files [VR-411](#)
    - file autoloader [VR-406, VR-408, VR-409](#)
    - script, displaying [VR-662](#)
  - ivr autoloader command [VR-406](#)
  - ivr autoloader mode command [VR-409](#)
  - ivr autoloader retry command [VR-408](#)
  - ivr prompt memory command [VR-411](#)



**K**

keepalives

signaling packet interval, configuring [VR-874](#)**L**line-power command [VR-413](#)link (RLM) command [VR-415](#)loopback (T1 controller) command [VR-419](#)loop-detect command [VR-421](#)loss-plan command [VR-422](#)lrq forward-queries command [VR-424](#)lrq reject-unknown-prefix command [VR-427](#)lrq timeout blast window command [VR-429](#)lrq timeout seq delay command [VR-430](#)**M**max-conn command [VR-431](#)max-connection command [VR-432](#)max-forwards command [VR-434](#)max-redirects command [VR-435](#)

MDN (message disposition notice)

address for, specifying [VR-495](#)off-ramp gateway process, specifying [VR-485](#)requesting [VR-436](#)mdn command [VR-436](#)

media gateway

package capability, configuring [VR-441, VR-448](#)

messages

raw telephone equipment, displaying [VR-766](#)MGCP (Media Gateway Control Protocol) statistical  
counters, resetting [VR-179](#)mgcp block-newcalls command [VR-438](#)mgcp call-agent command [VR-439](#)mgcp codec command [VR-440](#)mgcp command [VR-437](#)mgcp default-package command [VR-441](#)mgcp dtmf-relay command [VR-443](#)mgcp ip-tos command [VR-444](#)mgcp max-waiting-delay command [VR-446](#)mgcp modem passthru command [VR-447](#)mgcp package-capability command [VR-448](#)mgcp playout command [VR-450](#)mgcp quality-threshold command [VR-451](#)mgcp request retries command [VR-453](#)mgcp request timeout command [VR-454](#)mgcp restart-delay command [VR-455](#)mgcp sdp simple command [VR-456](#)mgcp vad command [VR-457](#)MIB, descriptions online [viii](#)microcode reload controller command [VR-458](#)mmoip aaa global-password command [VR-459](#)mmoip aaa method fax accounting command [VR-460](#)mmoip aaa method fax authentication command [VR-462](#)mmoip aaa receive-accounting enable command [VR-464](#)mmoip aaa receive-authentication enable  
command [VR-465](#)mmoip aaa receive-id primary command [VR-466](#)mmoip aaa receive-id secondary command [VR-468](#)mmoip aaa send-accounting enable command [VR-470](#)mmoip aaa send-authentication enable command [VR-471](#)mmoip aaa send-id primary command [VR-472](#)mmoip aaa send-id secondary command [VR-474](#)mode (Voice over ATM) command [VR-476](#)mode ccs command [VR-478](#)modem passthrough (dial-peer) command [VR-479](#)modem passthrough (voice-service) command [VR-481](#)

modes

*See* command modesmta receive aliases command [VR-483](#)mta receive generate-mdn command [VR-485](#)mta receive maximum-recipients command [VR-487](#)mta send mail-from command [VR-489](#)mta send origin-prefix command [VR-491](#)mta send postmaster command [VR-493](#)mta send return-receipt-to command [VR-495](#)

mta send server command [VR-497](#)  
 mta send subject command [VR-499](#)  
 music-threshold command [VR-500](#)

---

## N

Nariwake service registered caller ring cadence,  
 configuring [VR-564](#)  
 network-clock base-rate command [VR-502](#)  
 network clocks  
   base rate, configuring [VR-502](#)  
   setings, displaying [VR-690](#)  
   switch delay time, setting [VR-503](#)  
 network-clock-switch command [VR-503](#)  
 non-linear command [VR-504](#)  
 notes, usage in text [x](#)  
 nsap command [VR-505](#)  
 numbering-type command [VR-508](#)  
 num-exp command [VR-506](#)

---

## O

OOS (out-of-service) signal  
   connection restart timeout, specifying [VR-886](#)  
   lost signal delay time, specifying [VR-894](#)  
   pattern, specifying [VR-880](#), [VR-890](#), [VR-892](#)  
   standby state, configuring [VR-888](#)  
   timing parameters, specifying [VR-884](#)  
 operation command [VR-510](#)  
 output attenuation command [VR-511](#)

---

## P

platforms, supported  
   Feature Navigator, identify using [xix](#)  
   release notes, identify using [xix](#)  
 playout-delay (dial peer) command [VR-513](#)  
 playout-delay (voice-port) command [VR-517](#)  
 playout-delay command [VR-513](#), [VR-517](#)

playout-delay mode (dial-peer) command [VR-519](#)  
 playout-delay mode (voice-port) command [VR-521](#)  
 port (dial peer) command [VR-523](#)  
 port (voice) command [VR-523](#)  
 port media command [VR-526](#)  
 port signal command [VR-527](#)  
 pots call-waiting command [VR-528](#)  
 pots country command [VR-529](#)  
 pots dialing-method command [VR-531](#)  
 pots disconnect-supervision command [VR-533](#)  
 pots disconnect-time command [VR-535](#)  
 pots distinctive-ring-guard-time command [VR-537](#)  
 pots encoding command [VR-539](#)  
 pots line-type command [VR-541](#)  
 pots ringing-freq command [VR-543](#)  
 pots silence-time [VR-545](#)  
 pots silence-time command [VR-545](#)  
 pots tone-source [VR-547](#)  
 pots tone-source command [VR-547](#)  
 pre-dial delay command [VR-549](#)  
 preference command [VR-550](#)  
 prefix command [VR-553](#)  
 pri-group command [VR-555](#)  
 pri-group nec-fusion command [VR-557](#)  
 privileged EXEC mode, summary of [xiv](#)  
 progress\_ind command [VR-558](#)  
 prompts, system [xiv](#)  
 protocol rlm port command [VR-417](#)  
 proxy h323 command [VR-560](#)

---

## Q

QoS (quality of service)  
   dial peer, specifying [VR-565](#)  
   H.323 gateway, enabling on [VR-375](#)  
   RSVP attempted call statistics, displaying [VR-686](#)  
   RSVP synchronization, displaying [VR-684](#)  
   VoIP dial peer, defining for [VR-3](#)  
 question mark (?) command [xiv](#)

**R**

RADIUS accounting attributes  
     overloaded Acct-Session-Id field [VR-353](#)  
     vendor specific [VR-355](#)

register e164 command [VR-562](#)

registered-caller ring command [VR-564](#)

release notes  
     *See* platforms, supported

req-qos command [VR-565](#)

reset command [VR-566](#)

resource threshold command [VR-567](#)

response-timeout [VR-569](#)

response-timeout command [VR-569](#)

retry (SIP user-agent) command [VR-575](#)

retry-delay command [VR-571](#)

retry-limit command [VR-573](#)

RFC  
     full text, obtaining [viii](#)

RFC 821, envelope-from address or Return-Path address [VR-489](#)

ringback tone, enabling [VR-1001](#)

ring cadence command [VR-578](#)

ring command [VR-576](#)

ring frequency command [VR-580](#)

ringing  
     distinctive, configuring [VR-576](#)  
     timeout value, configuring [VR-967](#)

ring number command [VR-582](#)

RLM (Redundant Link Manager)  
     enabling [VR-415](#)  
     group  
         latency display [VR-767](#)  
         status [VR-770](#)  
         timer values [VR-772](#)

roaming  
     matching pattern, configuring [VR-622](#)  
     roaming (settlement) command [VR-585](#)  
     roaming command [VR-584](#)

ROM monitor mode, summary of [xiv](#)

RS-366 video interface  
     statistics, displaying [VR-693](#)

RTSP (Real Time Streaming Protocol)  
     session history, keeping [VR-586, VR-587](#)  
     session records, displaying [VR-774](#)

rtsp client session history duration command [VR-586](#)

rtsp client session history records command [VR-587](#)

rule [VR-588](#)

rule command [VR-588](#)

**S**

security command [VR-590](#)

sequence-numbers command [VR-592](#)

server (RLM) command [VR-594](#)

server registration-port command [VR-596](#)

server trigger command [VR-597](#)

session group command [VR-600](#)

session protocol (VoFR) command [VR-603](#)

session protocol aal2 command [VR-605](#)

session protocol command [VR-601](#)

session protocol multicast command [VR-606](#)

sessions  
     SIP transport layer protocol [VR-616](#)

session target (VoATM) command [VR-607](#)

session target (VoFR) command [VR-610](#)

session target (VoIP) command [VR-613](#)

session transport command [VR-616](#)

set command [VR-617](#)

settle-call command [VR-618](#)

settlement command [VR-620](#)

settlement providers  
     attributes  
         displaying [VR-785](#)  
         specifying [VR-620](#)  
     connection attempt maximum, setting [VR-573](#)  
     delay between connection attempts, setting [VR-571](#)  
     gateway associated with [VR-246](#)

- roaming capability, enabling [VR-585](#)
- type, selecting [VR-1011](#)
- settlement roam-pattern command [VR-622](#)
- SGCP (Simple Gateway Control Protocol)
  - active connections, listing [VR-787](#)
  - call agent, defining [VR-625](#)
  - calls, terminating [VR-627](#)
  - daemon, starting [VR-623](#)
  - fax and modem passthrough, enabling [VR-631](#)
  - management-eligible endpoints, displaying [VR-789](#)
  - notify and delete message retries, specifying [VR-635](#)
  - quarantine buffer, disabling [VR-633](#)
  - request response timeout, specifying [VR-637](#)
  - retransmission timer algorithm, configuring [VR-641](#)
  - RSIP message, triggering [VR-639](#)
  - RTP transmission interval, configuring [VR-643](#)
  - statistics, clearing [VR-184](#)
  - statistics, displaying [VR-791](#)
  - TSE payload type, enabling [VR-645](#)
  - waiting delay, setting [VR-629](#)
- sgcp call-agent command [VR-625](#)
- sgcp command [VR-623](#)
- sgcp graceful-shutdown [VR-627](#)
- sgcp max-waiting-delay command [VR-629](#)
- sgcp modem passthru command [VR-631](#)
- sgcp quarantine-buffer disable command [VR-633](#)
- sgcp request retries command [VR-635](#)
- sgcp request timeout command [VR-637](#)
- sgcp restart command [VR-639](#)
- sgcp retransmit timer command [VR-641](#)
- sgcp timer command [VR-643](#)
- sgcp tse payload command [VR-645](#)
- show aal2 profile command [VR-647](#)
- show atm video-voice address command [VR-649](#)
- show backhaul-session-manager group command [VR-650](#)
- show backhaul-session-manager session command [VR-652](#)
- show backhaul-session-manager set command [VR-654](#)
- show call active command [VR-655](#)
- show call application voice command [VR-662](#)
- show call fallback cache command [VR-666](#)
- show call fallback config command [VR-668](#)
- show call fallback stats command [VR-669](#)
- show call history [VR-670](#)
- show call history command [VR-670](#)
- show call history video record command [VR-678](#)
- show call history voice record command [VR-679](#)
- show call resource voice stats command [VR-681](#)
- show call resource voice threshold command [VR-683](#)
- show call rsvp-sync conf command [VR-684](#)
- show call rsvp-sync stats command [VR-686](#)
- show cdapi command [VR-688](#)
- show ces clock-select command [VR-690](#)
- show connect command [VR-691](#)
- show controllers rs366 command [VR-693](#)
- show controllers timeslots command [VR-695](#)
- show controllers voice command [VR-697](#)
- show csm command [VR-701](#)
- show dhcp command [VR-708](#)
- show dial-peer video command [VR-708](#)
- show dial-peer voice command [VR-709](#)
- show dialplan incall number command [VR-712](#)
- show frame-relay vofr command [VR-719](#)
- show gatekeeper calls command [VR-722](#)
- show gatekeeper endpoints command [VR-724](#)
- show gatekeeper gw-type-prefix command [VR-726](#)
- show gatekeeper servers command [VR-729](#)
- show gatekeeper status command [VR-731](#)
- show gatekeeper zone prefix [VR-732](#)
- show gatekeeper zone prefix command [VR-732](#)
- show gatekeeper zone status command [VR-733](#)
- show gateway command [VR-735](#)
- show interface dspfarm dsp command [VR-737](#)
- show mgcp command [VR-742](#)
- show mgcp connection command [VR-745](#)
- show mgcp endpoint command [VR-747](#)
- show mgcp statistics command [VR-748](#)
- show num-exp command [VR-751](#)

- show pots csm command [VR-753](#)
- show pots status command [VR-754](#)
- show proxy h323 calls command [VR-758](#)
- show proxy h323 detail-call command [VR-759](#)
- show proxy h323 status command [VR-765](#)
- show rawmsg command [VR-766](#)
- show rlm group statistics command [VR-767](#)
- show rlm group status command [VR-770](#)
- show rlm group timer command [VR-772](#)
- show rtsp client session command [VR-774](#)
- show rudpv1 command [VR-781](#)
- show settlement command [VR-785](#)
- show sgcp connection command [VR-787](#)
- show sgcp endpoint command [VR-789](#)
- show sgcp statistics command [VR-791](#)
- show sip-ua command [VR-793](#)
- show translation-rule command [VR-812](#)
- show vfc cap-list command [VR-816](#)
- show vfc command [VR-815](#)
- show vfc default-file command [VR-817](#)
- show vfc directory command [VR-818](#)
- show vfc version command [VR-820](#)
- show video call summary command [VR-821](#)
- show voice busyout command [VR-822](#)
- show voice call command [VR-824](#)
- show voice dsp command [VR-828](#)
- show voice permanent-call command [VR-830](#)
- show voice port command [VR-834](#)
- show voice trunk-conditioning signaling command [VR-845](#)
- show voice trunk-conditioning supervisory command [VR-849](#)
- show vrm active\_calls command [VR-852](#)
- show vrm vdevices command [VR-855](#)
- shut command [VR-863](#)
- shutdown (DS 1 link) commands [VR-865](#)
- shutdown (gatekeeper) command [VR-866](#)
- shutdown (RLM) command [VR-867](#)
- shutdown (settlement) command [VR-868](#)
- shutdown (voice-port) command [VR-870](#)
- shutdown command
  - dial-peer configuration [VR-864](#)
- signal command [VR-872](#)
- signal keepalive command [VR-874](#)
- signal pattern command [VR-876](#)
- signal sequence oos command [VR-880](#)
- signal timing idle suppress-voice command [VR-882](#)
- signal timing oos command [VR-884](#)
- signal timing oos restart command [VR-886](#)
- signal timing oos slave-standby command [VR-888](#)
- signal timing oos suppress-all command [VR-890](#)
- signal timing oos suppress-voice command [VR-892](#)
- signal timing oos timeout command [VR-894](#)
- signal-type command [VR-896](#)
- SIP (Session Initiation Protocol)
  - enabling [VR-899](#)
  - UA, configuring [VR-1008](#)
  - UA settings, displaying [VR-793](#)
- sip-server command [VR-898](#)
- sip-ua command [VR-899](#)
- snmp enable peer-trap poor-qov command [VR-901](#)
- station-id command [VR-927](#)
- Store and Forward Fax
  - AAA accounting method, defining [VR-460](#)
  - AAA authentication method, defining [VR-462](#)
  - email prefix header, adding [VR-491](#)
  - SMTP maximum recipients, specifying [VR-487](#)
- subcell multiplexing, enabling [VR-929](#)
- subcell-mux command [VR-929](#)
- supervisory disconnect anytime command [VR-931](#)
- supervisory disconnect command [VR-930](#)
- supervisory disconnect dualtone voice-class command [VR-933](#)

---

## T

- T.120 data channels
  - H.323 gateway, enabling capabilities on [VR-376](#)

- T1
  - CCS cross-connect, configuring [VR-478](#)
  - CCS frame-forwarding, configuring [VR-478](#)
  - controller interface mode, configuring [VR-476](#)
  - loopback test mode, setting [VR-419](#)
  - loop detection, enabling [VR-421](#)
  - microcode images, reloading [VR-458](#)
  - out-of-service alarm [VR-5](#)
  - signal levels, attenuating [VR-287, VR-288](#)
- Tab key, command completion [xiv](#)
- tdm-group command [VR-935](#)
- tech-prefix command [VR-937](#)
- telephone numbers
  - destination pattern, expanding [VR-506](#)
  - expansions, displaying [VR-751](#)
  - incoming called, specifying [VR-388](#)
  - variable length terminator, changing [VR-250](#)
  - workstation dial application, using [VR-940](#)
- test call fallback probe command [VR-939](#)
- test pots dial command [VR-940](#)
- test pots disconnect command [VR-941](#)
- test translation-rule command [VR-942](#)
- test voice port detector command [VR-944](#)
- test voice port inject-tone command [VR-947](#)
- test voice port loopback command [VR-950](#)
- test voice port relay command [VR-952](#)
- test voice port switch command [VR-955](#)
- test vrm busyout command [VR-957](#)
- test vrm reset command [VR-959](#)
- test vrm unbusyout command [VR-960, VR-962](#)
- threshold noise command [VR-962](#)
- timeouts call-disconnect command [VR-963](#)
- timeouts initial command [VR-964](#)
- timeouts interdigit command [VR-965](#)
- timeouts ringing [VR-967](#)
- timeouts ringing command [VR-967](#)
- timeouts wait-release command [VR-968](#)
- timers command [VR-970](#)
- timing clear-wait command [VR-971](#)
- timing delay-duration command [VR-973](#)
- timing delay-start command [VR-975](#)
- timing delay-with-integrity command [VR-977](#)
- timing dialout-delay command [VR-981](#)
- timing dial-pulse min-delay command [VR-979](#)
- timing digit command [VR-983](#)
- timing guard-out command [VR-985](#)
- timing hookflash-input command [VR-986](#)
- timing hookflash-out [VR-987](#)
- timing interdigit command [VR-988](#)
- timing percentbreak command [VR-990](#)
- timing pulse command [VR-991](#)
- timing pulse-interdigit command [VR-993](#)
- timing wink-duration command [VR-995](#)
- timing wink-wait command [VR-997](#)
- token-root-name command [VR-999](#)
- tone ringback command [VR-1001](#)
- tones
  - analog voice, specifying [VR-223](#)
  - frequency component, specifying [VR-333](#)
- ToS (type of service)
  - MGCP-controlled connections, enabling [VR-444](#)
- translate command [VR-1002](#)
- translate-outgoing command [VR-1004](#)
- translation-rule command [VR-1006](#)
- translations
  - rules
    - applying [VR-1002, VR-1004](#)
    - testing [VR-942](#)
  - rule tag name, creating [VR-1006](#)
  - VoIP rules
    - displaying [VR-812](#)
    - setting [VR-1060](#)
- transport command [VR-1008](#)
- TSI (transmitting subscriber identifier)
  - fax, displaying [VR-322](#)
- type (voice) command [VR-1009](#)
- type command [VR-1011](#)

---

**U**

unbundle vfc [VR-1013](#)  
 unbundle vfc command [VR-1013](#)  
 unbundle vfc EXEC command [VR-1013](#)  
 url command [VR-1014](#)  
 use-proxy command [VR-1016](#)  
 user EXEC mode, summary of [xiv](#)

---

**V**

V.54 loopback detection, enabling [VR-245](#)  
 vad (dial peer) command [VR-1018](#)  
 VAD (voice activity detection) gaps  
     changing [VR-1059](#)  
     comfort noise, generating [VR-205, VR-286](#)  
     enabling [VR-1018, VR-1020](#)  
 vad command [VR-1020](#)  
 VBR (variable bit rate)  
     VoATM, configuring [VR-1021](#)  
 vbr-rt command [VR-1021](#)  
 VFC (voice feature card)  
     cache entries, displaying [VR-815](#)  
     default files, listing [VR-817](#)  
     file directory, listing [VR-818](#)  
     Flash memory  
         adding file to list [VR-235](#)  
         copying VCWare to [VR-221 to VR-222](#)  
         deleting file from [VR-238](#)  
         erasing [VR-299](#)  
     list capacity, displaying [VR-816](#)  
     version, displaying [VR-820](#)  
 ViCM (Video Call Manager)  
     status, displaying [VR-821](#)  
 VoFR (Voice over Frame Relay)  
     on DLCI, configuring [VR-1023](#)  
 vofr command [VR-1023](#)  
 voice call convert-discipi-to-prog [VR-1027](#)  
 voice call send-alert command [VR-1028](#)

voice-card command [VR-1029](#)  
 voice class busyout command [VR-1030](#)  
 voice class codec command [VR-1032](#)  
 voice-class codec command [VR-1034, VR-1039](#)  
 voice class dualtone command [VR-1036](#)  
 voice class h323 command [VR-1038](#)  
 voice class permanent [VR-1040](#)  
 voice-class permanent (dial-peer) [VR-1042](#)  
 voice-class permanent (dial-peer) command [VR-1042](#)  
 voice-class permanent (voice-port) [VR-1044](#)  
 voice class permanent command [VR-1040](#)  
 voice-class permanent command [VR-1044](#)  
 voice conferencing  
     multicast session protocol, setting [VR-606](#)  
 voice confirmation-tone [VR-1046](#)  
 voice confirmation-tone command [VR-1046](#)  
 voice-encap [VR-1047](#)  
 voice gateway  
     IP address, designating source [VR-365](#)  
 voice-group [VR-1048](#)  
 voice hardware  
     status, displaying [VR-697](#)  
 voice hunt [VR-1049](#)  
 voice hunt user-busy command [VR-1049](#)  
 voice local-bypass [VR-1051](#)  
 voice local-bypass command [VR-1051](#)  
 voice network  
     failure cause codes, specifying [VR-403](#)  
     release messages over, enabling [VR-400](#)  
 voice packets  
     UDP checksum, calculating [VR-397](#)  
 voice path  
     two-way, establishing [VR-1057](#)  
 voice-port [VR-1052](#)  
 voice-port busyout command [VR-1055](#)  
 voice-port command [VR-1052](#)  
 voice ports  
     busyout function voice class, creating [VR-1030](#)  
     busyout state

configuring monitor [VR-38](#)  
 displaying [VR-822](#)  
 forcing [VR-36](#)  
 placing in [VR-1055](#)  
 prompted by remote RTR probe signal [VR-41](#)  
 calls in progress, clearing [VR-186](#)  
 codec voice class ID tag, assigning [VR-1032](#)  
 configuration and status, displaying [VR-834](#), [VR-845](#),  
[VR-849](#)  
 delay dial wink pulse duration, specifying [VR-977](#)  
 delay signal duration, specifying [VR-973](#)  
 detector-related functions, testing [VR-944](#)  
 dialing type, specifying [VR-256](#)  
 dial-out delay, specifying [VR-981](#)  
 dial peer, associating [VR-523](#)  
 disabling [VR-870](#)  
 disabling settlement [VR-868](#)  
 disconnect timeout value, configuring [VR-963](#)  
 DTMF digit signal duration, specifying [VR-983](#)  
 fax mode, forcing [VR-955](#)  
 inactive seizure signal minimum wait,  
 specifying [VR-971](#)  
 initial digit timeout value, configuring [VR-964](#)  
 interdigit timeout value, configuring [VR-965](#)  
 loopback test [VR-950](#)  
 maximum wink-signal duration, specifying [VR-995](#)  
 maximum wink-wait duration, specifying [VR-997](#)  
 on-hold music threshold, specifying [VR-500](#)  
 outgoing seizure signal minimum delay,  
 specifying [VR-975](#)  
 output attenuation, configuring [VR-511](#)  
 permanent calls on, displaying [VR-830](#)  
 pulse interdigit timing, configuring [VR-993](#)  
 relay-related functions, testing [VR-952](#)  
 release process delay timeout, configuring [VR-968](#)  
 signal gain values, specifying [VR-392](#)  
 signal type, specifying [VR-872](#)  
 terminating impedance, specifying [VR-387](#)  
 test tone, injecting [VR-947](#)  
 wink-like pulses, configuring [VR-979](#)

voice quality  
     echo cancel, configuring [VR-288](#), [VR-290](#), [VR-292](#)  
     quality drop alarm, generating [VR-300](#)  
 voice rtp send-recv command [VR-1057](#)  
 voice service [VR-1058](#)  
 voice service command [VR-1058](#)  
 voice traffic bandwidth allocation, specifying [VR-326](#)  
 voice vad-time [VR-1059](#)  
 voice vad-time command [VR-1059](#)  
 voip-incoming translation-rule [VR-1060](#)  
 voip-incoming translation-rule command [VR-1060](#)

---

## Z

zone access command [VR-1062](#)  
 zone bw [VR-1064](#)  
 zone bw command [VR-1064](#)  
 zone local [VR-1065](#)  
 zone local command [VR-1065](#)  
 zone prefix [VR-1067](#)  
 zone prefix command [VR-1067](#)  
 zone remote [VR-1070](#)  
 zone remote command [VR-1070](#)  
 zone subnet [VR-1072](#)  
 zone subnet command [VR-1072](#)