



Configuring MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels

First Published: October 24, 2008

Last Updated: February 8, 2011

The MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels feature addresses port security with service instances by providing the capability to control and filter MAC address learning behavior at the granularity of a per-service instance. When a violation requires a shutdown, only the customer who is assigned to a given service instance is affected and—not all customers who are using the port. The MAC Address Security on EVC Port Channel feature supports MultiPoint Bridging over Ethernet (MPBE). MAC address limiting is a type of MAC security and is also referred to as a MAC security component or element.

Finding Feature Information

Your software release may not support all the features documented in this module. For the latest feature information and caveats, see the release notes for your platform and software release. To find information about the features documented in this module, and to see a list of the releases in which each feature is supported, see the [“Feature Information for MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels”](#) section on page 42.

Use Cisco Feature Navigator to find information about platform support and Cisco software image support. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.



Americas Headquarters:

Cisco Systems, Inc., 170 West Tasman Drive, San Jose, CA 95134-1706 USA

Contents

- [Prerequisites for MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels, page 2](#)
- [Restrictions for MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels, page 2](#)
- [Information About MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels, page 2](#)
- [How to Configure MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels, page 10](#)
- [Configuration Examples for MAC Address Limiting on Service Instances, and Bridge Domains, and EVC Port Channels, page 34](#)
- [Additional References, page 40](#)
- [Feature Information for MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels, page 42](#)

Prerequisites for MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels

- An understanding of service instances and bridge domains.
- An understanding of the concepts of MAC address limiting and how it is used for MAC security.
- An understanding of how port channels and EtherChannels work in a network.

Restrictions for MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels

MAC address limiting for service instances and bridge domains is configured under a service instance and is permitted only after the service instance is configured under a bridge domain. If a service instance is removed from a bridge domain, all the MAC address limiting commands under it are also removed. If a bridge domain is removed from a service instance, all the MAC address limiting commands are also removed.

Information About MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels

- [Ethernet Virtual Circuits, Service Instances, and Bridge Domains, page 3](#)
- [EVCs on Port Channels, page 3](#)
- [MAC Security and MAC Addressing, page 3](#)
- [MAC Address Permit List, page 4](#)
- [MAC Address Deny List, page 4](#)

- [MAC Address Limiting and Learning, page 5](#)
- [Violation Response Configuration, page 7](#)
- [MAC Address Aging Configuration, page 8](#)
- [Sticky MAC Address Configurations, page 8](#)
- [Transitions, page 9](#)

Ethernet Virtual Circuits, Service Instances, and Bridge Domains

An Ethernet virtual circuit (EVC) as defined by the Metro Ethernet Forum is a port-level point-to-point or multipoint-to-multipoint Layer 2 circuit. It is an end-to-end representation of a single instance of a Layer 2 service being offered by a provider to a customer. An EVC embodies the different parameters on which the service is being offered. A service instance is the instantiation of an EVC on a given port.

Support for Ethernet bridging is an important Layer 2 service that is offered on a router as part of an EVC. Ethernet bridging enables the association of a bridge domain with a service instance.

Service instances are configured under a port channel. The traffic carried by service instances is load-balanced across member links. Service instances under a port channel are grouped and each group is associated with one member link. Ingress traffic for a single service instance can arrive on any member of the bundle. All egress traffic for a service instance uses only one of the member links. Load-balancing is achieved by grouping service instances and assigning them to a member link.

For information about the Metro Ethernet Forum standards, see the [“Standards” section on page 40](#).

EVCs on Port Channels

An EtherChannel bundles individual Ethernet links into a single logical link that provides the aggregate bandwidth of up to eight physical links. The Ethernet Virtual Connection Services (EVCS) EtherChannel feature provides support for EtherChannels on service instances.



Note

The MAC Address Security on EVC Port Channel services is supported only on bridge domains over Ethernet and is not supported on local connect and xconnect services.

EVCS uses the concepts of EVCs and service instances.

Load balancing is done on an Ethernet flow point (EFP) basis where a number of EFPs exclusively pass traffic through member links.

MAC Security and MAC Addressing

MAC security is enabled on a service instance by configuring the **mac security** command. Various MAC security elements can be configured or removed regardless of whether the **mac security** command is presently configured, but these configurations become operational only when the **mac security** command is applied.

In this document, the term “secured service instance” is used to describe a service instance on which MAC security is configured. The MAC addresses on a service instance on which MAC security is configured are referred to as “secured MAC addresses.” Secured MAC addresses can be either statically configured (as a permit list) or dynamically learned.

MAC Address Permit List

A permit list is a set of MAC addresses that are permitted on a service instance. Permitted addresses permanently configured into the MAC address table of the service instance.

On a service instance that is a member of a bridge domain, the operator is permitted to configure one or more permitted MAC addresses. For each permitted address, eligibility tests are performed and after the address passes these tests, it is either:

- Programmed into the MAC address table of the bridge domain, if MAC security is enabled on the service instance or.
- Stored in an area of memory referred to as “MAC table cache” if MAC security is not enabled on the service instance. When MAC security is enabled, the addresses from the MAC table cache are added to the MAC address table as secure addresses.

The eligibility tests performed when a user tries to add a MAC address to the permit list on a service instance are as follows:

1. If the address is already a denied address on the service instance, the configuration is rejected with an appropriate error message.
2. If the acceptance of this address would increase the secure address count on the service instance beyond the maximum number allowed, an attempt is made to make room by removing an existing address from the MAC address table. The only candidate for removal is a dynamically learned address on the service instance. If sufficient room cannot be made, the configuration is rejected. If the acceptance of this address would increase the secure address count on the bridge domain beyond the maximum number allowed, an attempt is made to make room by removing an existing address from the MAC address table. The only candidate for removal is a dynamically learned address on the service instance. If room cannot be made, the configuration is rejected.
3. If the address is already permitted on another service instance in the same bridge domain, One of the following actions occur:
 - a. If the conflicting service instance has MAC security configured, the configuration is rejected with an appropriate error message.
 - b. If the conflicting service instance does not have MAC security configured, the configuration is accepted silently. (If the operator attempts to enable MAC security on the conflicting service instance, that attempt fails.)

MAC Address Deny List

A deny list is a set of MAC addresses that are not permitted on a service instance. An attempt to learn a denied MAC address will fail. On a service instance that is a member of a bridge domain, the operator is permitted to configure one or more denied MAC addresses. The arrival of a frame with a source MAC address that is part of a deny list will trigger a violation response.

Before a denied address can be configured, the following test is performed:

1. If the address is already configured as a permitted address on the specific service instance or if the address has been learned and saved as a sticky address on the service instance, the configuration is rejected with an appropriate error message.

In all other cases, the configuration of the denied address is accepted. Typical cases include:

- The address is configured as a permitted address on another service instance in the same bridge domain, or the address has been learned and saved as a sticky address on another service instance.
- The address is present in the MAC table of the bridge domain as a dynamically learned address on the specific service instance and is deleted from the MAC table before the configuration is accepted.

MAC Address Limiting and Learning

An upper limit for the number of secured MAC addresses allowed on a bridge domain service instance can be configured. This limit includes addresses added as part of a permit list and dynamically learned MAC addresses.

Before an unknown MAC address is learned, a series of checks are run against a set of configured and operational constraints. If any of these checks fails, the address is not learned, and a configured violation response is triggered.

Static and Dynamic MAC Addresses

A static MAC address is specified as permitted on a service instance, by a **mac security permit** command. A dynamic MAC address is a source MAC address encountered by the service instance that is not present in the MAC table but is allowed into and learned by the MAC address table.

Dynamic MAC Address Learning

Dynamic MAC address learning occurs when the bridging data path encounters an ingress frame whose source address is not present in the MAC address table for the ingress secured service instance.

The MAC security component is responsible for permitting or denying the addition of the new source address into the MAC table. The following constraints apply:

1. In considering if this MAC address is to be learned, a check to see whether the number of secured MAC addresses will exceed the maximum number that are permitted to be learned on the individual service instance and on the bridge domain as a whole, or not is performed.
2. A check is performed to determine if the MAC address now being seen on another service instance was learned previously on a secured service instance in the same bridge domain.
3. A check is performed to verify that the new dynamic MAC address is a deny list.

MAC Address Limiting on Service Instances

The user can configure the maximum number of MAC addresses that can exist in the MAC table that is associated with a service instance. This number includes statically configured and dynamically learned (including sticky) addresses.

On a service instance that has MAC security enabled and that does not have the maximum number of MAC addresses configured, the number of addresses allowed is one. This means that if the service instance has an associated permit list, that permit list can have only one address, and no addresses are learned dynamically. If the service instance does not have an associated permit list, one MAC address may be learned dynamically.

MAC Address Limiting for Bridge Domains

An upper limit for the number of MAC addresses that can reside in the MAC address table of a bridge domain can be set. This is set independently of the upper limit of secured MAC addresses on the service instance. An attempted violation of this bridge domain MAC address limit will cause the MAC address learn attempt to fail, and the frame to be dropped.

If the bridge domain MAC address limit is not configured, then by default, the maximum number of MAC addresses allowed on a bridge domain is the maximum number that can be supported by that platform.

Relationship Between the MAC Address Limit on a Bridge Domain and on a Service Instance

The MAC security commands permit the user to specify the maximum count of MAC table entries on a bridge domain and on a service instance simultaneously. However, there are no restrictions on the count that is configured on the service instance.

Table 1 shows an example of an initial configuration where three service instances are configured on a bridge domain:

Table 1 Bridge-Domain and Service-Instance MAC Address Limit

Bridge-Domain / Service-Instance Number	MAC Address Limit
Bridge Domain 1000	20
Service Instance 1001	5
Service Instance 1002	10
Service Instance 1003	To be configured

If the user wishes to configure MAC security on service instance 1003, any value can be configured for the maximum count. For example:

```
service instance 1003 ethernet
  bridge-domain 1
  mac security
  mac security maximum addresses 35
```

A MAC address limit of 35 is permitted, even though the total MAC address limit for the three service instances (5 + 10 + 35) would exceed the count (20) configured on the bridge domain. Note that during actual operation, the bridge domain limit of 20 is in effect. The dynamic secure address count cannot exceed the lowest count applicable, so it is not possible for service instance 1003 to learn 35 addresses.

MAC Move and MAC Locking

If a MAC address is present in the MAC address table for a service instance (for example, service instance 1) on which MAC security is configured, the same MAC address cannot be learned on another service instance (for example, service instance 2) in the same bridge domain.

If service instance 2 attempts to learn the same MAC address, the violation response configured on service instance 2 is triggered. If MAC security is not configured on service instance 2 and a violation response is not configured, the “shutdown” response sequence is triggered on service instance 2.

If MAC security is not enabled on service instance 1, the violation is not triggered. service instance 2 learns the MAC address and moves it from service instance 1.

For some platforms such as Cisco 7600 series routers, MAC address moves are allowed but moves between secured service instances and nonsecured service instances cannot be detected.

For example, if you do not configure MAC security on service instance 2 because of a hardware limitation on the Cisco 7600 series router, a MAC move from secured service instance 1 to service instance 2 is accepted. Therefore, it is recommended that all service instances within the same bridge-domain are configured as secured service instances.

Violation Response Configuration

A violation response is a response to a MAC security violation or a failed attempt to dynamically learn a MAC address due to an address violation. MAC security violations are of two types:

Type 1 Violation—The address of the ingress frame cannot be dynamically learned due to a deny list, or because doing so would cause the maximum number of secure addresses to be exceeded (see the [“MAC Address Limiting and Learning” section on page 5](#)).

Type 2 Violation—The address of the ingress frame cannot be dynamically learned because it is already “present” on another secured service instance (see the [“MAC Move and MAC Locking” section on page 6](#)).

There are three possible sets of actions that can be taken in response to a violation:

1. Shutdown

- The ingress frame is dropped.
- The service instance on which the offending frame arrived is shut down.
- The violation count is incremented, and the violating address is recorded for later CLI display.
- The event and the response are logged to SYSLOG.

2. Restrict

- The ingress frame is dropped.
- The violation count is incremented, and the violating address is recorded for display.
- The event and the response are logged to SYSLOG.

3. Protect

- The ingress frame is dropped.

If a violation response is not configured, the default response mode is shutdown. The violation response can be configured to protect or restrict mode. A “no” form of a violation response, sets the violation response to the default mode of shutdown.

You are allowed to configure the desired response for a Type 1 and Type 2 violations on a service instance. For a Type 1 violation on a bridge domain (that is, if the learn attempt conforms to the policy configured on the service instance, but violates the policy configured on the bridge domain), the response is always “Protect.” This is not configurable.

In shutdown mode, the service instance is put into the error disabled state immediate, an SNMP trap notification is transmitted, and a message is sent to the console and SYSLOG as shown below:

```
%ETHER_SERVICE-6-ERR_DISABLED:  
Mac security violation - shutdown service instance 100 on interface gig 0/0/0
```

To bring a service instance out of the error-disabled state, use **errdisable recovery cause mac-security** command to set the auto recovery timer, or re-enable it using the EXEC command **clear ethernet service instance id id interface type number errdisable**.

In Restrict mode, the violation report is sent to SYSLOG at level LOG_WARNING.

Support for the different types of violation responses depends on the capabilities of the platform. The desired violation response can be configured on the service instance. The configured violation response does not take effect unless and until MAC security is enabled using the **mac security** command.

MAC Address Aging Configuration

A specific time scheduler can be set to age out secured MAC addresses that are dynamically learned or statically configured on both service instances and bridge domains, thus freeing up unused addresses from the MAC address table for other active subscribers.

The set of rules applied to age out secured MAC addresses is called secure aging. By default, the entries in the MAC address table of a secured service instance are never aged out. This includes permitted addresses and dynamically learned addresses.

The **mac security aging time** *aging-time* command sets the aging time of the addresses in the MAC address table to *<n>* minutes. By default, this affects only dynamically learned (not including sticky) addresses—permitted addresses and sticky addresses are not affected by the application of this command.

By default, the aging time *<n>* configured via the **mac security aging time** *aging-time* command is an absolute time. That is, the age of the MAC address is measured from the instant that it was first encountered on the service instance. This interpretation can be modified by using the **mac security aging time** *aging-time inactivity* command, which specifies that the age *<n>* be measured from the instant that the MAC address was last encountered on the service instance.

The **mac security aging static** and **mac security aging sticky** commands specify that the **mac security aging time** *aging-time* command must be applicable to permitted and sticky MAC addresses, respectively. In the case of permitted MAC addresses, the absolute aging time is measured from the time the address is entered into the MAC address table (for example, when it is configured or whenever the **mac security** command is entered—whichever is later).

If the **mac security aging time** command is not configured, the **mac security aging static** command has no effect.

Sticky MAC Address Configurations

The ability to make dynamically learned MAC addresses on secured service instances permanent even after interface transitions or device reloads can be set up and configured. A dynamically learned MAC address that is made permanent on a secured service instance is called a “sticky MAC address”. The **mac security sticky** command is used to enable the sticky MAC addressing feature on a service instance.

With the “sticky” feature enabled on a secured service instance, MAC addresses learned dynamically on the service instance are kept persistent across service instance line transitions and device reloads.

The sticky feature has no effect on statically configured MAC addresses. The sticky addresses are saved in the running configuration. Before the device is reloaded, it is the responsibility of the user to save the running configuration to the startup configuration. Doing this will ensure that when the device comes on, all the MAC addresses learned dynamically previously are immediately populated into the MAC address table.

The **mac security sticky address** *mac-address* command can configure a specific MAC address as a sticky MAC address. The use of this command is not recommended for the user because configuring a MAC address as a static address does the same thing. When sticky MAC addressing is enabled by the

mac security sticky command, the dynamically learned addresses are marked as sticky and a **mac security sticky address** *mac-address* command is automatically generated and saved in the running configuration for each learned MAC address on the service instances.

Aging for Sticky Addresses

MAC addresses learned on a service instance that has the sticky behavior enabled are subject to aging as configured by the **mac security aging time** and **mac security aging sticky** commands. In other words, for the purpose of aging functionality, sticky addresses are treated the same as dynamically learned addresses.

Transitions

This section contains a description of the expected behavior of the different MAC security elements when various triggers are applied; for example, configuration changes or link state transitions.

MAC Security Enabled on a Service Instance

When MAC security is enabled on a service instance, all existing MAC table entries for the service instance are purged. Then, permitted MAC address entries and sticky addresses are added to the MAC table, subject to the prevailing MAC address limiting constraints on the bridge domain.

If MAC address limits are exceeded, any MAC address that fails to get added is reported via an error message to the console, the attempt to enable MAC security on the service instance fails, and the already added permitted entries are backed out or removed.

The aging timer for all entries is updated according to the secure aging rules.

MAC Security Disabled on a Service Instance

The existing MAC address table entries for this service instance are purged.

Service Instance Moved to a New Bridge Domain

This transition sequence applies to all service instances, whether or not they have MAC security configured. All the MAC addresses on this service instance in the MAC address table of the old bridge domain are removed. The count of dynamically learned addresses in the old bridge domain is decremented. Then, all the MAC security commands are permanently erased from the service instance.

Service Instance Removed from a Bridge Domain

All the MAC addresses in the MAC address table that attributable to this service instance are removed, and the count of dynamically learned addresses in the bridge domain is decremented. Since MAC security is applicable only on service instances that are members of a bridge domain, removing a service instance from a bridge domain causes all the MAC security commands to be erased permanently.

Service Instance Shut Down Due to Violation

All dynamically learned MAC addresses in the MAC address table are removed, and all the other MAC security state values are left unchanged. The only change is that no traffic is forwarded, and therefore no learning can take place.

Interface/Service Instance Down/Linecard OIR Removed

The MAC tables of all the affected bridge domains are cleared of all the entries attributable to the service instances that are down.

Interface/Service Instance Re-activated/Linecard OIR Inserted

The static and sticky address entries in the MAC tables of the affected bridge domains are re-created to the service instances that are activated.

MAC Address Limit Decreased

When the value of the MAC address limit on the service instance is changed initially, a sanity check is performed to ensure that the new value of <n> is greater than or equal to the number of permitted entries. If not, the command is rejected. The MAC table is scanned for addresses that are attributable to this service instance, and dynamically learned MAC addresses are removed when the new MAC address limit is less than the old MAC address limit.

When the value of <n> on a bridge domain is changed initially, a sanity check is performed to ensure that the new value of <n> is greater than or equal to the sum of the number of permitted entries on all the secured service instances on the bridge domain. If this sanity test fails, the command is rejected. The bridge domain MAC address table (regardless of service instance) is scanned for dynamically learned (or sticky) addresses. All dynamically learned addresses are removed when the new MAC address limit is less than the old MAC address limit.

Sticky Addresses Added or Removed on a Service Instance

Existing dynamically learned MAC addresses remain unchanged. All new addresses learned become “sticky” addresses.

Disabling sticky addresses causes all sticky secure MAC addresses on the service instance to be removed from the MAC address table. All new addresses learned become dynamic addresses on the service instance and are subject to aging.

How to Configure MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels

- [Enabling MAC Security on a Service Instance, page 11](#)
- [Enabling MAC Security on an EVC Port Channel, page 12](#)
- [Configuring a MAC Address Permit List, page 14](#)
- [Configuring a MAC Address Deny List, page 16](#)
- [Configuring MAC Address Limiting on a Bridge Domain, page 18](#)

- [Configuring MAC Address Limiting on a Service Instance, page 19](#)
- [Configuring a MAC Address Violation, page 20](#)
- [Configuring MAC Address Aging, page 22](#)
- [Configuring a Sticky MAC Address, page 24](#)
- [Displaying the MAC Security Status of a Specific Service Instance, page 25](#)
- [Displaying the Service Instances with MAC Security Enabled, page 26](#)
- [Displaying the Service Instances with MAC Security Enabled on a Specific Bridge Domain, page 26](#)
- [Showing the MAC Addresses of All Secured Service Instances, page 27](#)
- [Showing the MAC Addresses of a Specific Service Instance, page 27](#)
- [Showing the MAC Addresses of All Service Instances on a Specific Bridge Domain, page 28](#)
- [Showing the MAC Security Statistics of a Specific Service Instance, page 29](#)
- [Showing the MAC Security Statistics of All Service Instances on a Specific Bridge Domain, page 29](#)
- [Showing the Last Violation Recorded on Each Service Instance on a Specific Bridge Domain, page 30](#)
- [Clearing All Dynamically Learned MAC Addresses on a Service Instance, page 31](#)
- [Clearing All Dynamically Learned MAC Addresses on a Bridge Domain, page 31](#)
- [Bringing a Specific Service Instance Out of the Error-Disabled State, page 32](#)
- [Bringing a Specific Service Instance Out of the Error-Disabled State, page 33](#)

Enabling MAC Security on a Service Instance

Perform this task to enable MAC address security on a service instance.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface gigabitethernet** *slot/subslot/port*
4. **service instance** *id* **ethernet**
5. **encapsulation dot1q** *vlan-id*
6. **bridge-domain** *bridge-id*
7. **mac security**
8. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	interface gigabitethernet <i>slot/subslot/port</i> Example: Router(config)# interface gigabitethernet 1/0/0	Specifies the type and location of the interface to configure.
Step 4	service instance <i>id</i> ethernet Example: Router(config-if)# service instance 100 ethernet	Creates a service instance on an interface and enters service instance configuration mode.
Step 5	encapsulation dot1q <i>vlan-id</i> Example: Router(config-if-srv)# encapsulation dot1q 100	Defines the matching criteria to be used in order to map ingress dot1q frames on an interface to the appropriate service instance.
Step 6	bridge-domain <i>bridge-id</i> Example: Router(config-if-srv)# bridge-domain 200	Binds the service instance to a bridge-domain instance where <i>bridge-id</i> is the identifier for the bridge-domain instance.
Step 7	mac security Example: Router(config-if-srv)# mac security	Enables MAC security on the service instance.
Step 8	end Example: Router(config-if-srv)# end	Exits service instance configuration mode and enters privileged EXEC mode.

Enabling MAC Security on an EVC Port Channel

Perform this task to enable MAC Security on an EVC port channel.

RESTRICTIONS

- All member links of the port channel are on Cisco 7600-ES+ line cards.
- Bridge-domain, xconnect, connect EVCs, switchports, and IP subinterfaces are allowed over the port channel interface and the main interface.

- If you configure a physical port as part of a channel group, you cannot configure EVCs under that physical port.
- A physical port that is part of an EVC port channel cannot have switchport configuration.
- Statically configuring port channel membership with Link Aggregation Control Protocol (LACP) is not supported.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface port-channel** *channel-group*
4. **service instance** *id* **ethernet**
5. **encapsulation dot1q** *vlan-id*
6. **bridge-domain** *bridge-id*
7. **mac security**
8. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	interface port-channel <i>channel-group</i> Example: Router(config)# interface port-channel 2	Specifies the port channel group number and enters interface configuration mode. <ul style="list-style-type: none"> • Acceptable values are integers from 1 to 64.
Step 4	service instance <i>id</i> ethernet Example: Router(config-if)# service instance 100 ethernet	Creates a service instance on an interface and enters service instance configuration mode.
Step 5	encapsulation dot1q <i>vlan-id</i> Example: Router(config-if-srv)# encapsulation dot1q 100	Defines the matching criteria to be used in order to map ingress dot1q frames on an interface to the appropriate service instance.
Step 6	bridge-domain <i>bridge-id</i> Example: Router(config-if-srv)# bridge-domain 200	Binds the service instance to a bridge-domain instance where <i>bridge-id</i> is the identifier for the bridge-domain instance.

	Command or Action	Purpose
Step 7	<code>mac security</code> Example: Router(config-if-srv)# mac security	Enables MAC security on the service instance.
Step 8	<code>end</code> Example: Router(config-if-srv)# end	Exits service instance configuration mode and enters privileged EXEC mode.

Configuring a MAC Address Permit List

Perform this task to configure permitted MAC addresses on a service instance that is a member of a bridge domain.

SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `interface gigabitethernet slot/subslot/port`
4. `service instance id ethernet`
5. `encapsulation dot1q vlan-id`
6. `bridge-domain bridge-id`
7. `mac security address permit mac-address`
8. `mac security address permit mac-address`
9. `mac security address permit mac-address`
10. `mac security address permit mac-address`
11. `mac security address permit mac-address`
12. `mac security`
13. `end`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>enable</code> Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	<code>configure terminal</code> Example: Router# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 3	<p>interface gigabitethernet <i>slot/subslot/port</i></p> <p>Example: Router(config)# interface gigabitethernet 2/0/1</p>	<p>Specifies the type and location of the interface to configure, where:</p> <ul style="list-style-type: none"> <i>type</i>—Specifies the type of the interface. <i>number</i>—Specifies the location of the interface.
Step 4	<p>service instance <i>id ethernet</i></p> <p>Example: Router(config-if)# service instance 100 ethernet</p>	<p>Creates a service instance (an instance of an EVC) on an interface and enters service instance configuration mode.</p>
Step 5	<p>encapsulation dot1q <i>vlan-id</i></p> <p>Example: Router(config-if-srv)# encapsulation dot1q 100</p>	<p>Defines the matching criteria to be used for mapping ingress dot1q frames on an interface to the appropriate service instance.</p>
Step 6	<p>bridge-domain <i>bridge-id</i></p> <p>Example: Router(config-if-srv)# bridge-domain 200</p>	<p>Binds the service instance to a bridge-domain instance where <i>bridge-id</i> is the identifier for the bridge-domain instance.</p>
Step 7	<p>mac security address permit <i>mac-address</i></p> <p>Example: Router(config-if-srv)# mac security address permit a2aa.aaaa.aaaa</p>	<p>Adds the specified MAC address as a permit MAC address for the service instance.</p>
Step 8	<p>mac security address permit <i>mac-address</i></p> <p>Example: Router(config-if-srv)# mac security address permit a2aa.aaaa.aaab</p>	<p>Adds the specified MAC address as a permitted MAC address for the service instance.</p>
Step 9	<p>mac security address permit <i>mac-address</i></p> <p>Example: Router(config-if-srv)# mac security address permit a2aa.aaaa.aaac</p>	<p>Adds the specified MAC address as a permitted MAC address for the service instance.</p>
Step 10	<p>mac security address permit <i>mac-address</i></p> <p>Example: Router(config-if-srv)# mac security address permit a2aa.aaaa.aaad</p>	<p>Adds the specified MAC address as a permitted MAC address for the service instance.</p>
Step 11	<p>mac security address permit <i>mac-address</i></p> <p>Example: Router(config-if-srv)# mac security address permit a2aa.aaaa.aaae</p>	<p>Adds the specified MAC address as a permitted MAC address for the service instance.</p>

	Command or Action	Purpose
Step 12	<code>mac security</code> Example: Router(config-if-srv)# <code>mac security</code>	Enables MAC security on the service instance.
Step 13	<code>end</code> Example: Router(config-if-srv)# <code>end</code>	Exits service instance configuration mode and enters privileged EXEC mode.

Configuring a MAC Address Deny List

Perform this task to configure a list of MAC addresses that are not allowed on a service instance that is a member of a bridge domain.

SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `interface gigabitethernet slot/subslot/port`
4. `service instance id ethernet`
5. `encapsulation dot1q vlan-id`
6. `bridge-domain bridge-id`
7. `mac security address deny mac-address`
8. `mac security address deny mac-address`
9. `mac security address deny mac-address`
10. `mac security address deny mac-address`
11. `mac security address deny mac-address`
12. `mac security`
13. `end`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p>enable</p> <p>Example: Router> enable</p>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> Enter your password if prompted.
Step 2	<p>configure terminal</p> <p>Example: Router# configure terminal</p>	<p>Enters global configuration mode.</p>
Step 3	<p>interface gigabitethernet <i>slot/subslot/port</i></p> <p>Example: Router(config)# interface gigabitethernet 1/0/1</p>	<p>Specifies the type and location of the interface to configure, where:</p> <ul style="list-style-type: none"> <i>type</i>—Specifies the type of the interface. <i>number</i>—Specifies the location of the interface.
Step 4	<p>service instance <i>id</i> ethernet</p> <p>Example: Router(config-if)# service instance 100 ethernet</p>	<p>Creates a service instance (an instance of an EVC) on an interface and enters service instance configuration mode.</p>
Step 5	<p>encapsulation dot1q <i>vlan-id</i></p> <p>Example: Router(config-if-srv)# encapsulation dot1q 100</p>	<p>Defines the matching criteria to be used in order to map ingress dot1q frames on an interface to the appropriate service instance.</p>
Step 6	<p>bridge-domain <i>bridge-id</i></p> <p>Example: Router(config-if-srv)# bridge-domain 200</p>	<p>Binds the service instance to a bridge-domain instance where <i>bridge-id</i> is the identifier for the bridge-domain instance.</p>
Step 7	<p>mac security address deny <i>mac-address</i></p> <p>Example: Router(config-if-srv)# mac security address deny a2aa.aaaa.aaaa</p>	<p>Adds the specified MAC address as a denied MAC address for the service instance.</p>
Step 8	<p>mac security address deny <i>mac-address</i></p> <p>Example: Router(config-if-srv)# mac security address deny a2aa.aaaa.aaab</p>	<p>Adds the specified MAC address as a denied MAC address for the service instance.</p>
Step 9	<p>mac security address deny <i>mac-address</i></p> <p>Example: Router(config-if-srv)# mac security address deny a2aa.aaaa.aaac</p>	<p>Adds the specified MAC address as a denied MAC address for the service instance.</p>

	Command or Action	Purpose
Step 10	<code>mac security address deny mac-address</code> Example: Router(config-if-srv)# mac security address deny a2aa.aaaa.aaad	Adds the specified MAC address as a denied MAC address for the service instance.
Step 11	<code>mac security address deny mac-address</code> Example: Router(config-if-srv)# mac security address deny a2aa.aaaa.aaae	Adds the specified MAC address as a denied MAC address for the service instance.
Step 12	<code>mac security</code> Example: Router(config-if-srv)# mac security	Enables MAC security on the service instance.
Step 13	<code>end</code> Example: Router(config-if-srv)# end	Exits service instance configuration mode and enters privileged EXEC mode.

Configuring MAC Address Limiting on a Bridge Domain

Perform this task to configure an upper limit for the number of secured MAC addresses that reside in a bridge domain.

SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `bridge-domain bridge-id`
4. `mac limit maximum addresses maximum-addresses`
5. `end`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>enable</code> Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	<code>configure terminal</code> Example: Router# configure terminal	Enters global configuration mode.

	Command or Action	Purpose
Step 3	<code>bridge-domain <i>bridge-id</i></code> Example: Router(config)# <code>bridge-domain 100</code>	Configures components on a bridge domain and enters bridge-domain configuration mode.
Step 4	<code>mac limit maximum addresses <i>maximum-addresses</i></code> Example: Router(config-bdomain)# <code>mac limit maximum addresses 200</code>	Sets the MAC limit maximum addresses.
Step 5	<code>end</code> Example: Router(config-bdomain)# <code>end</code>	Exits bridge domain configuration mode and enters privileged EXEC mode.

Configuring MAC Address Limiting on a Service Instance

Perform this task to configure an upper limit for the number of secured MAC addresses allowed on a service instance. This number includes addresses added as part of a permit list as well as dynamically learned MAC addresses. If the upper limit is decreased, all learned MAC entries are removed.

SUMMARY STEPS

1. `enable`
2. `configure terminal`
3. `interface type number`
4. `service instance id ethernet`
5. `encapsulation dot1q vlan-id`
6. `bridge-domain bridge-id`
7. `mac security maximum addresses maximum-addresses`
8. `mac security`
9. `end`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>enable</code> Example: Router> <code>enable</code>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	<code>configure terminal</code> Example: Router# <code>configure terminal</code>	Enters global configuration mode.

	Command or Action	Purpose
Step 3	interface <i>type number</i> Example: Router(config)# interface gigabitethernet 2/0/1	Specifies the type and location of the interface to configure, where: <ul style="list-style-type: none"> <i>type</i>—Specifies the type of the interface. <i>number</i>—Specifies the location of the interface.
Step 4	service instance <i>id ethernet</i> Example: Router(config-if)# service instance 100 ethernet	Creates a service instance (an instance of an EVC) on an interface and enters service instance configuration mode.
Step 5	encapsulation dot1q <i>vlan-id</i> Example: Router(config-if-srv)# encapsulation dot1q 100	Defines the matching criteria to be used to map ingress dot1q frames on an interface to the appropriate service instance.
Step 6	bridge-domain <i>bridge-id</i> Example: Router(config-if-srv)# bridge-domain 200	Binds the service instance to a bridge-domain instance where <i>bridge-id</i> is the identifier for the bridge-domain instance.
Step 7	mac security maximum addresses <i>maximum-addresses</i> Example: Router(config-if-srv)# mac security maximum addresses 500	Sets the maximum number of secure addresses permitted on the service instance.
Step 8	mac security Example: Router(config-if-srv)# mac security	Enables MAC security on the service instance.
Step 9	end Example: Router(config-if-srv)# end	Exits service instance configuration mode and enters privileged EXEC mode.

Configuring a MAC Address Violation

Perform this task to specify the expected behavior of a device when an attempt to dynamically learn a MAC address fails because the configured MAC security policy on the service instance was violated.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface gigabitethernet** *slot/subslot/port*
4. **service instance** *id ethernet*
5. **encapsulation dot1q** *vlan-id*

6. **bridge-domain** *bridge-id*
7. **mac security violation restrict**
8. or
9. **mac security violation protect**
10. **mac security**
11. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	interface gigabitethernet <i>slot/subslot/port</i> Example: Router(config)# interface gigabitethernet 2/0/1	Specifies the type and location of the interface to configure, where: <ul style="list-style-type: none"> • <i>type</i>—Specifies the type of the interface. • <i>number</i>—Specifies the location of the interface.
Step 4	service instance <i>id</i> ethernet Example: Router(config-if)# service instance 100 ethernet	Creates a service instance (an instance of an EVC) on an interface and enters service instance configuration mode.
Step 5	encapsulation dot1q <i>vlan-id</i> Example: Router(config-if-srv)# encapsulation dot1q 100	Defines the matching criteria to be used to map ingress dot1q frames on an interface to the appropriate service instance.
Step 6	bridge-domain <i>bridge-id</i> Example: Router(config-if-srv)# bridge-domain 100	Binds the service instance to a bridge-domain instance where <i>bridge-id</i> is the identifier for the bridge-domain instance.

	Command or Action	Purpose
Step 7	<pre>mac security violation restrict</pre> <p>or</p> <pre>mac security violation protect</pre> <p>Example: Router(config-if-srv)# mac security violation restrict</p> <p>Example: Router(config-if-srv)# mac security violation protect</p>	<p>Sets the violation mode (for Type 1 and 2 violations) to restrict.</p> <p>or</p> <p>Sets the violation mode (for Type 1 and 2 violations) to protect.</p> <ul style="list-style-type: none"> If a MAC security violation response is not specified, by default, the violation mode is shutdown.
Step 8	<pre>mac security</pre> <p>Example: Router(config-if-srv)# mac security</p>	Enables MAC security on the service instance.
Step 9	<pre>end</pre> <p>Example: Router(config-if-srv)# end</p>	Exits service instance configuration mode and enters privileged EXEC mode.

Configuring MAC Address Aging

Perform this task to configure the aging of secured MAC addresses under MAC security. Secured MAC addresses are not subject to the normal aging of MAC table entries. If aging is not configured, secured MAC addresses are never aged out.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface gigabitethernet** *slot/subslot/port*
4. **service instance** *id* **ethernet**
5. **encapsulation dot1q** *vlan-id*
6. **bridge-domain** *bridge-id*
7. **mac security aging time** *aging-time* [**inactivity**]
8. **mac security**
9. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	interface gigabitethernet <i>slot/subslot/port</i> Example: Router(config)# interface gigabitethernet 2/0/1	Specifies the type and location of the interface to configure, where: <ul style="list-style-type: none"> <i>type</i>—Specifies the type of the interface. <i>number</i>—Specifies the location of the interface.
Step 4	service instance <i>id</i> ethernet Example: Router(config-if)# service instance 100 ethernet	Creates a service instance (an instance of an EVC) on an interface and enters service instance configuration mode.
Step 5	encapsulation dot1q <i>vlan-id</i> Example: Router(config-if-srv)# encapsulation dot1q 100	Defines the matching criteria to be used in order to map ingress dot1q frames on an interface to the appropriate service instance.
Step 6	bridge-domain <i>bridge-id</i> Example: Router(config-if-srv)# bridge-domain 200	Binds the service instance to a bridge-domain instance where <i>bridge-id</i> is the identifier for the bridge-domain instance.
Step 7	mac security aging time <i>aging-time</i> [inactivity] Example: Router(config-if-srv)# mac security aging time 200 inactivity	Sets the aging time for secure addresses, in minutes. The optional inactivity keyword specifies that the aging out of addresses is based on inactivity of the sending hosts (as opposed to absolute aging).
Step 8	mac security Example: Router(config-if-srv)# mac security	Enables MAC security on the service instance.
Step 9	end Example: Router(config-if-srv)# end	Exits service instance configuration mode and enters privileged EXEC mode.

Configuring a Sticky MAC Address

If sticky MAC addressing is configured on a secured service instance, MAC addresses that are learned dynamically on the service instance are retained during a link-down condition. Perform this task to configure sticky MAC addresses on a service instance.

SUMMARY STEPS

1. **enable**
2. **configure terminal**
3. **interface gigabitethernet *slot/subslot/port***
4. **service instance *id* ethernet**
5. **encapsulation dot1q *vlan-id***
6. **bridge-domain *bridge-id***
7. **mac security sticky**
8. **mac security**
9. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	interface gigabitethernet <i>slot/subslot/port</i> Example: Router(config)# interface gigabitethernet 2/0/1	Specifies the type and location of the interface to configure, where: <ul style="list-style-type: none"> • <i>type</i>—Specifies the type of the interface. • <i>number</i>—Specifies the location of the interface.
Step 4	service instance <i>id</i> ethernet Example: Router(config-if)# service instance 100 ethernet	Creates a service instance (an instance of an EVC) on an interface and enters service instance configuration mode.
Step 5	encapsulation dot1q <i>vlan-id</i> Example: Router(config-if-srv)# encapsulation dot1q 100	Defines the matching criteria to be used to map ingress dot1q frames on an interface to the appropriate service instance.

	Command or Action	Purpose
Step 6	<code>bridge-domain <i>bridge-id</i></code> Example: Router(config-if-srv)# bridge-domain 200	Binds the service instance to a bridge-domain instance where <i>bridge-id</i> is the identifier for the bridge-domain instance.
Step 7	<code>mac security sticky</code> Example: Router(config-if-srv)# mac security sticky	Enables sticky behavior on the service instance.
Step 8	<code>mac security</code> Example: Router(config-if-srv)# mac security	Enables MAC security on the service instance.
Step 9	<code>end</code> Example: Router(config-if-srv)# end	Exits service instance configuration mode and enters privileged EXEC mode.

Displaying the MAC Security Status of a Specific Service Instance

Perform this task to display the MAC security status of a service instance.

SUMMARY STEPS

1. `enable`
2. `show ethernet service instance id id interface type number mac security`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>enable</code> Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	<code>show ethernet service instance id <i>id</i> interface <i>type number</i> mac security</code> Example: Router# show ethernet service instance id 100 interface GigabitEthernet 1/1 mac security	Displays the MAC security status of a specific service instance.

Displaying the Service Instances with MAC Security Enabled

Perform this task to display all the service instances with MAC security enabled.

SUMMARY STEPS

1. `enable`
2. `show ethernet service instance mac security`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>enable</code> Example: Router> <code>enable</code>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	<code>show ethernet service instance mac security</code> Example: Router# <code>show ethernet service instance mac security</code>	Displays all the service instances with MAC security enabled.

Displaying the Service Instances with MAC Security Enabled on a Specific Bridge Domain

Perform this task to display the service instances on a specific bridge domain that have MAC security enabled.

SUMMARY STEPS

1. `enable`
2. `show bridge-domain id mac security`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<code>enable</code> Example: Router> <code>enable</code>	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	<code>show bridge-domain <i>id</i> mac security</code> Example: Router# <code>show bridge-domain 100 mac security</code>	Displays all the service instances with MAC security enabled on a specific bridge domain.

Showing the MAC Addresses of All Secured Service Instances

Perform this task to display all the MAC addresses on all the secured service instances.

Restrictions

For some platforms such as Cisco 7600 series routers, the MAC address remaining age time information is available only on the switch console. Use the **remote command switch** command and the **show ethernet service instance mac security address** command to display the MAC address remaining age time information.

SUMMARY STEPS

1. **enable**
2. **show ethernet service instance mac security address**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	show ethernet service instance mac security address Example: Router# show ethernet service instance mac security address	Displays the secured addresses on all the service instances.

Showing the MAC Addresses of a Specific Service Instance

Perform this task to display all the MAC addresses of a specific service instance.

Restrictions

For some platforms such as Cisco 7600 routers, the MAC address remaining age time information is available only on the switch console. Use the **remote command switch** command and the **show ethernet service instance id id interface type number mac security address** command to display the MAC address remaining age time information.

SUMMARY STEPS

1. **enable**
2. **show ethernet service instance id id interface type number mac security address**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	show ethernet service instance id id interface type number mac security address Example: Router# show ethernet service instance id 200 interface GigabitEthernet 1/0 mac security address	Displays the addresses of a specific service instance.

Showing the MAC Addresses of All Service Instances on a Specific Bridge Domain

Perform this task to display the MAC addresses of all service instances on a specific bridge domain.

Restrictions

For some platforms such as Cisco 7600 series routers, the MAC address remaining age time information is available only on the switch console. Use the **remote command switch** command and the **show bridge-domain id mac security address** command to display the MAC address remaining age time information.

SUMMARY STEPS

1. **enable**
2. **show bridge-domain id mac security address**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	show bridge-domain id mac security address Example: Router# show bridge-domain 100 mac security address	Displays the secured addresses of all the service instances on a specified bridge domain.

Showing the MAC Security Statistics of a Specific Service Instance

This section describes how to display the MAC security statistics of a specific service instance.

SUMMARY STEPS

1. `enable`
2. `show ethernet service instance id id interface type number mac security statistics`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><code>enable</code></p> <p>Example: Router> enable</p>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	<p><code>show ethernet service instance id <i>id</i> interface <i>type number</i> mac security statistics</code></p> <p>Example: Router# show ethernet service instance id 100 interface GigabitEthernet 1/1 mac security statistics</p>	<p>Displays the MAC security statistics of a specific service instance.</p>

Showing the MAC Security Statistics of All Service Instances on a Specific Bridge Domain

Perform this task to display the MAC security statistics of all the service instances on a specific bridge domain.

SUMMARY STEPS

1. `enable`
2. `show bridge-domain bridge-id mac security statistics`

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> Enter your password if prompted.
Step 2	show bridge-domain <i>bridge-id</i> mac security statistics Example: Router# show bridge-domain 100 mac security statistics	Displays the MAC security statistics of all service instances that belong to a specific bridge domain.

Showing the Last Violation Recorded on Each Service Instance on a Specific Bridge Domain

Perform this task to display the last violation recorded on each service instance on a specific bridge domain. Service instances on which there have been no violations are excluded from the output.

SUMMARY STEPS

- enable**
- show bridge-domain *bridge-id* mac security last violation**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> Enter your password if prompted.
Step 2	show bridge-domain <i>bridge-id</i> mac security last violation Example: Router# show bridge-domain 100 mac security last violation	Displays information about the last violation recorded on each of the service instances that belong to the bridge domain.

Clearing All Dynamically Learned MAC Addresses on a Service Instance

Perform this task to clear all dynamically learned MAC addresses on a service instance.

SUMMARY STEPS

1. `enable`
2. `clear ethernet service instance id id interface type number mac table`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><code>enable</code></p> <p>Example: Router> enable</p>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	<p><code>clear ethernet service instance id <i>id</i> interface <i>type number</i> mac table</code></p> <p>Example: Router# clear ethernet service instance id 100 interface GigaBitEthernet 1/1 mac table</p>	<p>Clears all the dynamically learned MAC addresses on the specified service instance.</p>

Clearing All Dynamically Learned MAC Addresses on a Bridge Domain

Perform this task to clear all dynamically learned MAC addresses on a bridge domain.

SUMMARY STEPS

1. `enable`
2. `clear bridge-domain bridge-id mac table`

DETAILED STEPS

	Command or Action	Purpose
Step 1	<p><code>enable</code></p> <p>Example: Router> enable</p>	<p>Enables privileged EXEC mode.</p> <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	<p><code>clear bridge-domain <i>bridge-id</i> mac table</code></p> <p>Example: Router# clear bridge-domain 100 mac table</p>	<p>Clears all dynamically learned MAC addresses on the specified bridge domain.</p>

Bringing a Specific Service Instance Out of the Error-Disabled State

Perform this task to bring a specific service instance out of the error-disabled state.



Note

The **clear ethernet service instance id *id* interface type *number* errdisable** command can also be used to bring a service instance out of an error disabled state. See the [“Bringing a Specific Service Instance Out of the Error-Disabled State”](#) section on page 33.

SUMMARY STEPS

1. **enable**
2. **config terminal**
3. **interface *type number***
4. **service instance *id* ethernet**
5. **encapsulation dot1q *vlan-id***
6. **bridge-domain *bridge-id***
7. **mac security**
8. **errdisable recovery cause mac-security *interval***
9. **end**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	configure terminal Example: Router# configure terminal	Enters global configuration mode.
Step 3	interface <i>type number</i> Example: Router(config)# interface gigabitethernet 2/0/1	Specifies the type and location of the interface to configure, where: <ul style="list-style-type: none"> • <i>type</i>—Specifies the type of the interface. • <i>number</i>—Specifies the location of the interface.
Step 4	service instance <i>id</i> ethernet Example: Router(config-if)# service instance 100 ethernet	Creates a service instance (an instance of an EVC) on an interface and enters service instance configuration mode.
Step 5	encapsulation dot1q <i>vlan-id</i> Example: Router(config-if-srv)# encapsulation dot1q 100	Defines the matching criteria to be used to map ingress dot1q frames on an interface to the appropriate service instance.

	Command or Action	Purpose
Step 6	bridge-domain <i>bridge-id</i> Example: Router(config-if-srv)# bridge-domain 200	Binds the service instance to a bridge-domain instance where <i>bridge-id</i> is the identifier for the bridge-domain instance.
Step 7	mac security Example: Router(config-if-srv)# mac security	Enables MAC security on the service instance.
Step 8	errdisable recovery cause mac-security interval Example: Router(config-if-srv)# errdisable recovery cause mac-security 50	Brings a specific service instance out of an error-disabled state and specifies a time interval to recover.
Step 9	end Example: Router(config-if-srv)# end	Exits service instance configuration mode and enters privileged EXEC mode.

Bringing a Specific Service Instance Out of the Error-Disabled State

Perform this task to bring a specific service instance out of the error-disabled state.

SUMMARY STEPS

1. **enable**
2. **clear ethernet service instance id *id* interface *type number* errdisable**

DETAILED STEPS

	Command or Action	Purpose
Step 1	enable Example: Router> enable	Enables privileged EXEC mode. <ul style="list-style-type: none"> • Enter your password if prompted.
Step 2	clear ethernet service instance id <i>id</i> interface <i>type number</i> errdisable Example: Router# clear ethernet service instance id 100 interface FastEthernet 1/1 errdisable	Brings a specific service instance out of the error-disabled state (shutdown).

Configuration Examples for MAC Address Limiting on Service Instances, and Bridge Domains, and EVC Port Channels

- [Example: Enabling MAC Security on a Service Instance, page 34](#)
- [Example: Configuring a MAC Address Permit List, page 35](#)
- [Example: Configuring a MAC Address Deny List, page 35](#)
- [Example: Configuring MAC Address Limiting on a Bridge Domain, page 35](#)
- [Example: Configuring a MAC Address Limit on a Service Instance, page 36](#)
- [Example: Configuring a MAC Address Violation Response, page 36](#)
- [Example: Configuring MAC Address Aging, page 36](#)
- [Example: Configuring a Sticky MAC Address, page 36](#)
- [Example: Displaying the MAC Addresses on a Specific Secure Service Instance, page 37](#)
- [Example: Displaying the Last Violation on a Specific Service Instance, page 37](#)
- [Example: Displaying the MAC Security Status of a Specific Service Instance, page 37](#)
- [Example: Displaying the MAC Addresses of All Secured Service Instances, page 38](#)
- [Example: Displaying the MAC Security Statistics of All Service Instances, page 38](#)
- [Example: Displaying the MAC Addresses on All Service Instances for a Bridge Domain, page 39](#)
- [Example: Displaying the Secured Service Instances for a Specific Bridge Domain, page 39](#)

Example: Enabling MAC Security on a Service Instance

The following example shows how to enable MAC security on a service instance:

```
Router> enable
Router# configure terminal
Router(config)# interface gigabitethernet 3/0/1
Router(config-if)# service instance 100 ethernet
Router(config-if-srv)# encapsulation dot1Q 100
Router(config-if-srv)# bridge-domain 100
Router(config-if-srv)# mac security
Router(config-if-srv)# end
```

Example: Enabling MAC Security on an EVC Port Channel

The following example shows how to enable MAC Security on an EVC port channel:

```
Router> enable
Router# configure terminal
Router(config)# interface port-channel 2
Router(config-if)# service instance 100 ethernet
Router(config-if-srv)# encapsulation dot1Q 100
Router(config-if-srv)# bridge-domain 100
Router(config-if-srv)# mac security
Router(config-if-srv)# end
```

Example: Configuring a MAC Address Permit List

The following example shows how to configure a MAC address permit list:

```
Router> enable
Router# configure terminal
Router(config)# interface gigabitethernet 3/0/1
Router(config-if)# service instance 100 ethernet
Router(config-if-srv)# encapsulation dot1Q 100
Router(config-if-srv)# bridge-domain 100
Router(config-if-srv)# mac security address permit a2aa.aaaa.aaaa
Router(config-if-srv)# mac security address permit a2aa.aaaa.aaab
Router(config-if-srv)# mac security address permit a2aa.aaaa.aaac
Router(config-if-srv)# mac security address permit a2aa.aaaa.aaad
Router(config-if-srv)# mac security address permit a2aa.aaaa.aaae
Router(config-if-srv)# mac security
Router(config-if-srv)# end
```

Example: Configuring a MAC Address Deny List

The following example shows how to configure a MAC address deny list:

```
Router> enable
Router# configure terminal
Router(config)# interface gigabitethernet 3/0/1
Router(config-if)# service instance 100 ethernet
Router(config-if-srv)# encapsulation dot1Q 100
Router(config-if-srv)# bridge-domain 100
Router(config-if-srv)# mac security address deny a2aa.aaaa.aaaa
Router(config-if-srv)# mac security address deny a2aa.aaaa.aaab
Router(config-if-srv)# mac security address deny a2aa.aaaa.aaac
Router(config-if-srv)# mac security address deny a2aa.aaaa.aaad
Router(config-if-srv)# mac security address deny a2aa.aaaa.aaae
Router(config-if-srv)# mac security
Router(config-if-srv)# end
```

Example: Configuring MAC Address Limiting on a Bridge Domain

```
Router> enable
Router# configure terminal
Router(config)# bridge-domain 100
Router(config-bdomain)# mac limit maximum addresses 1000
Router(config-bdomain)# end
```

Example: Configuring a MAC Address Limit on a Service Instance

```
Router> enable
Router# configure terminal
Router(config)# interface gigabitethernet 3/0/1
Router(config-if)# service instance 100 ethernet
Router(config-if-srv)# encapsulation dot1Q 100
Router(config-if-srv)# bridge-domain 100
Router(config-if-srv)# mac security maximum addresses 10
Router(config-if-srv)# mac security
Router(config-if-srv)# end
```

Example: Configuring a MAC Address Violation Response

```
Router> enable
Router# configure terminal
Router(config)# interface gigabitethernet 3/0/1
Router(config-if)# service instance 100 ethernet
Router(config-if-srv)# encapsulation dot1Q 100
Router(config-if-srv)# bridge-domain 100
Router(config-if-srv)# mac security address permit a2aa.aaaa.aaaa
Router(config-if-srv)# mac security violation protect
Router(config-if-srv)# mac security
Router(config-if-srv)# end
```

Example: Configuring MAC Address Aging

```
Router> enable
Router# configure terminal
Router(config)# interface gigabitethernet 4/0/1
Router(config-if)# service instance 100 ethernet
Router(config-if-srv)# encapsulation dot1q 100
Router(config-if-srv)# bridge-domain 100
Router(config-if-srv)# mac security aging time 10
Router(config-if-srv)# mac security
Router(config-if-srv)# end
```

Example: Configuring a Sticky MAC Address

```
Router> enable
Router# configure terminal
Router(config)# interface gigabitethernet 3/0/1
Router(config-if)# service instance 100 ethernet
Router(config-if-srv)# encapsulation dot1Q 100
Router(config-if-srv)# bridge-domain 100
Router(config-if-srv)# mac security sticky
Router(config-if-srv)# mac security
```

Example: Displaying the MAC Addresses on a Specific Secure Service Instance

```
Router# show ethernet service instance id 1879665131 interface gigabitethernet 0/2 mac security address
```

```
MAC Address      Type      Rem. Age(min)
0001.0001.0001   static    100
0001.0001.0002   static    100
0001.0001.aaaa   dynamic   100
0001.0001.aaab   dynamic   100
```

Table 2 describes the significant fields in the output.

Table 2 MAC Addresses on a Specific Service Instance: Field Descriptions

Field	Description
MAC Address	Displays the MAC addresses on the service instance.
Type	Indicates the type of MAC address by declaring if it was statically configured (static) or dynamically learned (dynamic).
Rem. Age(min)	Displays the remaining age of the address in minutes. A hyphen (-) indicates that the aging is not enabled.



Note

For some platforms such as Cisco 7600 series routers, the MAC address remaining age time information is available only on the switch console. Use the **remote command switch** command and the **show ethernet service instance id id interface type number mac security address** command to display the MAC address remaining age time information.

Example: Displaying the Last Violation on a Specific Service Instance

```
Router# show ethernet service instance id 1879665131 interface gigabitethernet 0/2 mac security last violation
```

```
At: Apr 4 06:57:25.971
Source address: ae4e.b7b5.79ae
Reason: Denied address
```

Example: Displaying the MAC Security Status of a Specific Service Instance

```
Router# show ethernet service instance id 1879665131 interface Ethernet0/2 mac security
```

```
MAC Security: enabled
```

Example: Displaying the MAC Addresses of All Secured Service Instances

```
Router# show ethernet service instance mac security address

Port                Bridge-domain  MAC Address      Type      Rem. Age(min)
Gi1/0/0 ServInst 1  10              0001.0001.0001  static    82
Gi1/0/0 ServInst 1  10              0001.0001.0002  static    82
Gi1/0/0 ServInst 1  10              0001.0001.aaaa  dynamic   82
Gi1/0/0 ServInst 1  10              0001.0001.aaab  dynamic   82
Gi1/0/0 ServInst 2  10              0002.0002.0002  static    -
Gi1/0/0 ServInst 2  10              0002.0002.0003  static    -
Gi1/0/0 ServInst 2  10              0002.0002.0004  static    -
Gi1/0/0 ServInst 2  10              0002.0002.aaaa  dynamic   -
Gi1/0/0 ServInst 2  10              0002.0002.bbbb  dynamic   -
Gi1/0/0 ServInst 2  10              0002.0002.cccc  dynamic   -
Gi3/0/5 ServInst 10 30              0003.0003.0001  static    200
Gi3/0/5 ServInst 10 30              0003.0003.0002  static    200
```

Table 3 describes the significant fields in the output.

Table 3 MAC Addresses of All Service Instances: Field Descriptions

Field	Description
Port	Displays the service instance ID number and its interface type and number.
Bridge- Domain	Displays the bridge- domain ID number for each service instance listed.
MAC Address	Displays the MAC addresses on the service instance.
Type	Indicates the type of MAC address by declaring if it was statically configured (static) or dynamically learned (dynamic).
Rem. Age(min)	Displays the remaining age of the address, in minutes. A hyphen (-) indicates that the aging is not enabled.



Note

For some platforms such as Cisco 7600 series routers, the MAC address remaining age time information is available only on the switch console. Use the **remote command switch** command and the **show ethernet service instance mac security address** command to display the MAC address remaining age time information.

Example: Displaying the MAC Security Statistics of All Service Instances

In the following example, the numbers of allowed and actual secured addresses recorded on the service instance are displayed.

```
Router# show ethernet service instance mac security statistics

Ethernet0/0 service instance 890597333 (bridge-domain 730)
Secure addresses: 3
Address limit: 7

Ethernet0/0 service instance 1559665780 (bridge-domain 1249)
Secure addresses: 8
Address limit: 8
```

```

Ethernet0/0 service instance 1877043343 (bridge-domain 1155)
Secure addresses: 0
Address limit: 8

Ethernet0/1 service instance 127771402 (bridge-domain 730)
Secure addresses: 12
Address limit: 12

Ethernet0/1 service instance 183598286 (bridge-domain 730)
Secure addresses: 1
Address limit: 1

Ethernet0/1 service instance 433365207 (bridge-domain 1249)
Secure addresses: 0
Address limit: 1
Ethernet0/1 service instance 858688453 (bridge-domain 1328)
Secure addresses: 0
Address limit: 2

```

Example: Displaying the MAC Addresses on All Service Instances for a Bridge Domain

```
Router# show bridge-domain 730 mac security address
```

Port	MAC Address	Type	Rem. Age(min)
Gi1/0/0 ServInst 1	0001.0001.0001	static	74
Gi1/0/0 ServInst 1	0001.0001.0002	static	74
Gi1/0/0 ServInst 1	0001.0001.aaaa	dynamic	74
Gi1/0/0 ServInst 1	0001.0001.aaab	dynamic	74
Gi1/0/0 ServInst 2	0002.0002.0002	static	-
Gi1/0/0 ServInst 2	0002.0002.0003	static	-
Gi1/0/0 ServInst 2	0002.0002.0004	static	-
Gi1/0/0 ServInst 2	0002.0002.aaaa	dynamic	-
Gi1/0/0 ServInst 2	0002.0002.bbbb	dynamic	-
Gi1/0/0 ServInst 2	0002.0002.cccc	dynamic	-



Note

For some platforms such as Cisco 7600 routers, the MAC address remaining age time information is available only on the switch console. Use the **remote command switch** command and the **show bridge-domain *id* mac security address** command to display the MAC address remaining age time information.

Example: Displaying the Secured Service Instances for a Specific Bridge Domain

```
Router# show bridge-domain 730 mac security
```

```

Gi1/0/0 ServInst 1
MAC Security enabled: yes
Gi1/0/0 ServInst 2
MAC Security enabled: yes

```

Additional References

Related Documents

Related Topic	Document Title
Carrier Ethernet configuration guide	<i>Cisco IOS Carrier Ethernet Configuration Guide</i> , Release 12.2SR
Carrier Ethernet commands: complete command syntax, command mode, command history, defaults, usage guidelines, and examples	<i>Cisco IOS Carrier Ethernet Command Reference</i>
Cisco IOS commands: master list of commands with complete command syntax, command mode, command history, defaults, usage guidelines, and examples	<i>Cisco IOS Master Commands List, All Releases</i>

Standards

Standard	Title
MEF 6.1	Metro Ethernet Services Definitions Phase 2 (PDF 6/08)
MEF 10.1	Ethernet Services Attributes Phase 2 (PDF 10/06)

MIBs

MIB	MIBs Link
No new or modified MIBs are supported, and support for existing MIBs has not been modified.	To locate and download MIBs for selected platforms, Cisco software releases, and feature sets, use Cisco MIB Locator found at the following URL: http://www.cisco.com/go/mibs

RFCs

RFC	Title
No new or modified RFCs are supported, and support for existing RFCs has not been modified.	—

Technical Assistance

Description	Link
<p>The Cisco Support and Documentation website provides online resources to download documentation, software, and tools. Use these resources to install and configure the software and to troubleshoot and resolve technical issues with Cisco products and technologies. Access to most tools on the Cisco Support and Documentation website requires a Cisco.com user ID and password.</p>	<p>http://www.cisco.com/cisco/web/support/index.html</p>

Feature Information for MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels

Table 4 lists the features in this module and provides links to specific configuration information.

Use Cisco Feature Navigator to find information about platform support and software image support. Cisco Feature Navigator enables you to determine which software images support a specific software release, feature set, or platform. To access Cisco Feature Navigator, go to <http://www.cisco.com/go/cfn>. An account on Cisco.com is not required.

**Note**

Table 4 lists only the software release that introduced support for a given feature in a given software release train. Unless noted otherwise, subsequent releases of that software release train also support that feature.

Table 4 Feature Information for MAC Address Limiting on Service Instances, Bridge Domains, and EVC Port Channels

Feature Name	Releases	Feature Information
MAC Address Limiting on Service Instances and Bridge Domains	12.2(33)SRD	<p>The MAC Address Limiting on Service Instances and Bridge Domains feature addresses port security with service instances by providing the capability to control and filter MAC address learning behavior at the granularity of a per-service instance. When a violation requires a shutdown, only the customer that is assigned to a given service instance is affected. MAC address limiting is a type of MAC security and is also referred to as a MAC security component or element.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> • Ethernet Virtual Circuits, Service Instances, and Bridge Domains, page 3 • MAC Security and MAC Addressing, page 3 • Enabling MAC Security on a Service Instance, page 11 <p>The following commands were introduced or modified: bridge-domain (config), bridge-domain (service instance), clear bridge-domain mac table, clear ethernet service instance, errdisable recovery cause mac-security, interface, mac limit maximum addresses, mac security, show bridge-domain, show ethernet service instance.</p>
MAC Address Security on EVC Port Channel	12.2(33)SRE	<p>The MAC Address Security on EVC Port Channel feature supports MPBE, local connect, and xconnect service types.</p> <p>Load balancing is done on an EFP basis where a number of EFPs exclusively pass traffic through member links.</p> <p>The following sections provide information about this feature:</p> <ul style="list-style-type: none"> • EVCs on Port Channels, page 3 • Enabling MAC Security on an EVC Port Channel, page 12 <p>The following command was introduced or modified: interface</p>

Cisco and the Cisco Logo are trademarks of Cisco Systems, Inc. and/or its affiliates in the U.S. and other countries. A listing of Cisco's trademarks can be found at www.cisco.com/go/trademarks. Third party trademarks mentioned are the property of their respective owners. The use of the word partner does not imply a partnership relationship between Cisco and any other company. (1005R)

Any Internet Protocol (IP) addresses and phone numbers used in this document are not intended to be actual addresses and phone numbers. Any examples, command display output, network topology diagrams, and other figures included in the document are shown for illustrative purposes only. Any use of actual IP addresses or phone numbers in illustrative content is unintentional and coincidental.

© 2008–2011 Cisco Systems, Inc. All rights reserved.

